



Chipsmall Limited consists of a professional team with an average of over 10 year of expertise in the distribution of electronic components. Based in Hongkong, we have already established firm and mutual-benefit business relationships with customers from,Europe,America and south Asia,supplying obsolete and hard-to-find components to meet their specific needs.

With the principle of "Quality Parts,Customers Priority,Honest Operation,and Considerate Service",our business mainly focus on the distribution of electronic components. Line cards we deal with include Microchip,ALPS,ROHM,Xilinx,Pulse,ON,Everlight and Freescale. Main products comprise IC,Modules,Potentiometer,IC Socket,Relay,Connector.Our parts cover such applications as commercial,industrial, and automotives areas.

We are looking forward to setting up business relationship with you and hope to provide you with the best service and solution. Let us make a better world for our industry!



Contact us

Tel: +86-755-8981 8866 Fax: +86-755-8427 6832

Email & Skype: info@chipsmall.com Web: www.chipsmall.com

Address: A1208, Overseas Decoration Building, #122 Zhenhua RD., Futian, Shenzhen, China



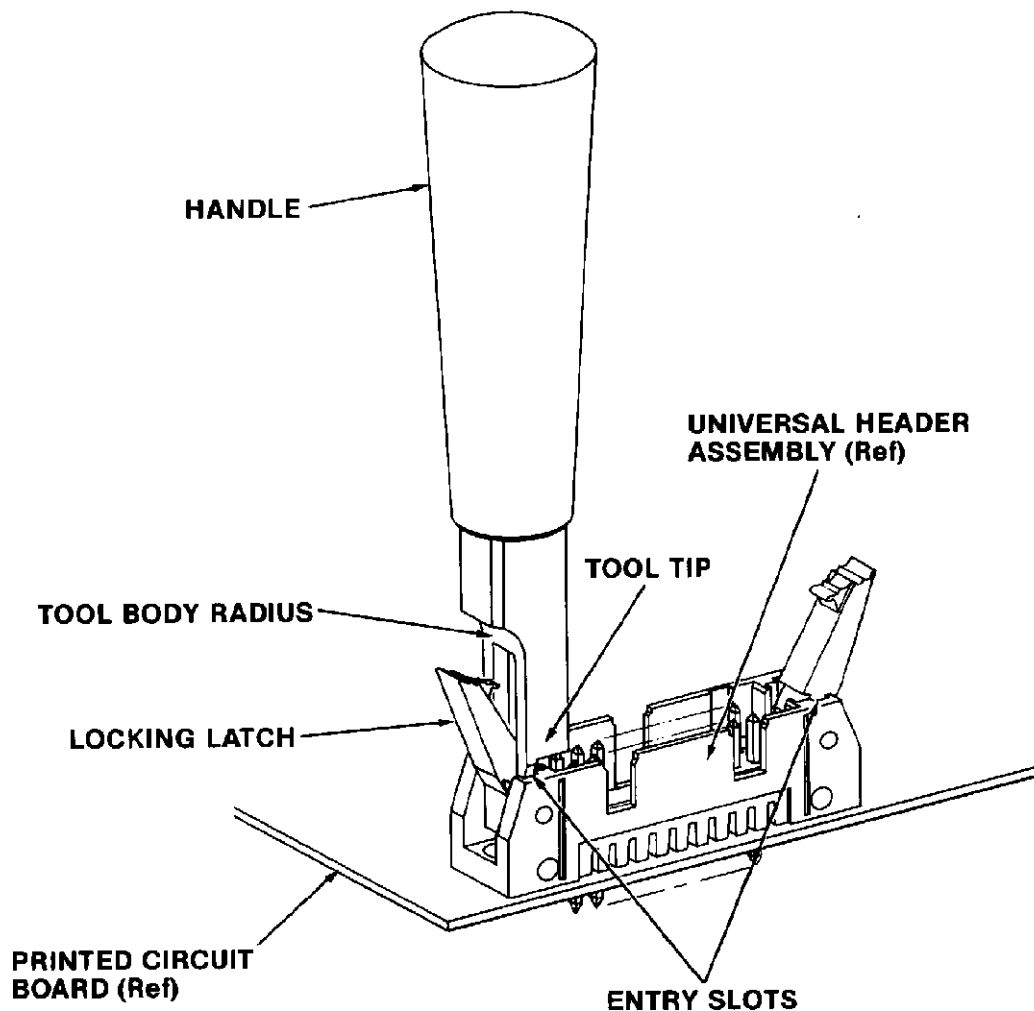


Fig. 1

1. INTRODUCTION

This instruction sheet (IS) covers the use of AMP Removal Tool 91269-1 which is used to remove latches from AMP-LATCH* Universal Header Assemblies. Read these instructions thoroughly before using the removal tool.

NOTE

All dimensions on this instruction sheet are in inches.


2. DESCRIPTION (Figure 1)

The removal tool features a tool tip and a tapered handle. The tool tip releases the latch from the header assembly.

3. REMOVAL PROCEDURE (Figure 1)

Before starting, hold the tool with the end of the handle in the middle of your palm, with your index finger on the radius of the tool body. Proceed as follows:

1. Position removal tool as shown in Figure 1.
2. Insert tool tip into locking latch entry slots.
3. Making sure tool tip straddles locking latch, bottom the tool on top of header assembly.
4. Grasp locking latch with index finger and pull upward until locking latch and tool are removed from assembly.

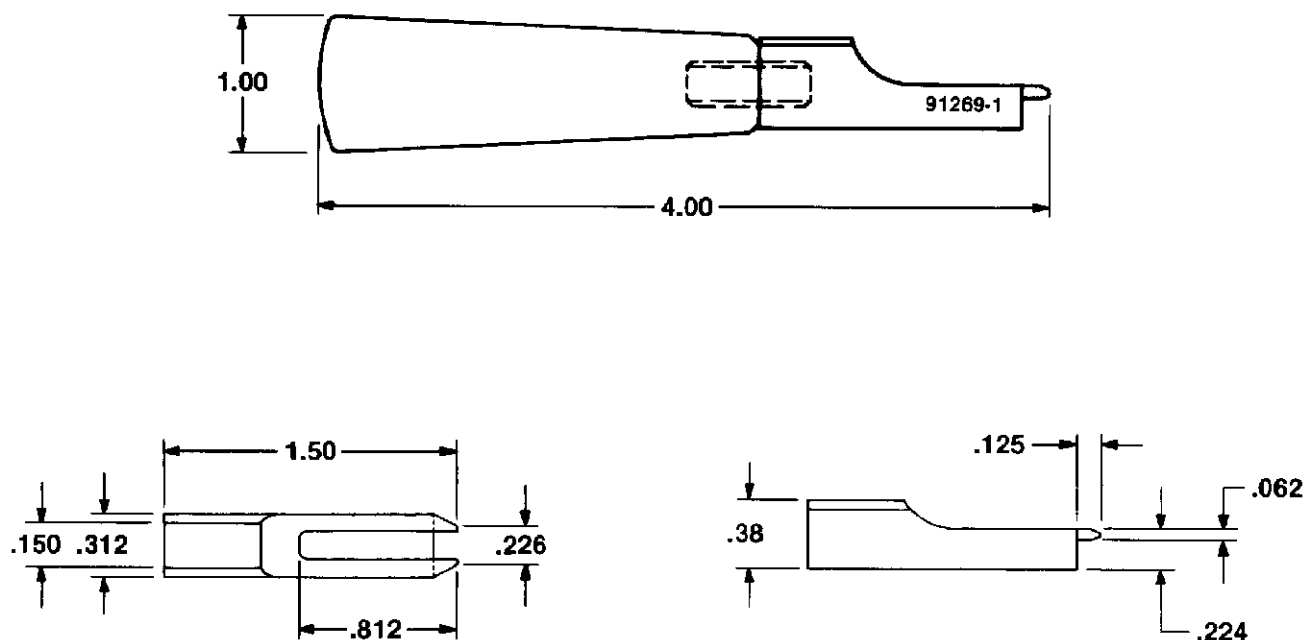

| REMOVAL TOOL | PRODUCT DESIGNED FOR | ENGINEERING APPROVAL | DATE |
|--------------|---------------------------------------|----------------------|---------|
| 91269-1 | AMP-LATCH Universal Header Assemblies | Dave Meyer | 4-24-86 |

Fig. 2

4. CERTIFICATION (Figure 2)

AMP Removal Tool 91269-1 should be certified with the information provided in Figure 2. It is recommended that each removal tool be inspected immediately upon its arrival at your facility, and at

regularly scheduled intervals, to ensure that the tool has not been damaged during handling.

Additional removal tools can be purchased from:

AMP Incorporated
P.O. Box 3608
Harrisburg, PA 17105-3608