



Chipsmall Limited consists of a professional team with an average of over 10 year of expertise in the distribution of electronic components. Based in Hongkong, we have already established firm and mutual-benefit business relationships with customers from,Europe,America and south Asia,supplying obsolete and hard-to-find components to meet their specific needs.

With the principle of "Quality Parts,Customers Priority,Honest Operation,and Considerate Service",our business mainly focus on the distribution of electronic components. Line cards we deal with include Microchip,ALPS,ROHM,Xilinx,Pulse,ON,Everlight and Freescale. Main products comprise IC,Modules,Potentiometer,IC Socket,Relay,Connector.Our parts cover such applications as commercial,industrial, and automotives areas.

We are looking forward to setting up business relationship with you and hope to provide you with the best service and solution. Let us make a better world for our industry!



Contact us

Tel: +86-755-8981 8866 Fax: +86-755-8427 6832

Email & Skype: info@chipsmall.com Web: www.chipsmall.com

Address: A1208, Overseas Decoration Building, #122 Zhenhua RD., Futian, Shenzhen, China





Arduino RS485 Shield SKU: DFR0259



Contents

- [1 Introduction](#)
- [2 Specification](#)
- [3 Pin Definition](#)
- [4 Simple Application](#)
 - [4.1 Use Setups](#)
 - [4.2 Sample Code](#)

Introduction


This is a RS485 shield, especially designed for the Arduino controller board. It can easily convert the UART to the RS485. This shield integrates a standard RS485 port ,a mini RS485 port(PH2.0 interface), RS485 headers, and provides the welding areas, so it's convenient for your DIY design. One key changes automatic and manual transmission mode, which expand the scope of application.

Specification

- Power module: +5.0V
- Module size: 55mmx53mm
- 16 digital IO port (including a I2C interface)

- 6 analog IO port and power
- Operation/programming mode switch
- Automatic/manual transceiver mode switch (When in manual transceiver mode, the enable end is the 2nd digital IO port)
- Transceiver indicating LED
- Standard RS485 interface, mini RS485 interface(PH2.0) and RS485 pins
- Weldable area
- Reset button

Pin Definition

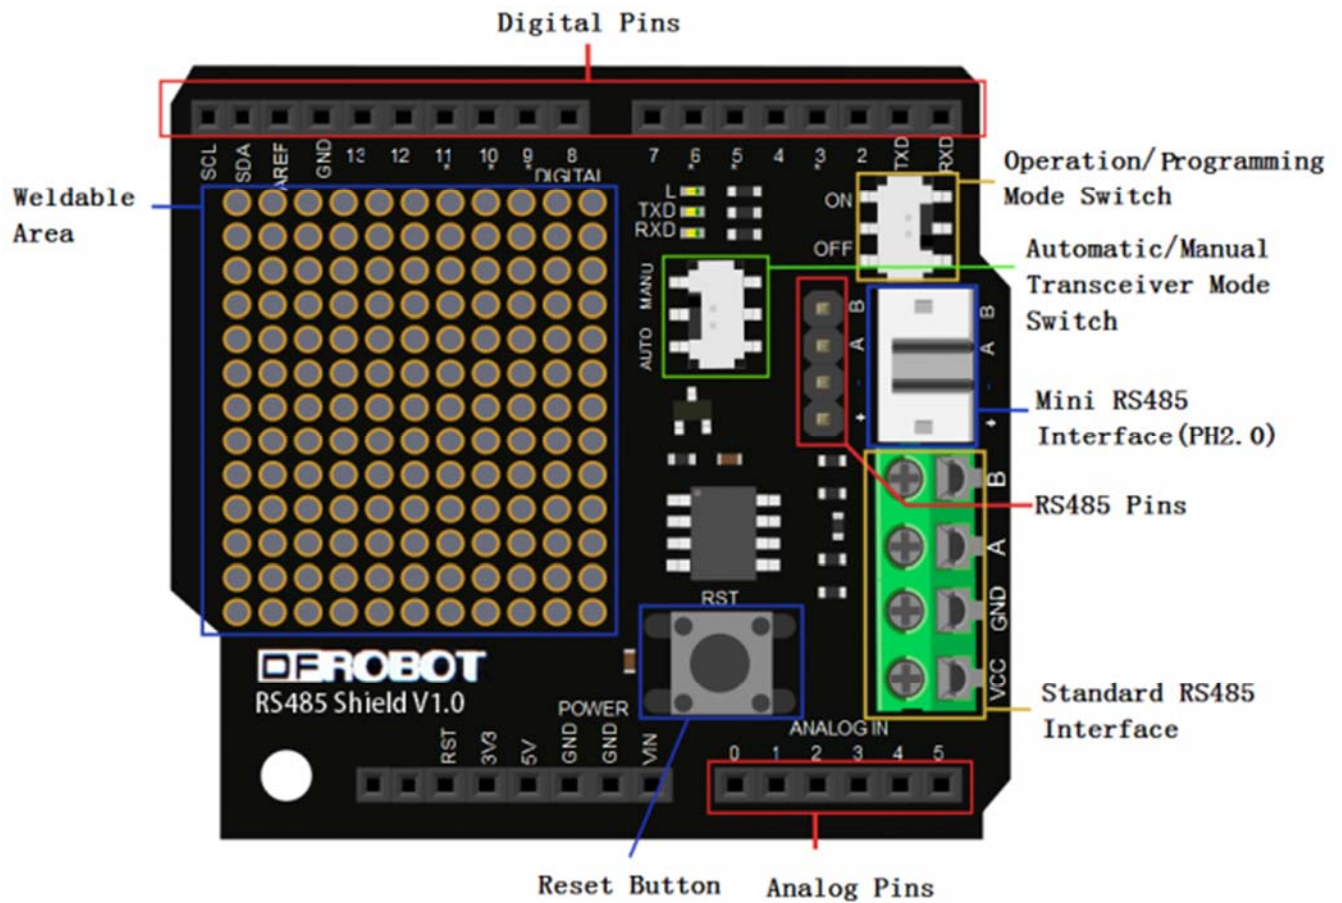

Operation and programming mode switch: To OFF, you can download the program for the Arduino controller. To ON, the shield will convert the UART to the RS485.

Transceiver mode switch: To AUTO, the shield is automatically sending and receiving data, so you do not care about operation timing; To MANU, the shield is in manual transceiver status, and the enable end is the 2nd digital IO port. Enabling high-side power Ping to sending state while the low level of the receiving state.

Simple Application

Use Setups

When the RS485 shield is installed on your Arduino controller, and then you will wire the RS485 shield with USB-RS485 converter to connect terminals, namely: A pair of A, B on B, GND on GND, then download the following sample code (Note: Downloading code, run / program mode switch must hit the OFF position, otherwise it will lead to the download fails. When downloaded, it is complete to ON, and the shield to normal use). Open serial monitor of Arduino IDE, find USB-RS485 converter corresponding serial port, send characters "V", you can see the LED status may change, and reply "OK".



Sample Code

Automatic Transmission Mode

```
/*
# This sample codes is for testing the RS485 shield(automatic transmission mode).
# Editor : YouYou
# Date   : 2013.9.16
# Ver    : 0.1
# Product: RS485 shield
# SKU    : DFR0259
*/
int led = 13;
void setup()
{
  Serial.begin(9600);
  pinMode(led, OUTPUT);
}
void loop()
{
  int temp;
  if(Serial.available())
  {
    temp=Serial.read();
    if(temp=='V'){
      digitalWrite(led,1-digitalRead(led));
      Serial.println("OK");
    }
  }
}
```

Manual Transmission Mode

```
/*
```

```

# This sample codes is for testing the RS485 shield(manual transmission mode)
.
# EN=2;
# Editor : YouYou
# Date   : 2013.9.16
# Ver    : 0.1
# Product: RS485 shield
# SKU    : DFR0259
*/

int led = 13;

int EN = 2; //Definition RS485 shield enable terminal (the 2nd digital IO ports),

//high for the sending state, the low level of receiving state

void setup()
{
  Serial.begin(9600);
  pinMode(led,OUTPUT);
  pinMode(EN,OUTPUT);
}

void loop()
{
  int temp;
  digitalWrite(EN,LOW); //Enable low, RS485 shield waiting to receive data
  if(Serial.available())
  {
    temp=Serial.read();
    if(temp=='V')
    {
      digitalWrite(led,1-digitalRead(led));
      digitalWrite(EN,HIGH); //Enable high, RS485 shield waiting to transmit data
      Serial.println("OK");
      delay(10); //Delay for some time, waiting for data transmitted
    }
  }
}

```

}