

Chipsmall Limited consists of a professional team with an average of over 10 year of expertise in the distribution of electronic components. Based in Hongkong, we have already established firm and mutual-benefit business relationships with customers from, Europe, America and south Asia, supplying obsolete and hard-to-find components to meet their specific needs.

With the principle of "Quality Parts, Customers Priority, Honest Operation, and Considerate Service", our business mainly focus on the distribution of electronic components. Line cards we deal with include Microchip, ALPS, ROHM, Xilinx, Pulse, ON, Everlight and Freescale. Main products comprise IC, Modules, Potentiometer, IC Socket, Relay, Connector. Our parts cover such applications as commercial, industrial, and automotives areas.

We are looking forward to setting up business relationship with you and hope to provide you with the best service and solution. Let us make a better world for our industry!



Contact us

Tel: +86-755-8981 8866 Fax: +86-755-8427 6832

Email & Skype: info@chipsmall.com Web: www.chipsmall.com

Address: A1208, Overseas Decoration Building, #122 Zhenhua RD., Futian, Shenzhen, China









FQ-M VISION SENSOR

Designed for motion tracking



» A new dimension in pick and place

» Fast & precise positioning

» Easy set-up and integration

Smart camera to guide your robot!

The new FQ-M series is a vision sensor designed specifically for Pick & Place applications. It comes with EtherCAT embedded and can be integrated easily into any environment. The FQ-M is compact, fast and includes an incremental encoder input for easy tracking calibration.

Omron's Sysmac Studio software is the perfect tool for configuring the FQ-M and is complemented by the TouchFinder console for on-site monitoring.

Key features and benefits

- Made specifically for pick & place applications
- Encoder input for conveyor tracking and calibration
- Shape based object detection
- Smart calibration wizard
- Sysmac Studio software for vision system operation and setting



Easy set-up & integration

With intelligent wizards for calibration and communication integration into your machine is easier than ever.


The FQ-M communicates with all devices via EtherCAT, or standard Ethernet. The communication wizard lets you easily configure any robot protocol both as a server or as a client without complex programming.

Fast detection & high stability

The FQ-M can detect up to 32 pieces at once and more than 5000 pieces per minute. The new contour based search algorithm ensures the highest reliability.

"On-the-fly" tracking

Synchronized control is even easier, because the FQ-M vision sensor has an in-built encoder input for accurate conveyor tracking and easy calibration. The FQ-M is able to output position coordinates and the correlative encoder values and is able to manage the object queue, so that no object's coordinates are duplicated.

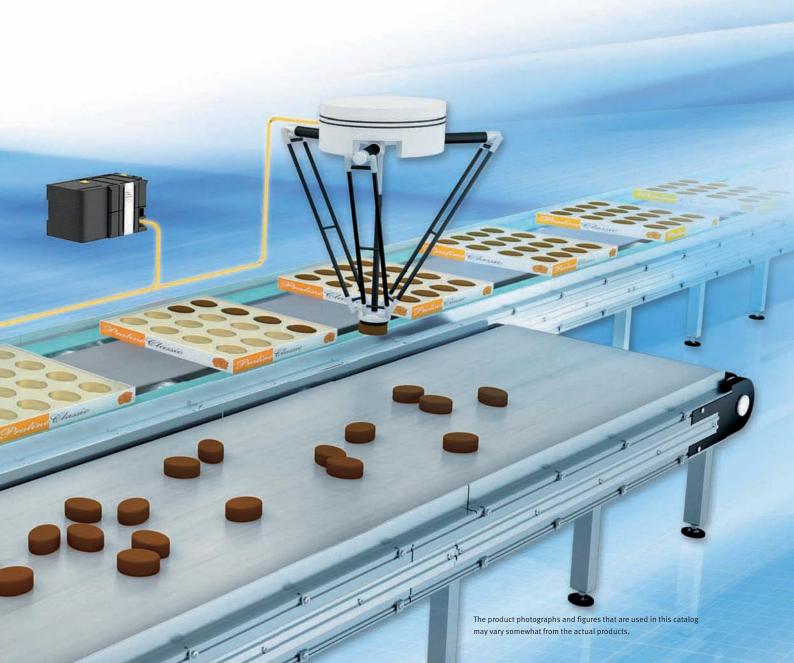







Programable out put format for your pick & place robot

Configuration as a server or as a client without complex programming.



Ethernet



Sysmac Studio for fast configuration

The Vision Editor of the Sysmac Studio software will help you to program the optimum vision setting. Intuitive and icon driven set-up and configuration.


TouchFinder for monitoring on-site

With the intuitive TouchFinder console – which fits in the palm of your hand – you can access all functions and settings quickly and easily.


Fast detection and high stability

The new contour based search algorithm offers unique performance for pick & place applications. Changing lighting conditions, reflection, object inclination or partially hidden objects are no longer a problem. The FQ-M delivers a stable result even at high speed, no matter how many objects have to be detected at the same time.


Best in class performance

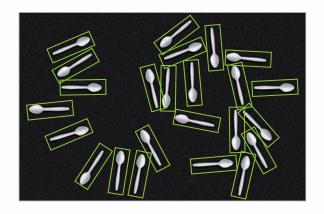

High-speed processing 5000 pcs/min with 360° detection.

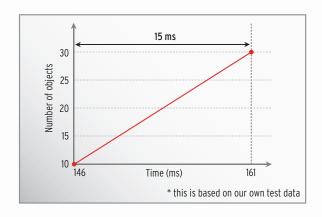

Only 15 ms time difference, detecting 10 objects or 30 objects at once.

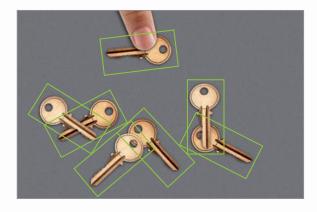

Stable and reliable detection, even if objects are overlapped or partially hidden.



Changing light conditions have no influence on the position accuracy.

Encoder input for simplified calibration & tracking



Step 1 - camera

Camera detects all calibration marks.

Step 2 - robot


Robot moves to the calibration marks. The offset to the camera is registered through the encoder value.

Step 3 - system

Camera, conveyor, robot and encoder are automatically aligned.

Panorama view - Parameter setting for ideal object detection

A panoramic view can be created from 3 different images, allowing easy parameter optimisation.

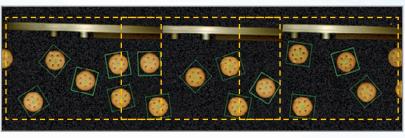

First shot

Second shot


Third shot

Objects that overlap within more than one field of view are segregated and only inserted in the picking queue once.



First shot

The position and orientation of objects 1, 2 and 3 is detected and added to the picking queue.

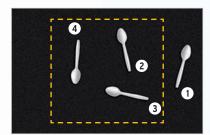

Next shot

Object 2, 3 and 4 are detected, but only the data of object 4 is evaluated. Position and orientation of objects 2 and 3 is ignored because they were already added to the queue with the shot before.

MEMO


Designed for motion tracking

- Connectivity with EtherCAT/Ethernet
- Up to 5000 pieces per minute with 360 degree rotation*
- Vision sensor with encoder input for tracking function
- Calibration function of the complete system
- Flexible data output depending on the output devices
- * The processing speed depends on setting conditions.






System configuration

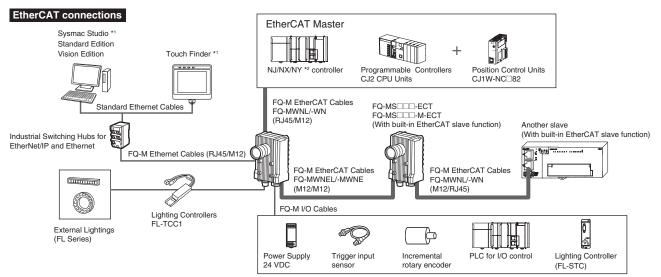

- *1. Sysmac Studio and Touch Finder can not be used together. When both are connected, Sysmac Studio will have a priority.

 When you make NJ/NX/NY controller settings with the Sysmac Studio Standard Edition, connect a computer and the controller via a USB connection or an Ethernet network.
- *2. Industrial PC Platform NY-series IPC Machine Controller only.

No-protocol Ethernet and PLC Link Connections

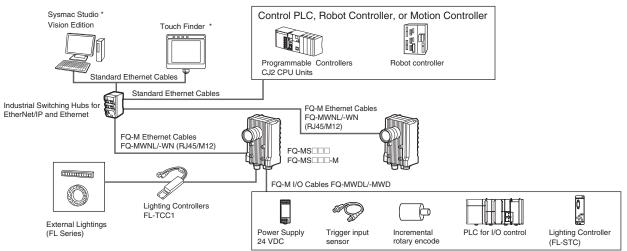

* Sysmac Studio and Touch Finder can not be used together. When both are connected, Sysmac Studio will have a priority

Note: 1. EtherCAT and Ethernet (PLC Link) can not be used simultaneously.

2. It is not possible to configure and adjust the FQ-M via an NJ/NX/NY controller, when they are connected via an EtherCAT network. For configuration and adjustment of FQ-M, connect the FQ-M and a computer or a Touch Finder via an Ethernet network.

Sysmac is a trademark or registered trademark of OMRON Corporation in Japan and other countries for OMRON factory automation products. Windows is registered trademarks of Microsoft Corporation in the USA and other countries.

EtherCAT® is registered trademark and patented technology, licensed by Beckhoff Automation GmbH, Germany.

Other company names and product names in this document are the trademarks or registered trademarks of their respective companies.

Ordering Information

Sensors

Appearance		Туре				
Color	Color	NPN		FQ-MS120		
Minimum /	PNP	PNP	51 OAT	FQ-MS125		
		EtherCAT communication function not provided	FQ-MS120-M			
	Monochrome	PNP		FQ-MS125-M		
• •	0-1	NPN		FQ-MS120-ECT		
	Color	FatharCAT communication function musuided	FQ-MS125-ECT			
A Comment	Manashuama	NPN	EtherCAT communication function provided	FQ-MS120-M-ECT		
	Monochrome	PNP		FQ-MS125-M-ECT		

Automation Software Sysmac Studio

Please purchase a DVD and required number of licenses the first time you purchase the Sysmac Studio. DVDs and licenses are available individually. Each model of licenses does not include any DVD.

		T			
Product name	Specifications	Number of licenses	Media	Model	Standards
Sysmac Studio	The Sysmac Studio is the software that provides an integrated environment for setting, programming, debugging and maintenance of machine automation controllers including the NJ/NX-series CPU Units, NY-series Industrial PC, EtherCAT Slave, and the HMI. Sysmac Studio runs on the following OS.	(Media only)	DVD	SYSMAC-SE200D	
Standard Edition Ver.1.□□ *2	Windows 7 (32-bit/64-bit version)/ Windows 8 (32-bit/64-bit version)/ Windows 8.1 (32-bit/64-bit version)/ Windows 10 (32-bit/64-bit version) This software provides functions of the Vision Edition. Refer to OMRON website for details such as supported models and functions.	1 license *1		SYSMAC-SE201L	
Sysmac Studio Vision Edition Ver.1.□□	Sysmac Studio Vision Edition is a limited license that provides selected functions required for FQ-M-series and FH-series Vision Sensor settings. Because this product is a license only, you need the Sysmac Studio Standard Edition DVD media to install it.	1 license		SYSMAC-VE001L	

^{*1} Multi licenses are available for the Sysmac Studio (3, 10, 30, or 50 licenses).
*2 The FQ-M series is supported by Sysmac Studio version 1.01 or higher.

Touch Finder

Appearance	Туре	Model
	DC power supply	FQ-MD30
	AC/DC/battery *	FQ-MD31

^{*} AC Adapter and Battery are sold separately.

Bend resistant Cables for FQ-M Series

Cable Type	Appearance	Туре	Cable length	Model
		Angle: M12/ Straight: RJ45	5 m	FQ-MWNL005
		Angle: W12/ Straight: N045	10 m	FQ-MWNL010
EtherCAT and Ethernet cable (M12/RJ45)			5m	FQ-WN005
		Straight type	10 m	FQ-WN010
	<i>d</i>		20 m	FQ-WN020
		Angle type	5 m	FQ-MWNEL005
EtherCAT cable	· ~		10 m	FQ-MWNEL010
(M12/M12)		Ctraight tune	5m	FQ-MWNE005
		Straight type	10 m	FQ-MWNE010

Cable Type	Appearance	Туре	Cable length	Model
I/O Cables		Angle type	5 m	FQ-MWDL005
		Aligie type	10 m	FQ-MWDL010
		Ctrainht tuna	5 m	FQ-MWD005
		Straight type	10 m	FQ-MWD010

Accessories

Appearance		Туре		Model
		Panel Mounting Adapter		FQ-XPM
10g		AC Adapter (for models for DC/AC/Battery)		FQ-AC□ *1
	For Touch Finder	Battery (for models for DC/AC/Battery)		FQ-BAT1 *2
/		Touch Pen (enclosed with Touch Finder)		FQ-XT
		Strap	Strap	
- SECTION .		SD Card	2GB	HMC-SD291
208		3D Calu	4GB	HMC-SD491

^{*1} AC Adapters for Touch Finder with DC/AC/Battery Power Supply. Select the model for the country in which the Touch Finder will be used.

Plug type	Voltage	Certified standards	Model
	125 V max.	PSE	FQ-AC1
Α	125 V IIIax.	UL/CSA	FQ-AC2
	250 V max.	CCC mark	FQ-AC3
С	250 V max.		FQ-AC4

^{*2} The Battery uses a lithium ion secondary battery. Confirm any applicable laws and regulations in the destination country if you export the Battery.

Industrial Switching Hubs for EtherNet/IP and Ethernet

Appearance	Number of ports	Failure detection	Current consumption	Model
PAR	3	None	0.22 A	W4S1-03B
100	5	None	0.22 A	W4S1-05B
56	3	Supported	0.22 A	W4S1-05C

Note: Industrial switching hubs are cannot be used for EtherCAT.

EtherCAT junction slaves

Appearance	Number of ports	Power supply voltage	Current consumption	Model
200	3	20.4 to 28.8 VDC	0.08 A	GX-JC03
E C E C E C	6	(24 VDC -15 to 20%)	0.17 A	GX-JC06

Note: 1. Please do not connect EtherCAT junction slave with OMRON position control unit, Model CJ1W-NC\(\sigma 81/\subseteq 82\).

Cameras peripheral devices

Туре	Model	Remarks
CCTV Lenses	3Z4S-LE Series	
External Lightings	FLV Series	Refer to Vision Accessory Catalog(Q198)
External Lightings	FL Series	

^{2.} EtherCAT junction slaves cannot be used for EtherNet/IP and Ethernet.

Specifications

Sensors

	Туре	EtherCAT communication	on function not provided	EtherCAT communica	tion function provided		
Item		Color	Monochrome	Color	Monochrome		
Madal	NPN	FQ-MS120	FQ-MS120-M	FQ-MS120-ECT	FQ-MS120-M-ECT		
Model	PNP	FQ-MS125	FQ-MS125-M	FQ-MS125-ECT	FQ-MS125-M-ECT		
Field of vision, Inst	allation distance	Selecting a lens according to the field of vision and installation distance. Refer to the "Optical Chart" page.					
	Inspection items	Shape search, Search, Labeling, Edge position					
	Number of simultaneous						
Main functions	inspections	32					
	Number of registered scenes	32 *1					
	Image processing method	Real color	Monochrome	Real color	Monochrome		
	Image elements	1/3-inch color CMOS	1/3-inch monochrome CMOS	1/3-inch color CMOS	1/3-inch monochrome CMOS		
mage input	Image filter	High dynamic range (HDR) and white balance High dynamic range (HDR)					
	Shutter	Electronic shutter; select sh	utter speeds from 1/10 to 1/3	0000 (sec)			
	Processing resolution	752 (H) × 480 (V)					
	Pixel size	6.0 (μm) × 6.0 (μm)					
	Frame rate (image read time)	60fps (16.7ms)					
Cutounal I imbtinua	Connecting method	Connection via a strobe ligh	t controller				
External Lightings	Connectable lighting	FL series					
	Measurement data	In Sensor: Max. 32000 item	s *2				
Data logging	Images	In Sensor: 20 images *2					
Measurement trigge		<u> </u>	Communications trigger (Eth	ernet No-protocol, PLC Link.	or EtherCAT)		
	Input signals	9 signals • Single measurement inpu • Error clear input (IN0) • Encoder counter reset inp • Encoder input (A±, B±, Z±	ut (IN1)				
I/O specifications	Output signals	5 signals *3 OUTO Overall judgement output (OR) OUT1 Control output (BUSY) OUT2 Error output (ERROR) OUT3 (Shutter output: SHTOUT) OUT4 (Strobe trigger output: STGOUT)					
	Ethernet specifications	100BASE-TX/10BASE-TX					
	EtherCAT specifications	-		Dedicated protocol for Ethe	rCAT 100BASE-TX		
	Connection method	Special connector cables • Power supply and I/O: • Touch Finder, Computer and Ethernet: 1 Ethernet cable • EtherCAT: 2 EtherCAT cable					
		LUICICAT.		ole			
LED display		OR: Judgment result ERR: Error indicator BUSY: BUSY indicator	2 EtherCAT cal	ole			
LED display	EtherCAT display	OR: Judgment result ERR: Error indicator BUSY: BUSY indicator	2 EtherCAT cal indicator	L/A IN (Link/Activity IN) × L/A OUT (Link/Activity OU RUN × 1 ERR × 1			
LED display	EtherCAT display Power supply voltage	OR: Judgment result ERR: Error indicator BUSY: BUSY indicator	2 EtherCAT cal indicator nications indicator	L/A IN (Link/Activity IN) × L/A OUT (Link/Activity OL RUN × 1			
	. ,	OR: Judgment result ERR: Error indicator BUSY: BUSY indicator ETN: Ethernet commu	2 EtherCAT cal indicator nications indicator ripple)	L/A IN (Link/Activity IN) × L/A OUT (Link/Activity OL RUN × 1			
	Power supply voltage	OR: Judgment result ERR: Error indicator BUSY: BUSY indicator ETN: Ethernet commu 21.6 to 26.4 VDC (including Between all lead wires and	2 EtherCAT cal indicator nications indicator ripple) case: 0.5 MΩ (at 250 V) series Strobe controller and I	L/A IN (Link/Activity IN) × L/A OUT (Link/Activity OU RUN × 1 ERR × 1			
	Power supply voltage Insulation resistance	OR: Judgment result ERR: Error indicator BUSY: BUSY indicator ETN: Ethernet commu 21.6 to 26.4 VDC (including Between all lead wires and 450mA max. (When the FL-250mA max. (When external	2 EtherCAT cal indicator nications indicator ripple) case: 0.5 MΩ (at 250 V) series Strobe controller and I	L/A IN (Link/Activity IN) × L/A OUT (Link/Activity OL RUN × 1 ERR × 1 ighting are used.)			
	Power supply voltage Insulation resistance Current consumption Ambient temperature	OR: Judgment result ERR: Error indicator BUSY: BUSY indicator ETN: Ethernet commu 21.6 to 26.4 VDC (including Between all lead wires and 450mA max. (When the FL- 250mA max. (When externa	2 EtherCAT call indicator nications indicator ripple) case: 0.5 MΩ (at 250 V) series Strobe controller and I all lighting is not used.)	L/A IN (Link/Activity IN) × L/A OUT (Link/Activity OU RUN × 1 ERR × 1 ighting are used.) g or condensation)			
Ratings	Power supply voltage Insulation resistance Current consumption Ambient temperature range	OR: Judgment result ERR: Error indicator BUSY: BUSY indicator ETN: Ethernet commu 21.6 to 26.4 VDC (including Between all lead wires and 450mA max. (When the FL- 250mA max. (When externa	2 EtherCAT call indicator nications indicator ripple) case: 0.5 MΩ (at 250 V) series Strobe controller and I all lighting is not used.) rige: -20 to 65 °C (with no icinal indicator)	L/A IN (Link/Activity IN) × L/A OUT (Link/Activity OU RUN × 1 ERR × 1 ighting are used.) g or condensation)			
LED display Ratings Environmental immunity	Power supply voltage Insulation resistance Current consumption Ambient temperature range Ambient humidity range	OR: Judgment result ERR: Error indicator BUSY: BUSY indicator ETH: Ethernet commu 21.6 to 26.4 VDC (including Between all lead wires and 450mA max. (When the FL- 250mA max. (When externation Operating: 0 to 50 °C, Storation Operating and storage: 35% No corrosive gas	2 EtherCAT call indicator nications indicator ripple) case: 0.5 MΩ (at 250 V) series Strobe controller and I all lighting is not used.) rige: -20 to 65 °C (with no icinal indicator)	L/A IN (Link/Activity IN) × L/A OUT (Link/Activity OL RUN × 1 ERR × 1 ighting are used.) g or condensation)			
Ratings	Power supply voltage Insulation resistance Current consumption Ambient temperature range Ambient humidity range Ambient atmosphere Vibration resistance	OR: Judgment result ERR: Error indicator BUSY: BUSY indicator ETH: Ethernet commu 21.6 to 26.4 VDC (including Between all lead wires and 450mA max. (When externate) Operating: 0 to 50 °C, Storate Operating and storage: 35% No corrosive gas 10 to 150 Hz, single amplituding	2 EtherCAT callindicator nications indicator ripple) case: 0.5 MΩ (at 250 V) series Strobe controller and I al lighting is not used.) ige: -20 to 65 °C (with no icinifo to 85% (with no condensation)	L/A IN (Link/Activity IN) × L/A OUT (Link/Activity OL RUN × 1 ERR × 1 ighting are used.) g or condensation) on) s, 8 min each, 10 times			
Ratings	Power supply voltage Insulation resistance Current consumption Ambient temperature range Ambient humidity range Ambient atmosphere Vibration resistance (destruction) Shock resistance	OR: Judgment result ERR: Error indicator BUSY: BUSY indicator ETH: Ethernet commu 21.6 to 26.4 VDC (including Between all lead wires and 450mA max. (When externate) Operating: 0 to 50 °C, Storate Operating and storage: 35% No corrosive gas 10 to 150 Hz, single amplituding	2 EtherCAT callindicator nications indicator ripple) case: 0.5 MΩ (at 250 V) series Strobe controller and I allighting is not used.) ige: -20 to 65 °C (with no icin. 6 to 85% (with no condensation of the series of the se	L/A IN (Link/Activity IN) × L/A OUT (Link/Activity OL RUN × 1 ERR × 1 ighting are used.) g or condensation) on) s, 8 min each, 10 times			
Ratings Environmental immunity	Power supply voltage Insulation resistance Current consumption Ambient temperature range Ambient humidity range Ambient atmosphere Vibration resistance (destruction) Shock resistance (destruction)	OR: Judgment result ERR: Error indicator BUSY: BUSY indicator ETN: Ethernet commu 21.6 to 26.4 VDC (including Between all lead wires and 450mA max. (When the FL- 250mA max. (When externa Operating: 0 to 50 °C, Stora Operating and storage: 35% No corrosive gas 10 to 150 Hz, single amplitu 150 m/s² 3 times each in 6 of IEC60529 IP40	2 EtherCAT callindicator nications indicator ripple) case: 0.5 MΩ (at 250 V) series Strobe controller and I allighting is not used.) ige: -20 to 65 °C (with no icin. 6 to 85% (with no condensation of the series of the se	L/A IN (Link/Activity IN) × L/A OUT (Link/Activity OL RUN × 1 ERR × 1 ighting are used.) g or condensation) on) s, 8 min each, 10 times			
Ratings	Power supply voltage Insulation resistance Current consumption Ambient temperature range Ambient humidity range Ambient atmosphere Vibration resistance (destruction) Shock resistance (destruction)	OR: Judgment result ERR: Error indicator BUSY: BUSY indicator ETN: Ethernet commu 21.6 to 26.4 VDC (including Between all lead wires and 450mA max. (When the FL- 250mA max. (When externa Operating: 0 to 50 °C, Stora Operating and storage: 35% No corrosive gas 10 to 150 Hz, single amplitu 150 m/s² 3 times each in 6 of IEC60529 IP40	2 EtherCAT cal indicator nications indicator ripple) case: 0.5 MΩ (at 250 V) series Strobe controller and I al lighting is not used.) rige: -20 to 65 °C (with no icing to 85% (with no condensation of the series of the serie	L/A IN (Link/Activity IN) × L/A OUT (Link/Activity OL RUN × 1 ERR × 1 ighting are used.) g or condensation) on) s, 8 min each, 10 times	IT) × 1		

^{*1} The maximum number of resisterable scenes depends on settings due to restrictions on memory.
*2 If a Touch Finder is used, results can be saved up to the capacity of an SD card.
*3 The five output signals can be allocated for the judgements of individual inspection items.

Encoder input specifications
Pulse input Specifications (When an open collector type encoder is used.)

Item		Specification		
Input voltage		24 VDC ±10%	12 VDC ±10%	5 VDC ±5%
Input current		4.8 mA (at 24 VDC, typical value)	2.4 mA (at 12 VDC, typical value)	1.0 mA (at 5 VDC, typical value)
NPN	ON voltage *1	4.8 V max.	2.4 V max.	1.0 V max.
NPN	OFF voltage *2	19.2 V min.	9.6 V min.	4.0 V min.
PNP	ON voltage *1	19.2 V min.	9.6 V min.	4.0 V min.
FINE	OFF voltage *2	4.8 V max.	2.4 V max.	1.0 V max.
Maximum response frequency *3		50 kHz (I/O cable: when the FQ-MWD005 or FQ-MWDL005 cables is used.) 20 kHz (I/O cable: when the FQ-MWD010 or FQ-MWDL010 cables is used.)		
Input impedance		5.1 kΩ		

- *1 ON voltage: Voltage to change from OFF to ON state. The ON voltage is the difference of voltages between the GND terminal of the encoder power terminals and each input terminal.
- *2 OFF voltage: Voltage to change from ON to OFF state. The ON voltage is the difference of voltages between the GND terminal of the encoder power terminals and each input terminal.
- *3 Select maximum response frequency depending on length of the encoder cable and response frequency of the encoder.

Pulse input Specifications (When a line-driver output type encoder is used.)

Item	Specification
Input voltage EIA standard RS-422-A line driver level	
Input impedance *1	120 Ω ±5%
Differential input voltage	0.2 V min.
Hysteresis voltage	50 mV
Maximum response frequency *2	200 kHz (I/O cable: when the FQ-MWD005, FQ-MWDL005, FQ-MWD010, or FQ-MWDL010 cables is used.)

- *1 When terminating resistance function is used.
- *2 Select maximum response frequency depending on length of the encoder cable and response frequency of the encoder.

Touch Finder

Item Type			Model with DC power supply	Model with AC/DC/battery power supply
Model			FQ-MD30	FQ-MD31
Number of connectable Sensors			2 max.	
	Types of measurement displays		Last result display, Last NG display, trend monitor, histograms	
Main functions	Types of display images		Through, frozen, zoom-in, and zoom-ou	ut images
wain functions	Data logging		Measurement results, measured images	
	Menu language		English, Japanese	
		Display device	3.5-inch TFT color LCD	
	LCD	Pixels	320 × 240	
		Display colors	16,777,216	
		Life expectancy *1	50,000 hours at 25 °C	
	Backlight	Brightness adjustment	Provided	
		Screen saver	Provided	
Indications	Indicators	Power indicator (color: green)	POWER	
		Error indicator (color: red)	ERROR	
		SD card access indicator (color: yellow)	SD ACCESS	
		Charge indicator (color: orange)		CHARGE
0		Method	Resistance film	
Operation interface	Touch screen	Life expectancy *2	1,000,000 operations	
	Ethernet		100 BASE-TX/10 BASE-T	
External interface	SD card		Omron SD card (Model: HMC-SD291/S rating is recommended.	D491) or a SDHC card of Class4 or higher
		DC power connection	20.4 to 26.4 VDC (including ripple)	
	Power supply voltage	AC adapter connection		100 to 240 VAC, 50/60 Hz
Datinus		Battery connection		FQ-BAT1 Battery (1 cell, 3.7 V)
Ratings	Continuous operation on Battery *3			1.5 h
	Current consumption		DC power connection: 0.2 A	
	Insulation resistance		Between all lead wires and case: 0.5 M	Ω (at 250 V)
Environmental immunity	Ambient temperature range		Operating: 0 to 50 °C Storage: -25 to 65 °C (with no icing or condensation)	Operating: 0 to 50 °C when mounted to DIN Track or panel 0 to 40 °C when operated on a Battery Storage: -25 to 65 °C (with no icing or condensation)
	Ambient humidity range		Operating and storage: 35% to 85% (w	ith no condensation)

Item		Туре	Model with DC power supply	Model with AC/DC/battery power supply
		Model	FQ-MD30	FQ-MD31
	Ambient atmosphere		No corrosive gas	
Environmental	Vibration resistance (destruction)		10 to 150 Hz, single amplitude: 0.35 mm, X/Y/Z directions 8 min each, 10 times	
immunity	Shock resistance (destruction)		150 m/s ² 3 times each in 6 direction (up, down, right, left, forward, and backward)	
	Degree of protection		IEC 60529 IP20	
Dimensions			95 × 85 × 33 mm	
Materials		Case: ABS		
Weight		Approx. 270 g (without Battery and hand	d strap)	
Accessories		Touch Pen (FQ-XT), Instruction Manual		

¹¹ This is a guideline for the time required for the brightness to diminish to half the initial brightness at room temperature and humidity. No guarantee is implied. The life of the backlight is greatly affected by the ambient temperature and humidity. It will be shorter at lower or higher temperatures.

Battery Specifications

Item Model	FQ-BAT1
Battery type	Secondary lithium ion battery
Nominal capacity	1800 mAh
Rated voltage	3.7 V
Dimensions	35.3 × 53.1 × 11.4 mm
Ambient temperature range	Operating: 0 to 40 °C Storage: -25 to 65 °C (with no icing or condensation)
Ambient humidity range	Operating and storage: 35% to 85% (with no condensation)
Charging method	Charged in Touch Finder (FQ-MD31). AC adapter (FQ-AC□) is required.
Charging time *1	2.0 h
Battery backup life *2	300 charging cycles
Weight	50 g max.

^{*1} This value is only a guideline. No guarantee is implied. The value will be affected by operating conditions.

Sysmac Studio

_		
Item	Requirement	
Operating system (OS) *1, *2 Japanese or English system	Windows 7 (32-bit/64-bit version)/ Windows 8 (32-bit/64-bit version)/ Windows 8.1 (32-bit/64-bit version)/ Windows 10 (32-bit/64-bit version)	
CPU	Windows computers with Celeron 540 (1.8 GHz) or faster CPU. Core i5 M520 (2.4 GHz) or equivalent or faster recommended	
Main memory	2GB min.	
Hard disk	At least 1.6 GB of available space *3	
Display	XGA 1024 × 768, 1600 million colors. WXGA 1280 × 800 min. recommended	
Disk drive	DVD-ROM drive	
Communications ports	USB port corresponded to USB 2.0, or Ethernet port	

- *1 Sysmac Studio Operating System Precaution: System requirements and hard disk space may vary with the system environment.
- *2 The following restrictions apply when Sysmac Studio is used with Microsoft Windows 7 or Windows 8.

 Some Help files cannot be accessed.

 The Help files can be accessed if the Help program distributed by

The Help files can be accessed if the Help program distributed by Microsoft for Windows (WinHlp32.exe) is installed. Refer to the Microsoft homepage listed below or contact Microsoft for details on installing the file. (The download page is automatically displayed if the Help files are opened while the user is connected to the Internet.)

http://support.microsoft.com/kb/917607/en-us

FQ-M Series EtherCAT Communications Specifications

Item	Specifications
Communications standard	IEC 61158 Type12
Physical layer	100BASE-TX (IEEE802.3)
Connector	M12 × 2 E-CAT IN : EtherCAT (IN) E-CAT OUT : EtherCAT (OUT)
Communications media Use the cables for FQ-MWN or FQ-WN series.	
Communications distance Use the communication cable within the length of FQ-MWN or FQ-WN or FQ-WN series cables.	
Process data Variable PDO Mapping	
Mailbox (CoE) Emergency messages, SDO requests, SDO responses, and SDO information	
Distributed clock Synchronization with DC mode 1	
L/A IN (Link/Activity IN) × 1, L/A OUT (Link/Activity OUT) × 1, RUN × 1, ERR × 1	

Version Information

FQ-M Series and Programming Devices

	Required Programming Device		
FQ-M Series	Sysmac Studio Standard Edition/Vision Edition		
	Ver.1.00	Ver.1.01 or higher	
FQ-MS (-M) FQ-MS (-M)-ECT	Not supported	Supported	

^{*2} This value is only a guideline. No guarantee is implied. The value will be affected by operating conditions.


^{*3} This value is only a guideline. No guarantee is implied. The value will be affected by the operating environment and operating conditions.

^{*2} This is a guideline for the time required for the capacity of the Battery to be reduced to 60% of the initial capacity. No guarantee is implied. The value will be affected by the operating environment and operating conditions.

^{*3} To use the file logging function, additional memory area to save the logging data is necessary.

Components and Functions

Sensor

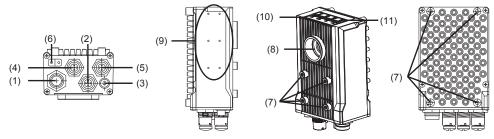


No.	Name	Description
(1)	I/O Cable connector	An I/O Cable is used to connect the Sensor to the power supply and external I/O.
(2)	Ethernet connector	An Ethernet cable is used to connect the Sensor to external devices such as PLCs, the Touch Finder, or computers.
(3)	Lighting connector	Connect an external lighting (strobe controller).
(4)	EtherCAT connector (IN)*	Connect an EtherCAT compatible device.
(5)	EtherCAT connector (OUT)*	Connect an EtherCAT compatible device.
(6)	Node address switch *	Set the node address for EtherCAT communications.
(7)	Installation holes	Holes to install and secure the camera.
(8)	C-mount lens connection part	Install the C-mount lens in this part. Determine the field of view depending on the measurement target and select a suitable CCTV lens (C-mounting lens).

No.	Name		Description
(9)	Strobe controller connection holes		Install the strobe controller in this part. FL-TCC1 can be mounted.
	Measure-	OR	Lit in orange while OR signal is ON.
(10)	ment process Operation indicators	ETN	Lit in orange while in Ethernet communications.
` ,		ERROR	Lit in red when an error occurs.
		BUSY	Lit in green while the sensor is processing.
	EtherCAT Operation indicators L/A OUT ECAT RUN ECAT ERROR	L/A IN	Lit in green when Link with EtherCAT device is established and flickers in green when communicating (data IN).
(11)		L/A OUT	Lit in green when Link with EtherCAT device is established and flickers in green when communicating (data OUT).
		ECAT RUN	Lit in green when EtherCAT communication is available.
		Lit in red when an EtherCAT communications error occurs.	

^{*} FQ-MS $\square\square$ -ECT and FQ-MS $\square\square$ -M-ECT only.

Touch Finder

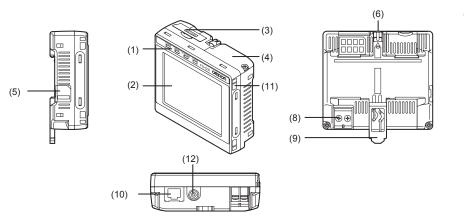

No.	Name		Description
	Operation indicators	POWER	Lights green when the Touch Finder is turned ON.
		ERROR	Lights red when an error occurs.
(1)		SD ACCESS	Lights yellow when an SD card is inserted. Flashes yellow when the SD card is being accessed.
		CHARGE *	Lights orange when the Battery is charging.
(2)	LCD/touch panel		Displays the setting menu, measurement results, and images input by the camera.
(3)	SD card slot		An SD card can be inserted.
(4)	Battery cover *		The Battery is inserted behind this cover. Remove the cover when mounting or removing the Battery.
(5)	Power supply switch		The Battery is inserted behind this cover. Remove the cover when mounting or removing the Battery.

No.	Name	Description
(6)	Touch pen holder	The touch pen can be stored here when it is not being used.
(7)	Touch pen	Used to operate the touch panel.
(8)	DC power supply connector	Used to connect a DC power supply.
(9)	Slider	Used to mount the Touch Finder to a DIN Track.
(10)	Ethernet port	Used when connecting the Touch Finder to the Sensor with an Ethernet cable. Insert the connector until it locks in place.
(11)	Strap holder	This is a holder for attaching the strap.
(12)	AC power supply connector *	Used to connect the AC adapter.


^{*} Applicable to the FQ-MD31 only.


Dimensions (Unit: mm)

Sensor

FQ-MS120/MS120-M FQ-MS125/MS125-M


MOUNTING SCREW HOLES (1)




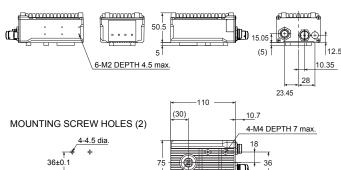

22.08

FQ-MS120-ECT/MS120-M-ECT FQ-MS125-ECT/MS125-M-ECT

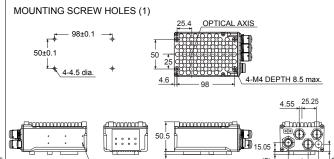

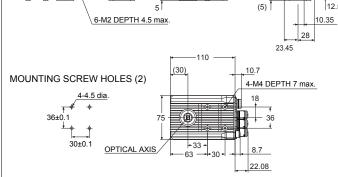


Touch Finder

30±0.1


OPTICAL AXIS

FQ-MD30/MD31

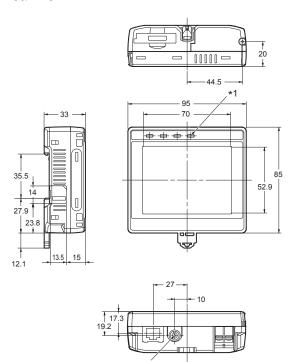


- Provided with FQ-MD31 only.
- The dimension of the panel mounting adapter does not include that of a FQ-MD□□.

Panel Mounting Adapter *2

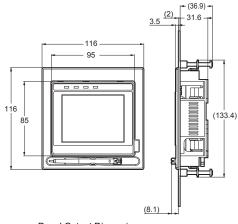


Panel Cutout Dimensions

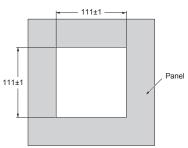

Cables


 For EtherCAT and Ethernet cable Angle:M12/ Straight:RJ45

FQ-MWNL005/010




* Cable is available in 5 m/10 m.

Straight type (M12/RJ45) FQ-WN005/010




 For EtherCAT cable Angle type (M12/M12) FQ-MWNEL005/010




* Cable is available in 5 m/10 m.

Straight type (M12/M12) FQ-MWNE005/010

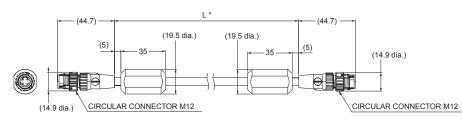


* Cable is available in 5 m/10 m.

● I/O Cables Angle type FQ-MWDL005/010




* Cable is available in 5 m/10 m.

Straight type FQ-MWD005/010

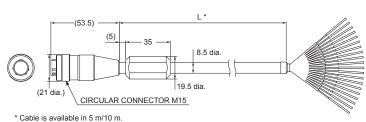


17


Optical Chart

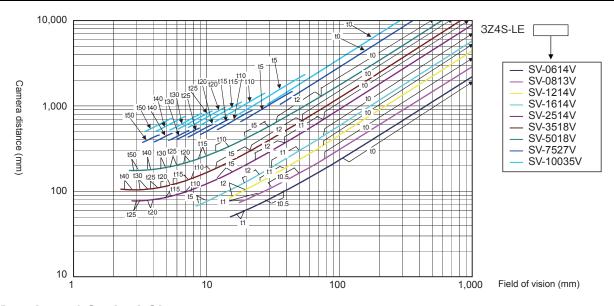

Meaning of Optical Chart

The X axis of the optical chart shows the field of vision (mm) *1, and the Y axis of the optical chart shows the camera installation distance (mm).*2

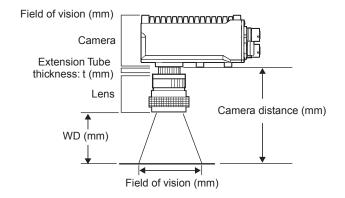



- *1. The lengths of the fields of vision given in the optical charts are the lengths of the Y axis.
- *2. The vertical axis represents WD for small cameras.

Related Manuals

Cat. No.	Model number	Manual
Z314	FQ-MS□□(-M) FQ-MS□□(-M)-ECT	Specialized Vision Sensor for Positioning FQ-M-Series User's Manual
W504	SYSMAC-	Sysmac Studio OPERATION MANUAL

READ AND UNDERSTAND THIS DOCUMENT

Please read and understand this document before using the products. Please consult your OMRON representative if you have any questions or comments.

WARRANTY

OMRON's exclusive warranty is that the products are free from defects in materials and workmanship for a period of one year (or other period if specified) from date of sale by OMRON.

OMRON MAKES NO WARRANTY OR REPRESENTATION, EXPRESS OR IMPLIED, REGARDING NON-INFRINGEMENT, MERCHANTABILITY, OR FITNESS FOR PARTICULAR PURPOSE OF THE PRODUCTS. ANY BUYER OR USER ACKNOWLEDGES THAT THE BUYER OR USER ALONE HAS DETERMINED THAT THE PRODUCTS WILL SUITABLY MEET THE REQUIREMENTS OF THEIR INTENDED USE. OMRON DISCLAIMS ALL OTHER WARRANTIES, EXPRESS OR IMPLIED.

LIMITATIONS OF LIABILITY

OMRON SHALL NOT BE RESPONSIBLE FOR SPECIAL, INDIRECT, OR CONSEQUENTIAL DAMAGES, LOSS OF PROFITS OR COMMERCIAL LOSS IN ANY WAY CONNECTED WITH THE PRODUCTS, WHETHER SUCH CLAIM IS BASED ON CONTRACT, WARRANTY, NEGLIGENCE, OR STRICT LIABILITY.

In no event shall responsibility of OMRON for any act exceed the individual price of the product on which liability is asserted.

IN NO EVENT SHALL OMRON BE RESPONSIBLE FOR WARRANTY, REPAIR, OR OTHER CLAIMS REGARDING THE PRODUCTS UNLESS OMRON'S ANALYSIS CONFIRMS THAT THE PRODUCTS WERE PROPERLY HANDLED, STORED, INSTALLED, AND MAINTAINED AND NOT SUBJECT TO CONTAMINATION, ABUSE, MISUSE, OR INAPPROPRIATE MODIFICATION OR REPAIR.

SUITABILITY FOR USE

THE PRODUCTS CONTAINED IN THIS DOCUMENT ARE NOT SAFETY RATED. THEY ARE NOT DESIGNED OR RATED FOR ENSURING SAFETY OF PERSONS, AND SHOULD NOT BE RELIED UPON AS A SAFETY COMPONENT OR PROTECTIVE DEVICE FOR SUCH PURPOSES. Please refer to separate catalogs for OMRON's safety rated products.

OMRON shall not be responsible for conformity with any standards, codes, or regulations that apply to the combination of products in the customer's application or use of the product.

At the customer's request, OMRON will provide applicable third party certification documents identifying ratings and limitations of use that apply to the products. This information by itself is not sufficient for a complete determination of the suitability of the products in combination with the end product, machine, system, or other application or use.

The following are some examples of applications for which particular attention must be given. This is not intended to be an exhaustive list of all possible uses of the products, nor is it intended to imply that the uses listed may be suitable for the products:

- · Outdoor use, uses involving potential chemical contamination or electrical interference, or conditions or uses not described in this document.
- Nuclear energy control systems, combustion systems, railroad systems, aviation systems, medical equipment, amusement machines, vehicles, safety equipment, and installations subject to separate industry or government regulations.
- Systems, machines, and equipment that could present a risk to life or property.

Please know and observe all prohibitions of use applicable to the products.

NEVER USE THE PRODUCTS FOR AN APPLICATION INVOLVING SERIOUS RISK TO LIFE OR PROPERTY WITHOUT ENSURING THAT THE SYSTEM AS A WHOLE HAS BEEN DESIGNED TO ADDRESS THE RISKS, AND THAT THE OMRON PRODUCT IS PROPERLY RATED AND INSTALLED FOR THE INTENDED USE WITHIN THE OVERALL EQUIPMENT OR SYSTEM.

PERFORMANCE DATA

Performance data given in this document is provided as a guide for the user in determining suitability and does not constitute a warranty. It may represent the result of OMRON's test conditions, and the users must correlate it to actual application requirements. Actual performance is subject to the OMRON Warranty and Limitations of Liability.

CHANGE IN SPECIFICATIONS

Product specifications and accessories may be changed at any time based on improvements and other reasons.

It is our practice to change model numbers when published ratings or features are changed, or when significant construction changes are made. However, some specifications of the product may be changed without any notice. When in doubt, special model numbers may be assigned to fix or establish key specifications for your application on your request. Please consult with your OMRON representative at any time to confirm actual specifications of purchased products.

DIMENSIONS AND WEIGHTS

Dimensions and weights are nominal and are not to be used for manufacturing purposes, even when tolerances are shown.

ERRORS AND OMISSIONS

The information in this document has been carefully checked and is believed to be accurate; however, no responsibility is assumed for clerical, typographical, or proofreading errors, or omissions.

PROGRAMMABLE PRODUCTS

OMRON shall not be responsible for the user's programming of a programmable product, or any consequence thereof.

COPYRIGHT AND COPY PERMISSION

This document shall not be copied for sales or promotions without permission.

This document is protected by copyright and is intended solely for use in conjunction with the product. Please notify us before copying or reproducing this document in any manner, for any other purpose. If copying or transmitting this document to another, please copy or transmit it in its entirety.

Note: Do not use this document to operate the Unit.

OMRON Corporation Industrial Automation Company

Tokyo, JAPAN

Contact: www.ia.omron.com

Regional Headquarters OMRON EUROPE B.V.

Wegalaan 67-69-2132 JD Hoofddorp The Netherlands
Tel: (31)2356-81-300/Fax: (31)2356-81-388

OMRON ASIA PACIFIC PTE. LTD. No. 438A Alexandra Road # 05-05/08 (Lobby 2), Alexandra Technopark, Singapore 119967 Tel: (65) 6835-3011/Fax: (65) 6835-2711

OMRON ELECTRONICS LLC

One Commerce Drive Schaumburg, IL 60173-5302 U.S.A. Tel: (1) 847-843-7900/Fax: (1) 847-843-7787

OMRON (CHINA) CO., LTD.
Room 2211, Bank of China Tower,
200 Yin Cheng Zhong Road,
PuDong New Area, Shanghai, 200120, China
Tel: (86) 21-5037-2222/Fax: (86) 21-5037-2200

Authorized Distributor:

© OMRON Corporation 2011 All Rights Reserved. In the interest of product improvement, specifications are subject to change without notice.

CSM_11_2_1217 Cat. No. Q183-E1-01

0911 (0911)