# imall

Chipsmall Limited consists of a professional team with an average of over 10 year of expertise in the distribution of electronic components. Based in Hongkong, we have already established firm and mutual-benefit business relationships with customers from, Europe, America and south Asia, supplying obsolete and hard-to-find components to meet their specific needs.

With the principle of "Quality Parts, Customers Priority, Honest Operation, and Considerate Service", our business mainly focus on the distribution of electronic components. Line cards we deal with include Microchip, ALPS, ROHM, Xilinx, Pulse, ON, Everlight and Freescale. Main products comprise IC, Modules, Potentiometer, IC Socket, Relay, Connector. Our parts cover such applications as commercial, industrial, and automotives areas.

We are looking forward to setting up business relationship with you and hope to provide you with the best service and solution. Let us make a better world for our industry!



### Contact us

Tel: +86-755-8981 8866 Fax: +86-755-8427 6832 Email & Skype: info@chipsmall.com Web: www.chipsmall.com Address: A1208, Overseas Decoration Building, #122 Zhenhua RD., Futian, Shenzhen, China



### **Series HS TS PS**

Toggles

#### **GENERAL SPECIFICATIONS**

Te		
	Electrical Canacity	
Rockers	Electrical Capacity Resistive Load:	HS13: 6A @ 125V AC, 3A @ 250V AC, or 5A @ 30V DC HS16: 12A @ 125V AC or 6A @ 250V AC TS: 6A @ 125/250V AC
Pushbuttons	Other Ratings	PS: 30A @ 125/250V AC
Pus	Contact Resistance:	10 milliohms maximum
ЪВ	Insulation Resistance:	200 megohms minimum @ 500V DC
ated	Dielectric Strength:	1,500V AC minimum for 1 minute minimum
, min	Mechanical Life:	HS: 15,000 operations minimum
		TS: 30,000 operations minimum PS: 10,000 operations minimum
nable	Electrical Life:	HS: 7,500 operations minimum
Programmable III uminated		TS: 10,000 operations minimum
Prog	Indexing:	PS: 5,000 operations minimum 30° for HS16, TS & PS; 45° for HS13
s	Contact Timing:	Nonshorting HS13; Shorting & Nonshorting HS16; Nonshorting TS; Nonshorting PS
Keylocks	Range of Operating Torque:	HS16: 0.54 ~ 0.64Nm for first pole & 0.05Nm for each additional pole
Key		HS13: $0.15 \sim 0.24$ Nm TS: 0.09 Nm for first role 8 (0.07 Nm whether strategy of roles) v 0.12 Nm for additional roles
		TS: 0.09Nm for first pole & (0.07Nm x total number of poles) + 0.13Nm for additional poles PS: 0.14Nm for each pole
ies		
Rotaries	Materials & Finishes	
Ľ	Knob:	Phenolic resin
	Shaft:	HS13: brass; HS16, TS, & PS: brass with nickel plating
Slides	Bushing: Case:	HS13: brass; HS16, TS, & PS: brass with nickel plating Phenolic resin
S	Movable Contacts:	HS13, HS16, & TS phosphor bronze; PS silver alloy
	Stationary Contacts:	HS13, HS16, & PS: brass with silver plating; TS: phosphor bronze
es	Terminals:	HS: phosphor bronze; TS & PS: copper with silver plating
Tactiles		
	Environmental Data	
	Operating Temp Range: Humidity:	–10°C through +70°C (+14°F through +158°F) 90 ~ 98% humidity for 96 hours @ 40°C (104°F)
1: 1:	Vibration:	10 ~ 55 Hz with peak-to-peak amplitude of 1.5mm traversing the frequency range
		& returning in 1 minute; 3 right angled directions for 2 hours
	Shock:	50G (490m/s <sup>2</sup> ) acceleration (tested in 3 right angled directions, with 3 shocks in each direction)
Touch	1 II	
To	Installation Mounting Torque:	2.94Nm (26 lb•in)
	Maximum Panel Thickness:	Shown with panel cutouts in following drawings
tors	Soldering Time & Temperature:	Manual Soldering (HS series only): See Profile A in Supplement section.
Indicators		
<u>_</u>	Standards & Certifications	
ies	UL:	File No. E44145 - Recognized only when ordered with marking on switch.
IS SOF		Add "/U" or "/CUL" to end of part number to order UL recognized switch. HS16 models 1– through 6–pole are recognized at 12A @ 125V AC & 6A @ 250V AC
Accessories		See Supplement section to find UL or cULus rating details.
Supplement		
Jppl.		
Sı		




### **Standard Size Rotaries**

## **Series HS**

	6 AMP SINGLE POLE/NONSHORTING/45° INDEXING								
Round	D-flat	Number of	Stopper	Number of	Load		Schematics		
Shaft	Shaft	Positions	Settings	Terminals *	Terminals	HS13X & of Keyway	HS13Y & of Keyway	HS13Z & of Keyway	
HS13X	HS13X-D	2	Fixed	1 COM, 2 LOAD	1&2	20	2 °	2 0 4 0 1 0	
HS13Y	HS13Y-D	3	Fixed	1 COM, 3 LOAD	1, 2, & 3	10	10		
HS13Z	HS13Z-D	4	Fixed	1 COM, 4 LOAD	1, 2, 3, & 4	clori	clowi	clo	


Switch is viewed from shaft end and shown in position 1. Terminal numbers are not on switch. Standard Hardware shown on last page of this section. \* Wire harness & cable assemblies offered only in Americas.

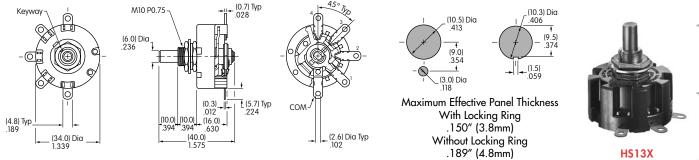

#### 12 AMP/SHORTING & NONSHORTING/30° INDEXING

Knurled Shaft D-flat Shaft		Shaft		Number of	Stopper	Number of		Keyl	
Nonshorting	Shorting	Nonshorting	Shorting	Pole	Positions	Settings	Terminals *	Schematic	
HS16-1	H\$16-1S	H\$16-1N	H\$16-1SN	1P	2-11	2, 3, 4 11	1 COM, 11 LOAD		es
HS16-2	H\$16-2S	H\$16-2N	HS16-2SN	2P	2-11	2, 3, 4 11	2 COM, 22 LOAD	$10$ $1$ $0^2$	<b>G</b> tarie
HS16-3	H\$16-35	HS16-3N	HS16-3SN	3P	2-11	2, 3, 4 11	3 COM, 33 LOAD	100 03	Ro
HS16-4	HS16-4S	HS16-4N	HS16-4SN	4P	2-11	2, 3, 4 11	4 COM, 44 LOAD	90 Qof Keyway	
HS16-5	HS16-5S	HS16-5N	HS16-5SN	5P	2-11	2, 3, 4 11	5 COM, 55 LOAD	80 05	\$
H\$16-6	H\$16-6\$	H\$16-6N	H\$16-6SN	6P	2-11	2, 3, 4 11	6 COM, 66 LOAD		lides


Switch is viewed from shaft end and shown in position 1. Terminal numbers are not on switch. Standard Hardware shown on last page of this section. \* Wire harness & cable assemblies offered only in Americas.

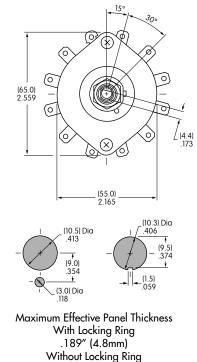

.228" (5.8mm)

Keyway M10 P0.75 (6.0) Dia .236 .(10.0) .394 (24.5) (34.5) 1.358 (0.84) Typ .033 (44.5) 1.752 (54.5) 2.146 (64.5) 2.539 (15.0) (14.0) .591 .551 (74.5) 2.933 \_(7.0) Max .276

- On each deck of multipole devices common and load terminals are in the same positions as shown in the schematic above.
- Switch is viewed from the shaft end and shown in position 1.
- Terminal numbers are on the switch bottom. Stopper positions are molded on the top of the switch.
- Standard Hardware shown on last page of this section.

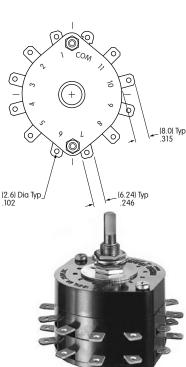

HS16-2N



Toggles

Rockers

**Factiles** 


Touch

G47

## **Series TS**

_	Model	Pole	Number of Positions	Stopper Settings	Number of Terminals	Shaft Type	Schematic
_	TSIN	1P	2-11	2, 3, 4 11	1 COM, 11 LOAD	D Flat	Ç of Keyway
_	TS2N	2P	2-11	2, 3, 4 11	2 COM, 22 LOAD	D Flat	$\begin{array}{c} 10 \\ 9 \\ 9 \\ 0 \end{array} \qquad \qquad$
_	TS3N	ЗP	2-11	2, 3, 4 11	3 COM, 33 LOAD	D Flat	0 0 0 0 0 0 0 0 0 0 0 0 0 0
-	TS4N	4P	2-11	2, 3, 4 11	4 COM, 44 LOAD	D Flat	as shown in this schematic. Switch is viewed from the shaft end and shown in position 1.
_	T\$5N	5P	2-11	2, 3, 4 11	5 COM, 55 LOAD	D Flat	Terminal numbers are on the switch botton Stopper positions are molded on the top o the switch.

**Panel Cutouts** 




Maximum Effective Panel Thickness With Locking Ring .189" (4.8mm) Without Locking Ring .228" (5.8mm)




TS5N

+15° Keyway (4.4) *]* .173  $(\times)$ (44.0) Dia 1.732

Тор

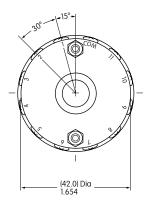

Bottom

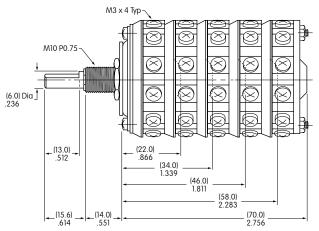



sω

K

e s

Rotaries

Slides

Tactiles


÷


Touch

Indicators

Supplement Accessories

(nurled Shaft	D Flat Shaft	Pole	Number of Positions	Stopper Settings	Number of Terminals	Schematic	- E E	
PS1	PS1N	1P	2-11	2, 3, 4 11	1 COM, 11 LOAD	€ of Keyway		
PS2 PS2N 2P 2-11 2, 3, 411 2 COM, 22 LOAD								
PS3 PS3N 3P 2-11 2, 3, 411 3 COM, 33 LOAD								
PS4	PS4N	4P	2-11	2, 3, 4 11	4 COM, 44 LOAD			
PS5	P\$5N	5P	2-11	2, 3, 4 11	5 COM, 55 LOAD	$0 \qquad 0 \qquad$		
						is schematic. Switch is viewed from re molded on the top of the switch.		
Standard	Hardware sha	wn on last	page of this sectior	1.				
Par	nel Cutout			Тор		Bottom		

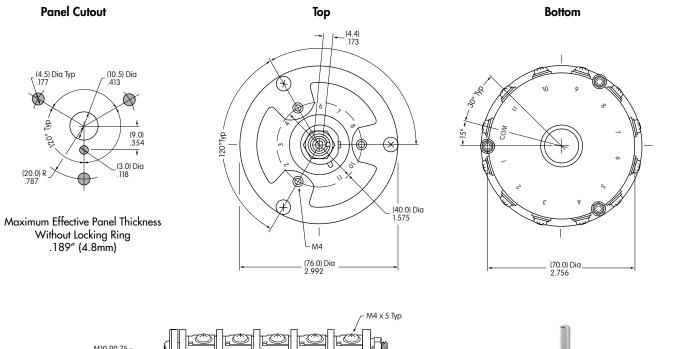

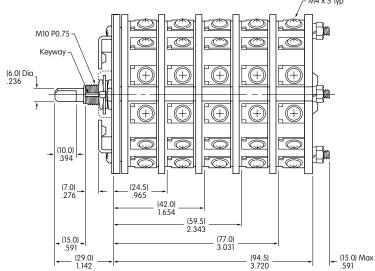



CHES Rotaries

Slides

Tactiles

÷


Touch

Indicators

Supplement Accessories

## Series HS TS PS

### **Standard Size Rotaries**

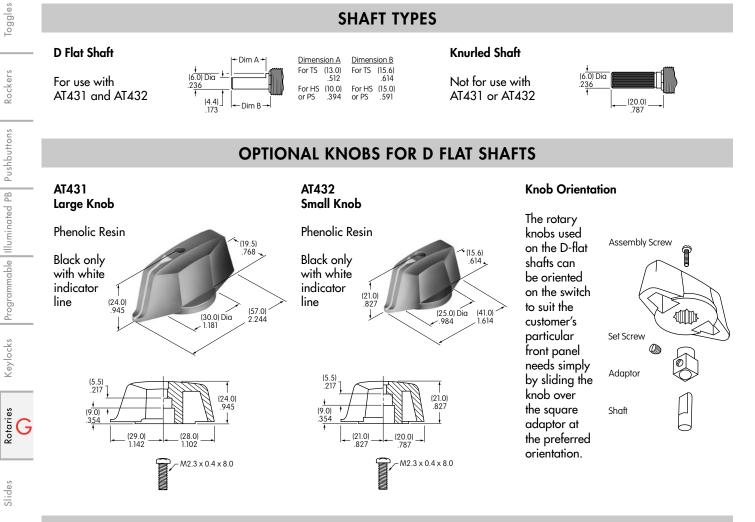

#### **STOPPER SETTING**

#### For HS16, TS, & PS Models

**Factiles** 

÷

Touch

Indicators

Supplement Accessories

The HS16, TS, and PS switches are supplied with the stopper plate set for the maximum number of positions allowed for that model. Prior to installation, the desired stopper setting should be made:

- 1. Be sure the shaft is turned counterclockwise to the extreme left. If the shaft is not turned counterclockwise to the extreme left, proper setting cannot be achieved.
- 2. Loosen the nut far enough to allow raising the stopper plate for resetting.
- 3. Insert the stopper in the numbered hole for the desired stopper setting. Satisfactory switch functioning cannot be assured if the stopper plate is not properly positioned.
- 4. Tighten the nut firmly against the stopped plate.

#### Standard Hardware Supplied with HS, TS, and PS:

AT526 Hex Mounting Nut (quantity 3) AT518 Locking Ring (quantity 1) AT520 Split Lockwasher (quantity 1) Use of mounting supports on PS is optional; screws are not provided.

