



Chipsmall Limited consists of a professional team with an average of over 10 year of expertise in the distribution of electronic components. Based in Hongkong, we have already established firm and mutual-benefit business relationships with customers from,Europe,America and south Asia,supplying obsolete and hard-to-find components to meet their specific needs.

With the principle of “Quality Parts,Customers Priority,Honest Operation,and Considerate Service”,our business mainly focus on the distribution of electronic components. Line cards we deal with include Microchip,ALPS,ROHM,Xilinx,Pulse,ON,Everlight and Freescale. Main products comprise IC,Modules,Potentiometer,IC Socket,Relay,Connector.Our parts cover such applications as commercial,industrial, and automotives areas.

We are looking forward to setting up business relationship with you and hope to provide you with the best service and solution. Let us make a better world for our industry!



Contact us

Tel: +86-755-8981 8866 Fax: +86-755-8427 6832

Email & Skype: info@chipsmall.com Web: www.chipsmall.com

Address: A1208, Overseas Decoration Building, #122 Zhenhua RD., Futian, Shenzhen, China




QM 120 ET

Nema 4 Single Hole Mounting Elapsed Hour Meter

QM 120ET is an easy to mount LCD digital elapsed hour meter. The module features 9999.9 and 99999 hour ranges, resulting in 1/10 hour and 1 hour resolution respectively. A leading zero blanking input is provided, allowing the user to switch off unwanted leading zeros. The module incorporates an output which pulses high after every hour counted. This is particularly useful in applications where maintenance or inspection are required at regular time intervals. The timer features Trip and Total ranges. The Trip range can be reset to zero. To mount the unit into a panel, the user need only drill a single 5.5mm / $\frac{7}{32}$ " hole. The module is fitted to the panel by locating its screw threaded stud through the hole, fitting the washer and tightening the nut provided. The module's 8 connecting wires pass through the hollow stud into the target application, where they can be easily connected as required. A rubber seal is included, providing splashproof protection for the unit when fitted to the meter during installation.

- 🔌 Single Hole Mounting
- 🔌 9999.9 and 99999 Hour Ranges
- 🔌 9mm / 0.35" LCD Digit Height
- 🔌 Reset and Trip/Total Inputs
- 🔌 Leading Zero Blanking Input
- 🔌 Pulse Output Every Hour
- 🔌 Splashproof

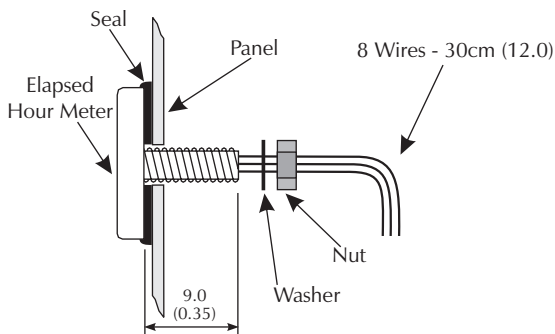

Easy Mounting Elapsed Hour Meter				Stock Number
				QM 120 ET
Specification	Min.	Typ.	Max.	Unit
Resolution	Range 9999.9		0.1	Hour
	Range 99999		1	Hour
Accuracy*		±2	±6	Sec./24Hrs.
Operating temperature range	0		50	°C
Supply voltage (V+)	5		27	V d.c.
Supply current		1.5		mA
Input Low Voltage (V _{IL})**	0		0.5	V
Input High Voltage (V _{IH})***	2		V+	V

* Based upon constant running. There is potential for ±2 seconds error each time the module is powered down and then up again. Over time, the accumulated error approximates to zero.


** Applies to the inputs: Range, V-Sense, LZB, Reset and Trip/Total

*** Applies to V-Sense input only.

SAFETY

To comply with the Low Voltage Directive (LVD 93/68/EEC), input voltages to the module's wires must not exceed 60Vd.c. The user must ensure that the incorporation of the meter into equipment conforms to the relevant sections of BS EN 61010 (Safety Requirements for Electrical Equipment for Measuring, Control and Laboratory Use).

DIMENSIONS All dimensions in mm (inches)

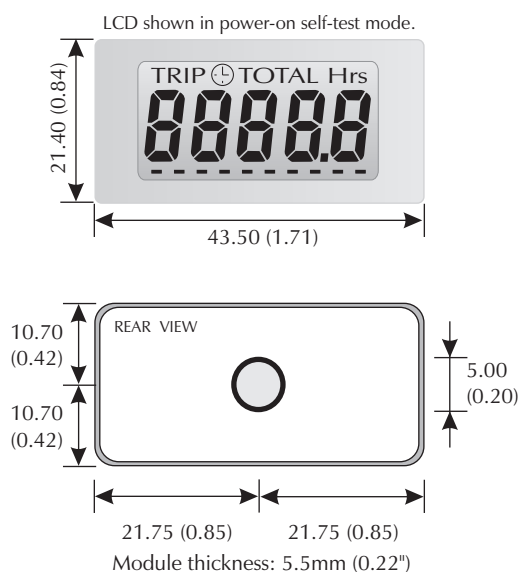

CONNECTION

0	Black	0V
1	Brown	9999.9/99999
2	Red	V+
3	Orange	Voltage Sense
4	Yellow	1 Hr Pulse
5	Green	Leading Zero Blanking
6	Blue	Reset
7	Violet	Trip/Total

FITTING THE Hour Meter

Drill a 5.5mm / $\frac{7}{32}$ " hole in the panel. Fit seal to the rear of the module. Fit the module to the panel by passing its screw threaded stud and the wires through the hole, fitting the washer and spring washer and tightening the nut provided. Take care not to trap any of the connecting wires. Do not overtighten the nut as this may damage the meter.

DO NOT PULL THE WIRES AND DO NOT ALLOW SCREW TERMINALS OR OTHER WIRES TO HANG FROM THE MODULE'S WIRES, AS THIS MAY DAMAGE THE PRODUCT.

WIRE FUNCTIONS


- | | | |
|-----------|------------|--|
| 0. Black | 0V | Negative power supply connection. |
| 1. Brown | RANGE | Do not connect for 99999 Hour range.
Connect to 0V for 9999.9 Hour range. |
| 2. Red | V+ | Positive power supply connection. |
| 3. Orange | V-SENSE | Connect to V+ to start/continue counting elapsed hours.
Connect to 0V or do not connect to read TRIP or TOTAL value without counting elapsed hours. |
| 4. Yellow | PULSE | Normally at 0V, this output goes High (+3.3V) every 100 hour interval in TRIP mode. |
| 5. Green | LZB | Do not connect to display leading zeros.
Connect to 0V to blank all leading zeros.
When reading is 0000.0 or 00000, leading zeros are not blanked. |
| 6. Blue | RESET | Connect momentarily to 0V to reset the display to zero (internally connected to V+ via pull-up resistor). |
| 7. Violet | TRIP/TOTAL | Do not connect for TOTAL mode operation. In TOTAL mode, the elapsed hour meter cannot be reset to zero.
Connect to 0V for TRIP mode operation. In TRIP mode, the elapsed hour meter can be reset to zero. |

Warning : Do not connect the following wires to V+: RANGE, PULSE, LZB, RESET, TRIP/TOTAL, as this may damage the meter. The user must incorporate suitable protection circuitry in applications where the voltage to any of the meter's wires can exceed 27V d.c., including transient conditions, else damage to the meter may occur. In particular, for applications in harsh electrical environments, e.g. automotive, suitable external protection must be provided to protect against "load dump" conditions, transients, etc.


DISPLAY FUNCTIONS

- 8888.8** The 5 digit readout displays elapsed time in hours.
TRIP This symbol is displayed when trip mode is selected (see Wire Functions above)
TOTAL This symbol is displayed when total mode is selected (see Wire Functions above)
 ----- The 10-segment incrementing bar indicates that the module is working correctly and counting hours.


APPLICATIONS

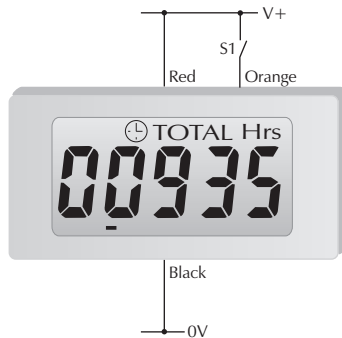


Basic 3-wire operation:
 - 99999 Hour range
 - Leading Zeros are displayed
 - Timing in TOTAL mode
 Open S1 to read TOTAL value without counting hours.

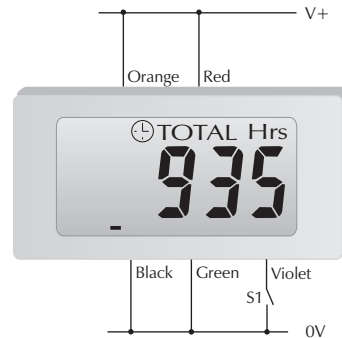

Leading zeros blanked.
 Close S1 to select TRIP mode.

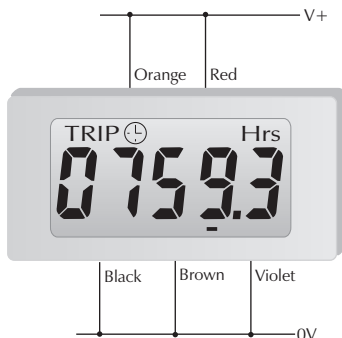

9999.9 Hour range
 - Leading Zeros are displayed
 - Timing in TRIP mode

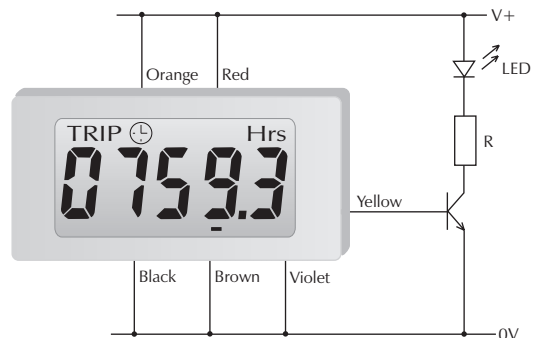

Using the PULSE O/P to drive an LED.
 The LED will illuminate once after every hour.