



Chipsmall Limited consists of a professional team with an average of over 10 year of expertise in the distribution of electronic components. Based in Hongkong, we have already established firm and mutual-benefit business relationships with customers from,Europe,America and south Asia,supplying obsolete and hard-to-find components to meet their specific needs.

With the principle of “Quality Parts,Customers Priority,Honest Operation,and Considerate Service”,our business mainly focus on the distribution of electronic components. Line cards we deal with include Microchip,ALPS,ROHM,Xilinx,Pulse,ON,Everlight and Freescale. Main products comprise IC,Modules,Potentiometer,IC Socket,Relay,Connector.Our parts cover such applications as commercial,industrial, and automotives areas.

We are looking forward to setting up business relationship with you and hope to provide you with the best service and solution. Let us make a better world for our industry!



Contact us

Tel: +86-755-8981 8866 Fax: +86-755-8427 6832

Email & Skype: info@chipsmall.com Web: www.chipsmall.com

Address: A1208, Overseas Decoration Building, #122 Zhenhua RD., Futian, Shenzhen, China






UNLOCK THE UNLIMITED POSSIBILITIES
OF ROBOTICS WITH THE BRACCIO

BRACCIO

QUICK

START

GUIDE

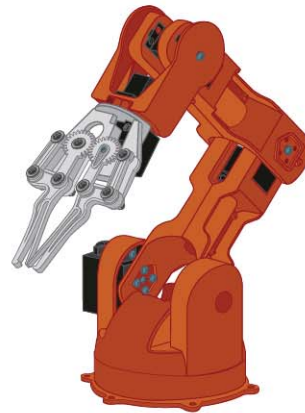

WELCOME

1 FOLLOW ASSEMBLY INSTRUCTIONS

2 CONNECT TO YOUR COMPUTER

3 ENJOY!

THIS KIT INCLUDES

✓ PLASTIC PARTS

1x 

1x 

1x 

1x 

4x 

1x 

1x 

1x 

2x 

1x 

5x 

1x 

1x 

✓ SCREWS

52x  Ø 3 mm

4x  Ø 2 mm

7x 

✓ FLAT WASHER

16x 

✓ HEXAGON NUT

7x 

✓ SPRINGS

2x 

✓ SERVO MOTORS

2 x SR 311, 4 x SR 431

✓ SHIELD

1 x Arduino compatible shield

✓ POWER SUPPLY

1 x 5 V, 5 A

✓ SCREWDRIIVER

1 x Phillips screwdriver

✓ BOX WRENCH

1 x Double Hexagon Box Wrench

✓ SPIRAL PROTECTION

1 x Spiral Cable Protection Wrap

ASSEMBLY INSTRUCTIONS

CAUTION: DO NOT OVER-TIGHTEN SCREWS

1




M2
4 × ∅ 3mm

2




1 × ∅ 2mm
1 ×

3

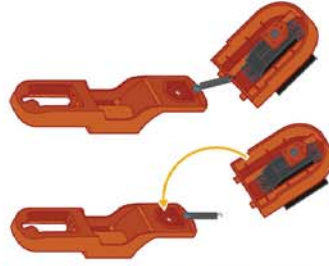

4

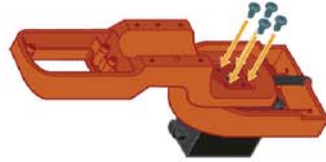



4 × ∅ 3mm

5



M3
3 × ∅ 3mm
1 × ∅ 2mm
1 ×

7

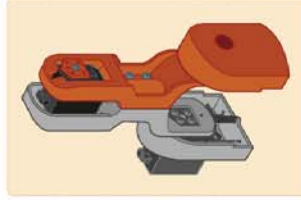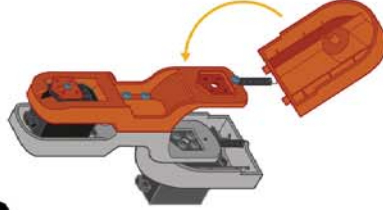

6





4 × ∅ 3mm

8




M1
4 × ∅ 3mm

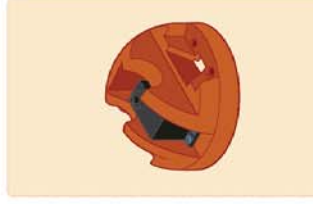

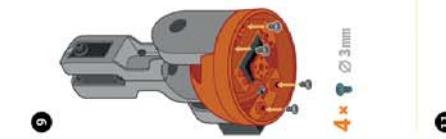

4 × Ø 3mm

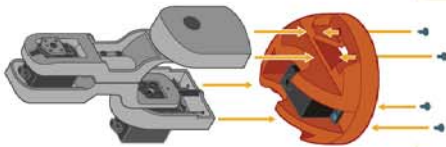


7




4 × Ø 3mm


8

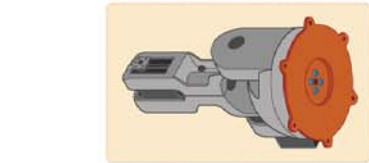

9

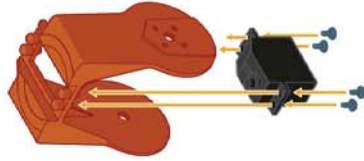


10

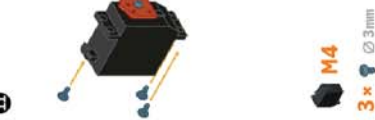


M4
3 × Ø 3mm

11

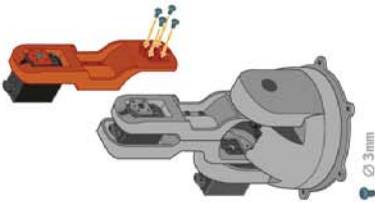


4 × Ø 3mm

12

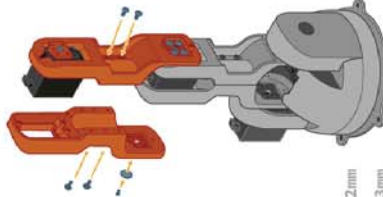


1 × Ø 2mm
1 × Ø 2mm
4 × Ø 3mm

13

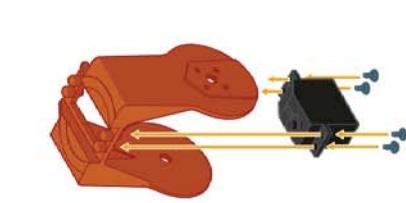




14







M5
4 × Ø 3mm

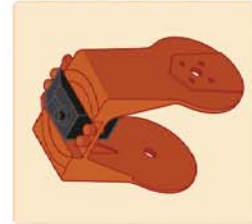




15

1 × Ø 2mm
1 × Ø 2mm
4 × Ø 3mm

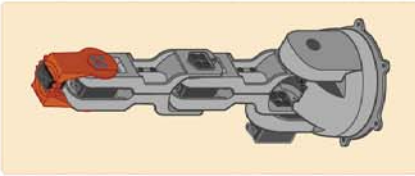
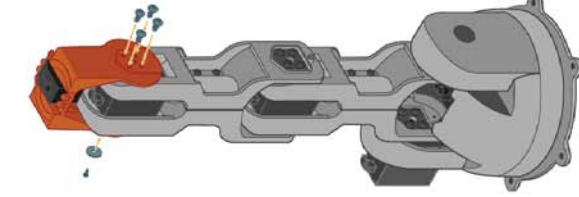
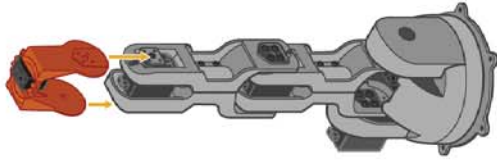


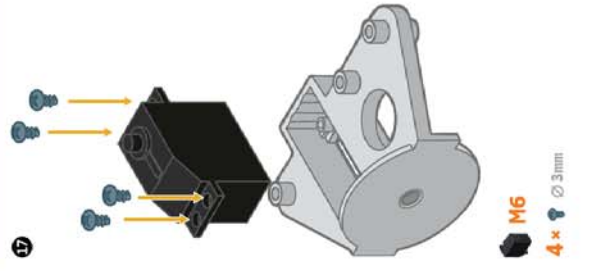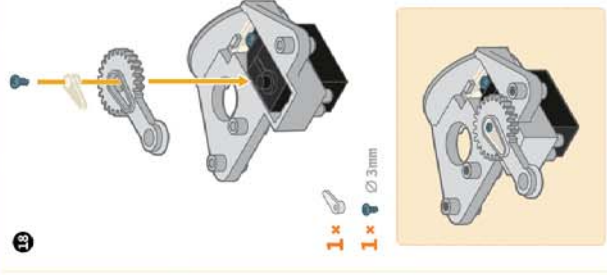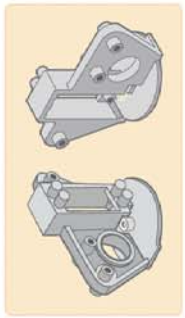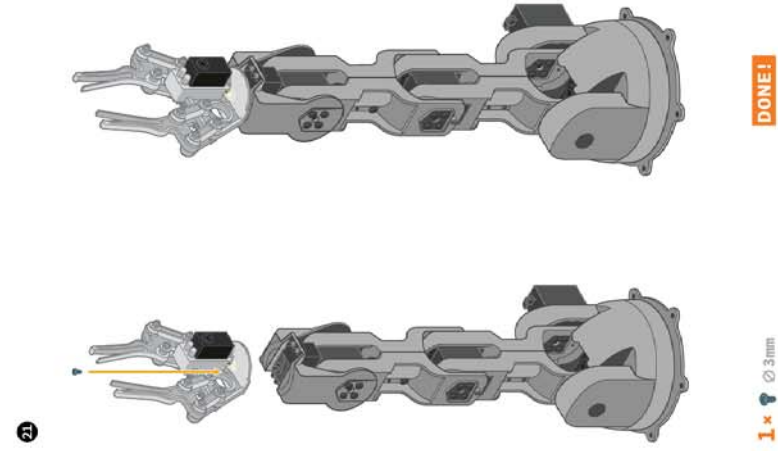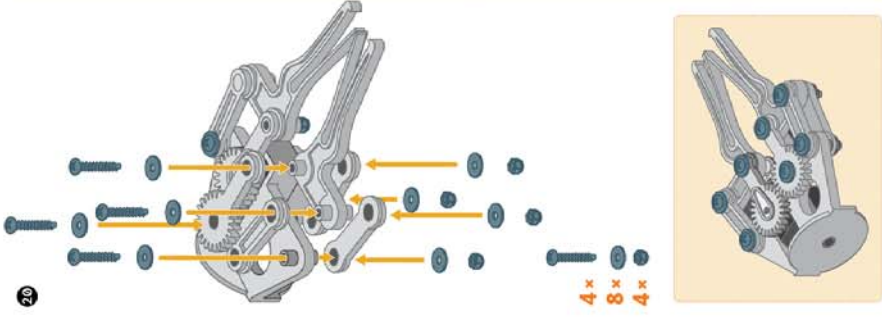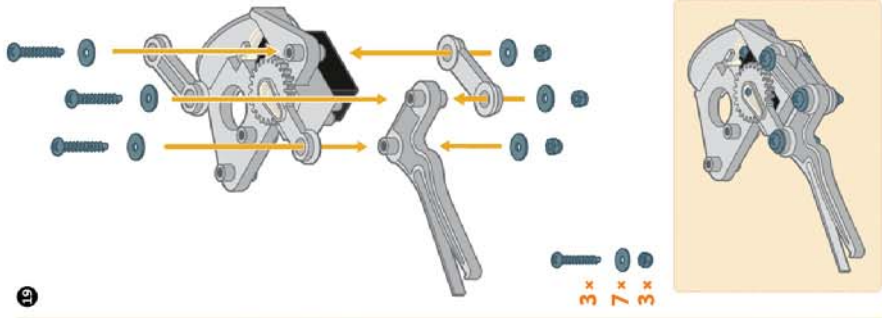

DESIGNED FOR VERSATILITY,
THE BRACCIO CAN SUPPORT VARIOUS
OBJECTS ON THE END OF THE ARM

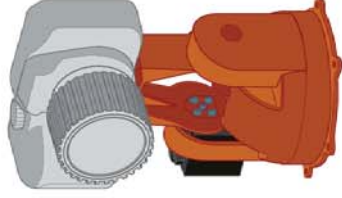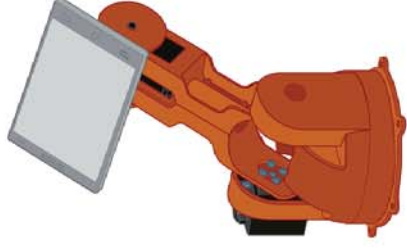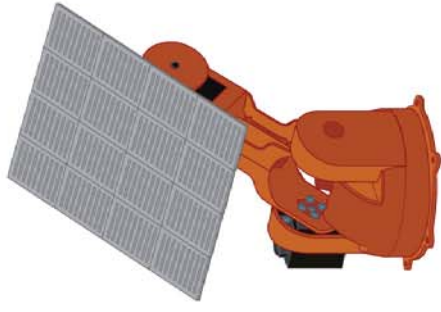


UNLOCK THE UNLIMITED
POSSIBILITIES OF ROBOTICS
WITH THE BRACCIO

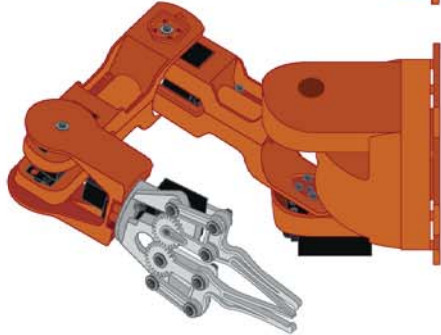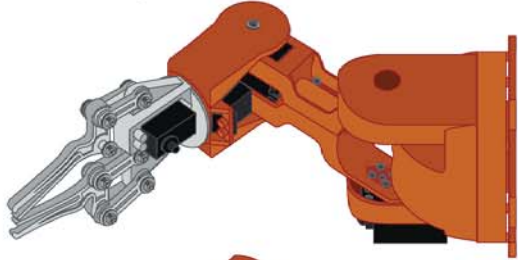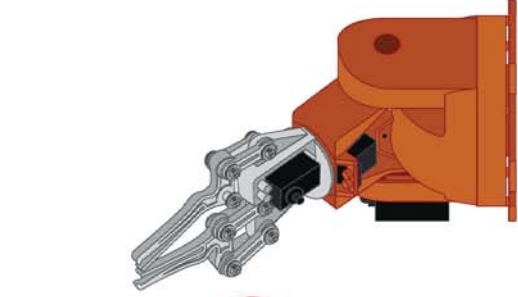

MOTORS ASSEMBLY

- MOTOR "1" BASE
- MOTOR "2" SHOULDER
- MOTOR "3" ELBOW
- MOTOR "4" VERTICAL WRIST
- MOTOR "5" ROTATORY WRIST
- MOTOR "6" GRIPPER

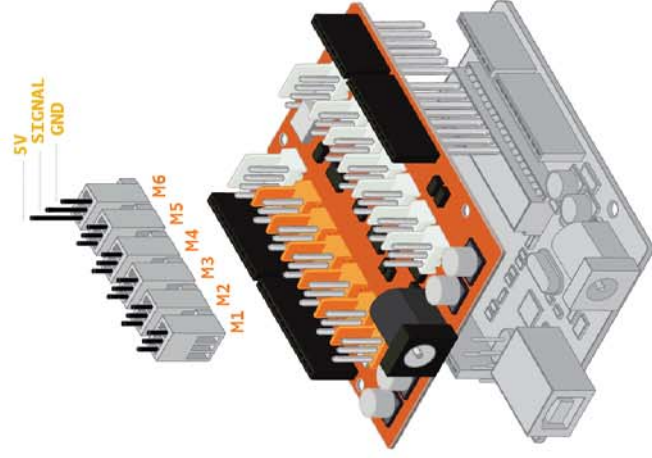

ARDUINO COMPATIBLE BOARDS

- UNO
- UNO SMD
- DUE
- MEGA 2560
- MEGA ADK
- ETHERNET
- LEONARDO
- LEONARDO ETH
- YUN
- TIAN
- UNO WIFI

CONNECTING TO YOUR COMPUTER


- 1 DOWNLOAD THE SOFTWARE**
Get the latest version of the Arduino Software from ARDUINO.ORG/DOWNLOADS
- 2 CONNECT THE BRACCIO**
Plug the USB cable to the control board port, and wait for hardware installation to finish
- 3 CONNECT YOUR BOARD**
Start the Arduino IDE
Select **Tools** → **Board** → Select the board you are using
Select the correct serial port from **Tools** → **Port**
- 4 LOAD A SKETCH**
Select a sketch from **File** → **Examples** → **Braccio**
Press the Upload button and wait for the program to finish uploading
CONGRATULATIONS!
You are ready to experiment and play

ONLINE TUTORIALS AND INFORMATION:
ARDUINO.ORG/BRACCIO

RUN YOUR SKETCH

1 TESTBRACCIO90

"testBraccio90" is a setup sketch allowing you to check the alignment of all the servo motors. It is also the first sketch you need to run on the Braccio. The sketch will position the Braccio in the upright position as seen in the picture below. If it doesn't, put the Braccio in the exact setting, you need to realign the position of the servo motors.

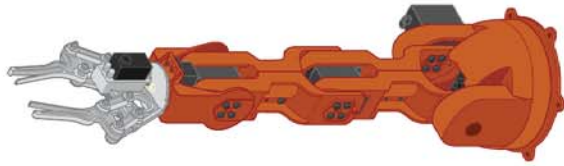

M1 = base degrees
M2 = shoulder degrees
M3 = elbow degrees
M4 = vertical wrist degrees
M5 = rotatory wrist degrees
M6 = gripper degrees

Braccio begin();

Initialization functions and set up the initial position for Braccio.

All the servo motors will be positioned in the "safety" position: M1 = 90°, M2 = 45°, M3 = 180°, M4 = 180°, M5 = 90°, M6 = 10°.

The sketch will position the Braccio in the upright position.

Step Delay - a milliseconds delay between the movement of each servo. Allowed values: from 10 to 30 msec

M1 allowed values from 0° to 180°
M2 allowed values from 15° to 165°
M3 allowed values from 0° to 180°
M4 allowed values from 0° to 180°
M5 allowed values from 0° to 180°
M6 allowed values from 10° to 73° (10°: the gripper is open, 73°: the gripper is closed).

```
1 #include <Braccio.h>  
2 #include <Servo.h>
```

```
3 Servo base;  
4 Servo shoulder;  
5 Servo elbow;  
6 Servo wrist_ver;  
7 Servo wrist_rot;  
8 Servo gripper;
```

```
9 void setup() {  
10   Braccio begin();  
11 }
```

```
12 void loop() {  
13   // (step delay, M1, M2, M3, M4, M5, M6);  
14   Braccio ServoMovement(20, 90, 90, 90, 90, 90, 73);  
15 }
```

6 SIMPLEMENTATIONS

The "simpleMovements" sketch shows you how each servo motor of the Braccio moves.

M1 = base degrees
M2 = shoulder degrees
M3 = elbow degrees
M4 = vertical wrist degrees
M5 = rotatory wrist degrees
M6 = gripper degrees

Braccio.begin();

Initialization functions and set up the initial position for Braccio.

All the servo motors will be positioned in the "safety" position: M1 = 90°, M2 = 45°, M3 = 180°, M4 = 180°, M5 = 90°, M6 = 10°.

The delay() function lets you stop the

Arduino from executing anything for a period of time.

Step Delay: a milliseconds delay between the movement of each servo. Allowed values: from 10 to 30 msec.

M1 allowed values from 0° to 180°

M2 allowed values from 15° to 165°

M3 allowed values from 0° to 180°

M4 allowed values from 0° to 180°

M5 allowed values from 0° to 180°

M6 allowed values from 10° to 73°. (0°: the gripper is open, 73°: the gripper is closed).

```
1 #include <Braccio.h>
2 #include <Servo.h>
```

```
3 Servo base;
4 Servo shoulder;
5 Servo elbow;
6 Servo wrist_ver;
7 Servo wrist_rot;
8 Servo gripper;
```

```
9 void setup() {
10   Braccio.begin();
11 }
```

```
12 void loop() {
13   //step delay M1, M2, M3, M4, M5, M6);
14   Braccio.ServoMovement(20, 15, 0, 180, 180, 0, 73);
15   delay(1000);
16   Braccio.ServoMovement(20, 165, 180, 0, 0, 180, 10);
17   delay(1000);
18 }
```

6 TAKETHESPONGE

This example tells the Braccio to take the sponge from the table and show it to the user.

M1 = base degrees
M2 = shoulder degrees
M3 = elbow degrees
M4 = vertical wrist degrees
M5 = rotatory wrist degrees
M6 = gripper degrees

Braccio.begin();

Initialization functions and set up the initial position for Braccio.

All the servo motors will be positioned in the "safety" position: M1 = 90°, M2 = 45°, M3 = 180°, M4 = 180°, M5 = 90°, M6 = 10°.

Starting position

One second **delay**.

The braccio moves to the sponge.

Close the tongue to take the sponge.

Brings the sponge upwards.

Show the sponge.

Return to the start position.

Open the gripper.

For **Step Delay** and **Motors** values please refer to the previous sketches.

```
1 #include <Braccio.h>
2 #include <Servo.h>
```

```
3 Servo base;
4 Servo shoulder;
5 Servo elbow;
6 Servo wrist_ver;
7 Servo wrist_rot;
8 Servo gripper;
```

```
9 void setup() {
10   Braccio.begin();
11 }
```

```
12 void loop() {
13   //((step delay: M1, M2, M3, M4, M5, M6):
14   Braccio.ServoMovement(20, 0, 45, 180, 180, 90, 10);
15   delay(1000);
16   Braccio.ServoMovement(20, 0, 90, 180, 180, 90, 10);
17   Braccio.ServoMovement(10, 0, 90, 180, 180, 90, 60);
18   Braccio.ServoMovement(20, 0, 45, 180, 45, 0, 60);
19   Braccio.ServoMovement(20, 180, 45, 180, 45, 0, 60);
20   Braccio.ServoMovement(20, 0, 90, 180, 180, 90, 60);
21   Braccio.ServoMovement(20, 0, 90, 180, 180, 90, 10);
22 }
```


CERTIFICATE OF ORIGIN

Thank you for choosing a Linkakit product. This product was produced, assembled and tested in Italy. The production process is controlled by Linkakit and all of the manufacturing, assembling, testing and packaging took place entirely in Italy.

MANUFACTURING

All parts used in this product comply with the RoHS Directive. The RoHS Directive prevents all new electrical and electronic equipment placed on the market in the European area from containing more than specified levels of lead, cadmium, mercury, hexavalent chromium, poly-brominated biphenyls (PBB) and polybrominated diphenyl ethers (PBDE). The RoHS Directive also requires that the product must be designed to meet the electromagnetic compatibility standards set by the EU.

All parts are tested to meet EU consumer safety, health and environmental requirements.

RETURN POLICY

We put all of our expertise and care in this product. Should you, despite all our efforts, find any fault, please contact our customer service department. We will do our utmost to find a solution to address your quality for a product replacement.

LIMITED WARRANTY STATEMENT

1.1. WARRANTIES

AROUND warrants that its products will conform to the Specifications. This warranty lasts for one (1) year from the date of the sale. AROUND shall not be held responsible for any damage caused by neglect, misuse or misoperation by the Customer, including improper installation or testing, or for any products that have been damaged or destroyed by fire. The Customer's use of the product shall not be liable for any defects that result from the Customer's design, specifications or instructions for such products. Testing and other quality control procedures are used to the extent AROUND deems necessary.

1.2.

If any AROUND products fail to conform to the Specifications, AROUND shall be held liable. AROUND's liability shall be limited to products that are determined by AROUND not to conform to such warranty. AROUND shall, within a reasonable time to provide replacement. Replaced products shall be warranted for a new full warranty period.

1.3.

EXCEPT AS SET FORTH ABOVE, PRODUCTS ARE PROVIDED "AS IS" AND "WITH ALL FAULTS". AROUND DISCLAIMS ALL OTHER WARRANTIES, EXPRESS OR IMPLIED, INCLUDING WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE.

1.4

The Customer agrees that prior to using any systems that include AROUND products, the Customer shall read and understand the functionality of the products as used in such systems. AROUND may provide technical, applications or design advice, quality characterization, reliability data or other information to the Customer. The Customer agrees that providing these services shall not extend or otherwise alter AROUND's warranties, as set forth above, and that no additional obligations or liabilities shall arise from AROUND providing such services.

1.5

AROUND products are not authorized for use in safety-critical applications where a failure of the product could result in death, injury or death. Safety-critical applications include, without limitation, life support systems, medical equipment, and weapons systems. AROUND products are neither designed nor intended for use in military or aerospace applications or environments, nor for use in applications where the highest level of performance, the Customer's knowledge and agreement that any such use of AROUND products is solely at the Customer's risk, and that the Customer shall assume all liability for the use with all legal and regulatory requirements in connection with such use.

1.6

Customer acknowledges and agrees that the Customer is the sole responsible for compliance with all legal, regulatory and safety-related requirements concerning the products and any use of AROUND products in the Customer's applications. AROUND shall not be held liable for any related information or support that may be provided by AROUND.

2. CONSEQUENTIAL DAMAGES MATTER

In view of the nature of the products, the Customer shall be held liable for any personal, collateral, indirect, punitive, incidental, consequential or exemplary damages in connection with or arising out of the products and services provided by AROUND. AROUND has been advised of the possibility of such damages. This section will survive the termination of the warranty period.

3. CHANGES TO SPECIFICATIONS

AROUND may make changes to specifications and product descriptions at any time, without notice. The Customer must not rely on the absence or characteristics of any feature or service. AROUND reserves these for future definition and shall have no responsibility whatsoever for conflicts or incompatibilities arising from any changes to specifications. Information on the Web Site or Materials is subject to change without notice. Do not finalize a design with this information.

FCC COMPLIANCE

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

Interference from other devices may cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on. The user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The following parties are responsible for the compliance of radio frequency equipment with the FCC Rules: the manufacturer of the equipment subject to authorization under the verification procedure, the manufacturer of, in the case of imported equipment, the importer, the radio frequency equipment is modified by any party not working under the authority of the responsible party, the party performing the modification becomes the new responsible party.

Manufactured by
AROUND S r.l.
Via Romano, 12
10010 Scarmagno
ITALY



ROHS COMPLIANT



[ARDUINO.ORG/BRACCIO](https://www.arduino.org/braccio)