

Chipsmall Limited consists of a professional team with an average of over 10 year of expertise in the distribution of electronic components. Based in Hongkong, we have already established firm and mutual-benefit business relationships with customers from, Europe, America and south Asia, supplying obsolete and hard-to-find components to meet their specific needs.

With the principle of "Quality Parts, Customers Priority, Honest Operation, and Considerate Service", our business mainly focus on the distribution of electronic components. Line cards we deal with include Microchip, ALPS, ROHM, Xilinx, Pulse, ON, Everlight and Freescale. Main products comprise IC, Modules, Potentiometer, IC Socket, Relay, Connector. Our parts cover such applications as commercial, industrial, and automotives areas.

We are looking forward to setting up business relationship with you and hope to provide you with the best service and solution. Let us make a better world for our industry!



#### Contact us

Tel: +86-755-8981 8866 Fax: +86-755-8427 6832

Email & Skype: info@chipsmall.com Web: www.chipsmall.com

Address: A1208, Overseas Decoration Building, #122 Zhenhua RD., Futian, Shenzhen, China








# IMPEL Backplane Module Installation Press-In Tool



## **Application Tooling Specification Sheet**



Order No. 62201-8965

#### **FEATURES**

- Polarized tool prevents product damage
- Tool provides uniform distribution of press force across entire pin array
- May be used as a stand-alone tool or mounted in an optional holder with other Molex press-in tools

#### **SCOPE**

<u>Products</u>: IMPEL (1.9mm pitch) Backplane Assembly, (5-Pair by 10 Column Assemblies). See Product List below for specific part numbers.


#### **Product List**

The following is a partial list of the product order numbers and their specifications this tool is designed to run. Updates to this list are available on <a href="https://www.molex.com">www.molex.com</a>.

Series No.	<b>Guide Style</b>	Columns	Assembly Order Number			
172005		10	172005-1104	172005-1105	172005-1107	172005-1108

#### **Tool Setup**

Depending on the number of connectors to be installed and/or the press used, this tool can be used alone or with a group of press-in tools, mounted in a 62201-95XX rail (ordered separately). See Figure 1.

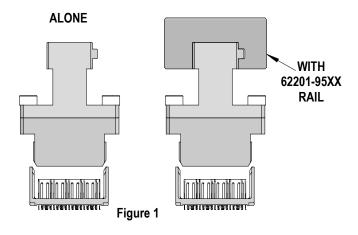

Doc No: ATS-622018965 Release I Revision: A Revision I

Release Date: 07-08-13 UNCON
Revision Date: 07-08-13

#### **Tool Installation**

The 62201-95XX rail is available in a variety of lengths to accommodate multiple press-in tools.

Rail Part Number	Rail Overall Length
62201-9501	24mm (0.94 in)
62201-9502	72mm (2.83 in)
62201-9503	156mm (6.14 in)
62201-9504	216mm (8.50 in)
62201-9509	254mm (10.0 in)
62201-9511	305mm (12.0 in)

Reference: This Press-In Tool is 19.7mm (0.77 in.) long.

#### **Printed Circuit Board (PCB) Support**

The IMPEL connectors require up to 3.6kg (8 lb) of force per pin to press into the PCB. To prevent excessive PCB flexure and/or damage to the PCB, a support plate is strongly recommended directly beneath the connector hole pattern.

Due to the custom nature of every application, Molex does not offer any PCB support plate. The customer must furnish their own support plate.

When creating the PCB support plate, remember to allow clearance for the connector pins as they pass through the PCB thickness.

### Press Equipment Recommendations

Many types of presses can be used to install IMPEL connectors, but to assure consistent connector installation Molex recommends the following press criteria:

- The capability to detect force variations as low as 4.5kg (10 lb) during the press-in cycle; excessive force measurements should stop the press-in cycle.
- NOTCH OF PRESS-IN TOOL MODULE ASSEMBLY

  SLOT OF MODULE ASSEMBLY

  Figure 2


  PCB
- 2. The rate of pressing can be regulated as low as 0.13mm (0.005 in) per second.
- 3. Press stroke control to within 0.25mm (0.010 in).
- 4. Total press stroke must be at least 19mm (0.75 in).
- 5. For statistical purposes, automatic collection of force and distance data.

Doc No: ATS-622018965 Release Date: 07-08-13 **UNCONTROLLED COPY** Page 2 of 3

Revision: A Revision Date: 07-08-13

#### **Tool Operation**

- 1. Insert by hand the backplane signal module assembly (s) carefully into the PCB hole pattern. Make sure the connector(s) are oriented properly by confirming the location of the #1 circuit notch with respect to the PCB layout.
- 2. Insert the Press-In Tool making sure that the notch in this tool is inserted into the slot on top of the connector housing of the backplane signal module assembly. See Figure 2.
- 3. Using the application tool and an appropriate press, seat the header assembly until there is less than 0.10mm (.004 in) clearance between the bottom of the plastic housing and the surface of the PCB. See Figure 3.

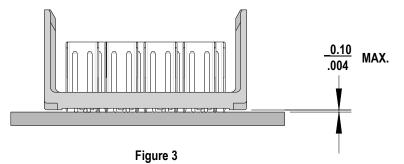

There should be no broken stand-offs along the perimeter of the part (an indication of over-pressing).

**CAUTION**: To prevent injury, never operate any press without the guards in place. Refer to the press manufacturer's instruction manual.

**CAUTION**: Molex application tooling specifications are valid only when used with Molex connectors and tooling.

#### **Contact Information**

For more information on Molex application tooling please contact Molex at 1-800-786-6539.

Visit our Web site at http://www.molex.com

Doc No: ATS-622018965 Release Date: 07-08-13 Revision: A Revision Date: 07-08-13