

Chipsmall Limited consists of a professional team with an average of over 10 year of expertise in the distribution of electronic components. Based in Hongkong, we have already established firm and mutual-benefit business relationships with customers from, Europe, America and south Asia, supplying obsolete and hard-to-find components to meet their specific needs.

With the principle of "Quality Parts, Customers Priority, Honest Operation, and Considerate Service", our business mainly focus on the distribution of electronic components. Line cards we deal with include Microchip, ALPS, ROHM, Xilinx, Pulse, ON, Everlight and Freescale. Main products comprise IC, Modules, Potentiometer, IC Socket, Relay, Connector. Our parts cover such applications as commercial, industrial, and automotives areas.

We are looking forward to setting up business relationship with you and hope to provide you with the best service and solution. Let us make a better world for our industry!



## Contact us

Tel: +86-755-8981 8866 Fax: +86-755-8427 6832

Email & Skype: info@chipsmall.com Web: www.chipsmall.com

Address: A1208, Overseas Decoration Building, #122 Zhenhua RD., Futian, Shenzhen, China








# NeoPress Receptacle Assembly Press-In Tool



## **Application Tooling Specification Sheet**

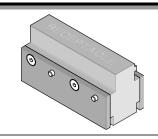

Order No. 62203-1360

#### **FEATURES**

- Tool provides uniform distribution of press force across entire pin array
- May be used as a stand-alone tool or mounted in an optional holder with other Molex press-in tools
- For plug extraction, use tool 62203-1320

#### **SCOPE**

<u>Products</u>: NeoPress Receptacle Assembly, (6-Pair by 16 Column Assemblies). See Product List below for specific part numbers.


#### **Product List**

The following is a partial list of the product order numbers and their specifications this tool is designed to run. Updates to this list are available on www.molex.com.

Series No.	Column	Height	Plug Assembly Order No.
172832	16	18.5mm	172832-0013

## **Tool Setup**

Depending on the number of connectors to be installed and/or the press used, this tool can be used alone or with a group of press-in tools, mounted in a 62201-95XX rail (ordered separately). See Figure 1.

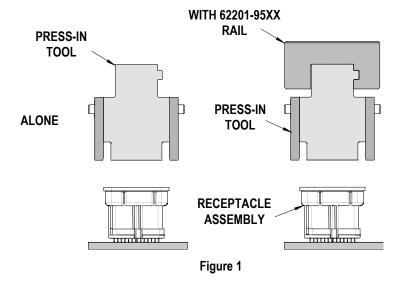

Doc No: ATS-622031360 Revision: A Release Date: 01-05-16 Revision Date: 01-05-16

#### **Tool Installation**

The 62201-95XX rail is available in a variety of lengths to accommodate multiple press-in tools.

Rail Part Number	Rail Overall Length
62201-9502	72mm (2.83 in)
62201-9503	156mm (6.14 in)
62201-9504	216mm (8.50 in)
62201-9509	254mm (10.0 in)
62201-9511	305mm (12.0 in)

Reference: The 62203-1360 Press-In Tool is 70mm (2.76 in.) long.

### **Printed Circuit Board (PCB) Support**

The NeoPress receptacle requires a significant force to press the assembly into the PCB. To prevent excessive PCB flexure and/or damage to the PCB, a support plate is strongly recommended directly beneath the connector hole pattern.

Due to the custom nature of every application, Molex does not offer any PCB support plate. The customer must furnish their own support plate.

When creating the PCB support plate, remember to allow clearance for the connector pins as they pass through the PCB thickness


### **Press Equipment Recommendations**

Many types of presses can be used to install the NeoPress receptacle, but to assure consistent connector installation Molex recommends the following press criteria:

- 1. The capability to detect force variations as low as 4.5kg (10 lb) during the press-in cycle; excessive force measurements should stop the press-in cycle.
- 2. The rate of pressing can be regulated as low as 0.13mm (0.005 in) per second.
- 3. Press stroke control to within 0.25mm (0.010 in).
- 4. Total press stroke must be at least 19mm (0.75 in).
- 5. For statistical purposes, automatic collection of force and distance data.


## **Tool Operation**

- 1. By hand, insert the receptacle assembly carefully into the PCB hole pattern. Make sure the connector is oriented properly by confirming the location of the #1 circuit indicator with respect to the PCB layout.
- 2. Insert the Press-In Tool over the top of the connector housing until it rests on the connector. The tool is symmetric and can be placed two ways without damage to the connector. See Figure 2.

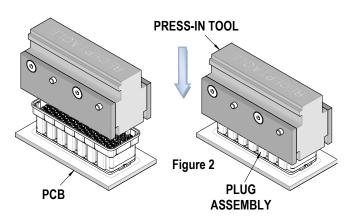

Doc No: ATS-622031360 Release Date: 01-05-16 **UNCONTROLLED COPY** Page 2 of 3 Revision: A Revision Date: 01-05-16

3. Using the application tool and an appropriate press, seat the receptacle assembly until there is less than 0.10mm (.004 in) clearance between the bottom of the plastic housing and the surface of the PCB. See Figure 3.

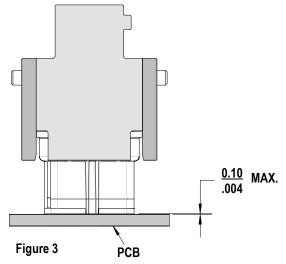

**CAUTION**: To prevent injury, never operate any press without the guards in place. Refer to the press manufacturer's instruction manual.

CAUTION: Molex application tooling specifications are valid only when used with Molex connectors and tooling.

#### **Contact Information**

For more information on Molex application tooling please contact Molex at 1-800-786-6539.

Visit our Web site at http://www.molex.com

Doc No: ATS-622031360 F Revision: A F

Release Date: 01-05-16 Revision Date: 01-05-16