

Chipsmall Limited consists of a professional team with an average of over 10 year of expertise in the distribution of electronic components. Based in Hongkong, we have already established firm and mutual-benefit business relationships with customers from, Europe, America and south Asia, supplying obsolete and hard-to-find components to meet their specific needs.

With the principle of "Quality Parts, Customers Priority, Honest Operation, and Considerate Service", our business mainly focus on the distribution of electronic components. Line cards we deal with include Microchip, ALPS, ROHM, Xilinx, Pulse, ON, Everlight and Freescale. Main products comprise IC, Modules, Potentiometer, IC Socket, Relay, Connector. Our parts cover such applications as commercial, industrial, and automotives areas.

We are looking forward to setting up business relationship with you and hope to provide you with the best service and solution. Let us make a better world for our industry!



Contact us

Tel: +86-755-8981 8866 Fax: +86-755-8427 6832

Email & Skype: info@chipsmall.com Web: www.chipsmall.com

Address: A1208, Overseas Decoration Building, #122 Zhenhua RD., Futian, Shenzhen, China







Instructions for installation and use of Scotchflex® Delta Hand Tool Kit 3710.

General:

The 3710 Delta Hand Tool Kit is designed for assembly of all Scotchflex Delta Connectors in Pin and Socket versions. This handy portable tool is specially suited for prototype and field-repair applications. The Hand Tool Kit 3710 consists of Pistol Grip 3586-12, Assembly Head 3714 and Assembly Head Inserts 3722, 3724 and 3727. (fig. 1)

Table 1

Assembly Head Insert Part No.	For Assembly of Connector Type
3722	Delta Pin version 9 and 15 contacts
3724	Delta Pin version 25 and 37 contacts
3727	Delta Socket version All Pin Counts



Fig. 1

Set up:

Cut suitable cable length using Scotchflex Cable Shear 3320, 3437A or Scotchflex Cable Cutter 3382. (fig. 2)

Note: To prevent shorting of conductors, do not use scissors type device or knife to cut or trim the cable.



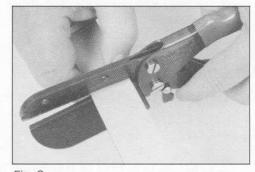


Fig. 2

Fig. 3


2. Mount Assembly Head 3714 on the Pistol Grip 3586-12. The assembly head snaps into position. (fig. 3)



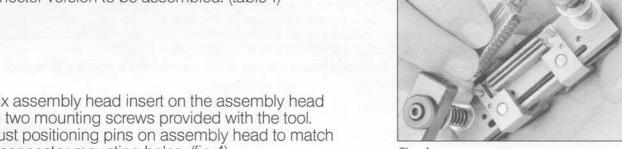



4. Fix assembly head insert on the assembly head with two mounting screws provided with the tool. Adjust positioning pins on assembly head to match the connector mounting holes. (fig 4) Fig. 4

- 5. Rub paper liner on connector cover for maximum adhesive transfer. Remove paper liner from the cover.
- 6. Use finger pressure to seat cable in the cover grooves. Check visually to ensure that cable is properly aligned and oriented with cover grooves.




7. Engage latch guides of the connector body to the





Strain Relief Attachment:

- 1. Fold the cable back over the connector cover.
- 2. Engage one end of the strain relief on one end of the connector.
- 3. Snap other end of the strain relief into position on the opposite connector end. (fig. 8)

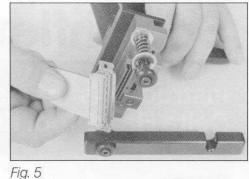

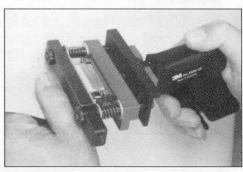


Fig. 6

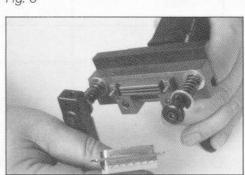


Fig. 7

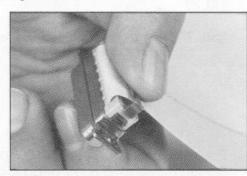


Fig. 8

Important Notice to Purchaser:

All statements, technical information and recommendations contained herein are based on tests we believe to be reliable, but the accuracy or completeness thereof is not guaranteed, and the following is made in lieu of all warranties expressed or implied:

Seller's and manufacturer's only obligation shall be to replace such quantity of the product proved to be defective. Neither seller nor manufacturer shall be liable for any injury, loss or damage, direct or consequential, arising out of the use or the inability to use the product. Before using, user shall determine the suitability of the product for his intended use, and user assumes all risk and liability whatsoever in connection therewith.

No statement or recommendation not contained herein shall have any force or effect unless in an agreement signed by officers of seller and manufacturer.

