



Chipsmall Limited consists of a professional team with an average of over 10 year of expertise in the distribution of electronic components. Based in Hongkong, we have already established firm and mutual-benefit business relationships with customers from,Europe,America and south Asia,supplying obsolete and hard-to-find components to meet their specific needs.

With the principle of “Quality Parts,Customers Priority,Honest Operation,and Considerate Service”,our business mainly focus on the distribution of electronic components. Line cards we deal with include Microchip,ALPS,ROHM,Xilinx,Pulse,ON,Everlight and Freescale. Main products comprise IC,Modules,Potentiometer,IC Socket,Relay,Connector.Our parts cover such applications as commercial,industrial, and automotives areas.

We are looking forward to setting up business relationship with you and hope to provide you with the best service and solution. Let us make a better world for our industry!



Contact us

Tel: +86-755-8981 8866 Fax: +86-755-8427 6832

Email & Skype: info@chipsmall.com Web: www.chipsmall.com

Address: A1208, Overseas Decoration Building, #122 Zhenhua RD., Futian, Shenzhen, China



INDASH by PANAVISE®

75107-309

Page 1 of 1

MOUNTING LOCATION:
Above Right & Left of radio JURL
TOOLS REQUIRED:

7mm Socket Driver
Phillips Screwdriver, Cutting Tool

PARTS INCLUDED:

- (1)S7-1999,(1)S7-1946Top(75002)
- (1)-E- 8/32"x1.0" Needle Pt. Screw, Phillips
- (2) -A-8/32"x9/16" Needle Pt. Screw
- (2)-O- 8/32" Acorn Nuts, Tape

CELL PHONE & MEDIA MOUNT
INSTALLATION INSTRUCTIONS

PART#: 75107-309

MFG: FORD

MODELS & YEARS:

F-150 2009-2012 (ALL)

**** ADVISEMENT ****

Read instructions completely prior to starting installation. All InDash Mounts are designed so that after installation, phone is facing normal driver position for left-hand drive vehicles. This mount is not designed to be used in foreign countries with right-hand drive vehicles. Use extreme care when working around the plastic components on the dash. Excess force, can cause breakage of the plastic components.

STEP #1: Lift off the rubber pad on floor of cubby above CD/Radio/Display. Lift up on the front of the pad and pull out towards you.

STEP #2: Install the Protective Tape piece on the bottom of the larger piece of the mount where the dash touches the radio bezel, and trim with scizzors. See Picture.

STEP #3: With 7mm socket driver, remove either the left or right side screw that was under pad. Place Indash by PanaVise Mount over screw hole. (Left side mounting uses the right side slotted screw hole, and Right side mounting uses the right side slotted screw hole) Install 1.0" long screw supplied. Make sure the joggle on the mount fits up against the radio bezel edge.

STEP #3: Install the additional (2) 9/16" long screws into the other screw holes. NOTE: The only hole that will not be used is the one directly in front of the hole you installed the 1.0" long screw into

STEP #4: Place the Pad back in place, as it will not go all the way in. You will need to cut some of the pad edge away to allow the rubber pad to fit in as best as it can.

STEP #5: Install the Upper mount part #75002 either in the UP(North) or the DOWN(South) direction, depending on your preferences. *Note: The top has (4) installation holes it can use to angle the top towards the driver. The Panavise logo and Part number will be side ways.*

INSTALLATION IS NOW COMPLETE. ENJOY YOUR NEW INDASH by PANAVISE MOUNT.




Mount in Place with Mounting Plate in Left Side Down Position on Nav.



Mount in Place with Mounting Plate in Right Side Down Position



Mount in Place with Mounting Plate in Left Side Down Position

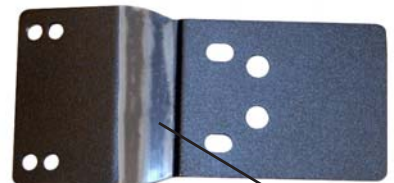

Tape Installation Location

03-13-13

