



Chipsmall Limited consists of a professional team with an average of over 10 year of expertise in the distribution of electronic components. Based in Hongkong, we have already established firm and mutual-benefit business relationships with customers from,Europe,America and south Asia,supplying obsolete and hard-to-find components to meet their specific needs.

With the principle of “Quality Parts,Customers Priority,Honest Operation,and Considerate Service”,our business mainly focus on the distribution of electronic components. Line cards we deal with include Microchip,ALPS,ROHM,Xilinx,Pulse,ON,Everlight and Freescale. Main products comprise IC,Modules,Potentiometer,IC Socket,Relay,Connector.Our parts cover such applications as commercial,industrial, and automotives areas.

We are looking forward to setting up business relationship with you and hope to provide you with the best service and solution. Let us make a better world for our industry!



Contact us

Tel: +86-755-8981 8866 Fax: +86-755-8427 6832

Email & Skype: info@chipsmall.com Web: www.chipsmall.com

Address: A1208, Overseas Decoration Building, #122 Zhenhua RD., Futian, Shenzhen, China



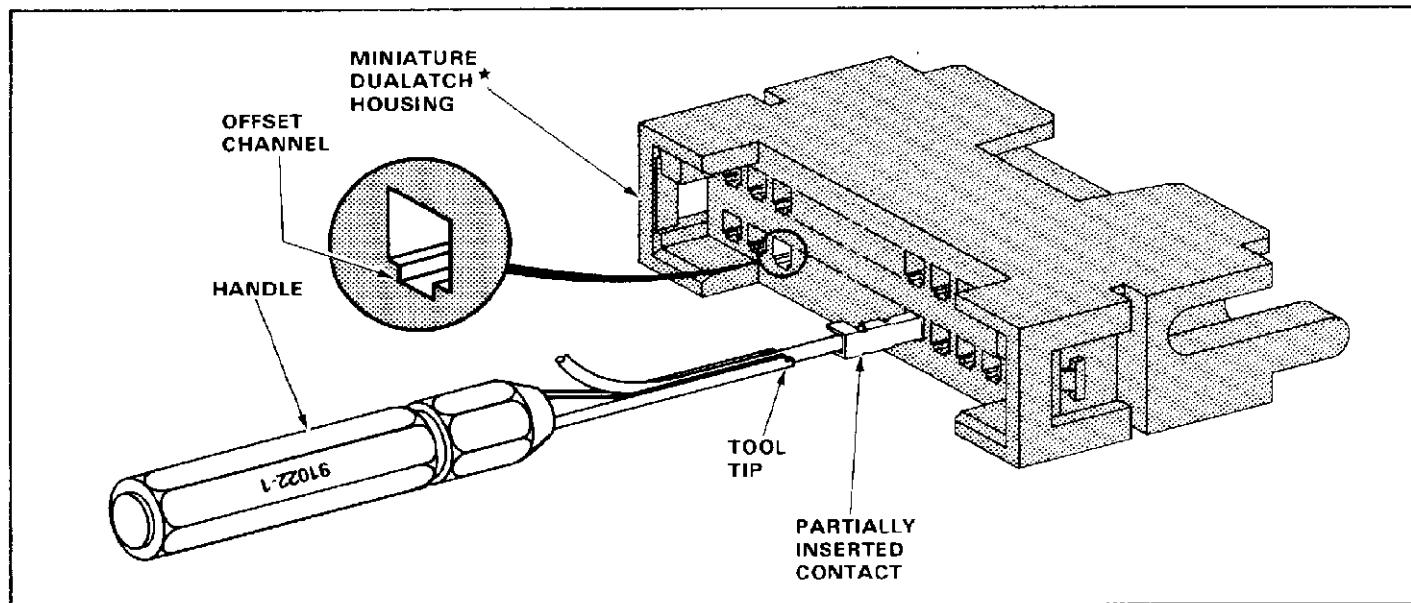


Fig. 1

1. INTRODUCTION

This instruction sheet covers the use of the AMP Insertion Tool 91022-1 which is designed to insert AMP Standard and Miniature DUALATCH Contacts into their housings. Read these instructions carefully before inserting the contacts.

2. DESCRIPTION (Figure 1)

The insertion tool features a handle and an insertion tip which is used to hold and place the contact into the contact cavity.

3. INSERTION PROCEDURES (Miniature)

1. Partially insert the contact into the rear of the housing. Make sure the claw of the contact enters the offset channel in the contact cavity (see Figure 2).
2. Place the insertion tool tip against the shoulder of the contact as shown in Figure 1. Allow the wire from the contact to rest in the channel of the tool tip.
3. Push the contact into the cavity until the tool tip bottoms against the rear of the housing.
4. The claw of the contact should snap over the raised lip in the cavity. Pull the wire to make sure the contact is properly seated in the contact cavity.

4. INSERTION PROCEDURES (Standard)

1. Partially insert the contact into the rear of the housing. Make sure the claw of the contact is aligned with the embossment on the front of the housing (see Figure 2).

2. Place the insertion tool tip against the shoulder of the contact as shown in Figure 1. Allow the wire from the contact to rest in the channel of the tool tip.
3. Push the contact straight into the contact cavity until the claw latches over the embossment.

NOTE

If the claw is not hooked on the embossment, the contact may snap loose from the contact cavity.

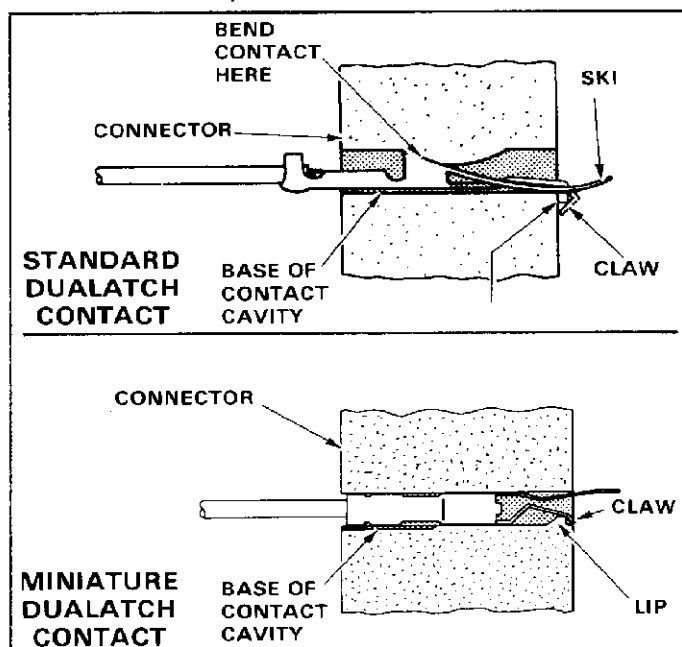


Fig. 2

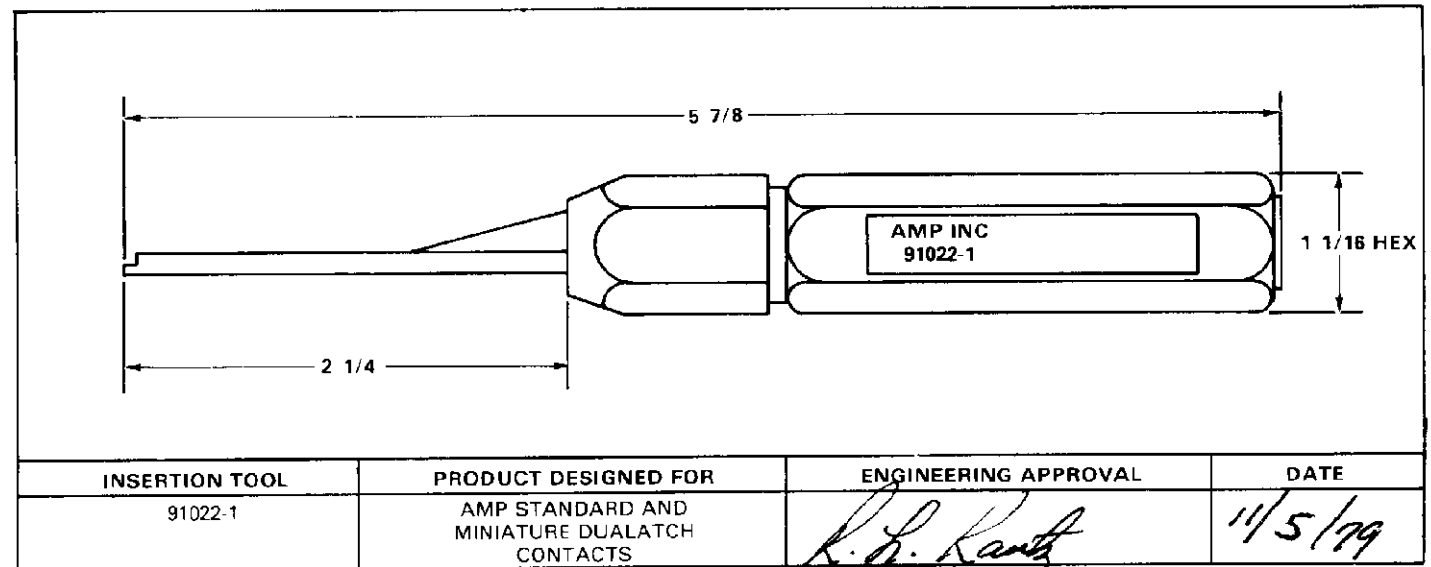


Fig. 3

5. TOOL CERTIFICATION

The tool listed in this instruction sheet should be certified with the information provided in Figure 3. We recommend that you inspect the tool immediately upon arrival in your factory, and at regularly scheduled intervals, to ensure that the tool has not been damaged.

Additional tools can be purchased from:

AMP Incorporated
 Eisenhower Boulevard
 Harrisburg, Pennsylvania 17105