



Chipsmall Limited consists of a professional team with an average of over 10 year of expertise in the distribution of electronic components. Based in Hongkong, we have already established firm and mutual-benefit business relationships with customers from,Europe,America and south Asia,supplying obsolete and hard-to-find components to meet their specific needs.

With the principle of “Quality Parts,Customers Priority,Honest Operation,and Considerate Service”,our business mainly focus on the distribution of electronic components. Line cards we deal with include Microchip,ALPS,ROHM,Xilinx,Pulse,ON,Everlight and Freescale. Main products comprise IC,Modules,Potentiometer,IC Socket,Relay,Connector.Our parts cover such applications as commercial,industrial, and automotives areas.

We are looking forward to setting up business relationship with you and hope to provide you with the best service and solution. Let us make a better world for our industry!



Contact us

Tel: +86-755-8981 8866 Fax: +86-755-8427 6832

Email & Skype: info@chipsmall.com Web: www.chipsmall.com

Address: A1208, Overseas Decoration Building, #122 Zhenhua RD., Futian, Shenzhen, China



AMPAMP INCORPORATED
Harrisburg, Pa. 17105

AMP ★ INSERTION TOOL 91233-1

Instruction Sheet

IS 6625

RELEASED 4-21-81

REDUCED FOR PACKAGING

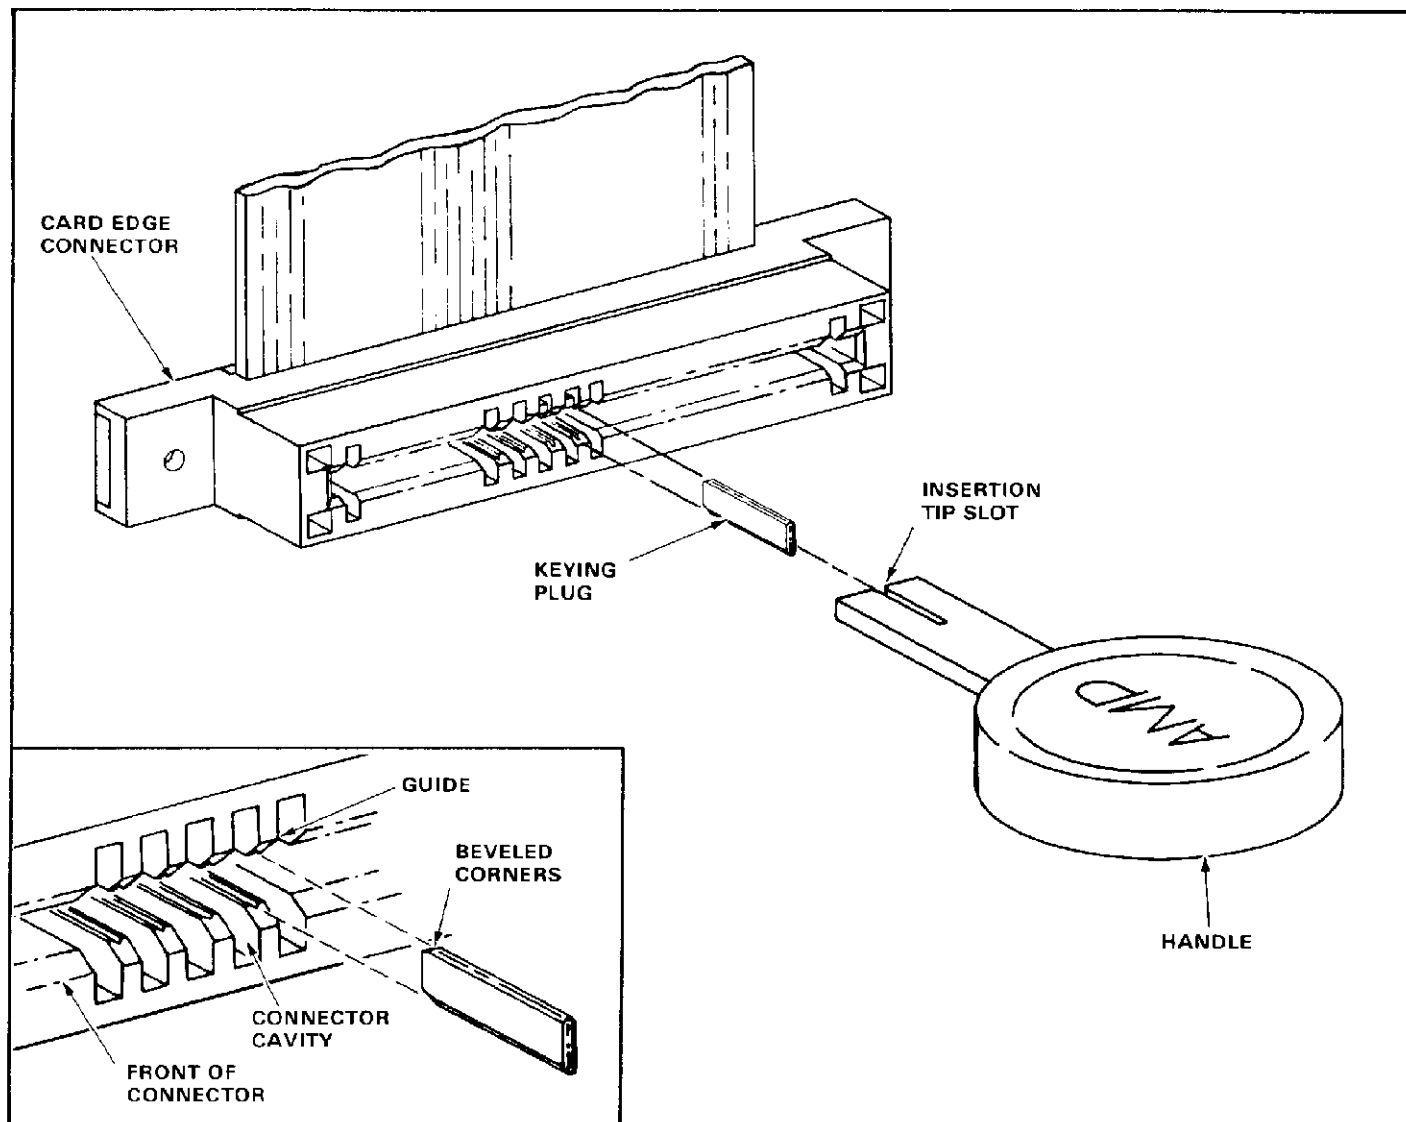


Fig. 1

1. INTRODUCTION

This instruction sheet covers the use of the AMP Insertion Tool 91233-1 which is designed to insert the AMP-LATCH ★ Intercontact Keying Plug 88113-1 into AMP-LATCH Card Edge Connectors for polarization. Read these instructions thoroughly before inserting any keying plugs.

NOTE

All dimensions presented on this instruction sheet are in inches, unless otherwise stated.

2. DESCRIPTION (Figure 1)

The insertion tool consists of a handle and insertion tip which holds the keying plug to insert it into the connector.

3. INSERTION PROCEDURES (Figure 1)

Determine the connector position to be keyed and insert keying plug as follows:

1. Center flat side of keying plug in insertion tip slot and push in plug until it bottoms.

NOTE

The beveled corners of keying plug are designed to ease entry into connector guides.

2. Hold tool handle firmly and align plug with selected guides.
3. Insert plug straight into connector until bottomed.
4. Remove tool from connector.

★Trademark of AMP Incorporated

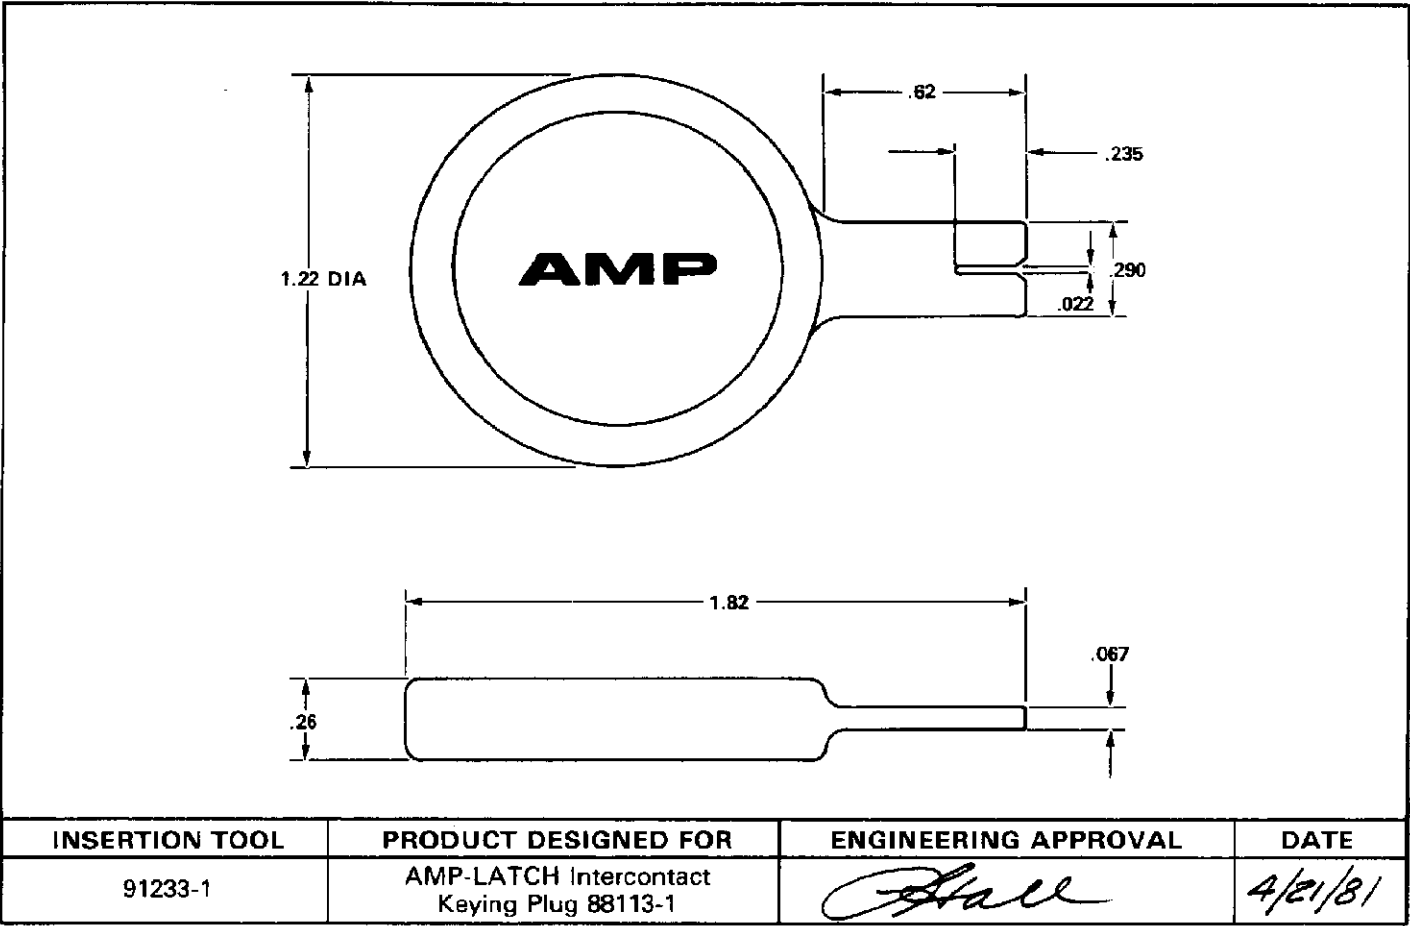


Fig. 2

4. TOOL CERTIFICATION

The tool listed in this instruction sheet should be certified with the information provided in Figure 2. We recommend that you inspect the tool immediately upon arrival in your factory, and at regular scheduled intervals to ensure that the tool has not been damaged.

Additional tools can be purchased from:

AMP Incorporated
Eisenhower Boulevard
Harrisburg, Pennsylvania 17105