



Chipsmall Limited consists of a professional team with an average of over 10 year of expertise in the distribution of electronic components. Based in Hongkong, we have already established firm and mutual-benefit business relationships with customers from,Europe,America and south Asia,supplying obsolete and hard-to-find components to meet their specific needs.

With the principle of “Quality Parts,Customers Priority,Honest Operation,and Considerate Service”,our business mainly focus on the distribution of electronic components. Line cards we deal with include Microchip,ALPS,ROHM,Xilinx,Pulse,ON,Everlight and Freescale. Main products comprise IC,Modules,Potentiometer,IC Socket,Relay,Connector.Our parts cover such applications as commercial,industrial, and automotives areas.

We are looking forward to setting up business relationship with you and hope to provide you with the best service and solution. Let us make a better world for our industry!



Contact us

Tel: +86-755-8981 8866 Fax: +86-755-8427 6832

Email & Skype: info@chipsmall.com Web: www.chipsmall.com

Address: A1208, Overseas Decoration Building, #122 Zhenhua RD., Futian, Shenzhen, China




Bel Stewart Connector

36 SERIES SHIELDED PLUG W/-A108 LOAD BAR
ASSEMBLY INSTRUCTIONS

11118 Susquehanna Trail South Glen Rock, PA 17327

36 SERIES SHIELDED PLUG WITH -A108 LOAD BAR ASSEMBLY INSTRUCTIONS


Assembly steps 1 – 11:

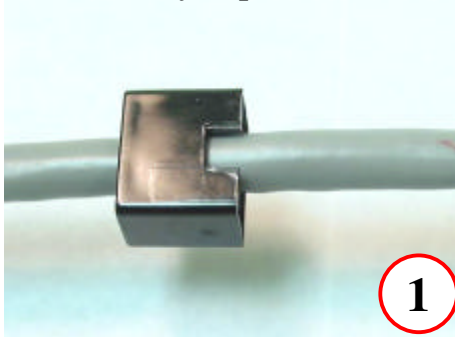


Slide strain relief over cable




Trim off 1" to 2" of cable jacket

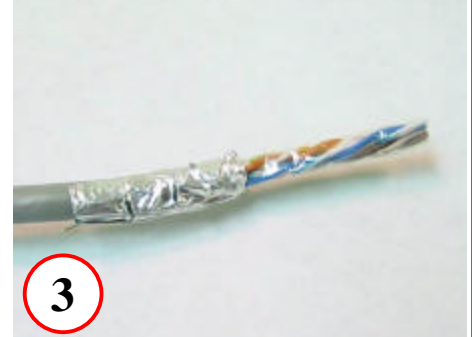


Fold back shield and drain wire

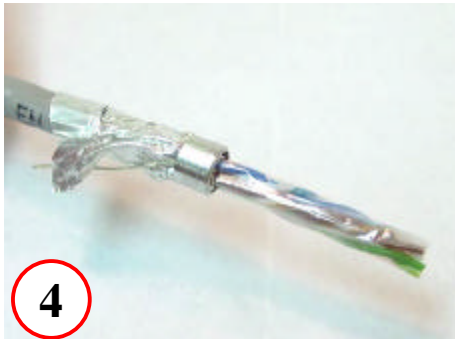


Slide ferrule over jacket and shield.
Do no trap any insulation between
shield and ferrule

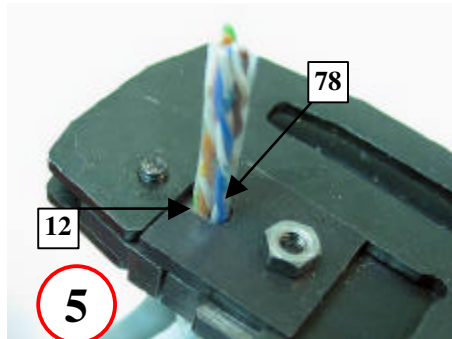


Crimp ferrule. Position pairs 12
and 78 to the outside

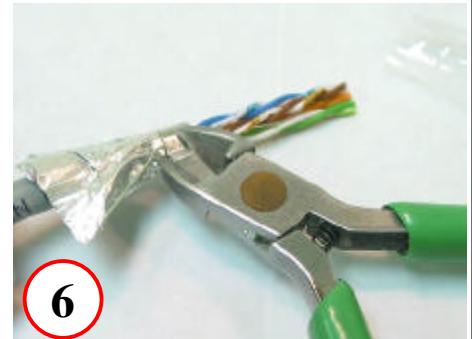


Remove excess shield. Remove
plastic foil insulation if present

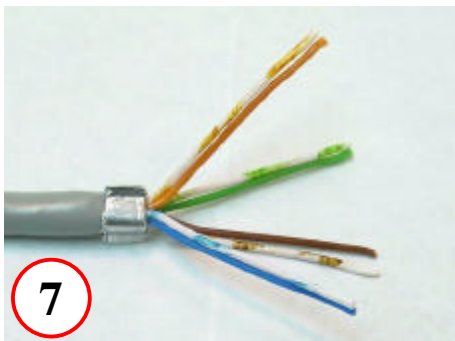

Untwist and straighten pairs

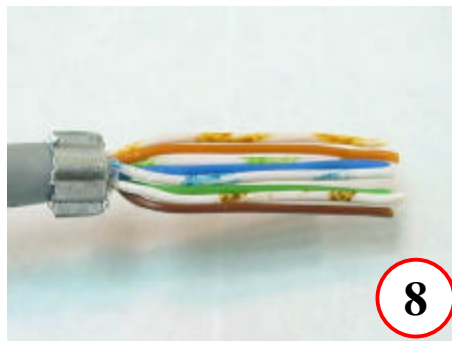

Align pairs (568-B shown)

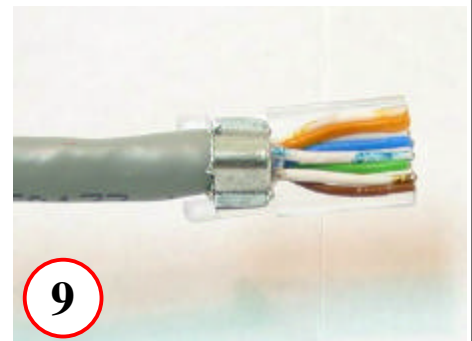

Place wires into -A108 load bar.
Trim wires flush with end of load
bar


Bel Stewart Connector

36 SERIES SHIELDED PLUG W/-A108 LOAD BAR
ASSEMBLY INSTRUCTIONS


11118 Susquehanna Trail South Glen Rock, PA 17327

36 SERIES SHIELDED PLUG WITH -A108 LOAD BAR ASSEMBLY INSTRUCTIONS


Assembly steps 1 – 11 (Cont.):

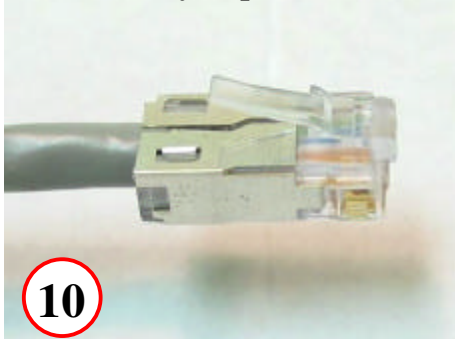


Insert load bar and wires into plug housing

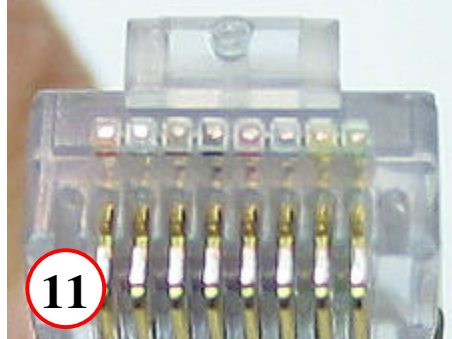

Verify wire ends are visible through plug housing

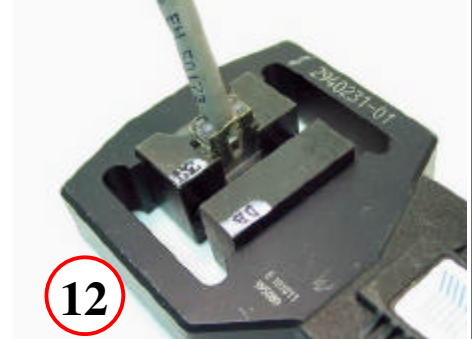

Terminate housing onto cable

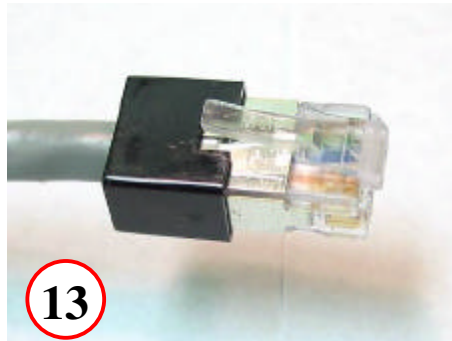

**Slide strain relief over housing.
Assembly is now complete**