

Chipsmall Limited consists of a professional team with an average of over 10 year of expertise in the distribution of electronic components. Based in Hongkong, we have already established firm and mutual-benefit business relationships with customers from, Europe, America and south Asia, supplying obsolete and hard-to-find components to meet their specific needs.

With the principle of "Quality Parts, Customers Priority, Honest Operation, and Considerate Service", our business mainly focus on the distribution of electronic components. Line cards we deal with include Microchip, ALPS, ROHM, Xilinx, Pulse, ON, Everlight and Freescale. Main products comprise IC, Modules, Potentiometer, IC Socket, Relay, Connector. Our parts cover such applications as commercial, industrial, and automotives areas.

We are looking forward to setting up business relationship with you and hope to provide you with the best service and solution. Let us make a better world for our industry!



## Contact us

Tel: +86-755-8981 8866 Fax: +86-755-8427 6832

Email & Skype: info@chipsmall.com Web: www.chipsmall.com


Address: A1208, Overseas Decoration Building, #122 Zhenhua RD., Futian, Shenzhen, China









Description	Material	Finish
Body	Brass	Nickel
Socket	BE CU	Gold
Insulation	PTFE	N/A
Spacer	PTFE	N/A
Gasket	SI Rubber	Rubber
Support	BE CU	Gold
Heat Shrink	Polyolefin	Black

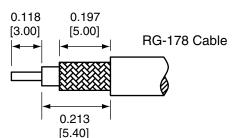


	revisions				
REV	DESCRIPTION	DATE	APPV		
В	Updated footprint and dimensions; Added new title block	2-JUL-12	SAH		
С	Updated stripping dimensions; Added dimensions to spacer and support	12-Jun-13	SAH		

## RECOMMENDED CABLE STRIPPING DIMENSIONS

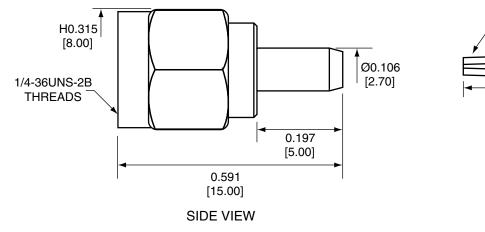

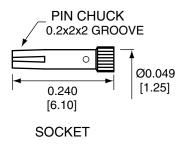

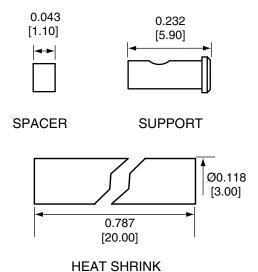

## NOTES: (UNLESS OTHERWISE SPECIFIED)

- 1. ALL DIMENSIONS ARE IN INCHES [mm].
- 2. DIMENSIONS APPLY AFTER FINISHING.
- 3. MANUFACTURE TO BE COMPLIANT WITH EU ROHS DIRECTIVE.
- 4. SAFETY BREAK ALL SHARP CORNERS AND EDGES .02 MAXIMUM.

## CONREVSMA007-R178 ASSEMBLY INSTRUCTIONS

- 1. Strip cable to recommended dimensions.
- 2. Slip heat shink and crimp ring onto cable.
- 3. Solder support onto the braid.
- 4. Place the spacer onto the center conductor.
- 5. Solder or crimp the socket onto the center conductor.
- Insert the socket, center conductor, spacer and support into the body until the top of the socket is even with the white insulation in the body.
- 7. Crimp the tail of the body onto the support with a 0.093" hex crimp tool (or one labeled for use with RG-178 cable).
- 8. Use heat shrink to cover crimp.

WARNING: THIS DRAWING CONTAINS PROPRIETARY INFORMATION THAT IS THE SOLE PROPERTY OF LINX TECHNOLOGIES, AND SHALL BE TREATED AS SUCH. NO DISCLOSURE OR REPRODUCTION OF THIS DOCUMENT IS PERMITTED, IN WHOLE OR IN PART, WITHOUT THE EXPRESS WRITTEN PERMISSION OF LINX TECHNOLOGIES OR ITS DESIGNATED AGENTS.

DE		
MATERIAL:	TOLERANCES: .020 [0.50]-2.00 [5.00]=±.008 [0.20] .200 [5.00]-1.200 [30.00]=±.016 [0.40] 1.20 [30.0]-4.75 [120.0]=±.024 [0.60] 4.75 [120.0]-12.40 [315.0]=±.040 [1.0]	
FINISH:		2-JUL-12

**ENGR: S.HOGAN** 

TITLE:

RP-SMA MA

159 ORT LANE MERLIN, OR 97532

RP-SMA MALE CABLE END CRIMP FOR RG-178 CABLE

| ANGLES: ±1° | CONREVSMA007-R178 | C |
| DT: 2-JUL-12 | SCALE: 2:1 | DO NOT SCALE DRAWING | SHEET 1 OF 1