Chipsmall Limited consists of a professional team with an average of over 10 year of expertise in the distribution of electronic components. Based in Hongkong, we have already established firm and mutual-benefit business relationships with customers from,Europe,America and south Asia,supplying obsolete and hard-to-find components to meet their specific needs.

With the principle of "Quality Parts,Customers Priority,Honest Operation,and Considerate Service",our business mainly focus on the distribution of electronic components. Line cards we deal with include Microchip,ALPS,ROHM,Xilinx,Pulse,ON,Everlight and Freescale. Main products comprise IC,Modules,Potentiometer,IC Socket,Relay,Connector.Our parts cover such applications as commercial,industrial, and automotives areas.

We are looking forward to setting up business relationship with you and hope to provide you with the best service and solution. Let us make a better world for our industry!

Contact us

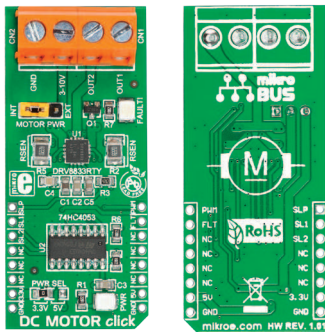Tel: +86-755-8981 8866 Fax: +86-755-8427 6832
Email & Skype: info@chipsmall.com Web: www.chipsmall.com
Address: A1208, Overseas Decoration Building, #122 Zhenhua RD., Futian, Shenzhen, China

DC MOTOR click™

1. Introduction

DC MOTOR click™ is a DC motor driver board in **mikroBUS™** form factor. It features the **DRV8833RTY** H-Bridge motor driver, **74HC4053** multiplexer and two screw terminals. DC MOTOR click™ communicates with the target board via SELECT1, SELECT2 and nSLEEP control lines, PWM input line and nFAULT feedback line. The board is designed to use 3.3V or 5V power supplies. It has a GREEN power supply indicator LED and a RED LED that indicates active nFAULT line (in case of short-circuit).
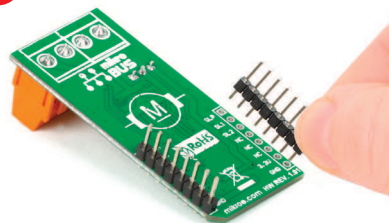
2. Soldering the headers

Before using your click™ board, make sure to solder 1x8 male headers to both left and right side of the board. Two 1x8 male headers are included with the board in the package.
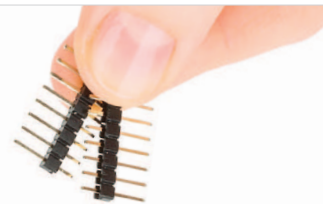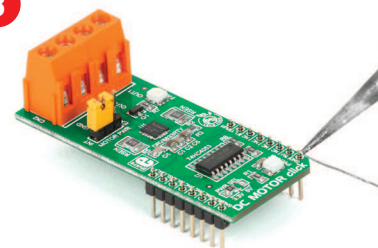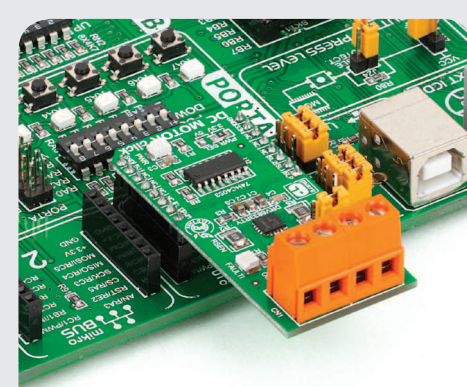
1

2 Turn the board upside down so that the bottom side is facing you upwards. Place shorter pins of the header into the appropriate soldering pads.
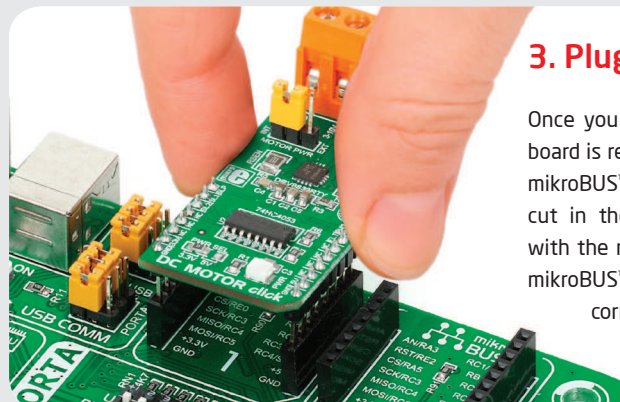
3 Turn the board upward again. Make sure to align the headers so that they are perpendicular to the board, then solder the pins carefully.

3. Plugging the board in

Once you have soldered the headers your board is ready to be placed into the desired mikroBUS™ socket. Make sure to align the cut in the lower-right part of the board with the markings on the silkscreen at the mikroBUS™ socket. If all the pins are aligned correctly, push the board all the way into the socket.

4. Essential features

DC MOTOR click™ with its **DRV8833RTY** IC's is limited to a 0.9A driving current with 0.22Ω current sense resistor. The 74HC4053 IC is incorporated into the design in order to run the motor with only one PWM line available on the mikroBUS™ socket. Use jumper J2 to select whether you want to power the board with the on-board or external power supply connected to the **CN2** screw terminal. The motor should be connected to the **CN1** screw terminal.
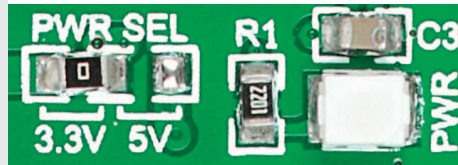
5. DC MOTOR click™ Board Schematic
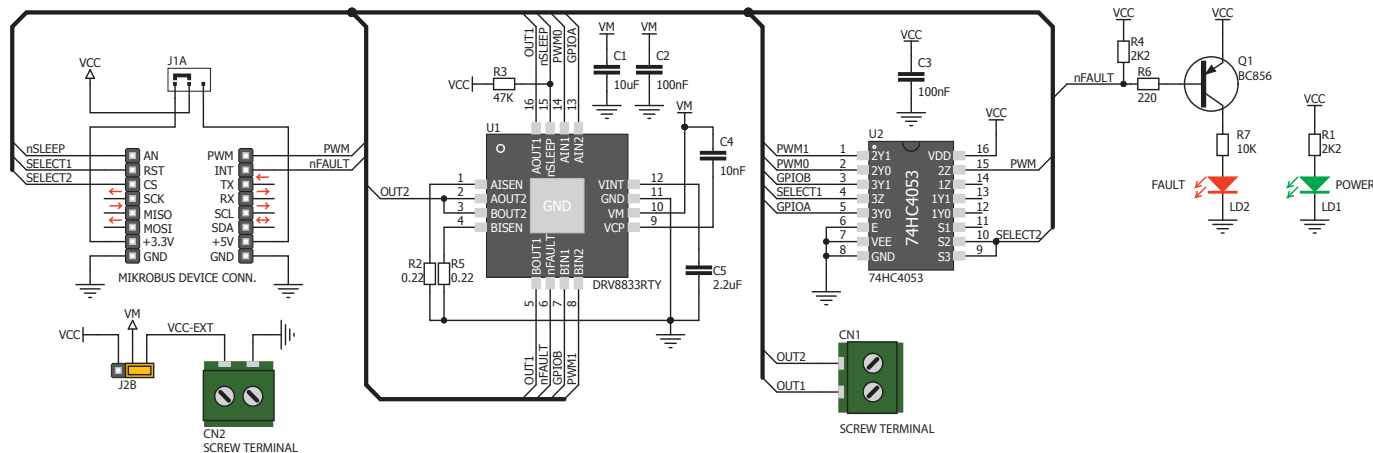
With two control lines SELECT1, SELECT2 and PWM input you can choose from the following driving options described in the table:

SELECT1	SELECT2	PWM	ROTATION	SPEED	BRAKE	DECAY
0	0	0-100%	Forward	MIN-MAX	@ 0% PWM	Fast
0	1	0-100%	Reverse	MIN-MAX	@ 0% PWM	Fast
1	0	0-100%	Reverse	MAX-MIN	@ 100% PWM	Slow
1	1	0-100%	Forward	MAX-MIN	@ 100% PWM	Slow

6. SMD Jumpers

There is a single SMD jumper (zero-ohm resistor) **J1** which is used to select between 3.3V or 5V power supplies. By default, it's soldered in the 3.3V position.

7. Code Examples

Once you have done all the necessary preparations, it's time to get your click™ board up and running. We have provided examples for mikroC™, mikroBasic™ and mikroPascal™ compilers on our **Libstock** website. Just download them and you are ready to start.

8. Support

MikroElektronika offers **Free Tech Support (www.mikroe.com/support/)** until the end of the product's lifetime, so if something goes wrong, we're ready and willing to help!