



Chipsmall Limited consists of a professional team with an average of over 10 year of expertise in the distribution of electronic components. Based in Hongkong, we have already established firm and mutual-benefit business relationships with customers from,Europe,America and south Asia,supplying obsolete and hard-to-find components to meet their specific needs.

With the principle of “Quality Parts,Customers Priority,Honest Operation,and Considerate Service”,our business mainly focus on the distribution of electronic components. Line cards we deal with include Microchip,ALPS,ROHM,Xilinx,Pulse,ON,Everlight and Freescale. Main products comprise IC,Modules,Potentiometer,IC Socket,Relay,Connector.Our parts cover such applications as commercial,industrial, and automotives areas.

We are looking forward to setting up business relationship with you and hope to provide you with the best service and solution. Let us make a better world for our industry!



## Contact us

Tel: +86-755-8981 8866 Fax: +86-755-8427 6832

Email & Skype: info@chipsmall.com Web: www.chipsmall.com

Address: A1208, Overseas Decoration Building, #122 Zhenhua RD., Futian, Shenzhen, China



# Test Procedure for the NCP1207AADAPGEVB

ON Semiconductor®



01/31/2005

## 1.0 Diagrams

### 1.1 Test Configuration

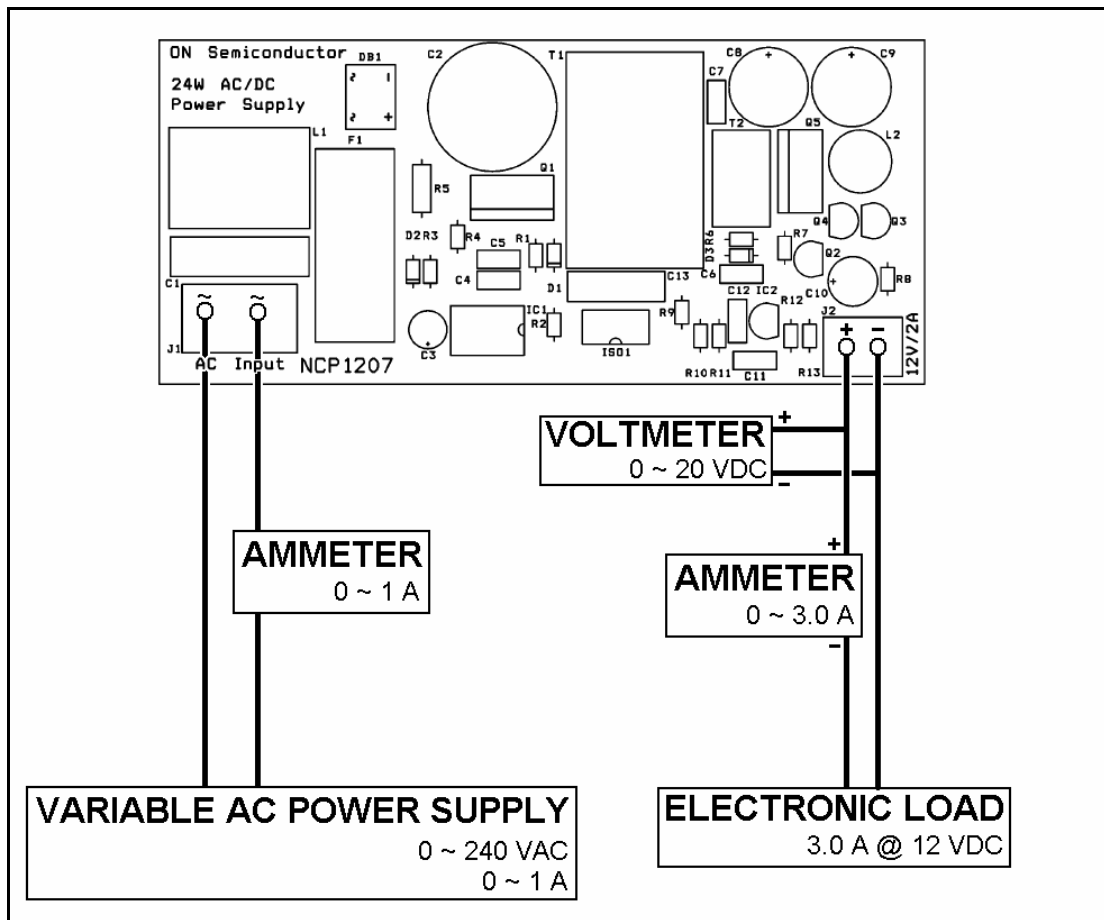


Figure 1. NCP1207AADAPGEVB Test Configuration.

## 1.2 Oscilloscope Test Points

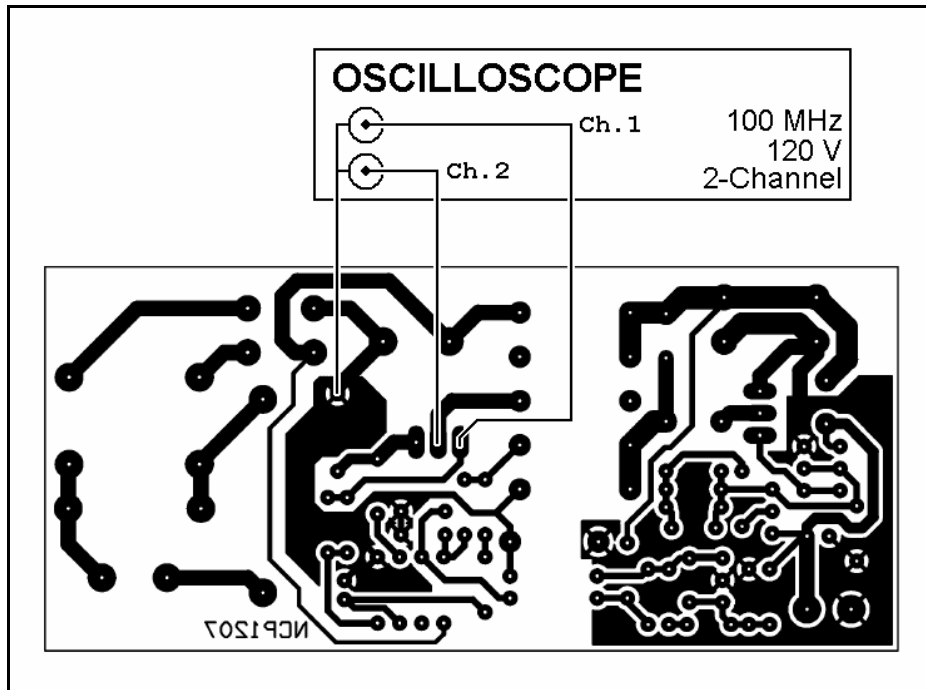


Figure 2. NCP1207AADAPGEVB Oscilloscope Test Points.


## 2.0 Equipment

- Variable AC Power supply (0 ~ 240 VAC, 1.0 A)
- Ammeter (0 ~ 1.0 A)
- Ammeter (0 ~ 3.0 A)
- Voltmeter (0 ~ 20 VDC)
- Electronic Load (capable of sinking 3.0 A @ 12 VDC)
- Oscilloscope (100 MHz, 120 V, 2-Channel)

### 3.0 Test Procedure

**3.1** Set load to 0.0 A. Apply 180 VAC supply. Verify that output voltage is 12.0 V  $\pm$ 1%. Input current should not exceed 20 mA.

**3.2** Increase load current to 0.1 A. Gate driver and drain voltage should be as in Figure 3. Verify that output voltage is 12.0 V  $\pm$ 1%. Input current should not exceed 200 mA.

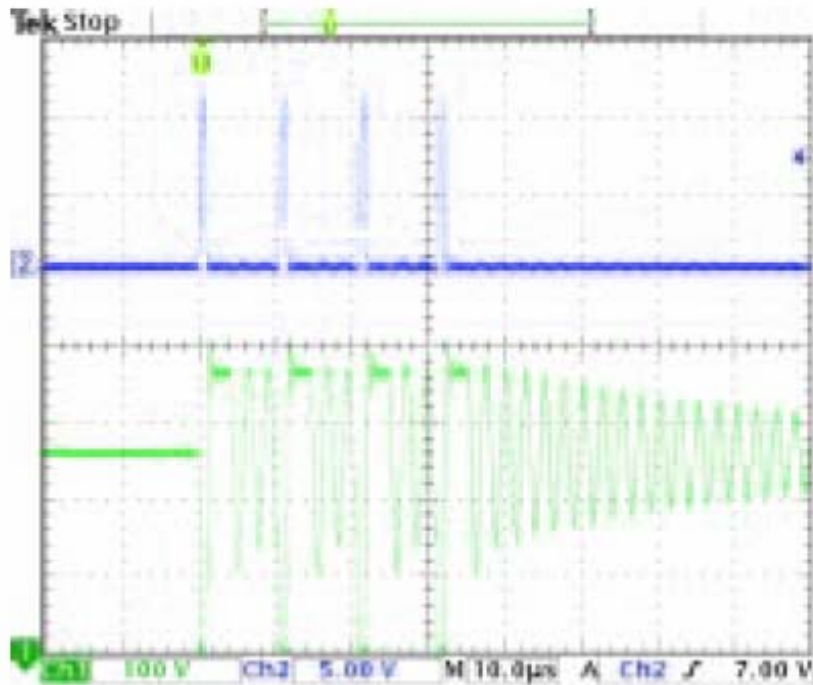

**Figure 3. Gate Driver and Drain Voltage at Very Light Load**



3.3 Increase load current to 2.0 A. Gate driver and drain voltage should be as in Figure 4. Verify that output voltage is 12.0 V  $\pm$ 1%. Input current should not exceed 200 mA.

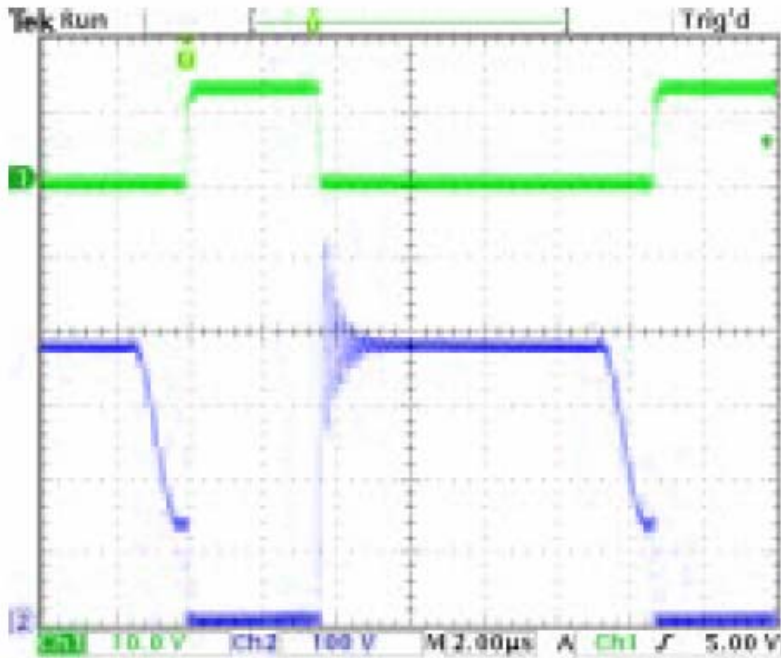


Figure 4. Gate Driver and Drain Voltage at Full Load.

3.4 Increase supply voltage to 240 VAC. Gradually increase load current until board enters overload protection ( $\sim$ 2.5 A). Verify overload protection with Figure 5.

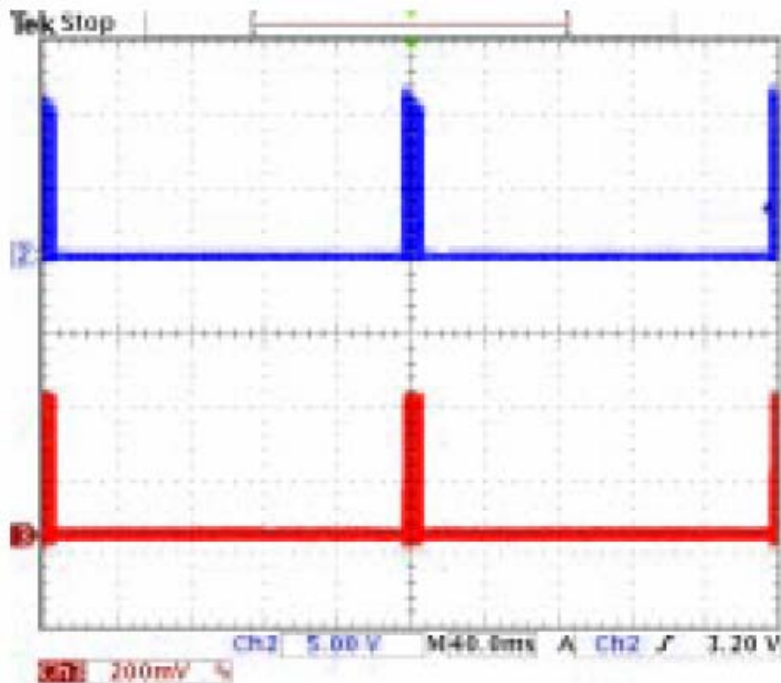


Figure 5. Gate Driver and Drain Voltage during Overload.

3.5 Shut off supply.

## **4.0 Notes**

**4.1** Oscilloscope channel 2 (drain) should be set to 10x.

**4.2** The ground plane side of resistor R5 is a convenient grounding point for the oscilloscope.