

Chipsmall Limited consists of a professional team with an average of over 10 year of expertise in the distribution of electronic components. Based in Hongkong, we have already established firm and mutual-benefit business relationships with customers from, Europe, America and south Asia, supplying obsolete and hard-to-find components to meet their specific needs.

With the principle of "Quality Parts, Customers Priority, Honest Operation, and Considerate Service", our business mainly focus on the distribution of electronic components. Line cards we deal with include Microchip, ALPS, ROHM, Xilinx, Pulse, ON, Everlight and Freescale. Main products comprise IC, Modules, Potentiometer, IC Socket, Relay, Connector. Our parts cover such applications as commercial, industrial, and automotives areas.

We are looking forward to setting up business relationship with you and hope to provide you with the best service and solution. Let us make a better world for our industry!



Contact us

Tel: +86-755-8981 8866 Fax: +86-755-8427 6832

Email & Skype: info@chipsmall.com Web: www.chipsmall.com

Address: A1208, Overseas Decoration Building, #122 Zhenhua RD., Futian, Shenzhen, China







Overview

- The UM (Ultra-Miniature) series consists of ultrasmall-size coaxial connectors that are most suitable for very thin coaxial cables having a high reliability.
- Two types of lock are available: the screw-lock type and the quick-lock type. The quick-lock type has been approved in Defense Agency standards NDS XC6115 and DSP C6205.
- Two connecting methods are available: the solderless connecting system, in which the simplicity and accuracy of the work of connecting the wiring is greatly increased; and the screw-clamp system, in which wires can be connected accurately.

Main materials used

Part	Materials	Finish
Shell	Brass	Gold plating
Male contact	Brass	Gold plating
Female contact	Beryllium copper	Gold plating
Insulation	Tetrafluoride resin	

Main performance characteristics

Items	Standard value		
Contact resistance	5mΩ or less (at 1A DC)		
Insulation resistance	1000 MΩ or more at 500 V DC		
Withstand voltage	500V AC (rms) for 1 minute		
Characteristic impedance	50Ω		
Voltage standing wave ratio	1.2 or less at DC ~ 1000MHz		

UM-P plugs

	HRS No.	Part No.	Applicable cable	Α	φВ	Shape
¥	318-0190-0-40	UM-QP-1.5VCR3A(40)	1.5D-2V	18.8	1.8	Fig.4
*	318-0176-0-40	UM-QP-1.5WCR3A(40)	1.5D-2W	18.8	1.8	Fig.4
*	318-0164-0-40	UM-QP-2.5CR3A(40)	2.5D-2V	21	2.8	Fig.4

*Center contact fix type



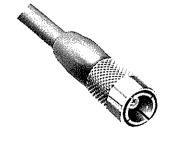


Fig.4



L-shaped plug

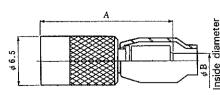


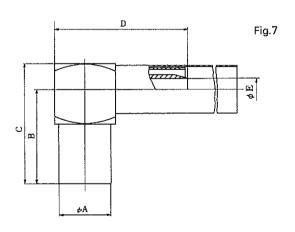

HRS No.	Part No.	Applicable cable	Α	В	С	D	φΕ	Shape
318-0162-5-40	UM-QLP-1.5-6(40)	1.5D-2V	6.3	10.4	13.3	14.1	1.8	Fig.7
318-0163-8-40	UM-QLP-1.5W-6(40)	1.5D-2W	6.3	10.4	13.3	14.1	1.8	Fig.7


UM-R receptacles



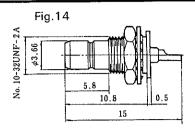


HR\$ No.	Part No.	Remark
CL318-0002-9-41	UM-QR(41)	Fig.14
CL318-0011-0-41	UM-QR-1(41)	Fig.16




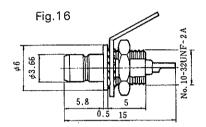


UM-A linear adapters

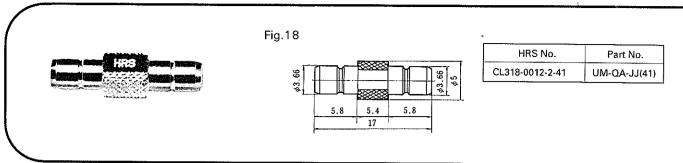


Receptacles (type for mounting printed circuit boards)

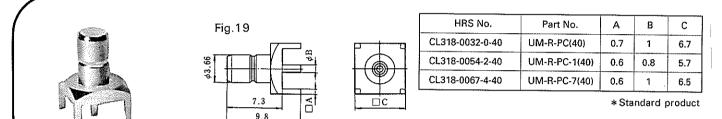

L-type receptacle (type for mounting printed circuit boards)

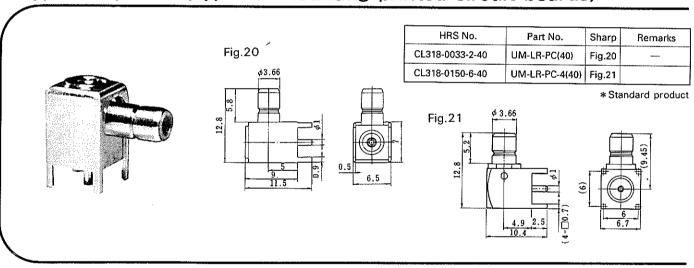

Plug receptacle (type for mounting printed circuit boards)

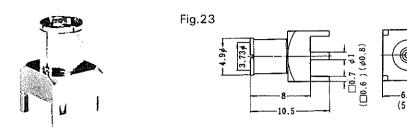

HRS No.	Part No.	Remarks
CL318-0036-0-40	UM-PR-PC(40)	6.7.2
CL318-0118-3-40	UM-PR-PC-1(40)	5.7


UM Series Plating Specifications List


The UM series are available with the center contact gold-plated or silver-plated, and outer contact gold-plated or nickel-plated. Plating specifications by part numbers are as follows:


		D. A.M.	110011	Cer	nter	Ou	ter
1 9	pe	Part No.	HRS No.	Gold Silver		Gold	Nickel
		UM-QP-1.5VCR3A(40)	318-0190-0-40	0			0
PI	ug	UM-QP-1.5WCR3A(40)	318-0176-0-40	0			0
		UM-QP-2.5CR3A(40)	318-0164-0-40	0			0
	aped	UM-QLP-1.5-6(40)	318-0162-5-40	0			0
plug]	UM-QLP-1.5W-6(40)	318-0163-8-40	0			0
		UM-QR(40)	318-0002-9-40	0		0	
Rece	ptacle	UM-QR(41)	318-0002-9-41	0			0
i i i e c e i	placie	UM-QR-1(40)	318-0011-0-40	0		0	
		UM-QR-1(41)	318-0011-0-41	0			0
Adapter	nter	UM-QA-JJ(40)	318-0012-2-40	0		0	
Ade	pter	UM-QA-JJ(41)	318-0012-2-41	0			0
		UM-R-PC(41)	318-0032-0-41	0	:	0	
	Rece pta-	UM-R-PC(40)	318-0032-0-40	0			0
	cle	UM-R-PC-1(41)	318-0054-2-41	0		0	
for	:	UM-R-PC-7(40)	318-0067-4-40	0			0
PC boad	L-	UM-LR-PC(41)	318-0033-2-41	0		0	
Joac	shaped rece	UM-LR-PC(40)	318-0033-2-40	0			0
	ptacle	UM-LR-PC-4(40)	318-0150-6-40	0			0
	Plug	UM-PR-PC(41)	318-0036-0-41	0		0	
	rece ptacle	UM-PR-PC(40)	318-0036-0-40	0			0
		UM-PR-PC-1(40)	318-0118-3-40	0		0	


Connecting methods

Solderless connecting system

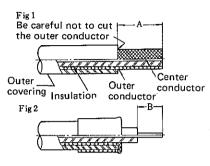

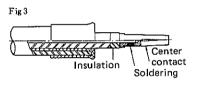

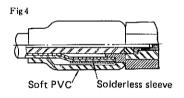

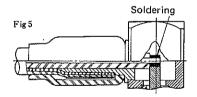

Part No.	Α	В
UM-QP -1.5	4.7	2,7
UM-QLP-1.5	4.7	1.1
UM-QJ -1.5	4.7	2.7
UM-QPJ-1.5	4.7	2.7


- Cut the outer covering as shown in the drawing on the left.
- 2. Insert the soft PVC and solderless sleeve, in that order, onto the cable. Fold back the outer conductor, and cut the insulator to obtain the dimensions indicated in B.
- 3. Insert the insulation into the center conductor of the cable. Next insert the center conductor into the center contact and solder it. (Be careful to avoid any solder build-up.)
- Insert this block into the plug. Insert the solderless sleeve, and crimp it with the proper tool. (As indi-cated) Cut off any of the outer conductor which is left outside the solderless sleeve at this time.


Note: In the case of UM-QP-1.5, it is advisable to insert this block into the plug with the plug locator (UM-QP-T) fitted into position.


Dedicated fixture HT303/ UM-MSS-T-1


- Finally, insert the soft
- UM-QLP-1,5, In everything has been done up to Fig. 2, insert into the plug and then perform 4 and 5.
- Put the cable core into the split part of the center contact and solder it. (Be careful to avoid any solder build-up.)

Clamping system

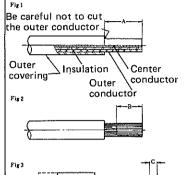

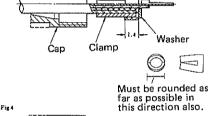

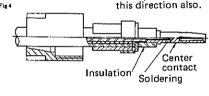

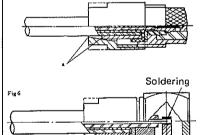

- С Part No. В UM-QP -196/U 4.0 2.7 1.0 UM-QLP-196/U 6.5 1.1 5.0 UM-QJ -196/U 4.0 1.0 2.7 UM-QPJ-196/U 4.0 2.7
 - 1. Cut the outer covering as shown in the drawing on the left.
 - 2. Disentangle the outer conductor, and cut the insulation as shown in the drawing on the left.
 - 3. Pass the cable through the cap, insert the clamp, and fold back the outer conductor as is shown in the drawing on the left. Cut the outer conductor at 1.4mm after inserting the washer. (The C dimensions are approximately the dimensions given in the table above.) Tighten the clamp in the direction of the split.)
 - Insert the insulation in front of the washer, insert the center contact into the core of the cable, and solder it. (Be careful to avoid any solder buildup).
- 5. Insert the insulation.
 - Insert this block into the plug and tighten the cap until they match at part "a."
 - Note: In the case of UM-QP-196/U, it is advisable to insert this block into the plug with the plug locator (UM-QP-T) fitted into position.
 - 7. In UM-QLP-196/U, after everything has been done up to Fig. 3, insert into the plug and then tighten the cap thoroughly.
 - Put the cable core into the split part of the center contact and solder it. (Be careful to avoid any build-up of solder.)


Drawings of holes drilled for panel mounting

Mounting holes for UM-QR.


UM-QPJ-1.5, UM-SR,

UM-SPJ-1.5,


UM-QPJ-196/U,

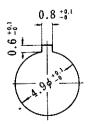

Mounting holes for UM-QR-1 UM-QR-8

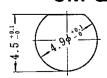


For printed circuit boards

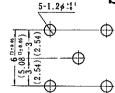


UM-R-PC, UM-PR-PC, UM-LR-PC, UM-LR-PC-4 Note: UM-R-PC-1, UM-PR-PC-1 are also available with the dimensions given in parenthesis

1. UM-QP-1.5CR3 (02), UM-QP-2.5CR3 (02)

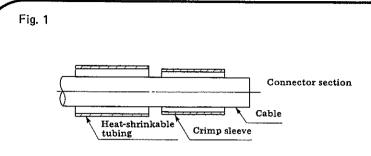

Mounting the heat-shrinkable tubing, crimp sleeve -----Fig. 1. Mount the heat-shrinkable tubing and crimp
sleeve in the cable as shown in Fig. 1.


Fig. 2

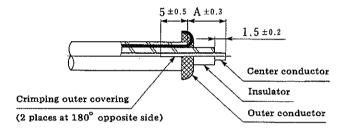

Part No.	Α
UM-QP-1.5CR3(02)	6.8
UM-QP-2,5CR3(02)	5.6


Note: Be careful not to damage the outer conductor or center conductor of the cable.

Fig. 3

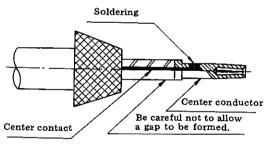

- 3. Solder the center contact Fig. 3
 - (1) Solder the solder hole of center contact.
 - (2) Insert cable center conductor into the solder hole and solder it.
 - Note 1: Be careful when soldering not to melt the cable insulator when soldering.
 - Note 2: Remove the extra solder by knife where the solder is applied.

Fig. 4

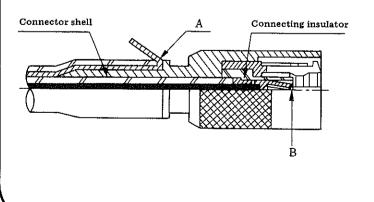

- 4. Insert the cable into the connector Fig. 4.
 - (4) Insertion of cable is finished when the tip of center contact strikes against the connecting insulator at B section.
 - (2) Cut off the outer conductor by knife blade if it appears beyond A part.

List of Connection Tools

Working tools by applicable cable for the UM series are as listed in a table below.

Applicable cable	Down Ma	Connecting tool name			
Applicable capte	Part No.	For outer conductor	Lid press-fitting rod		
1.5D-2V	UM-QP-1.5VCR3A(40)	HT303/UM.MSS-T-1	_		
1.50-24	UM-QLP-1.5-6(40)	-1.5-6(40) HT303/UM.MSS-T-1	UM-T-1		
1 50 214	UM-QP-1.5WCR3A(40)	HT303/PO-P-2-T	40-0		
1.5D-2W	UM-QLP-1.5W-6(40)	HT303/PO-P-2-T	UM-T-1		
2.5D-2V	UM-QP-2.5CR3A(40)	HT303/PO73-T-4	***		