imall

Chipsmall Limited consists of a professional team with an average of over 10 year of expertise in the distribution of electronic components. Based in Hongkong, we have already established firm and mutual-benefit business relationships with customers from, Europe, America and south Asia, supplying obsolete and hard-to-find components to meet their specific needs.

With the principle of "Quality Parts, Customers Priority, Honest Operation, and Considerate Service", our business mainly focus on the distribution of electronic components. Line cards we deal with include Microchip, ALPS, ROHM, Xilinx, Pulse, ON, Everlight and Freescale. Main products comprise IC, Modules, Potentiometer, IC Socket, Relay, Connector. Our parts cover such applications as commercial, industrial, and automotives areas.

We are looking forward to setting up business relationship with you and hope to provide you with the best service and solution. Let us make a better world for our industry!




Contact us

Tel: +86-755-8981 8866 Fax: +86-755-8427 6832 Email & Skype: info@chipsmall.com Web: www.chipsmall.com Address: A1208, Overseas Decoration Building, #122 Zhenhua RD., Futian, Shenzhen, China





FineAdjust Applicator Specification Sheet Order No. 63900-4000

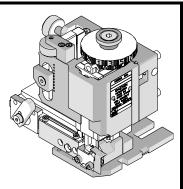


- FEATURES
- Directly adapts to most automatic wire processing machines
- Quick punch removal with the push of a button for fast and easy tooling change
- Applicator designed to industry standard mounting and shut height 135.80mm (5.346")
- Quick set-up time; plus the crimp height, track and feed adjustments can be set without removing the applicator from the press
- Fine adjustment allows users to achieve target with little effort by adjusting in increments of .015mm (.0006") for conductor crimp height and .063mm (.0025") for insulation height
- Independent adjustment rings allow users to quickly adjust the conductor or insulation crimp height without affecting each other

SCOPE

Products: 2.00mm (.079") Pitch Micro Blade Board -In Crimp Terminal 26-30 AWG.

Terminal Series No.	Terminal Order No.	Wi	re Size	Insulation	Diameter	Strip Length	
		AWG	mm²	mm	In.	mm	In.
50034	50034-8000	26-30	0.12-0.05	0.80-1.40	.031055	1.40-1.90	.055075

DEFINITION OF TERMS

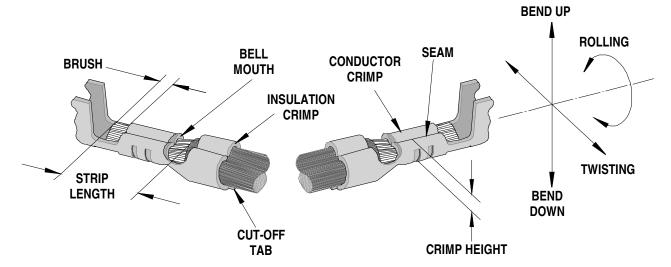

The above terminal drawing is a generic terminal representation. It is not an image of a terminal listed in the scope.

Release Date: 08-17-07 Revision Date: 08-17-07 UNCONTROLLED COPY

INSULATION CRIMP FORM

This crimp terminal is designed for miniaturization; therefore, each dimension of insulation crimp portion appears small as compared to the terminal material thickness. In order to avoid insulation piercing the crimp forms by the insulation barrel, coining is provided inside of the insulation barrel. For this reason, various crimp forms will occur at the tip of the insulation crimp barrel shown in the figure below.

These crimp forms maybe changed completely by a small change in the wire, insulation punch, or terminal.

These crimp forms are satisfactory for original function of the insulation crimp portion and it is confirmed that all of these forms below are acceptable insulation crimps.







CRIMP SPECIFICATION

	Terminal Series No.	Bell mouth		Cut-off Tab	Maximum	Conductor Brush		
		mm	ln.	mm	In.	mm	In.	
	50034	0.05-0.30	.002012	0.20	.008	0.00-0.70	.000028	

	Bend up Bend down Degree		Twist Roll - Degree		Punch Width mm (Ref)				Seam	
Terminal Series No.					Conductor		Insulation		Seam shall not be open	
					mm	In	mm	In	and no wire allowed out of	
50034	4	3	4	8	1.00	.039	1.40	.055	the crimping area	


After crimping, the conductor profile should measure the following.

Terminal Series No.	Wire	Size	Cond Crimp	Pull Force Minimum		
	AWG	mm ²	mm	In.	Ν	Lb.
	26	0.12	0.57-0.62	.022024	19.57	4.40
50034	28	0.08	0.56-0.61	.022024	9.78	2.20
	30	0.05	0.53-0.58	.021023	4.89	1.10

Pull Force should be measured with no influence from the insulation crimp. The above specifications are guidelines to an optimum crimp.

PARTS LIST

FineAdjust Applicator 63900-4000								
ltem	Order No	Engineering No.	Description	Quantity				
Perishable Tooling								
	63900-4070	63900-4070	Tool Kit (All "Y" Items)	REF				
1	63444-1003	63444-1003	Conductor Punch	1 Y				
2	63445-1010	63445-1010	Conductor Anvil	1 Y				
3	63446-1402	63446-1402	Insulation Punch	1Y				
4	63445-1404	63445-1404	Insulation Anvil	1 Y				
5	63443-0003	63443-0003	Cut-Off Plunger	1 Y				
6	63443-0012	63443-0012	Front Plunger Retainer	1 Y				
Other Components (REF 003750)								
7	11-18-4083	60707-8	Feed Guide	1				
8	11-24-1067	4996-4	Cut-Off Plunger Spring	1				
9	11-40-4039	8302-5	Plunger Striker	1				
10	63443-0009	63443-0009	Front Scrap Chute	1				
11	63443-0024	63443-0024	Key	1				
12	63443-0090	63443-0090	Wire Stop	1				
13	63443-1703	63443-1703	17.30mm Height Spacer	1				
14	63443-2217	63443-2217	17.00mm Coarse Spacer	1				
15	63443-2306	63443-2306	3.30mm Fine Spacer	1				
16	63443-6111	63443-6111	Rear Cover	1				
Frame								
17	63800-4901	63800-4901	Тор	1				
18	63801-3281	63801-3281	Base	1				
19	63801-4650	63801-4650	Track	1				
		Н	lardware					
20	N/A	N/A	M3 by 6 Long SHCS	2**				
21	N/A	N/A	M3 by 6 Long FHCS	1**				
22	N/A	N/A	M4 by 6 Long SHCS	2**				
23	N/A	N/A	M4 by 12 Long BHCS	2**				
24	N/A	N/A	M4 by 45 Long SHCS	2**				
25	N/A	N/A	M5 by 12 Long SHCS	1**				
26	N/A	N/A	#10-32 by 3/8"Long Flat Point SSS	1**				
27	N/A	N/A	#10-32 Hex Jam Nut	1**				
**	** Available from an industrial supply company such as MSC (1-800-645-7270).							

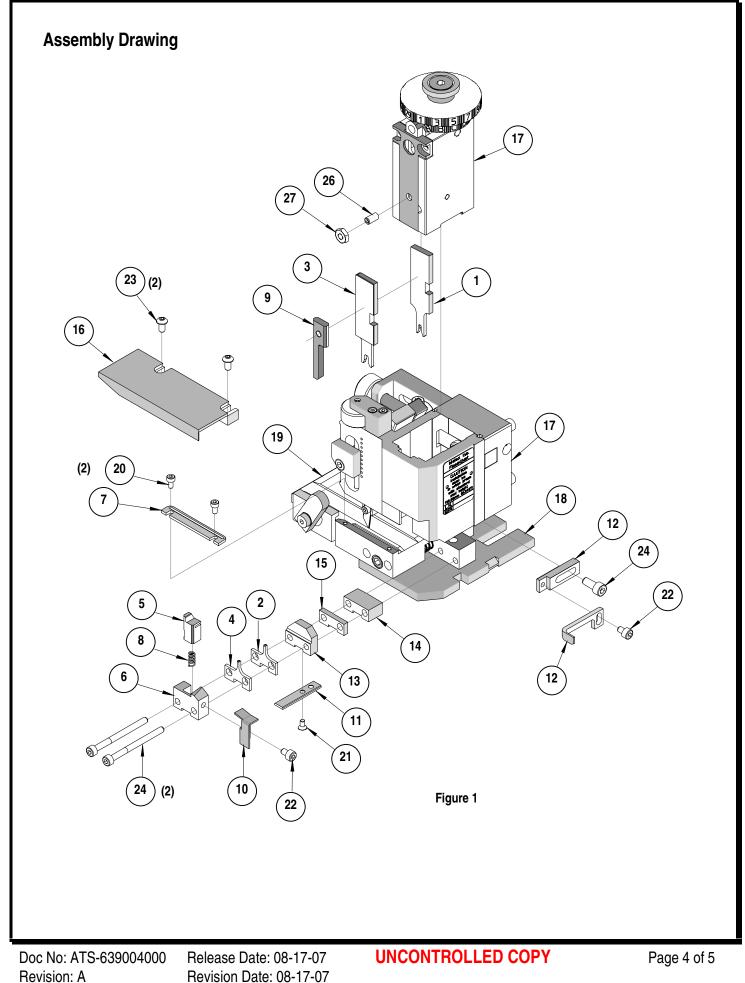

NOTES

- 1. Molex recommends an extra perishable tooling kit be maintained at your facility.
- 2. Verify tooling alignment by manually cycling the press and Applicator before crimping under power. Check that all screws are tight.
- 3. Slugs, Terminals, Dirt and Oil should be kept clear of work area.
- 4. Wear safety glasses at all times.
- 5. For recommended maintenance refer to the FineAdjust Manual.

CAUTION: This applicator should only be used in a press with a shut height of 135.80 mm (5.346"). Tooling damage could result at a lower setting.

CAUTION: To prevent injury never operate this Applicator without the guards supplied with the press or wire-processing machine in place. Reference the press or wire processing manufacturer's instruction manual.

CAUTION: Molex crimp specifications are valid only when used with Molex terminals, applicators and tooling.

Americas Headquarters Lisle, Illinois 60532 U.S.A. 1-800-78MOLEX amerinfo@molex.com Far East North Headquarters Yamato, Kanagawa, Japan 81-462-65-2324 feninfo@molex.com

Far East South Headquarters Jurong, Singapore 65-6-268-6868 fesinfo@molex.com

European Headquarters Munich, Germany 49-89-413092-0 eurinfo@molex.com Corporate Headquarters

2222 Wellington Ct. Lisle, IL 60532 U.S.A. 630-969-4550 Fax: 630-969-1352

Visit our Web site at http://www.molex.com

Doc No: ATS-639004000 Revision: A Release Date: 08-17-07 Revision Date: 08-17-07

UNCONTROLLED COPY

Page 5 of 5