

Chipsmall Limited consists of a professional team with an average of over 10 year of expertise in the distribution of electronic components. Based in Hongkong, we have already established firm and mutual-benefit business relationships with customers from, Europe, America and south Asia, supplying obsolete and hard-to-find components to meet their specific needs.

With the principle of "Quality Parts, Customers Priority, Honest Operation, and Considerate Service", our business mainly focus on the distribution of electronic components. Line cards we deal with include Microchip, ALPS, ROHM, Xilinx, Pulse, ON, Everlight and Freescale. Main products comprise IC, Modules, Potentiometer, IC Socket, Relay, Connector. Our parts cover such applications as commercial, industrial, and automotives areas.

We are looking forward to setting up business relationship with you and hope to provide you with the best service and solution. Let us make a better world for our industry!



# Contact us

Tel: +86-755-8981 8866 Fax: +86-755-8427 6832

Email & Skype: info@chipsmall.com Web: www.chipsmall.com

Address: A1208, Overseas Decoration Building, #122 Zhenhua RD., Futian, Shenzhen, China









Web Site: www.parallax.com Forums: forums.parallax.com Sales: sales@parallax.com Technical: support@parallax.com Office: (916) 624-8333 Fax: (916) 624-8003 Sales: (888) 512-1024 Tech Support: (888) 997-8267

# Single Relay Board (#27115)

The Single Relay Board can be used to turn lights, fans and other devices on/off while keeping them isolated from your microcontroller. The Single Relay Board allows you to control high-power devices (up to 10 A) via the on-board relay. Control of the relay is provided via a 1x3 header — friendly to servo cables and convenient connection to many development boards, such as the Board of Education, Propeller Board of Education, Professional Development Board and Propeller Professional Development Board.



#### **Features**

- Control high-power devices up to 10 A
- Provides isolation between microcontroller and device being controlled
- Screw terminals for relay connections
- 3-pin servo-style header for power/signal interface
- LED indicator

## **Specifications**

- Power Requirements: 5 VDC @ ~85 mA (Relay Power), 3.3-5 VDC (input signal)
- Communication Interface: Logic High/Low (3.3-5 VDC)
- Operating temperature: -13 to +158 °F (-25 to +70 °C)
- Dimensions: 1.57 x 1.06 x 0.71 in (4.0 x 2.7 x 1.8 cm)

## **Application Ideas**

- 120 VAC brushless fan/lighting control
- 12 VDC automotive applications

#### **Precautions**

As with any device capable of switching high voltage, precautions should always be taken to avoid damage and/or injury. The following precautions are recommended in addition to any precautions by the manufacturer of any equipment connected to this device.

- Always disconnect main power when connecting circuits to the Single Relay Board.
- When using high-power circuits, mount the Single Relay Board inside a suitable enclosure or electrical panel using standoffs. The board should not be able to move.
- Secure all electrical connections to the board so they cannot move; provide strain relief for any wires extending outside the enclosure.
- Fuse any incoming voltage rails that are to be switched by the relay, prior to entering the Single Relay Board terminal block.
- Always be sure any incoming voltage rails are powered off prior to connecting them to the Single Relay Board.
- Observe Max Switching Current! 10 A @ 250 VAC / 30 VDC.
- While mechanical relays provide electrical isolation from control circuits, it is possible for EMF generated by high-power devices to affect the control circuits. This is especially true if the control wires and/or power leads are longer than 6 inches (~15 cm). Always try to keep wires as short as possible and avoid running high-power leads near or across control lines.

#### **Quick-Start Circuit**

The Single Relay Board has an on-board transistor that switches the relay coil on/off. Diode protection of back-EMF is provided via an on-board diode. Essentially you're providing a common ground, relay supply voltage of 5 VDC and a signal input to activate the relay via the transistor.

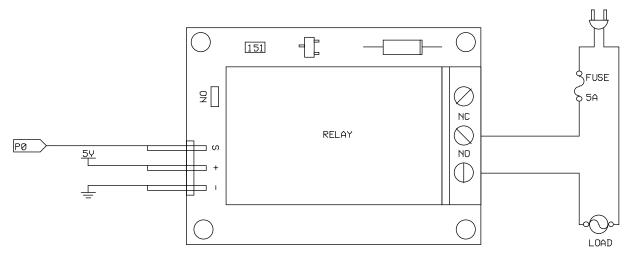


Figure 1: Connection Example

In the example in Figure 1 the relay is switching a 120 VAC load, such as a lamp or brushless fan. Notice the fuse in the example is 5 A, not 10 A. The fuse should be chosen according to the load, not the max current of the relay. You want the fuse to blow when the device draws more current than it is supposed to. Notice on the input that the "S" input connects to P0 of a BASIC Stamp Module, Propeller chip or any I/O pin from any 3.3 V or 5 V microcontroller.

The order of the 3-pin header makes it compatible with the servo header connections on many Parallax development boards. You could also use pluggable wires to makes these connections.

#### **Resources and Downloads**

Check for the latest version of this document from the Single Relay Board product page. Go to www.parallax.com and search 27115.

## **Pin Definitions and Ratings**

Pin	Name	Type	Function
-	Ground	G	Signal/Coil Ground
+	Supply	Р	Relay Coil Supply
S	Signal	I	Signal Input

Pin Type: P = Power, G = Ground, I = Input, O = Output

## **Specifications**

Symbol	Quantity	Minimum	Typical	Maximum	Units
S	Signal Input Voltage	3.3	5	_	V
+	Relay Supply Voltage	_	5	_	V
_	Relay Supply Current	0	85	_	mA
_	Max Switching Current	_	_	10	Α

# **BASIC Stamp® Example Code**

This program uses the BASIC Stamp Editor software. The software is a free download from www.parallax.com/basicstampsoftware.

```
' 27115-BS2SourceCode.bs2
' Toggles relay on/off every second

' {$STAMP BS2}
' {$PBASIC 2.5}

RLY1 PIN 15

DO
HIGH RLY1
PAUSE 1000
LOW RLY1
PAUSE 1000
LOOP
```

## **Propeller**<sup>™</sup> P8X32A Example Code

Note: This application uses the 27115-P8X32ASourceCode.spin object. It toggles the relay on/off every second. The Propeller Tool is available from the Downloads link at <a href="https://www.parallax.com/Propeller">www.parallax.com/Propeller</a>.

```
{{27115-P8X32ASourceCode.spin
Toggles relay on/off every second
}}

CON
   _clkmode = xtal1 + pll16x
   _xinfreq = 5_000_000

RLY = 14

PUB Toggle
   dira[RLY]~~
   repeat
       !outa[RLY]
       waitcnt(clkfreq + cnt)
```