



Chipsmall Limited consists of a professional team with an average of over 10 year of expertise in the distribution of electronic components. Based in Hongkong, we have already established firm and mutual-benefit business relationships with customers from,Europe,America and south Asia,supplying obsolete and hard-to-find components to meet their specific needs.

With the principle of “Quality Parts,Customers Priority,Honest Operation,and Considerate Service”,our business mainly focus on the distribution of electronic components. Line cards we deal with include Microchip,ALPS,ROHM,Xilinx,Pulse,ON,Everlight and Freescale. Main products comprise IC,Modules,Potentiometer,IC Socket,Relay,Connector.Our parts cover such applications as commercial,industrial, and automotives areas.

We are looking forward to setting up business relationship with you and hope to provide you with the best service and solution. Let us make a better world for our industry!



Contact us

Tel: +86-755-8981 8866 Fax: +86-755-8427 6832

Email & Skype: info@chipsmall.com Web: www.chipsmall.com

Address: A1208, Overseas Decoration Building, #122 Zhenhua RD., Futian, Shenzhen, China



IB IL 24 PWR IN/R-PAC

Inline power/boost terminal



Data sheet
6483_en_05

© PHOENIX CONTACT 2017-04-19

1 Description

The terminal is designed for use within an Inline station. If the maximum load of the bus coupler for the communications power (U_L) or the supply voltage for the analog terminals (U_{ANA}) is reached, this terminal can be used to provide these voltages again. To do this, apply a 24 V DC voltage (U_{24V}) to the terminal. The communications power (U_L) and the supply voltage for the analog terminals (U_{ANA}) are generated from this voltage. In addition, the terminal enables the feed-in of the 24 V DC main voltage (U_M) and the 24 V DC segment voltage (U_S).

Features

- Supply of all 24 V voltages required for the low-level signal of an Inline station
- From hardware version 01, approved for use in potentially explosive areas of zone 2



WARNING: Explosion hazard when used in potentially explosive areas

When using the terminal in potentially explosive areas, observe the corresponding notes.



This data sheet is only valid in association with the IL SYS INST UM E user manual.



Make sure you always use the latest documentation. It can be downloaded from the product at phoenixcontact.net/products.


2	Table of contents	
1	Description	1
2	Table of contents	2
3	Ordering data	3
4	Technical data	3
5	Electrical isolation/isolation of the voltage areas.....	6
6	Internal circuit diagram	7
7	Terminal point assignment.....	8
8	Connection example.....	9
9	Local diagnostic indicators	9
10	Notes on using the terminal block in potentially explosive areas	10

3 Ordering data

Description	Type	Order No.	Pcs./Pkt.
Inline power terminal or boost terminal, complete with accessories (connector and labeling field), 24 V DC, without fuse	IB IL 24 PWR IN/R-PAC	2861674	1
Accessories	Type	Order No.	Pcs./Pkt.
Connector set, for power terminal block, copper, colored identification. (Connector/Adapter)	IB IL PWR IN/R-PLSET	2860620	1
Labeling field, width: 12.2 mm (Marking)	IB IL FIELD 2	2727501	10
Labeling field, width: 48.8 mm (Marking)	IB IL FIELD 8	2727515	10
Insert strip, Sheet, white, unlabeled, can be labeled with: Office printing systems: Laser printer, Mounting type: Insert, Lettering field: 62 x 10 mm (Marking)	ESL 62X10	0809492	1
Insert strip, Sheet, white, unlabeled, can be labeled with: Office printing systems: Laser printer, Mounting type: Insert, Lettering field: 62 x 46 mm (Marking)	ESL 62X46	0809502	5
Documentation	Type	Order No.	Pcs./Pkt.
User manual, English, Automation terminals of the Inline product range	IL SYS INST UM E	-	-

4 Technical data

Dimensions (nominal sizes in mm)

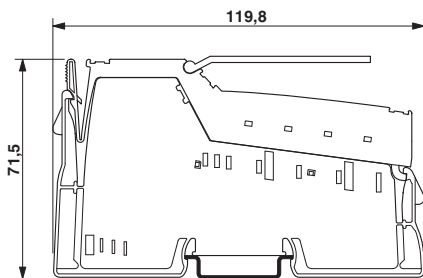

Width	48.8 mm
Height	119.8 mm
Depth	71.5 mm

General data

Color	green
Weight	192 g (with connectors)
Mounting type	DIN rail
Ambient temperature (operation)	-25 °C ... 55 °C
Ambient temperature (storage/transport)	-25 °C ... 85 °C
Permissible humidity (operation)	10 % ... 95 % (non-condensing)
Permissible humidity (storage/transport)	10 % ... 95 % (non-condensing)
Air pressure (operation)	70 kPa ... 106 kPa (up to 3000 m above sea level)
Air pressure (storage/transport)	70 kPa ... 106 kPa (up to 3000 m above sea level)
Degree of protection	IP20
Protection class	III, IEC 61140, EN 61140, VDE 0140-1

Connection data

Designation	Inline connector
Connection method	Spring-cage connection
Conductor cross section solid / stranded	0.08 mm ² ... 1.5 mm ² / 0.08 mm ² ... 1.5 mm ²
Conductor cross section [AWG]	28 ... 16
Stripping length	8 mm

Connection data for UL approvals

Designation	Inline connector
Connection method	Spring-cage connection
Conductor cross section solid / stranded	0.2 mm ² ... 1.5 mm ² / 0.2 mm ² ... 1.5 mm ²
Conductor cross section [AWG]	24 ... 16
Stripping length	8 mm

Interface Inline local bus

Connection method	Inline data jumper
Transmission speed	500 kbps / 2 Mbps (Can be used in Inline stations with these transmission speeds)

Power consumption**NOTE: Electronics may be damaged when overloaded**

Provide external fuses for each 24 V area.

The power supply unit must be able to supply four times the nominal current of the external fuse, to ensure that it blows in the event of an error.



When supply voltages U_M/U_S are supplied separately from the supply voltage U_{24V} , they are electrically isolated from one another. This is only ensured if two separate power supply units are used.

Power consumption

24 V supply (U_{24V}) for generating U_L and U_{ANA}	24 V DC
Supply voltage range U_{24V}	19.2 V DC ... 30 V DC (including all tolerances, including ripple)
Current consumption	min. 12 mA DC (from U_{24V} , at nominal voltage) max. 1.25 A DC (from U_{24V} , at nominal voltage; consisting of: 0.75 A DC for the communications power and 0.5 A DC for the analog voltage supply)
Main circuit supply U_M	24 V DC
Supply voltage range U_M	19.2 V DC ... 30 V DC (including all tolerances, including ripple)
Power supply at U_M	max. 8 A (Sum of $U_M + U_S$; 4 A, maximum, when used in potentially explosive areas.)
Segment circuit supply U_S	24 V DC
Supply voltage range U_S	19.2 V DC ... 30 V DC (including all tolerances, including ripple)
Power supply at U_S	max. 8 A DC (Sum of $U_M + U_S$; 4 A, maximum, when used in potentially explosive areas.)
Communications power U_L	7.5 V DC
Power supply at U_L	max. 2 A DC
I/O supply voltage U_{ANA}	24 V DC
Supply voltage range U_{ANA}	19.2 V DC ... 30 V DC (including all tolerances, including ripple)
Power supply at U_{ANA}	max. 0.5 A DC

Power dissipation

Power dissipation	max. 2.55 W (entire device)
-------------------	-----------------------------

Configuration and parameter data in a PROFIBUS system

Required parameter data	0 Byte
Need for configuration data	0 Byte

Electrical isolation/isolation of the voltage areas

Test section	Test voltage
7.5 V logics supply, 24 V analog supply/functional earth ground	500 V AC , 50 Hz , 1 min.
7.5 V logics supply, 24 V analog supply, 24 V main supply, 24 V segment supply	500 V AC , 50 Hz , 1 min.
24 V main supply, 24 V segment supply / functional earth ground	500 V AC , 50 Hz , 1 min.

Error messages to the higher level control or computer system

None

Protective circuit

Surge protection (segment supply, main supply, 24 V supply)

Input protective diodes (can be destroyed by permanent overload)
Pulse loads up to 1500 W are short circuited by the input protective diode.

Protection against polarity reversal (segment supply/main supply)

Parallel diodes for protection against polarity reversal; in the event of an error the high current flowing through the diodes causes the fuse connected upstream to blow.

Polarity reversal (24 V supply)

Serial diode in the lead path of the power supply unit; in the event of an error only a low current flows. In the event of an error, no fuse trips within the external power supply unit.

Approvals

For the latest approvals, please visit phoenixcontact.net/products.

5 Electrical isolation/isolation of the voltage areas

Common potentials	
When providing the 24 V supply for generating U_L and U_{ANA} separately from the 24 V main supply/24 V segment supply	Main and segment supply have the same potential. From the power terminal onwards, common ground is led through the potential jumper to the devices as reference ground GND. 24 V supply for generating U_L and U_{ANA} , 24 V analog supply U_{ANA} , and 7.5 V communications power U_L have the same potential. From the bus coupler onwards, common ground is led through the potential jumper to the devices as the reference ground "Logical GND" (U_{L-}).
When providing the 24 V supply for generating U_L and U_{ANA} by jumpering the 24 V main supply/24 V segment supply	Main supply, segment supply, 24 V analog supply, and 7.5 V communications power have the same potential. From the power terminal onwards, common ground is led through the potential jumper to the devices as the reference ground "Logical GND" (U_{L-}) for the communications power and analog supply and separately as reference ground GND for the supply and segment level.
Separate potentials	
When providing the 24 V supply for generating U_L and U_{ANA} separately from the 24 V main supply/24 V segment supply	The 24 V supply for generating U_L and U_{ANA} is physically and therefore electrically isolated from the main supply and the segment supply.
When providing the 24 V supply for generating U_L and U_{ANA} by jumpering the 24 V main supply/24 V segment supply	None

6 Internal circuit diagram

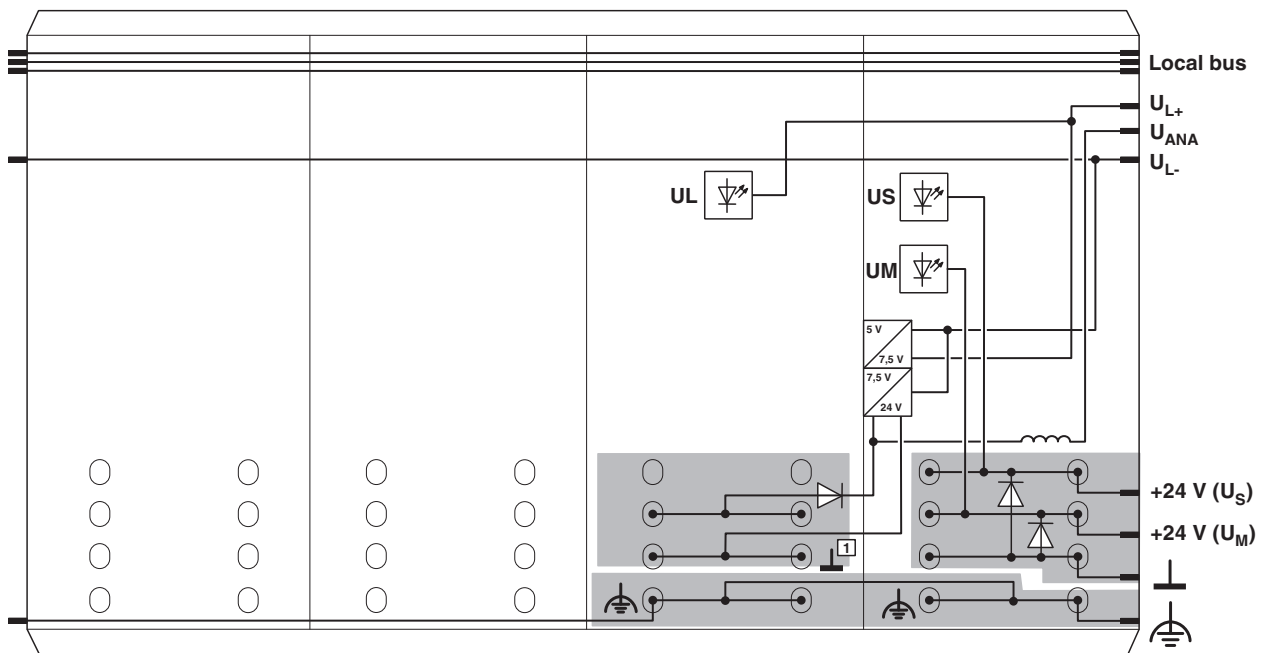


Figure 1 Internal wiring of the terminal points

Key:



LED



Electrically isolated area



Power supply unit



Diode



Reference potential GND (24 V supply)



Explanation for other used symbols has been provided in the IL SYS INST UM E user manual.

7 Terminal point assignment

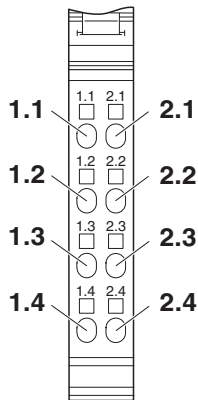


Figure 2 Terminal point assignment

Terminal point	Designation	Assignment	
Connector 1	Not used		
Connector 2	Not used		
Connector 3	Voltage supply for generating the communications power and analog voltage		
1.1 / 2.1	Not used		
1.2 / 2.2	24 V DC	For generating U_L and U_{ANA}	
1.3 / 2.3	GND	Ground	Ground of the 24 V supply
1.4 / 2.4	FE	Functional earth ground	Functional earth ground of the power terminal and, therefore, of the Inline station. The contacts are directly connected to the potential jumper and the FE spring on the bottom of the housing.
Connector 4	Voltage supply for the main circuit and segment circuit		
1.1 / 2.1	24 V DC	U_S	24 V supply for segment circuit
1.2 / 2.2	24 V DC	U_M	24 V supply for main circuit
1.3 / 2.3	GND	Reference potential of the I/O supply	The reference potential is routed directly to the potential jumper and simultaneously functions as reference ground for the main and segment supplies.
1.4 / 2.4	FE	Functional earth ground	Functional earth ground of the power terminal and, therefore, of the Inline station. The contacts are directly connected to the potential jumper and the FE spring on the bottom of the housing.



Functional earth ground is only used to discharge interference.



NOTE: Electronics may be damaged when overloaded

Ensure that the maximum permissible current of 8 A flowing through potential jumpers U_M and U_S (total current) is not exceeded.



NOTE: Malfunction

Connect the power terminal to the functional earth ground (FE) via one of the FE connections of connector 3 or connector 4. To do so, connect the corresponding contact to a grounding terminal block.

24 V segment supply/24 V main supply

The segment supply and main supply must have the same reference potential. Therefore, an electrically isolated voltage area on the I/O side cannot be created.

The main supply and the segment supply are protected against polarity reversal and transient overvoltage.



NOTE: Module can become damaged
 The main supply and segment supply do not have short-circuit protection.
 The user must provide short-circuit protection. Measure the rating of the fuse connected upstream such that the maximum permissible load current is not exceeded.

24 V segment supply

You can provide the segment voltage at this terminal or one of the supply terminals.

There are several ways of providing the segment voltage at the terminal (connector 4):

1. The segment voltage can be supplied separately at terminal points 1.1 (or 2.1) and 1.3 (or 2.3) (GND) of the power connector.
2. Connections 1.1 (or 2.1) and 1.2 (or 2.2) can be jumpered to tap the supply for the segment circuit from the main circuit.
3. A switch can be inserted between terminal points 1.1 (or 2.1) and 1.2 (or 2.2) to create a switched segment circuit (e.g., an emergency stop circuit).

24 V supply for generating U_L and U_{ANA}

The 24 V supply has protection against polarity reversal and transient overvoltage. These protective elements are only used to protect the power supply unit.



NOTE: Module can become damaged
 The 24 V supply does not have short-circuit protection.
 The user must provide short-circuit protection. Measure the rating of the fuse connected upstream such that the maximum permissible load current is not exceeded.

8 Connection example

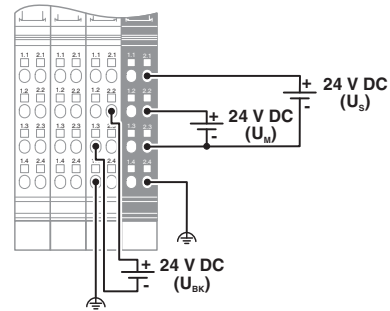


Figure 3 Typical connection of the supply voltage

9 Local diagnostic indicators

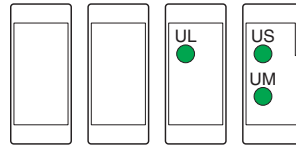


Figure 4 Local diagnostic indicators

LED	Color	Meaning
UL	Green	7.5 V communications power
US	Green	24 V supply for segment circuit
UM	Green	24 V supply for main circuit

Function identification

Black

10 Notes on using the terminal block in potentially explosive areas

**WARNING: Explosion hazard**

Please make sure that the following notes and instructions are observed.

Approval according to ATEX Directive 2014/34/EU

Ⓜ II 3 G Ex nA IIC T4 Gc X

Installation notes

The category 3 device is designed for installation in zone 2 potentially explosive areas.

The device meets the requirements of EN 60079–0:2012 + A11:2013 and EN 60079–15:2010.

- Observe the specified conditions for use in potentially explosive areas.
- At the time of installation, use an approved housing (minimum protection IP54), which meets the requirements of EN 60079-15. Within this context, observe the requirements of IEC 60079-14/EN 60079-14.
- The following work is only permitted in potentially explosive areas when the power is disconnected:
 - Snapping the device onto the DIN rail
 - Removing the device from the DIN rail
 - Connection and disconnection of cables
- Connect the DIN rail to the protective earth ground.
- Only devices that are designed for operation in Ex Zone 2 and the conditions at the installation location may be connected to the circuits in Zone 2.
- The maximum permissible current for each tension spring contact is **2 A**.
- When using the device in potentially explosive areas, observe the specifications in the application note AH DE IL EX ZONE 2 (German) / AH EN IL EX ZONE 2 (English).