



Chipsmall Limited consists of a professional team with an average of over 10 year of expertise in the distribution of electronic components. Based in Hongkong, we have already established firm and mutual-benefit business relationships with customers from,Europe,America and south Asia,supplying obsolete and hard-to-find components to meet their specific needs.

With the principle of "Quality Parts,Customers Priority,Honest Operation,and Considerate Service",our business mainly focus on the distribution of electronic components. Line cards we deal with include Microchip,ALPS,ROHM,Xilinx,Pulse,ON,Everlight and Freescale. Main products comprise IC,Modules,Potentiometer,IC Socket,Relay,Connector.Our parts cover such applications as commercial,industrial, and automotives areas.

We are looking forward to setting up business relationship with you and hope to provide you with the best service and solution. Let us make a better world for our industry!



## Contact us

Tel: +86-755-8981 8866 Fax: +86-755-8427 6832

Email & Skype: info@chipsmall.com Web: www.chipsmall.com

Address: A1208, Overseas Decoration Building, #122 Zhenhua RD., Futian, Shenzhen, China



## FEATURES

### MitySOM-335x Development Board

### MitySOM-335x SoM Module

#### Additional Hardware Included:

- RS485/422 Expansion Kit
- RS232 Expansion Kit
- Serial & Ethernet Cables
- AC to DC 12V 1.2A Adapter


#### Integrated +3V/+5V Power Supplies

#### Digital Interfaces:

- HDMI Video Only Interface with 2048x2048 maximum resolution
- Audio Output and Microphone Input
- 10/100/1000 MBit Ethernet Interface
- 8-Channel ADC
- RS-232 Serial Interface
- USB Host Interface
- USB OTG Interface
- Dual Electrically Isolated CAN Bus Interfaces
- SD/MMC Card Socket

#### Expansion

- 2 UART Expansion Headers
- 41-Pin with SPI, I2C and GPIO
- LCD Interface

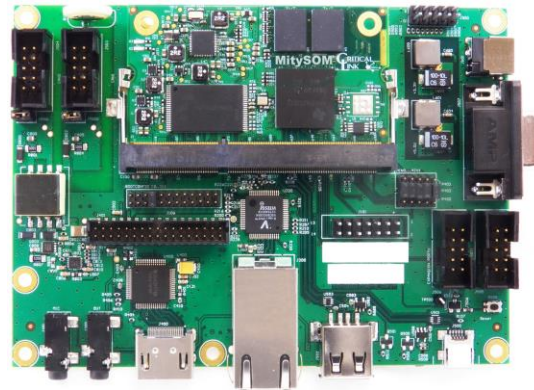

#### Software and Documentation:

- Real-Time Linux Kernel
- uBoot
- Development Environment - Virtual Machine
- Development Board Schematics
- Development Board Gerber Files
- Development Board BOM

## APPLICATIONS

- MitySOM-335x Evaluation
- Process Automation
- Factory Automation
- Industrial Automation
- Embedded Instrumentation
- Rich Displays
- Rapid Prototyping

## DESCRIPTION


The MitySOM-335x Development Kit provides all the hardware and software support for system designers and developers to evaluate the Critical Link MitySOM-335x System on Module. The MitySOM-335x Development Kit comes complete with the MitySOM-335x module that meets your project's needs.

The MitySOM-335x Development Kit includes on-board RS-232, 10/100/1000 GBit Ethernet, Universal Serial Bus (USB 2.0) Host and USB-On-The-Go (OTG) communication interfaces. Dual electrically isolated CAN and dual UART expansion ports provide a wide range of communication interfaces. Included are RS232 and RS485/422 expansion kits from Critical Link, Table 18.

The High-Definition Multimedia Interface (HDMI) supports displays up to a resolution of 2048 x 2048 through a standard HDMI connector, video only. An interface to support an XGA LCD display with SPI or ADC interfaces for resistive touch control is available via an expansion kit, Table 18. Multi Media Card (MMC) interface supporting Secure Digital (SD) cards and an I/O Expansion connector for an 802.11b/g/n Wireless with Bluetooth module from Critical Link, Table 18, or a user designed custom add-on card. All powered from a single 12VDC input with onboard +3V/+5V power supplies.

A block diagram of the MitySOM-335x Development Kit is illustrated in Figure 1 on the following page. All available processor GPIO ports are used directly by the MitySOM-335x Development Kit. Control of the on-board interface hardware and connected Expansion IO cards require proper configuration of the MitySOM-335x Module. While not required, it is strongly recommended that the MitySOM software development kit and supplied API be used to manage these interfaces.

### MitySOM-335x Development Kit

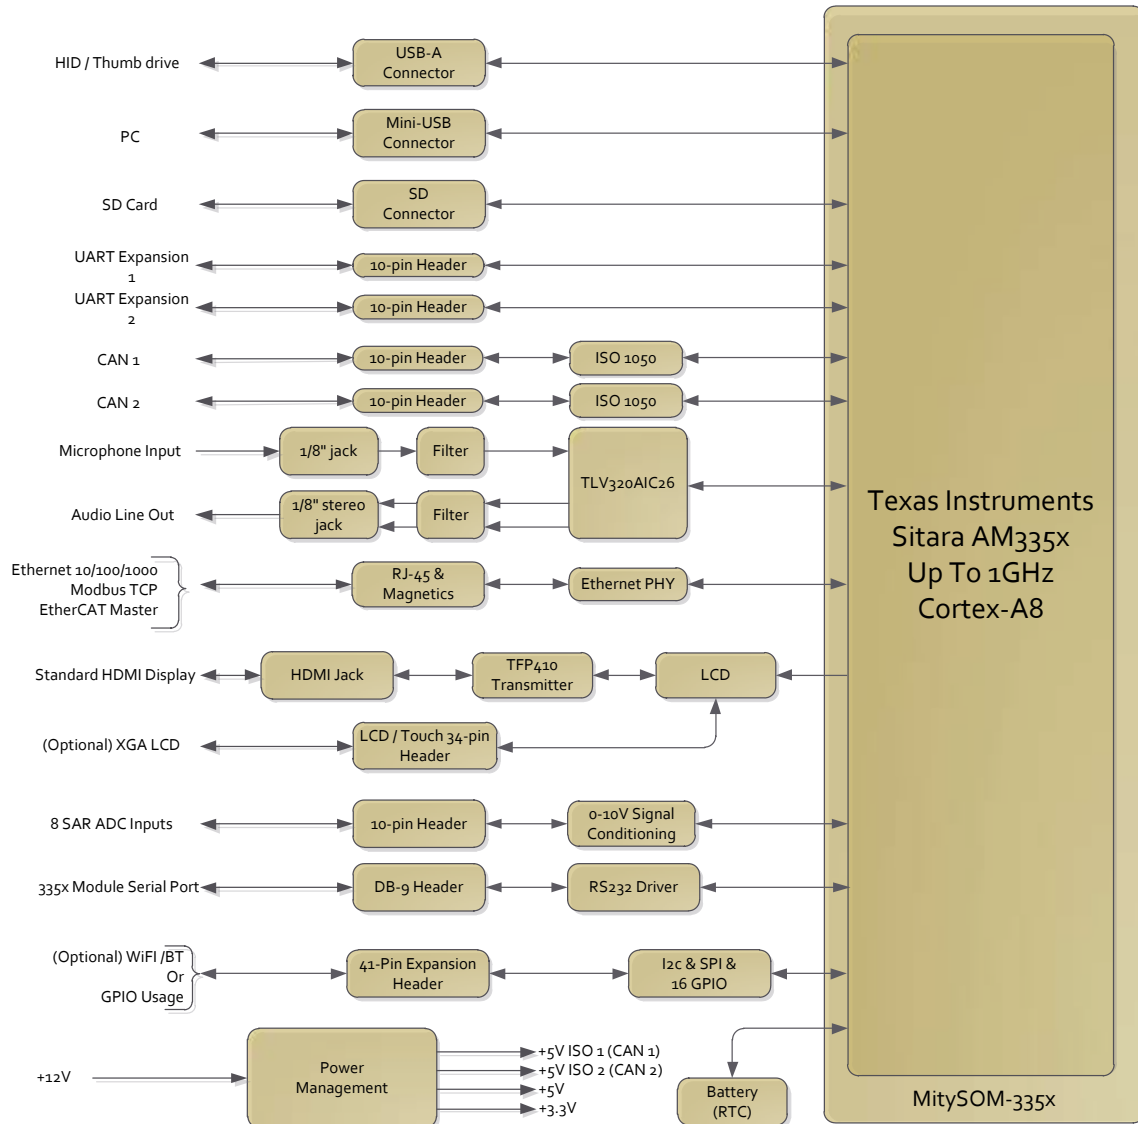

**Figure 1: MitySOM-335x Development Kit Block Diagram**

Additional details about the AM335x Sitara ARM MPU, available peripherals and their features are provided in the data sheet at the TI website ([www.ti.com/am335x](http://www.ti.com/am335x)).

## Feature Descriptions

|  |   |
|--|---|
| RS-232 Interface Description .....                     | 5 |
| Dual UART Expansion Port Description .....             | 5 |
| Audio Input/Output Description .....                   | 5 |
| USB 2.0 Interface Description .....                    | 5 |
| MultiMedia Card (SD) Interface Description .....       | 5 |
| Gigabit Ethernet Interface Description.....            | 5 |
| XGA LCD with Touch Interface Description.....          | 6 |
| HDMI (Video Only) Interface Description .....          | 6 |
| 8-Channel Analog to Digital Converter Description..... | 6 |
| Dual CAN Interface Description.....                    | 6 |
| Expansion Port Interface Description.....              | 7 |
| Boot Configuration Header Description.....             | 7 |
| TI JTAG Interface Description .....                    | 7 |

## Electrical Interface Descriptions

|   |    |
|---|----|
| Input Power – J601.....   | 9  |
| Analog to Digital Converter Interface – J900.....                             | 9  |
| MultiMedia Card (SD) Interface – J501 .....                                   | 9  |
| Auxiliary / LCD Interface – J401.....   | 10 |
| HDMI Interface – J400.....  | 12 |
| Expansion Port Interface – J700 .....   | 12 |
| Debug/Boot RS232 Interface – J507.....  | 14 |
| Dual CAN Interface – J503 & J504 .....  | 14 |
| UART Expansion Interface Port0 - J506 (Use with 80-000450 and 80-000358)..... | 15 |
| UART Expansion Interface Port1 - J505 (Use with 80-000450 and 80-000358)..... | 15 |
| 10/100/1000 Ethernet Interface – J200.....                                    | 16 |
| Audio Input/Output Interface – J300 and J301 .....                            | 16 |
| Boot Configuration header – J106 .....  | 17 |
| TI JTAG Interface – J101 .....  | 17 |

### **RS-232 Interface Description**

The on-board RS-232 level driver provides a standard serial interface at data rates up to 115,200 baud. The serial interface, J507, is routed to the primary MitySOM serial bootloading port, UART0, in order to allow remote code download and FLASH upgrades on an attached MitySOM from this connector.

### **Dual UART Expansion Port Description**

The dual UART expansion ports each contain a set of TX and RX connections as well as an enable GPIO from the MitySOM-335x module. A custom user designed driver board can be designed to provide any desired signaling or you can select an off-the-shelf solution available from Critical Link for RS232 and RS485/422 drivers. Each MitySOM-335x Development includes both a RS232 and RS485/422 driver expansion kits, Table 18.

The electrical interfaces are provided via J505 and J506, 10-pin shrouded headers. HW flow control is not supported on these interfaces.

Linux Driver and API examples are available to support the UART functionality.

### **Audio Input/Output Description**

Standard 3.5mm / 1/8<sup>th</sup> inch audio jacks are provided for both stereo audio output and a microphone audio input from/to a TLV320AIC26 16-bit audio CODEC connected to the MitySOM-335x module.

The electrical interfaces are provided via 1/8<sup>th</sup> inch jacks J300, Audio Out, and J301, Microphone In.

Linux Driver and API examples are available to support the audio functionality.

### **USB 2.0 Interface Description**

The on-board USB interface utilizes dedicated HOST, A type connector J502, and OTG, mini B type connector J500, controllers inside Sitara processor. Linux drivers are available.

### **MultiMedia Card (SD) Interface Description**

The on-board MultiMedia Card (MMC) slot uses a Secure Digital connector J501 which supports standard (3.3V) and SDHC (1.8V) cards up to 32GB. U-Boot configuration information and Linux drivers are available.

### **Gigabit Ethernet Interface Description**

The on-board Ethernet interface features a network PHY capable of running at 10/100/1000Mbit including link auto-negotiation and MII/MDIO capability. An industry standard RJ-45 connector is provided for external connection. This Ethernet interface may be used to perform remote code download via U-Boot and FLASH upgrades on an attached MitySOM-335x module.

### **LCD with Touch Interface Description**

The MitySOM-335x Development Kit provides a flat-ribbon cable low profile Digital Video Interface (DVI). In addition to custom user interfacing, the signals may be used to interface to either a XGA (1024x768) or VGA (640x480) LCD screen using the MitySOM hardware and software development kit LCD interface libraries and an appropriate daughterboard interface. Off-the-shelf display solutions for XGA or VGA interfaces are provided by Critical Link.

Combining five of the interface pins with P400, P401 and P402 jumper settings allow for SPI or up to 5-channel Analog based touch screen controls.

**Note:** ADC Channels 1 through 5 are shared with the Analog to Digital Converter interface connections and are enabled or disabled depending on P402 and P401 jumpers.

The interface can also be customized to support 20 GPIO lines at +3.3V CMOS/LVTTL signaling levels based on the AM335x configuration.

### **HDMI (Video Only) Interface Description**

The MitySOM-335x Development Kit provides a standard HDMI interface for external monitor connection. With a maximum resolution of 2048 x 2048 the MitySOM-335x development kit can drive the display you need.

### **8-Channel Analog to Digital Converter Description**

The on-board 8-channel analog to digital converter (ADC) accepts 0 to 10V input levels through the 10-pin header, J900.

**Note:** Channels 1 through 5 are shared with the LCD analog touch interface connections and are enabled or disabled depending on P402 and P401 jumpers.

### **Dual CAN Interface Description**

The on-board CAN provides a set of CAN V2.0B compliant interfaces. These interfaces are managed by the MitySOM-335x module directly.

The galvanic isolation is provided by a dedicated TI ISO1050 transceiver for each interface. The ISO1050 is powered by an isolated power supply with 1000V\* isolation from the primary supply.

Jumpers JP500 (CAN 1) and JP501 (CAN 0) can provide dedicated bus termination of 120Ohm. To enable termination, place shorting jumper across JP504.

The electrical interfaces are provided via J503 and J504, 10-pin shrouded headers.

Linux Driver and API examples are available to support CAN functionality.

#### **Expansion Port Interface Description**

This 41-pin port can be used for a multitude of expansion functions. Both SPI and I2C connections are available as well as 16 Address/Data pins with control logic. Both 1.8V from the MitySOM-335x module and 3.3V power supply connections are available on the connector.

In addition to custom user interfacing Critical Link provides off-the-shelf add-on modules for this port that include an 802.11 b/g/n with Bluetooth module.

#### **Boot Configuration Header Description**

The 335x Development Kit features a 12 bit, [0] to [11] series of boot configuration jumpers, based off the LCD\_DATA pins, to determine the search order of peripherals for a valid boot image.

By default the MitySOM-335x Development Kits is required to boot initially from the MMC/SD card. Note that there are a total of 16 bits for the boot configuration with pins [12] to [15] already pulled high/low on the MitySOM-335x module.

#### **TI JTAG Interface Description**

The 14-pin JTAG header J101 is available onboard for debugging of the MitySOM AM335x module with a TI Emulator.



## ABSOLUTE MAXIMUM RATINGS

If Military/Aerospace specified cards are required, please contact the Critical Link Sales Office or unit Distributors for availability and specifications.

Maximum Supply Voltage            13.2 V  
 Storage Temperature Range        0 to 80C

## OPERATING CONDITIONS

Ambient Temperature                0 to 70C  
 Range  
 Humidity                                0 to 95%  
 Non-condensing

## ELECTRICAL CHARACTERISTICS

| Symbol                             | Parameter   | Conditions | Typical          | Limit | Units (Limits) |
|------------------------------------|---|------------|------------------|-------|----------------|
| <b>Maximum Power Supply Output</b> |   |            |                  |       |                |
| $I_{Max}$                          | 12V Supply (AC Adapter) <sup>1</sup> all components |            |                  | 1.2   | A              |
| $I_{Max}$                          | 5.0V Supply <sup>2</sup> for external components    |            |                  | 1.0   | A              |
| $I_{Max}$                          | 3.3V Supply <sup>2</sup> for external components    |            |                  | 1.0   | A              |
| <b>Power Dissipation</b>           |   |            |                  |       |                |
| $V_s$                              | Supply Voltage                                      |            | 12±5%            |       | V              |
| $I_s$                              | Supply Current <sup>3</sup>                         |            | 330 <sup>1</sup> |       | mA             |

### Notes:

1. An alternative higher amperage AC/DC 12V adapter is available upon request. Contact Critical Link for details and ordering information.
2. The maximum current supplied to external components should be limited to the specified maximum for both the 5.0V and 3.3V supplies.
3. Expansion card not attached, 100% ARM utilization, RS-232 and Ethernet are enabled and active.

## ELECTRICAL INTERFACE DESCRIPTIONS

### Input Power – J601

The MitySOM-335x Development Kit power interface, J601, requires a single +12Volt power supply.

**Table 1: Input Power Interface Pin Description**

| Signal | J601 Position |
|--------|---------------|
| +12V   | 1             |
| GND    | 2             |

### Analog to Digital Converter Interface – J900


The MitySOM-335x Development Kit provides an 8-channel Analog to Digital converter (ADC). This 10-pin header, J900, has 8 ADC input pins and 2 ground pins, Figure 2 below and Table 2. It can accept voltage levels from 0 to 10V.

Note: Inputs 0 to 4 are shared with the LCD Interface and may not be used for both functions simultaneously, see Table 4.

**Table 2: J900 Connector Pin Assignments**

| Pin | Signal  | SoM Pin Post Conversion <sup>1</sup> | Type  | Standard         | Notes   |
|-----|---------|--------------------------------------|-------|------------------|---|
| 1   | A_INP_7 | 198                                  | I     | Analog 0V to 10V |   |
| 2   | +12V    | -                                    | Power | 200mA Max        | Total external draw on 12V supply should not exceed 800mA |
| 3   | A_INP_5 | 194                                  | I     | Analog 0V to 10V |   |
| 4   | A_INP_6 | 196                                  | I     | Analog 0V to 10V |   |
| 5   | A_INP_3 | 190                                  | I     | Analog 0V to 10V |   |
| 6   | A_INP_4 | 192                                  | I     | Analog 0V to 10V |   |
| 7   | A_INP_1 | 186                                  | I     | Analog 0V to 10V |   |
| 8   | A_INP_2 | 188                                  | I     | Analog 0V to 10V |   |
| 9   | GND     | -                                    | Power |                  |   |
| 10  | A_INP_0 | 184                                  | I     | Analog 0V to 10V |   |

Note 1: Each analog input pin passes through a series of OPAMPs to convert the 0V to 10V levels to 0V to 1.8V levels so that the MitySOM-335x module can process them. The “SoM Pin Post Scaling” is the pin after the OPAMPs and also after the headers of Table 4 in the cases of inputs 0 to 4.

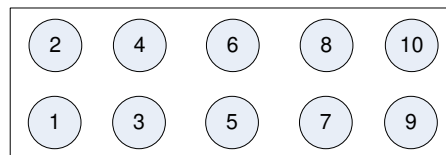

**Figure 2: J900 Pin-out (Top View)**

### MultiMedia Card (SD) Interface – J501

The MitySOM-335x Development Kit provides a MMC interface that uses a standard Secure Digital (SD) card slot for the physical interface. Through the use of SD card adapters MicroSD and MiniSD cards can be used in this slot. By default the slot is supplied with 3.3V for use with standard SD cards and the R140 resistor can be de-populated while R139 is populated to provide a 1.8V supply for SDHC cards.

### Auxiliary / LCD Interface – J401

The Auxiliary / LCD interface connector provides the necessary connections to connect either an XGA or VGA display as well as pins to support touch screen controls. The interface uses a standard 2mm 34 position male header. Table 3 defines the LCD connector, J401, pin out which contains DVI signals that are routed directly from the MitySOM-335x to this connector.

There are also 5 interface pins that are used for the touch screen controls which can support either SPI or Analog to Digital based interfaces depending on P400, P401 and P402 jumper settings as defined in Table 3.

A ribbon cable using Molex 87568-3463 connector (or equivalent) can be used. There are a variety of 2mm mating connectors that can be utilized.


**Table 3: J401 Aux / LCD Interface Pin Description**

| Pin | Schematic Signal | SoM Pin | Type  | Standard             | Notes   |
|-----|------------------|---------|-------|----------------------|---|
| 1   | DVI R4           | 63      | I/O   | 3.3V LVCMOS          | Software configurable AM335x IO                             |
| 2   | DVI R3           | 61      | I/O   | 3.3V LVCMOS          | Software configurable AM335x IO                             |
| 3   | DVI R2           | 59      | I/O   | 3.3V LVCMOS          | Software configurable AM335x IO                             |
| 4   | DVI R1           | 57      | I/O   | 3.3V LVCMOS          | Software configurable AM335x IO                             |
| 5   | DVI R0           | 53      | I/O   | 3.3V LVCMOS          | Software configurable AM335x IO                             |
| 6   | DVI G5           | 51      | I/O   | 3.3V LVCMOS          | Software configurable AM335x IO                             |
| 7   | DVI G4           | 49      | I/O   | 3.3V LVCMOS          | Software configurable AM335x IO                             |
| 8   | DVI G3           | 47      | I/O   | 3.3V LVCMOS          | Software configurable AM335x IO                             |
| 9   | DVI G2           | 45      | I/O   | 3.3V LVCMOS          | Software configurable AM335x IO                             |
| 10  | DVI G1           | 43      | I/O   | 3.3V LVCMOS          | Software configurable AM335x IO                             |
| 11  | DVI G0           | 41      | I/O   | 3.3V LVCMOS          | Software configurable AM335x IO                             |
| 12  | DVI B4           | 39      | I/O   | 3.3V LVCMOS          | Software configurable AM335x IO                             |
| 13  | DVI B3           | 35      | I/O   | 3.3V LVCMOS          | Software configurable AM335x IO                             |
| 14  | DVI B2           | 33      | I/O   | 3.3V LVCMOS          | Software configurable AM335x IO                             |
| 15  | DVI B1           | 31      | I/O   | 3.3V LVCMOS          | Software configurable AM335x IO                             |
| 16  | DVI B0           | 29      | I/O   | 3.3V LVCMOS          | Software configurable AM335x IO                             |
| 17  | GND              | -       | Power | -                    |   |
| 18  | GND              | -       | Power | -                    |   |
| 19  | DVI CLK          | 65      | I/O   | 3.3V LVCMOS          | Software configurable AM335x IO                             |
| 20  | DVI DE           | 71      | I/O   | 3.3V LVCMOS          | Software configurable AM335x IO                             |
| 21  | DVI HSYNC        | 69      | I/O   | 3.3V LVCMOS          | Software configurable AM335x IO                             |
| 22  | DVI VSYNC        | 67      | I/O   | 3.3V LVCMOS          | Software configurable AM335x IO                             |
| 23  | GND              | -       | Power | -                    |   |
| 24  | GND              | -       | Power | -                    |   |
| 25  | +12V             | -       | Power | 200mA max            | Total external draw on 12V supply should not exceed 800mA   |
| 26  | +5.0V            | -       | Power | 200mA max            | Total external draw on 5V supply should not exceed 1000mA   |
| 27  | +3.3V            | -       | Power | 200mA max            | Total external draw on 3.3V supply should not exceed 1000mA |
| 28  | BACKLIGHT_PWM    | 152     | I/O   | 3.3V LVCMOS          | Software configurable AM335x IO                             |
| 29  | SPI0 D1/A2D 0    | 185/184 | I/O   | 3.3V or 0 to 10V ADC | Touch Screen SPI or ADC - Table 4                           |
| 30  | SPI0 D0/A2D 1    | 183/186 | I/O   | 3.3V or 0 to 10V ADC | Touch Screen SPI or ADC - Table 4                           |
| 31  | SPI0 SCLK/A2D 2  | 187/188 | I/O   | 3.3V or 0 to 10V ADC | Touch Screen SPI or ADC - Table 4                           |
| 32  | SPI0 CS0/A2D 3   | 191/190 | I/O   | 3.3V or 0 to 10V ADC | Touch Screen SPI or ADC - Table 4                           |
| 33  | TS IRQ N/A2D 4   | 201/192 | I/O   | 3.3V or 0 to 10V AD  | Touch Screen SPI or ADC - Table 4                           |
| 34  | TS BUSY          | 203     | I/O   | 3.3V LVCMOS          | Software configurable AM335x IO                             |


Note: These signals are pin-muxed in the CPU and may be available for a variety of functions.

**Table 4: J104 Aux / LCD Interface Touch Screen Pin Description**


| Pin                    | P400     | P401     | P402     | Notes    |
|------------------------|----------|----------|----------|----------|
| SPI Touch Only         | Jumpered | -        | -        | Figure 3 |
| ADC Touch Only         | -        | Jumpered | -        | Figure 4 |
| ADC J900 Only          | -        | -        | Jumpered | Figure 5 |
| ADC J900 and SPI Touch | Jumpered | -        | Jumpered | Figure 6 |

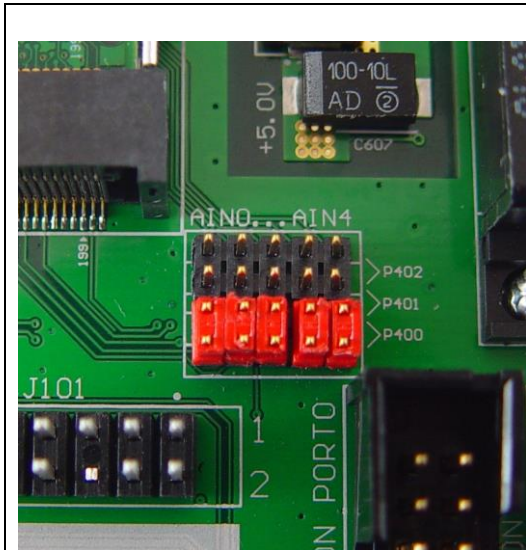


**Figure 3: P400 - SPI Touch Only**

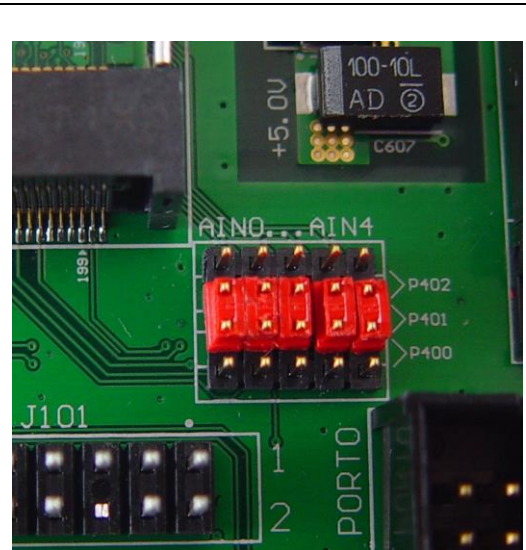

**Figure 4: P401 - ADC Touch Only**

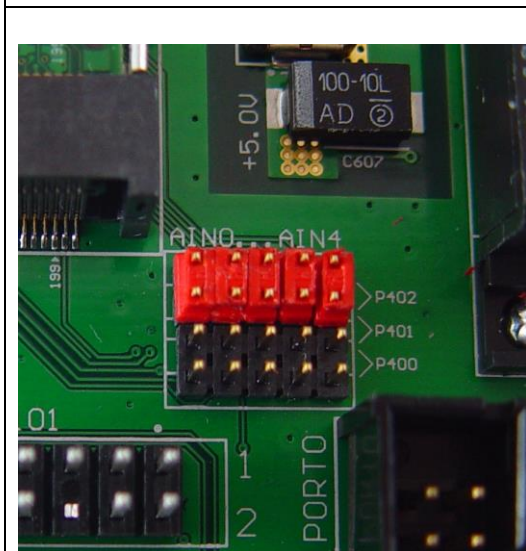

**Figure 5: P402 – ADC J900 Only**

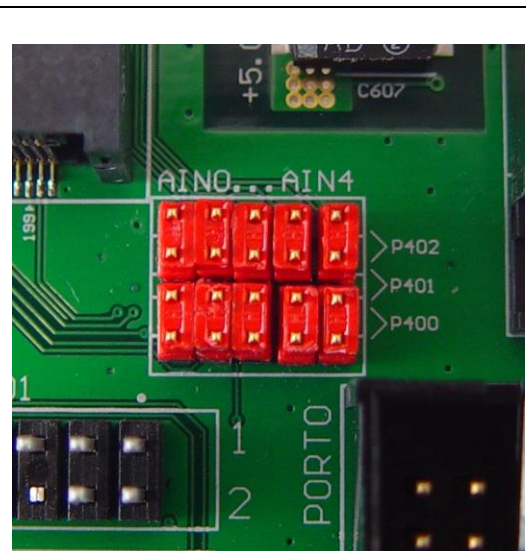

**Figure 6: P400 and P402 - ADC J900 and SPI Touch**

## HDMI Interface – J400

The MitySOM-335x Development Kit provides a 19-pin standard HDMI connector with video only, J400. Supporting HDMI 1.3, the MitySOM-335x can output up to a resolution of 2048 x 2048 pixels.

**Table 5: J400 Connector Pin Assignments**

| Pin | Signal                   | Type  | Standard | Notes |
|-----|--------------------------|-------|----------|-------|
| 1   | TMDS Data2+              | O     |          |       |
| 2   | Shield                   | Power |          |       |
| 3   | TMDS Data2-              | O     |          |       |
| 4   | TMDS Data1+              | O     |          |       |
| 5   | Shield                   | Power |          |       |
| 6   | TMDS Data1-              | O     |          |       |
| 7   | TMDS Data0+              | O     |          |       |
| 8   | Shield                   | Power |          |       |
| 9   | TMDS Data0-              | O     |          |       |
| 10  | TMDS Clock+              | O     |          |       |
| 11  | Shield                   | Power |          |       |
| 12  | TMDS Clock-              | O     |          |       |
| 13  | Reserved (CEC)           | -     |          |       |
| 14  | Reserved                 | -     |          |       |
| 15  | Reserved (DDC Data/SDA)  | -     |          |       |
| 16  | Reserved (DDC Clock/SCL) | -     |          |       |
| 17  | GND                      | Power |          |       |
| 18  | +5.0V                    | Power |          |       |
| 19  | Hot Plug Detect          | O     |          |       |

## Expansion Port Interface – J700

The MitySOM-335x Development Kit provides a single 41-pin general expansion connector on the bottom of the board. A Hirose DF9-41P-1V(32) connector is used and mates with a Hirose DF9A-41S-1V(22) (or equivalent) connector.

This expansion interface can be used for many different add-on cards due to it having I2C, SPI and 16 General Purpose Memory Controller (GPMC) Address/Data pins with control signals directly from the MitySOM-335x module. Two 3.3V Supply pins are provided on the connector as well as a 1.8V connection from the MitySOM-335x module itself.

In addition to custom user interfacing Critical Link provides off-the-shelf add-on modules for this port that include an 802.11 b/g/n with Bluetooth module.

Table 6 provides signal descriptions for each pin.

**Table 6: J700 Connector Pin Assignments**

| Pin | Schematic Signal | SoM Pin | Type  | Standard    | Notes                                |
|-----|------------------|---------|-------|-------------|--------------------------------------|
| 1   | GPMC_AD15        | 107     | I/O   | 3.3V LVCMOS | Software configurable GPIO           |
| 2   | +3.3V            | -       | Power | -           | 250mA Max (Per pin)                  |
| 3   | GPMC_AD14        | 105     | I/O   | 3.3V LVCMOS | Software configurable GPIO           |
| 4   | +3.3V            | -       | Power | -           | 250mA Max (Per pin)                  |
| 5   | GPMC_AD13        | 103     | I/O   | 3.3V LVCMOS | Software configurable GPIO           |
| 6   | GND              | -       | Power | -           |                                      |
| 7   | GPMC_AD12        | 101     | I/O   | 3.3V LVCMOS | Software configurable GPIO           |
| 8   | GPMC_CS1_N       | 113     | I/O   | 3.3V LVCMOS | Software configurable GPIO           |
| 9   | GPMC_AD11        | 99      | I/O   | 3.3V LVCMOS | Software configurable GPIO           |
| 10  | GPMC_CS2_N       | 111     | I/O   | 3.3V LVCMOS | Software configurable GPIO           |
| 11  | GPMC_AD10        | 97      | I/O   | 3.3V LVCMOS | Software configurable GPIO           |
| 12  | GPMC_WP_N        | 104     | I/O   | 3.3V LVCMOS | Software configurable GPIO           |
| 13  | GPMC_AD9         | 95      | I/O   | 3.3V LVCMOS | Software configurable GPIO           |
| 14  | GPMC_BEN1        | 102     | I/O   | 3.3V LVCMOS | Software configurable GPIO           |
| 15  | GPMC_AD8         | 93      | I/O   | 3.3V LVCMOS | Software configurable GPIO           |
| 16  | GPMC_WAIT0       | 100     | I     | 3.3V LVCMOS | Software configurable GPIO           |
| 17  | GPMC_AD7         | 89      | I/O   | 3.3V LVCMOS | Software configurable GPIO           |
| 18  | GND              | -       | Power | -           |                                      |
| 19  | GPMC_AD6         | 87      | I/O   | 3.3V LVCMOS | Software configurable GPIO           |
| 20  | GPMC_WE_N        | 98      | I/O   | 3.3V LVCMOS | Software configurable GPIO           |
| 21  | GPMC_AD5         | 85      | I/O   | 3.3V LVCMOS | Software configurable GPIO           |
| 22  | GPMC_CS3_N       | 94      | I/O   | 3.3V LVCMOS | Software configurable GPIO           |
| 23  | GPMC_AD4         | 83      | I/O   | 3.3V LVCMOS | Software configurable GPIO           |
| 24  | GPMC_OEN_RE_N    | 90      | I/O   | 3.3V LVCMOS | Software configurable GPIO           |
| 25  | GPMC_AD3         | 81      | I/O   | 3.3V LVCMOS | Software configurable GPIO           |
| 26  | GPMC_ADV_N_ALE   | 88      | I/O   | 3.3V LVCMOS | Software configurable GPIO           |
| 27  | GPMC_AD2         | 79      | I/O   | 3.3V LVCMOS | Software configurable GPIO           |
| 28  | GPMC_BEN0_CLE    | 86      | I/O   | 3.3V LVCMOS | Software configurable GPIO           |
| 29  | GPMC_AD1         | 77      | I/O   | 3.3V LVCMOS | Software configurable GPIO           |
| 30  | GPMC_CLK         | 84      | O     | 3.3V LVCMOS | Software configurable GPIO           |
| 31  | GPMC_AD0         | 75      | I/O   | 3.3V LVCMOS | Software configurable GPIO           |
| 32  | GND              | -       | Power | -           |                                      |
| 33  | GND              | -       | Power | -           |                                      |
| 34  | VIO_IP8          | -       | Power | -           | 1.8V direct from MitySOM-335x module |
| 35  | Reserved         | -       | -     | -           |                                      |
| 36  | SPI1_D1_MISO     | 197     | I     | 3.3V LVCMOS | Software configurable GPIO           |
| 37  | GPIO3_14         | 122     | I/O   | 3.3V LVCMOS | Software configurable GPIO           |
| 38  | SPI1_D0_MOSI     | 195     | O     | 3.3V LVCMOS | Software configurable GPIO           |
| 39  | I2C0_SDA         | 177     | I/O   | 3.3V LVCMOS | Software configurable GPIO           |
| 40  | SPI1_SCLK        | 193     | O     | 3.3V LVCMOS | Software configurable GPIO           |
| 41  | I2C0_SCL         | 179     | I/O   | 3.3V LVCMOS | Software configurable GPIO           |

Note that these signals are pin-muxed in the CPU and may be available for a variety of functions.

<sup>1</sup> The I2C bus controlled by MitySOM hardware. Slave address 0x90 reserved for Power Management Controller IC, I2C1. User should not attempt to write any data to this address as it will result in module damage.

## Expansion Port Naming Description



**Table 7: J700 Expansion Port Signal Description**

| Signal                   | Type | Standard  | Notes   |
|--------------------------|------|-----------|---|
| GPMC_CS#_N               | I/O  | 3.3V CMOS | Chip select signals to MitySOM                            |
| GPMC_AD##                | I/O  | 3.3V CMOS | GPMC Address/Data Direct Interface to MitySOM-335x Module |
| GPMC_CLK                 | O    | 3.3V CMOS | GPMC Clock output maximum 100Mhz                          |
| GPMC_Wait0               | I    | 3.3V CMOS | GPMC Wait0 signal to MitySOM-335x Module                  |
| GPMC_XXXX_XXX            | I/O  | 3.3V CMOS | Other GPMC control I/O signals to MitySOM-335x Module     |
| SPI1_D1_MISO             | I    | 3.3V CMOS | SPI input signal  |
| SPI1_SCLK & SPI1_DO_MOSI | O    | 3.3V CMOS | SPI output signals  |
| I2C0_XXX                 | I/O  | 3.3V CMOS | I2C bus signals   |

### Debug/Boot RS232 Interface – J507

**Table 8: J507 DB9 Connector Pin Assignments**

| Pin | Signal        | Type  | Standard | Notes                            |
|-----|---------------|-------|----------|----------------------------------|
| 1   | RESERVED      | -     | -        |                                  |
| 2   | BOOT_RS232_RX | O     | RS232    | RS232 RX to MitySOM Debug Port   |
| 3   | BOOT_RS232_TX | I     | RS232    | RS232 TX from MitySOM Debug Port |
| 4   | RESERVED      | -     | -        |                                  |
| 5   | GND           | Power | -        | RS232 Ground                     |
| 6   | RESERVED      | -     | -        |                                  |
| 7   | RESERVED      | -     | -        |                                  |
| 8   | RESERVED      | -     | -        |                                  |
| 9   | RESERVED      | -     | -        |                                  |

### Dual CAN Interface – J503 & J504

**Table 9: J503 CAN1 & J504 CAN0 Connector<sup>1</sup> Pin Assignments**

| Pin | Signal                   | Type  | Standard | Notes                         |
|-----|--------------------------|-------|----------|-------------------------------|
| 1   | RESERVED                 | -     | -        |                               |
| 2   | CANL                     | I/O   |          | CAN Bus Signal L              |
| 3   | GND_ISOCANx <sup>2</sup> | Power | -        | CAN Bus Isolated Ground       |
| 4   | RESERVED                 | -     | -        |                               |
| 5   | RESERVED                 | -     | -        |                               |
| 6   | RESERVED                 | -     | -        |                               |
| 7   | CANH                     | I/O   |          | CAN Bus Signal H              |
| 8   | RESERVED                 | -     | -        |                               |
| 9   | +5V_CANx <sup>2</sup>    | Power | -        | Isolated +5V Output, 20mA Max |
| 10  | RESERVED                 | -     | -        |                               |

Note 1: Please see Figure 7 for physical pin-out of connector

Note 2: The 'x' at the end of the signal names is either a 1 or a 0 depending on which CAN interface you are using.

**UART Expansion Interface Port0 - J506 (Use with 80-000450 and 80-000358)**

**Table 10: J506 Connector Pin Assignments**

| Pin | Schematic Signal  | SoM Pin | Type  | Standard  | Notes   |
|-----|-------------------|---------|-------|-----------|---|
| 1   | EXPANSION0_TX_ENB | 114     | I/O   |           | Software configurable MitySOM-335x GPIO                     |
| 2   | EXPANSION0_RX     | 165     | O     |           | Software configurable MitySOM-335x GPIO                     |
| 3   | +3.3V             | -       | Power | 200mA Max | Total external draw on 3.3V supply should not exceed 1000mA |
| 4   | RESERVED          | -       | -     |           |   |
| 5   | RESERVED          | -       | -     |           |   |
| 6   | EXPANSION0_TX     | 167     | I     |           | Software configurable MitySOM-335x GPIO                     |
| 7   | RESERVED          | -       | -     |           |   |
| 8   | GND               | -       | Power |           |   |
| 9   | RESERVED          | -       | -     |           |   |
| 10  | RESERVED          | -       | -     |           |   |


Notes: Please see Figure 7 for physical pin-out of connector

**UART Expansion Interface Port1 - J505 (Use with 80-000450 and 80-000358)**

**Table 11: J506 Connector Pin Assignments**

| Pin | Schematic Signal  | SoM Pin | Type  | Standard  | Notes   |
|-----|-------------------|---------|-------|-----------|---|
| 1   | EXPANSION1_TX_ENB | 126     | I/O   |           | Software configurable MitySOM-335x GPIO                     |
| 2   | EXPANSION1_RX     | 118     | O     |           | Software configurable MitySOM-335x GPIO                     |
| 3   | +3.3V             | -       | Power | 200mA Max | Total external draw on 3.3V supply should not exceed 1000mA |
| 4   | RESERVED          | -       | -     |           |   |
| 5   | RESERVED          | -       | -     |           |   |
| 6   | EXPANSION1_TX     | 116     | I     |           | Software configurable MitySOM-335x GPIO                     |
| 7   | RESERVED          | -       | -     |           |   |
| 8   | GND               | -       | Power |           |   |
| 9   | RESERVED          | -       | -     |           |   |
| 10  | RESERVED          | -       | -     |           |   |

Notes: Please see Figure 7 for physical pin-out of connector

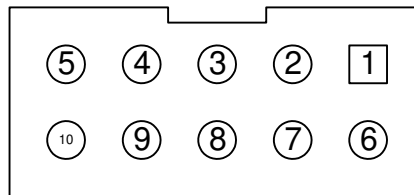

**Figure 7: J503, J504, J505 and J506 Pin-out (Top View)**



### 10/100/1000 Ethernet Interface – J200

The MitySOM-335x Development Kit provides a RJ-45 connection for a Gigabit 10/100/1000 Ethernet connection. This connection follows standard TIA/EIA-568B pin-out as shown in Table 12 below. The Ethernet PHY will auto negotiate to the speed of the device it is connected to.

**Table 12: J200 Ethernet RJ45 Pin Assignments**

| Pin | Signal | Type | Standard | Notes |
|-----|--------|------|----------|-------|
| 1   | TXVA_P | I/O  |          |       |
| 2   | TXVA_N | I/O  |          |       |
| 3   | TXVB_P | I/O  |          |       |
| 4   | TXVB_N | I/O  |          |       |
| 5   | TXVC_P | I/O  |          |       |
| 6   | TXVC_N | I/O  |          |       |
| 7   | TXVD_P | I/O  |          |       |
| 8   | TXVD_N | I/O  |          |       |

### Audio Input/Output Interface – J300 and J301

The MitySOM-335x Development Kit provides both an Input, biased microphone, and Output, L/R stereo speaker connections. The 3.5mm/1/8” connections are through J300 for output and J301 for input with the pin-outs shown below.

**Table 13: J300 Audio Output Pin Assignments**

| Pin    | Signal          | Type  | Standard | Notes                   |
|--------|-----------------|-------|----------|-------------------------|
| Tip    | Audio Out Left  | O     |          | Unbalanced audio output |
| Ring   | Audio Out Right | O     |          | Unbalanced audio output |
| Sleeve | GND             | Power |          | Audio Ground            |

**Table 14: J301 Audio Output Pin Assignments**

| Pin    | Signal    | Type  | Standard | Notes                      |
|--------|-----------|-------|----------|----------------------------|
| Tip    | Mic Bias  | O     |          | 2.2V bias from TLV320AIC26 |
| Ring   | Mic Input | I     |          |                            |
| Sleeve | GND       | Power |          | Audio Ground               |

### Boot Configuration header – J106

The boot mode, as determined by the 12 BOOTCONFIG pins, is selected on the rising edge of the PWRONRSTn Reset Input Pin of the AM335x processor which is controlled by the PMIC of the MitySOM-335x module. Each boot configuration pin on the development kit is connected to a weak pull up, ‘1’, unless a jumper is placed across the header pins which pulls that configuration pin down to ground, ‘0’.

The MitySOM-335x Development Kits default boot configuration header mode is shown in Figure 8 below. As seen this equates to a boot configuration setting of [0] to [11], 111011111111. Please reference the AM335x Technical Reference Manual for complete details on how the vast array of boot mode options.

There are a total of 16 boot configuration pins that are registered by the AM335x processor however [12] to [15] are fixed, 0010, on the MitySOM-335x module.

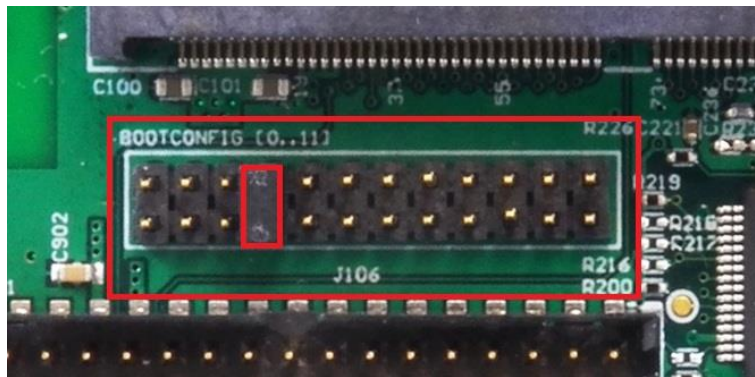


Figure 8: Default Development Kit Boot Jumper Mode

### TI JTAG Interface – J101

Table 15: J101 JTAG Pin Assignments

| Pin | Schematic Signal | SoM Pin | Type  | Standard | Notes |
|-----|------------------|---------|-------|----------|-------|
| 1   | TMS              | 172     |       |          |       |
| 2   | TRST_N           | 174     |       |          |       |
| 3   | TDI              | 168     |       |          |       |
| 4   | GND              | -       | Power |          |       |
| 5   | +3.3V            | -       | Power |          |       |
| 6   | Key              | -       | -     | -        |       |
| 7   | TDO              | 170     |       |          |       |
| 8   | GND              | -       | Power |          |       |
| 9   | TCK_RET          | 166     |       |          |       |
| 10  | GND              | -       | Power |          |       |
| 11  | TCK              | 166     |       |          |       |
| 12  | GND              | -       | Power |          |       |
| 13  | EMU0             | 160     |       |          |       |
| 14  | EMU1             | 162     |       |          |       |


### Included Components

The following table lists the components that are included with a MitySOM-335x Development Kit. See Table 17 for specific development kit ordering information and Table 18 for expansion kit ordering information.

**Table 16: Included Items**

| Description                            | Interface Port | Qty. Included |
|--|----------------|---------------|
| MitySOM-335x Development Kit Board     | n/a            | Qty. 1        |
| MitySOM-335x Module                    | n/a            | Qty. 1        |
| Serial cable M/F                       | J507           | Qty. 1        |
| RS485/422 Expansion Kit                | J505 and J506  | Qty. 1        |
| RS232 Expansion Kit                    | J505 and J506  | Qty. 1        |
| 12V 1.2A AC to DC Supply               | J601           | Qty. 1        |
| Ethernet cable – 7 foot                | J200           | Qty. 1        |
| USB Drive with Development Environment | n/a            | Qty. 1        |
| Development Kit Schematic Files        | n/a            |               |
| Development Kit Gerber Drawings        | n/a            |               |
| Development Kit Bill Of Materials      | n/a            |               |

### MitySOM-335x Development Kit Board with MitySOM-335x Module

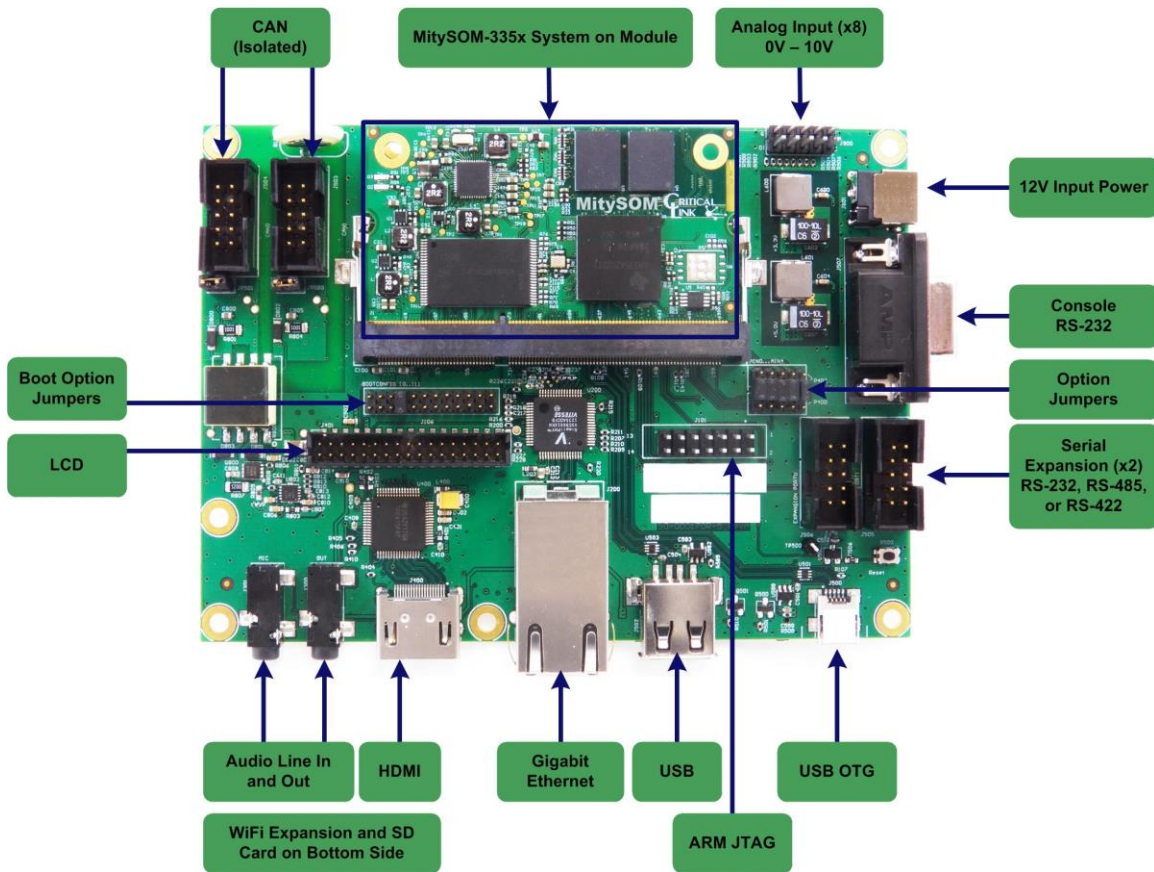

## ORDERING INFORMATION

### Development Kits

The following table lists the standard MitySOM-335x Development Kit configurations. For shipping status, availability, and lead time of these or other configurations please contact your Critical Link representative.

**Table 17: Standard Model Numbers**

| Development Kit Model | Module Included | Operating Temp |
|-----------------------|-----------------|----------------|
| 80-000512             | 3359-GX-226-RC  | 0°C to 70° C   |
| 80-000587             | 3354-GX-X38-RC  | 0°C to 70° C   |

### Expansions Kits

The following table lists the standard expansion kits for the above development kits. For shipping status, availability, and lead time of these or other configurations please contact your Critical Link representative.

**Table 18: Standard Expansion Kit Numbers**

| Expansion Kit Model | Type   | Interface Port |
|---------------------|--|----------------|
| 80-000541           | RS232  | J505 and J506  |
| 80-000540           | RS485/422  | J505 and J506  |
| 80-000535           | WiFi 802.11b/g/n<br>w/ Bluetooth                     | J700           |
| Contact Us          | XGA LCD w/Resistive Touch<br>Screen and Driver Board | J401           |
| Contact Us          | VGA LCD w/Resistive Touch<br>Screen and Driver Board | J401           |

## MECHANICAL INTERFACE DESCRIPTION

### Main Board Interface / Mounting

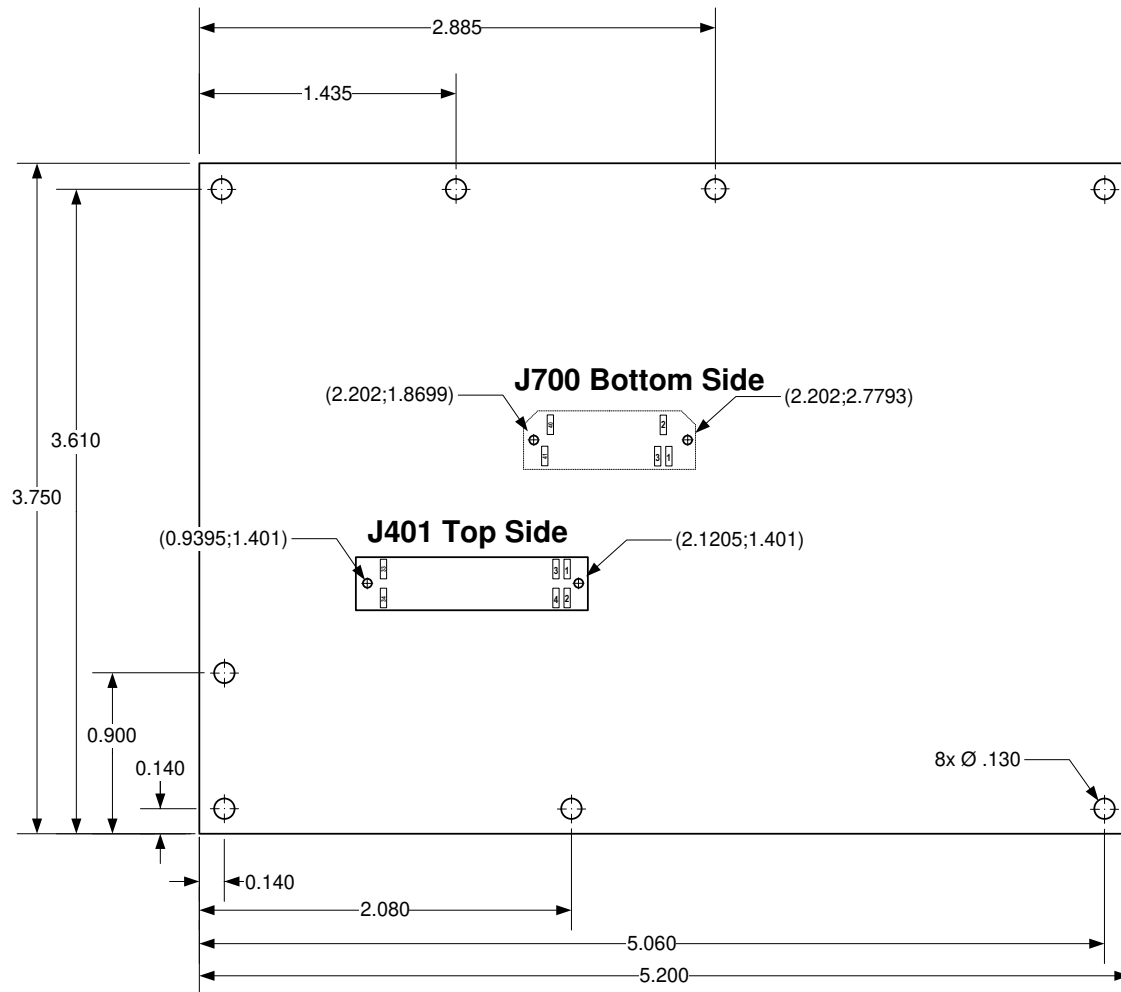


Figure 9: MitySOM-335x Development Kit Outline, Mounting Hole Locations, Hirose DF9-41P-1V(32) expansion header J700 and Molex 87832-3420 LCD header J401 (Top View, inches)

## REVISION HISTORY

| Date        | Change Description  |
|-------------|---|
| 29-FEB-2012 | Initial revision.   |
| 15-MAR-2012 | Updates and changes from review.  |
| 12-APR-2013 | Added boot jumper information and revised available development kit part numbers. |
| 6-MAR-2014  | Update MitySOM product name   |