imall

Chipsmall Limited consists of a professional team with an average of over 10 year of expertise in the distribution of electronic components. Based in Hongkong, we have already established firm and mutual-benefit business relationships with customers from, Europe, America and south Asia, supplying obsolete and hard-to-find components to meet their specific needs.

With the principle of "Quality Parts, Customers Priority, Honest Operation, and Considerate Service", our business mainly focus on the distribution of electronic components. Line cards we deal with include Microchip, ALPS, ROHM, Xilinx, Pulse, ON, Everlight and Freescale. Main products comprise IC, Modules, Potentiometer, IC Socket, Relay, Connector. Our parts cover such applications as commercial, industrial, and automotives areas.

We are looking forward to setting up business relationship with you and hope to provide you with the best service and solution. Let us make a better world for our industry!



Contact us

Tel: +86-755-8981 8866 Fax: +86-755-8427 6832 Email & Skype: info@chipsmall.com Web: www.chipsmall.com Address: A1208, Overseas Decoration Building, #122 Zhenhua RD., Futian, Shenzhen, China





DIN Rail Mount 22.5 mm ETM22 Part number 84874034



Version ETM :

- Controls temperature of machines using built-in PTC probes
 Line break or probe short-circuit detection
- Version ETM2 / ETM22 :
- Fault latching function
 Pushbutton for local reset
- Remote reset via external contact
- Pushbutton test facility
- 2 LEDs to indicate relay and power supply status


Part numbers


Туре	Output	Supply voltage
84874034 ETM22	2 changeovers	230 V AC

Specifications

	Galvanic isolation by transformer	
Operating range	24 VDC no galvanic isolation 0.85 to 1.10 Un	
Nominal power	3 VA	
Maximal power	5 VA	
Immunity from micro power cuts	10 ms	
Delay on pick-up	500 ms	
Insulation coordination	Category III, degree of pollution 2 conforming to IEC/EN 60664-1 / VDE 0110 : 4 KV/2	
Max. resistance of cold probes	1500 Q	
Trip threshold	3100 0± 10 %	
Reset threshold	1650 0+ 10 %	
Short-circuit detection	0-10Ω	
Measurement voltage as per IEC/EN 60034-11	≤ 2.5 V	
Repetition accuracy with constant parameters	±0.5%	
Temperature drift	± 0.05 % / °C	
Voltage-dependent drift	-2 %	
Output	AgNi 90/10	
Breaking capacity	2000 VA / 80 W	
Max. breaking current	8 A AC	
Max. breaking voltage	440 V AC	
Min. breaking current	100 mA	
Maximum rate	360 operations / hour at full load	
Mechanical life (operations)	5 x 10 ⁶	
Electrical life	AC12 : 2000 VA - 10 ⁵ operations	
	AC15 : $\cos \varphi = 0.3 - 6000$ operations	
	DC13 : L/R = 300 ms - 6000 operations	
Reset time	≤ 500 ms	
Response time	< 500 ms	
Display on ETM2/ETM22 - power supply	green LED	
Display on ETM2/ETM22 - Relay	yellow LED	
Class of protection (IEC EN/60529) - Term. block	IP 20 IP 50	
Protection class (IEC EN/60529) - Casing Housing material	Self-extinguishing	
Weight (g)	145	
Terminal capacity	2 x 1.5 mm ² with ferrule	
	2 x 2.5 mm ² without ferrule	
Temperature limit operation (IEC 68.1.14) (°C)	-20 →+60 °C	
Temperature limits stored (IEC 68.1.1/2) (°C)	-30 →+70 °C	
Relative humidity (no condensation)	95 % (+2 % ; -3 %)	

Principles



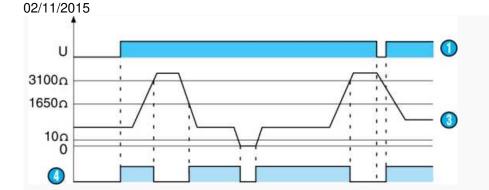

Operating principle

Control relay is used in combination with PTC thermistor probes (not supplied) for thermal protection of machines (motors, alternators, transformers, etc). The probes are placed at critical points on the equipment to be protected (normally inserted into the stator windings of motors). The resistance of the PTC probe has a positive temperature coefficient. As soon as the nominal trip temperature of the probe is exceeded, the resistance of the probe increases rapidly. Protection relay detects this and opens the power supply circuit of the protected equipment (eg motor) and the yellow fault indicator LED lights up (version ETM2/ETM22).

Test button

The ETM2/ETM22 has a TEST button which can be used to simulate a thermal overload in order to test the service condition of the relay.

Tripping


The relay drops out as soon as the protected equipment is subjected to a thermal overload, short-circuit or break in the probe measuring circuit.

Early warning of tripping

If the equipment being protected has another PTC proble with a lower nominal trip temperature, a second ETM/ETM2/ETM22 relay can be used to give early warning of tripping and thus prevent breaks in operation.

Control relay ETM/ETM2/ETM22 is automatically reset as soon as the temperature drops below the trip threshod (the yellow fault indicator LED goes out).


Nº	Legend
1	Unit power-up
2	Resistance between terminals T1 and T2
3	Output relay

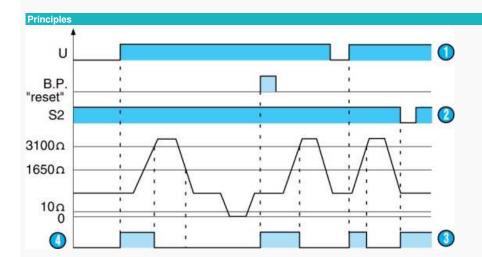


The relay is reset either using the RESET pushbutton on the front face or by opening the external contact S2 (remote reset), or by cutting the auxiliary power supply (terminals A1 - A2). If the auxiliary power is cut for a period of time greater than the reset time (500 ms), the relay is reactivated if the proble detects a normal temperature when the power supply voltage is restored.

Nº	Legend
1	Unit power-up
2	Latching contact
3	Resistance between terminals T1 and T2
0	Output relay

Principles




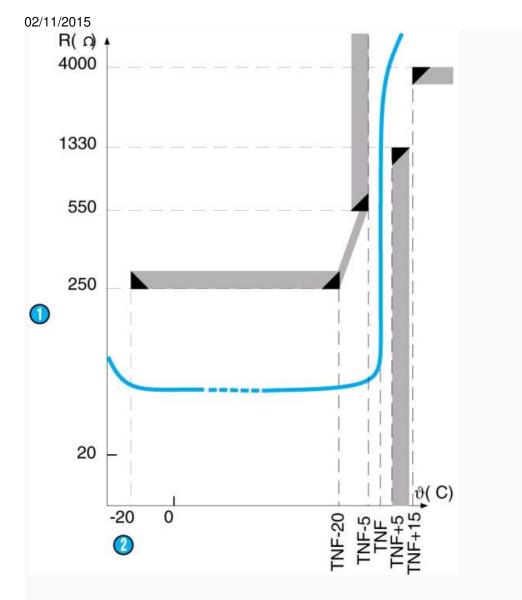



The relay is reset either using the RESET pushbutton on the front face or by opening the external contact S2 (remote reset), or by cutting the auxiliary power supply (terminals A1 - A2). If the auxiliary power is cut for a period of time greater than the reset time (500 ms), the relay is reactivated if the proble detects a normal temperature when the power supply voltage is restored.

Nº	Legend
1	Resistance R (Ω)
0	Nominal temprerature Tripping (°C)

Dimensions (mm)



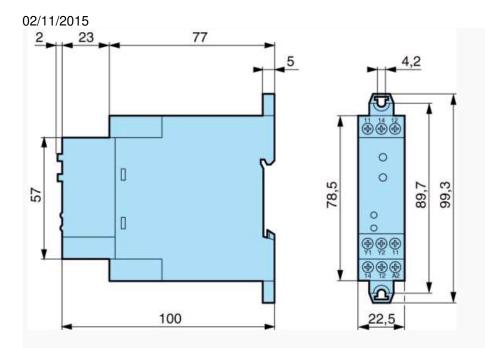


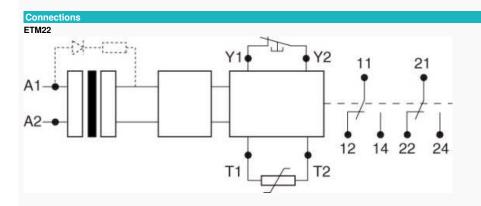

Legend	
A1 - A2 : supply voltage	
11 - 12 -14 : low treshold output relay (R1)	
21 - 22 -24 : high treshold output relay (R2)	
T1 -T2 : external PTC probe	
Y1 - Y2 : remote reset contact	

Connections

ЕТМ

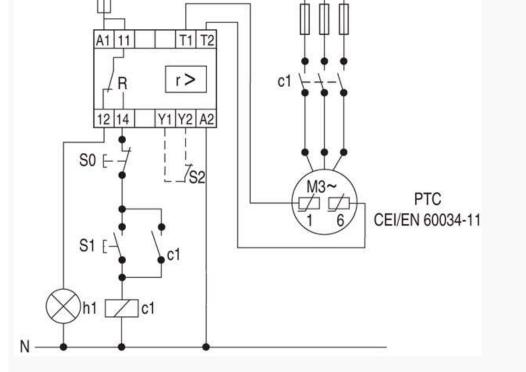

Legend
*** TRADUCTION MANQUANTE ***

Connections CA 84874033

× CA 84874033

RST