imall

Chipsmall Limited consists of a professional team with an average of over 10 year of expertise in the distribution of electronic components. Based in Hongkong, we have already established firm and mutual-benefit business relationships with customers from, Europe, America and south Asia, supplying obsolete and hard-to-find components to meet their specific needs.

With the principle of "Quality Parts, Customers Priority, Honest Operation, and Considerate Service", our business mainly focus on the distribution of electronic components. Line cards we deal with include Microchip, ALPS, ROHM, Xilinx, Pulse, ON, Everlight and Freescale. Main products comprise IC, Modules, Potentiometer, IC Socket, Relay, Connector. Our parts cover such applications as commercial, industrial, and automotives areas.

We are looking forward to setting up business relationship with you and hope to provide you with the best service and solution. Let us make a better world for our industry!



Contact us

Tel: +86-755-8981 8866 Fax: +86-755-8427 6832 Email & Skype: info@chipsmall.com Web: www.chipsmall.com Address: A1208, Overseas Decoration Building, #122 Zhenhua RD., Futian, Shenzhen, China



OMRON

Remote Reset Rocker Switch

Minimum size class in the industry Rocker switch with reset function

- Zero standby power by Reset function.
- High inrush-current durability.
 Conforming to TV-8 rating. (Inrush 117A)
- Model variation for Micro loads.
- Model variation of micro load and high capacity combination. (DPST) It is able to operate micro load and high capacity load at the same time.
- Contact gap of 3 mm minimum.
- UL and cUL standard approved, Conforming to EN standards.
- Model variation for 3.3VDC circuit.

RoHS Compliant (Please refer the Precautions)

Usage example

Saving energy by cutting the standby power. Saving energy by preventing forgetting to turn OFF main power. Turning OFF main power by remote. Turning OFF main power of many equipments at the same time.



* There are 2 kinds of main models A8GS. (Delay OFF Function model and Remote Reset model) With regard to the models with Delay OFF Function, please refer to the other catalog.

List of Models

1. Reset function type

Contact Form 1 to 2: Power contact terminal a, b: Micro load contact terminal +, -: Coil terminal		SPST Micro load contact terminal × 1 Power contact terminal × 1					-	
		+ - a a b		+ ¶ 1 ¶ - ¶2		+ 1 1 - 2		Quantity per box
Terminals		CT Cor	nnector	Quick-connect terminals #187 (t=0.8) Solder terminals		erminals		
Reset voltage		5V model	3.3V model	5V model	3.3V model	5V model	3.3V model	
	No Marking	A8GS-S1105	A8GS-S1103	A8GS-P1185	A8GS-P1183	A8GS-P1115	A8GS-P1113	
Marking on caps	-0	A8GS-S1205	A8GS-S1203	A8GS-P1285	A8GS-P1283	A8GS-P1215	A8GS-P1213	50
	10	A8GS-S1305	A8GS-S1303	A8GS-P1385	A8GS-P1383	A8GS-P1315	A8GS-P1313	

Contact Form 1 to 2: Power contac a, b: Micro load cont +, -: Coil terminal		DPST Micro load contact terminal × 1 + Power contact terminal × 1 + 1 1 12 - 1 a = b				
Terminals		Micro load contact ter Power contact term terminals #		Micro load contact te Power contact termi		
Reset voltage		5V model	3.3V model	5V model	3.3V model	
	No Marking	A8GS-C1185	A8GS-C1183	A8GS-C1115	A8GS-C1113	
Marking on caps	-0	A8GS-C1285	A8GS-C1283	A8GS-C1215	A8GS-C1213	50
	10	A8GS-C1385	A8GS-C1383	A8GS-C1315	A8GS-C1313	

Contact Form 1 to 4: Power contac +, -: Coil terminal	ct terminal	DPST Power contact terminal × 2 + 1 1 12 - 3 3 14				
Terminals			ect terminals (t=0.8)	Solder to		
Reset voltage		5V model	3.3V model	5V model	3.3V model	
	No Marking	A8GS-D1185	A8GS-D1183	A8GS-D1115	A8GS-D1113	
Marking on caps	- 0	A8GS-D1285	A8GS-D1283	A8GS-D1215	A8GS-D1213	50
	10	A8GS-D1385	A8GS-D1383	A8GS-D1315	A8GS-D1313	

[V] is shown at the end of model name for TV-8 approved models. (Example : A8GS-P1185V, A8GS-C1185V, A8GS-D1185V) TV-8 approved model is only for Power switch circuit. [3] is shown at the end of model name for reset voltage 3.3 VDC models. (Example : A8GS-P1183). [5] is shown at the end of model name for reset voltage 5 VDC models. (Example : A8GS-P1185). Note: 1. Note: 2.

Note: 3.

2. Without Reset function type

			SPST		DPST		
Contact Form 1 to 4: Power contact terminal a, b: Micro load contact terminal		Micro load contact terminal × 1	Power contact terminal v 1		Power contact terminal $ imes$ 2		
			1 -22		1 -2		Quantity per box
		a∎∕∕–∎b				<u>→</u> <u>-</u> <u>4</u>	P • • • • • •
Terminals		CT Connector	Quick-connect terminals #187 (t=0.8)	Solder terminals	Quick-connect terminals #187 (t=0.8)	Solder terminals	
	No Marking	A8GS-S1100	A8GS-P1180	A8GS-P1110	A8GS-D1180	A8GS-D1110	
Marking on caps	- 0	A8GS-S1200	A8GS-P1280	A8GS-P1210	A8GS-D1280	A8GS-D1210	50
	10	A8GS-S1300	A8GS-P1380	A8GS-P1310	A8GS-D1380	A8GS-D1310	

Contact Form 1 to 2 Power contact terminal a, b: Micro load contact terminal		DPST Micro load contact terminal × 1 + Power contact terminal × 1 1=2 a=b				
Terminals		Micro load contact terminal : CT Connector Power contact terminal : Quick-connect terminals #187 (t=0.8)	Micro load contact terminal : CT Connector Power contact terminal : Solder terminals			
	No Marking	A8GS-C1180	A8GS-C1110			
Marking on caps	- 0	A8GS-C1280	A8GS-C1210	50		
	10	A8GS-C1380	A8GS-C1310			

Note: 4. These models are without reset function, it has same function with standard Rocker switch.

Ratings **Contact Ratings**

	Rated voltage	Rated current (Resistive load)
Power contact terminal	125 VAC	16 A
	250 VAC	10 A
Miero load contact terminal		024

contact terminal 5 VDC 0.2 A viicro ioa Note: 1. The above ratings were tested under the following conditions:

(1) Ambient temperature : 20 ± 2 °C (2) Ambient humidity : 65 ± 5 % RH (3) Switching frequency : 7 times/min

Reset Coil Ratings

Rated voltage, **Coil resistance** Operating Model Rated usage cycle (Coil temperature: 20 \pm 2 °C) current voltage range Reset voltage : 5V model ON: 50 to 100 ms 5VDC 455 mA 4.5 to 5.5 VDC 11 $\Omega \pm$ 20 % (A8GS-005) OFF: Min 5 sec Reset voltage : 3.3V model (A8GS-003) ON: 50 to 100 ms 3.3VDC 300 mA 3.0 to 3.6 VDC 11 $\Omega\pm$ 20 % OFF: Min 5 sec

Note: 1. Voltage for coil should be set within operating voltage range and applied time should be within rated usage cycle. Otherwise the performance of the coil may be deteriorated.

Note: 2. In case of applying voltage within the range from 5.5 to 24 VDC to the coil, contact your OMRON sales representative.

Contact specifications

	Micro load contact	Power contact
Material	Gold alloy	Silver alloy
Contact gap	3 mm	3 mm
Minimum applicable load (Reference value) *	3 VDC 1 mA	5 VDC 200 mA

* Please refer to "Using Micro loads" in "Precautions" (P6) for more information on the minimum applicable load.

Characteristics

Permissible operating	Mechanical	Switch operation: 20 times/min max, Coil operation: 7 times/min max			
frequency	Electrical	7 times/min max			
Insulation resistance	<u> </u>	100 M Ω min (at 500 VDC with insulation tester)			
Contact resistance Power contact terminal		100 mΩ max (6 VDC to 8 V, 1 A Voltage drop method)			
(initial value)	Micro load contact terminal	100 mΩ max (6 VDC to 8 V, 0.1 A Voltage drop method)			
	Between terminals of the same polarity	AC2,000 V 50/60 Hz 1 min			
Dielectric strength	Between terminals of the different polarity	AC2,000 V 50/60 Hz 1 min			
	Between each terminals of the switch and terminals of coil	AC4,000 V 50/60 Hz 1 min			
	Between each terminals of switch and ground	AC4,000 V 50/60 Hz 1 min			
Vibration resistance *	Malfunction	10 to 55 Hz 1.5 mm double amplitude (Malfunction within 1 ms)			
Shock resistance *	Malfunction	300 m/s ² min (Malfunction within 1 ms)			
SHOCK TESIStance	Destruction	1000 m/s ² max			
Ambient operating tem	perature	-10 to +55 °C (with no icing or condensation, 60 % RH max)			
Ambient operating hun	nidity	90 %RH max (+5 to 35 °C with no icing or condensation)			
Durability	Mechanical	Switch operation: 30,000 operations min, Coil operation: 10,000 operations min			
Durability	Electrical	Switch operation: 10,000 operations min			
Inrush current		117 A max.			
Degree of protection		IEC IP40			
Contact release time **		100 ms max			
Weight		A8GS-Sxxxx: around 9 g A8GS-Pxxxx: around 10 g A8GS-Cxxxx: around 11 g A8GS-Dxxxx: around 11 g			

Note: 1. Above specification values are initial values. *For the testing condition in individual specification, contact your OMRON sales representative. **Time from voltage applied to reset coil to actual contacts opening.

Approved Safety Standards

UL (UL61058-1)

	Approved safety standards ratings	TV-8 approved ratings *
Power contact terminal	16 A 125 VAC	TV-8
Power contact terminal	10 A 250 VAC	10-0
Micro load contact terminal	_	_

TÜV (EN61058-1)

	Approved safety standards ratings	TV-8 approved ratings *
Power contact terminal	10 (4) A 250 VAC	8/128 A 250 VAC
Micro load contact terminal	0.2 A 5 VDC	0.2 A 5 VDC

Note: 1. Approved safety standard ratings for Signal Switch Circuit is only for 'A8GS-Cxxxx' model. 'A8GS-Sxxxx' model is not approved. *These ratings are only for TV-8 rating approved models.

Connector for Signal Switch Circuit and Coil Circuit

CT connectors produced by Tyco Electronics Corporation or XR connectors produced by JST shall be used for connection of Signal and Coil circuit. Other connectors shall not be used.

	Tyco Electronics Corporation: CT connecter														
	Connector Terminal no.		Pr	essure welding	type	Crampi	na tune	JST: XR Connector							
								Connection with Switch	Housing	Со	Contact	Cramping type			
			Housing	AWG #30-26	AWG #26-22	AWG #28-26	AWG #24	AWG #28-26							
	1	a (Switch COM)	179228-3	179609-1	179227-1	173977-3	2-179694-3	03XR-6⊡-P*							
Micro load contact terminal	2														
contact terminar	3	b (Switch NO)													
Coil terminal	1	+ (Coil)	179228-2	170000 0		173977-2	2-179694-2	02XR-6⊡-P*							
Conterminar	2	- (Coil)	1/5220-2												

*
indicates Housing color.

Operation

Remote Reset Function

Button is operated for turning OFF of Power and Micro load contact terminal by applying external signal to coil.


Manual Operation

Power and Micro load contact terminal are operated to turn ON/OFF by manual, same as standard Rocker switch.

Button operating condition	OFF	(1) Manual ON	(2) Manual OFF	
Power / Micro load contact terminal	OFF	ON	OFF]


Remote Reset Function Operation

It is able to turn OFF Power and Micro load contact terminal from manual ON condition by applying voltage to coil.



Switch circuit and operating condition


Voltage applied

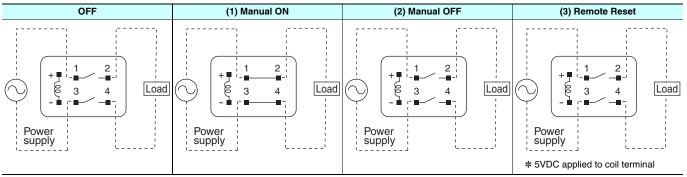

Note: 1. The above circuit is referring to the 'A8GS-Dxxxx' model.

A8GS

Dimensions (Unit: mm) /Operating Characteristics

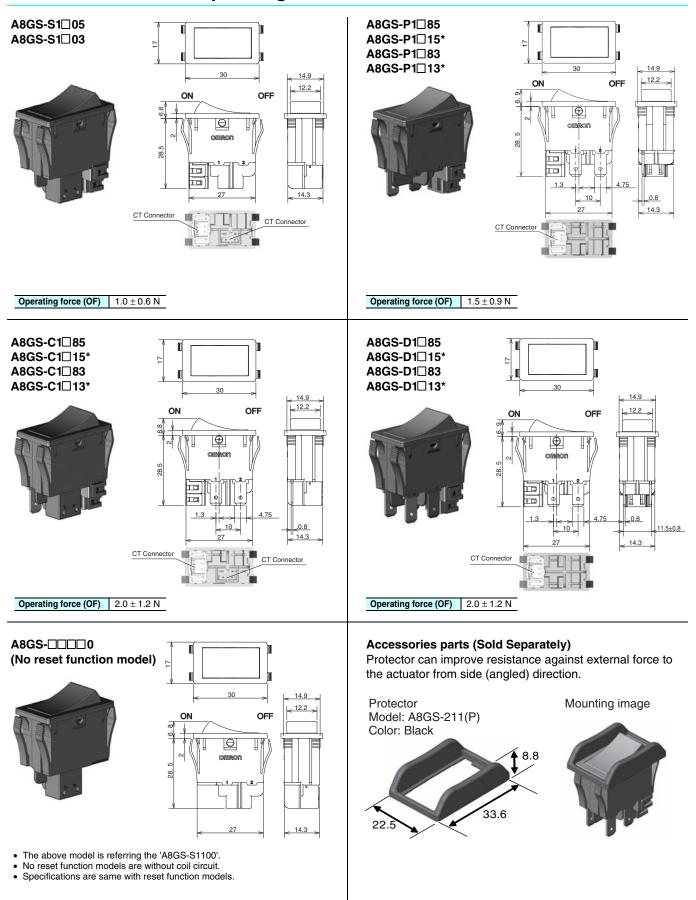

Note: 1. Unless otherwise specified, a tolerance of ± 0.4 mm applies to all dimensions.
 Note: 2. When initial operation or operation after reset, operating force is increased, due to switch structure.
 Note: 3. TV-8 approved models are same outline and characteristics with standard models.
 * Solder terminals model has different hole shape, compare with Quick-connect terminals. Outline and characteristics are same.


A8GS

Panel Cutout

Panel thickness: 0.8 to 2.3 mm

Panel cutout design is for prevention of false insertion. Please be careful about the direction of the protrusion.

The rollover of the panel shall be on the front face. And panel back side shall be Edge shape by processing.



Note: 1. Recommendation panel material is "SPCC", however, in case of soft material or Panel back side shape is not edge, mounting strength may down. Please check and try by actual mounting panel and set the Panel thickness and hole dimension.

Precautions

Do not wire the switch or touch any terminal of the Switch while power is being supplied. Or it may result in electric shock.




Cautions

Use the switch within the rated voltage and current ranges, otherwise the switch may have deteriorated durability. Radiate heat, or burn out. This particularly applies to the instantaneous voltages and currents when switching.

Caution of usage


Mounting

- · Easy to mount by snap fitting.
- Do not impose excessive force on switch at the time of panel mounting.
- Do not detach the switch after installed. Otherwise, the holding strength may be loose.
- Apply the force to housing when installing to panel. Do not apply the force to the button (rocker) part when installing to the panel.



Wiring


- Confirm the size of the receptacles and be sure to connect them firmly.
- Use an appropriate wire allowable to carry current.
- Be sure that there is no mechanical stress on terminals and coil terminals. Otherwise, the switch may malfunction and/or damaged. (Example: Too strong wiring)



- Take appropriate insulation distance between switch terminal and other metal parts after wiring.
- Coil has polarity, please confirm polarity when wiring.
- Do not apply continuous voltage more than 10 seconds at any time. Otherwise, insulation deterioration may occur by heat of coil. Please consider the circuit design.
- Reverse voltage may cause of accurate discrete semiconductor devices. In case of controlling by accurate discrete semiconductor devices, Please consider the circuit design. (Example : add the surge absorbing circuit)
- In case of manual soldering, soldering time is max 4 sec by soldering iron (Max 350 °C at the iron tip) and do not add the stress to terminals.
- In case of touching the soldering iron to the root of terminals, it may cause Housing parts melt.

Handling

- Do not apply excessive operating force to the switch.
- Do not drop or apply the excessive shock. Otherwise the switch may be damaged or deformed.
- Do not impose force to operating part from an angle, Otherwise the switch may be damaged or deformed.



- •Environment for storage and use
- To prevent the terminals color change and others while storage, Do not keep for a long term in the following conditions.
 - (1) High temperature, high humid environment
 - (2) Corrosive gas
 - (3) The place where the direct rays of the sun
 - (4) The place where the sea breeze
 - (5) Environmental with a sudden temperature change

This switch is not sealed to prevent from entering dust and liquid. Do not use under dust and liquid condition.

Switch shall not be icing or condensation.

 Strong magnetic field may cause malfunction. Check function is recommended under practical use conditions.

Using Micro Loads

In case of using the switch under the micro loads, please refer the Minimum applicable load and set the load more than minimum applicable load.

Even when using micro load within the operating range, if inrush current occurs, it may increase contact wear and so deteriorate durability. Therefore, insert a contact protection circuit where necessary.

The minimum applicable load is the L-level reference value. This value indicates the malfunction reference level for the reliability level of 60 %. (λ 60)

The equation, λ 60 = 0.5 x 10⁻⁶ /operations indicates that the estimated malfunction rate is less than 1/2,000,000 operations with a reliability level of 60 %.

RoHS Compliant

The "RoHS Compliant" designation indicates that the listed models do not contain the six hazardous substances covered by the RoHS Directive.

Reference: The following standards are used to determine compliance for the six substances.

complication for and one	040014110001
Lead	: 1,000 ppm max.
Mercury	: 1,000 ppm max.
Cadmium	: 100 ppm max.
Hexavalent chromium	: 1,000 ppm max.
PBB	: 1,000 ppm max.
PBDE	: 1,000 ppm max.

МЕМО	

Application examples provided in this document are for reference only. In actual applications, confirm equipment functions and safety before using the product.
 Consult your OMRON representative before using the product under conditions which are not described in the manual or applying the product to nuclear control systems, railroad systems, aviation systems, vehicles, combustion systems, medical equipment, amusement machines, safety equipment, and other systems or equipment that may have a serious influence on lives and property if used improperty. Make sure that the ratings and performance characteristics of the product provide a margin of safety for the system or equipment, and be sure to provide the system or equipment with double safety mechanisms.

Note: Do not use this document to operate the Unit.

OMRON Corporation Electronic and Mechanical Components Company

Contact: www.omron.com/ecb

CSM_3_1_1216 Cat. No. A222-E1-03 1014(0313)(O)