



Chipsmall Limited consists of a professional team with an average of over 10 year of expertise in the distribution of electronic components. Based in Hongkong, we have already established firm and mutual-benefit business relationships with customers from,Europe,America and south Asia,supplying obsolete and hard-to-find components to meet their specific needs.

With the principle of “Quality Parts,Customers Priority,Honest Operation,and Considerate Service”,our business mainly focus on the distribution of electronic components. Line cards we deal with include Microchip,ALPS,ROHM,Xilinx,Pulse,ON,Everlight and Freescale. Main products comprise IC,Modules,Potentiometer,IC Socket,Relay,Connector.Our parts cover such applications as commercial,industrial, and automotives areas.

We are looking forward to setting up business relationship with you and hope to provide you with the best service and solution. Let us make a better world for our industry!



Contact us

Tel: +86-755-8981 8866 Fax: +86-755-8427 6832

Email & Skype: info@chipsmall.com Web: www.chipsmall.com

Address: A1208, Overseas Decoration Building, #122 Zhenhua RD., Futian, Shenzhen, China



AG921-07E Digital Gear-Tooth Sensor Demonstrator



About This Demonstrator

GT Sensors™ are designed for detection of gear teeth and magnetic encoder wheels in industrial speed sensing.


This demonstrator is based on an AKL-Series GT Sensor, which provides a 50% duty cycle digital current-modulated output.

The demonstrator also includes a circuit board with an LED and a transistor driver; a small gear that can be rotated; and a battery to power the circuit.

GT Sensors are based on Giant Magnetoresistance (GMR), providing the sensitivity to detect small gear teeth and wide air gaps. GT Sensors can operate to DC, and can therefore detect a wide range of speeds, including very slow speeds.

In addition to AKL-Series digital sensors, NVE offers ABL-Series analog gear-tooth sensors, which provide sinusoidal outputs. Single- or dual-bridge analog sensors are available. The dual-bridge versions have two out-of-phase outputs for determining direction.

Quick Start

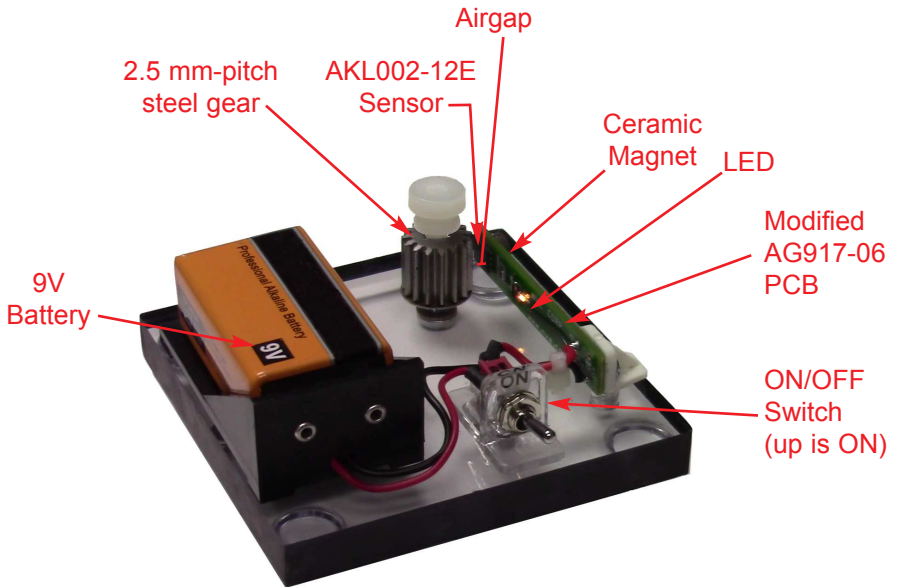

Quick Start


- Install 9 volt battery.
- Turn the demonstrator ON (switch in the up position).
- Adjust the airgap between the sensor and the gear if necessary.
- Turn the gear slowly and observe the LED tuning ON and OFF.
- Turn the demonstrator OFF when not in use to preserve battery life.

Note:


Style may vary from the above image.

Magnetic Operation


As shown in the diagrams at right, the direction of sensitivity is parallel to the plane of the AKL sensor. A biasing magnet provides magnetic field.

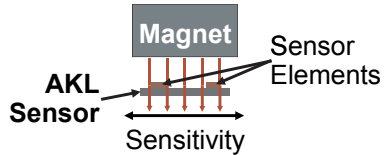

As the gear turns, the magnetic flux lines are deflected into the direction of sensitivity by passing steel gear teeth.

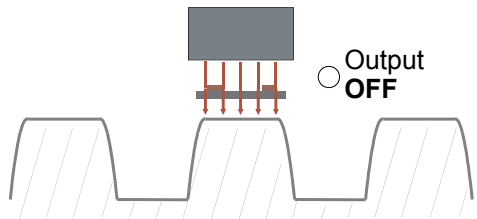

The sensor produces a digital output with one cycle per tooth.

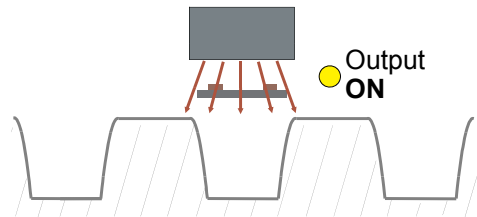

Magnetic Design Considerations

The Right Sensor for the Application

AKL-Series sensors have two sensor elements with various spacings. The following table shows popular models:

| Part Number | Element Spacing (Microns) |
|--------------------|----------------------------------|
| AKL001-12 | 1000 |
| AKL002-12* | 500 |
| AKL003-12 | 300 |

*Included in the demonstrator

Optimal spacing depends on the geometry of the gear and the sensor system. As a starting point, the sensor element spacing can be one-fourth of the gear pitch. In this demonstrator, the gear pitch is approximately 0.1 inch (2.5 mm), so the 500-micron sensor (AKL002) was selected.

Sensor-to-Magnet Spacing

This demonstrator has the sensor and magnet on opposite sides of a circuit board, providing approximately 1.5 millimeter spacing between the sensor and magnet. Spacing in this range typically keeps flux-lines “flexible” and able to follow gear teeth.

Magnet Selection


Ceramic-8 magnets, like the NVE number 12216 disk magnet used in this demonstrator, are recommended for most gear-tooth applications because of their low cost and good field properties. Alnico-8 magnets can be used for high-temperature applications. Rare-earth magnets are not recommended because they saturate the sensors too easily.

Schematic and Electrical Operation


Demonstrator Circuitry

AKL-Series Gear-Tooth Sensors have 4-to-8 mA two-wire interfaces. This demonstrator provides a circuit board with an LED and driver.

When the sensor current is 4 mA, the voltage across the 100 ohm resistor is 0.4 V, which is not enough to turn on the transistor. With 8 mA the transistor turns on, illuminating the LED.

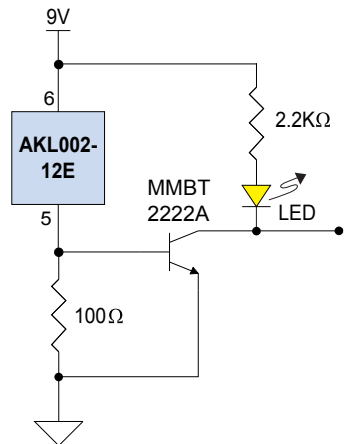

Demonstrator Schematic

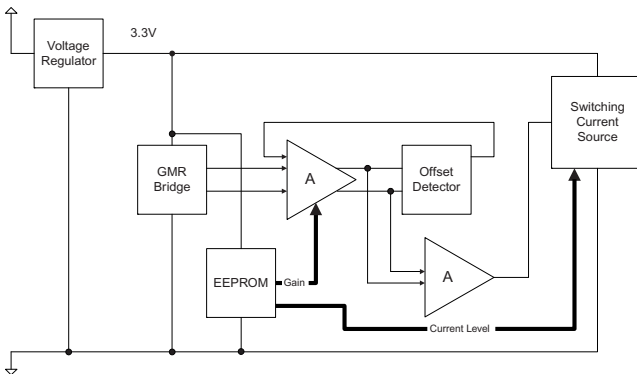


AKL-Series Sensor Block Diagram

AKL Operation

AKL-Series sensors include a GMR bridge consisting of two GMR sensor elements, a voltage regulator to allow a wide range of supply voltages, a factory-programmable EEPROM for calibration, and an output current driver.

Circuit Board

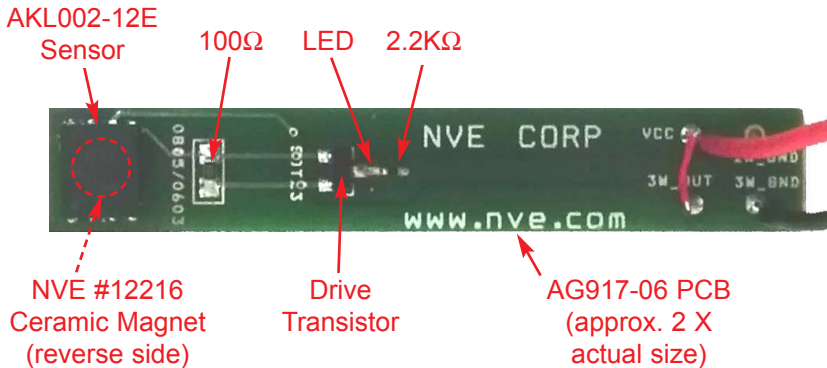

The circuit board in this demonstrator is designed for an AKL sensor in a TDFN-8 package. The standard AG917-06 PCB has connections for converting to a three-wire output by adding a 100 ohm resistor (0805 package) and an NPN output transistor (SOT-23 package). The demonstrator circuit board has been modified to add an LED and series resistor to indicate an output.

A board is also available with the sensor rotated 90 degrees (the AG916-06) for sensitivity parallel to the short axis of the board.

For more information: http://www.nve.com/Downloads/gtsensor_catalog.pdf

Limited Warranty and Liability

Information in this document is believed to be accurate and reliable. However, NVE does not give any representations or warranties, expressed or implied, as to the accuracy or completeness of such information and shall have no liability for the consequences of use of such information. In no event shall NVE be liable for any indirect, incidental, punitive, special or consequential damages (including, without limitation, lost profits, lost savings, business interruption, costs related to the removal or replacement of any products or rework charges) whether or not such damages are based on tort (including negligence), warranty, breach of contract or any other legal theory.

Right to Make Changes

NVE reserves the right to make changes to information published in this document including, without limitation, specifications and product descriptions at any time and without notice.

Use in Life-Critical or Safety-Critical Applications

Unless NVE and a customer explicitly agree otherwise in writing, NVE products are not designed, authorized or warranted to be suitable for use in life support, life-critical or safety-critical devices or equipment. NVE accepts no liability for inclusion or use of NVE products in such applications and such inclusion or use is at the customer's own risk. Should the customer use NVE products for such application whether authorized by NVE or not, the customer shall indemnify and hold NVE harmless against all claims and damages.

Applications

Applications described in this document are illustrative only. NVE makes no representation or warranty that such applications will be suitable for the specified use without further testing or modification. Customers are responsible for the design and operation of their applications and products using NVE products, and NVE accepts no liability for any assistance with applications or customer product design. It is customer's sole responsibility to determine whether the NVE product is suitable and fit for the customer's applications and products planned, as well as for the planned application and use of customer's third party customers. Customers should provide appropriate design and operating safeguards to minimize the risks associated with their applications and products. NVE does not accept any liability related to any default, damage, costs or problem which is based on any weakness or default in the customer's applications or products, or the application or use by customer's third party customers. The customer is responsible for all necessary testing for the customer's applications and products using NVE products in order to avoid a default of the applications and the products or the application or use by customer's third party customers. NVE accepts no liability in this respect.

An ISO 9001 Certified Company

NVE Corporation
11409 Valley View Road
Eden Prairie, MN 55344-3617

©NVE Corporation

All rights are reserved. Reproduction in whole or in part is prohibited without the prior written consent of the copyright owner.

Manual No.: SB-000-046