imall

Chipsmall Limited consists of a professional team with an average of over 10 year of expertise in the distribution of electronic components. Based in Hongkong, we have already established firm and mutual-benefit business relationships with customers from, Europe, America and south Asia, supplying obsolete and hard-to-find components to meet their specific needs.

With the principle of "Quality Parts, Customers Priority, Honest Operation, and Considerate Service", our business mainly focus on the distribution of electronic components. Line cards we deal with include Microchip, ALPS, ROHM, Xilinx, Pulse, ON, Everlight and Freescale. Main products comprise IC, Modules, Potentiometer, IC Socket, Relay, Connector. Our parts cover such applications as commercial, industrial, and automotives areas.

We are looking forward to setting up business relationship with you and hope to provide you with the best service and solution. Let us make a better world for our industry!



Contact us

Tel: +86-755-8981 8866 Fax: +86-755-8427 6832 Email & Skype: info@chipsmall.com Web: www.chipsmall.com Address: A1208, Overseas Decoration Building, #122 Zhenhua RD., Futian, Shenzhen, China





Headphone Amplifiers Standard

BH3544F,BH3547F,BH3548F

Headphone Amplifiers

No.10102ECT02

Description

BH3544F, BH3547F, BH3548F are headphone amplifiers suitable for portable products. BH3544F, BH3547F, BH3548F has a fixed gain of 6 dB. External resistors for gain setting are not needed. Package of BH3544F, BH3547F, BH3548F is pin-to-pin compatible (SOP8), enable to replace each other easily.

BH3544F, BH3547F, BH3548F also has mute functions that make it easy to prevent pop noise when power supply turns on/off. Moreover, thermal shutdown function is built-in.BH3544F, BH3547F can drive $16/32\Omega$ load, BH3548F can drive $8/16/32\Omega$. So, BH3548F is suitable for 8Ω receiver.

Features

- 1) Built-in mute function for preventing pop noise when power supply turns on/off
- 2) Built-in thermal shutdown function
- 3) BH3544F, BH3547F, BH3548F are pin-to-pin compatible
- 4) SOP8 small package

Applications

TV, Desktop PC, Notebook PC, Camcorder and other equipment having headphone output

•Line up

Part No.	BH3544F	BH3547F	BH3548F	Unit
Supply voltage	+2.8 ~ +6.5	+4.5 ~ +6.5	+4.0 ~ +5.5	V
Quiescent current	7.0	3.7	6.5	mA
Amplifier gain		6		dB
Output [RL=16Ω]	62	77	62	mW
load impedance	16 /	/ 32	8/16/32	Ω
Operating temperature range	-25 ~	+75	-40 ~ +85	°C

Absolute maximum ratings(Ta=25°C)

Parameter	Symbol	Ratings	Unit	
Farameter	Symbol	BH3544F,BH3547F,BH3548F	Unit	
Applied voltage	VCC	7.0	V	
Power dissipation	Pd	550 ^{*1}	mW	
Storage temperature	Tstg	-55~+125	°C	

*1 Derating is done at 5.5mW/°C above Ta=25°C. (When mounted on a 70mm×70mm×1.6mm PCB board, FR4)

Operating conditions (Ta=25°C)


Parameter	Symbol	Limits				
Faiametei	Symbol	BH3544F	BH3547F	BH3548F	Unit	
Supply voltage	VCC	+2.8 ~ +6.5	+4.5 ~ +6.5	+4.0 ~ +5.5	V	
Temperature Range	Topr	-25~	~ +75	-40 ~ +85	°C	


* These product are not designed for protection against radioactive rays.


Electrical characteristics (Unless otherwise noted, Ta=25°C, VCC=5V, RL=32Ω, f=1kHz, BW=400~30kHz, VIN =-6dBV)

		Limits(TYP.)				· · · · ·	
Parameter	Symbol	BH3544F BH3547F BH		BH3548F	Unit	Conditions	
Quiescent current	lq	7	3.7	6.5	mA	VIN=0Vrms	
Mute pin control voltage H	Vтмн	1.6< V Mute OFF		Mute OFF			
Mute pin control voltage L	VTML		<0.3		V	Mute ON	
Gain	Gvc		6		dB	-	
Gain difference between channels	ΔGvc		0		dB	-	
Total harmonic distortion	THD	0.02	0.05	0.02	%	BW=20~20kHz	
Rated output 1	Pot	31	46	31	mW	R∟=32Ω,THD<0.1% (BH3541F,BH3544F,BH3548F) R∟=32Ω,THD<0.3% (BH3547F)	
Rated output 2	Po2	62	77	62	mW	RL=16Ω,THD<0.1% (BH3541F,BH3544F,BH3548F) RL=16Ω,THD<0.5% (BH3547F)	
Rated output 3	Роз	- 120		mW	RL=8Ω,THD<0.25% (BH3548F)		
Output noise voltage	voltage VNO -93 dBV BW=20~20kHz,Rg=0Ω		BW=20~20kHz,Rg=0Ω				
Channel separation	separation CS -90 -87 -90 dB Rg=0Ω		Rg=0Ω				
Mute attenuation	ATT	-80 dB Rg=0Ω		Rg=0Ω			
Ripple rejection	RR		-57		dB	frr=100Hz,Vrr=-20dBV	
Input resistance	Rin		90		kΩ	-	


Reference data

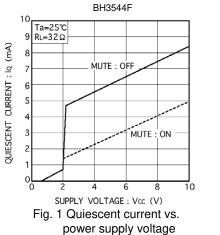

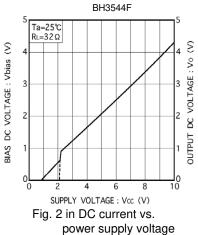

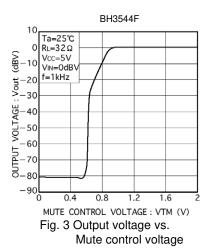


BH3544F,BH3547F,BH3548F

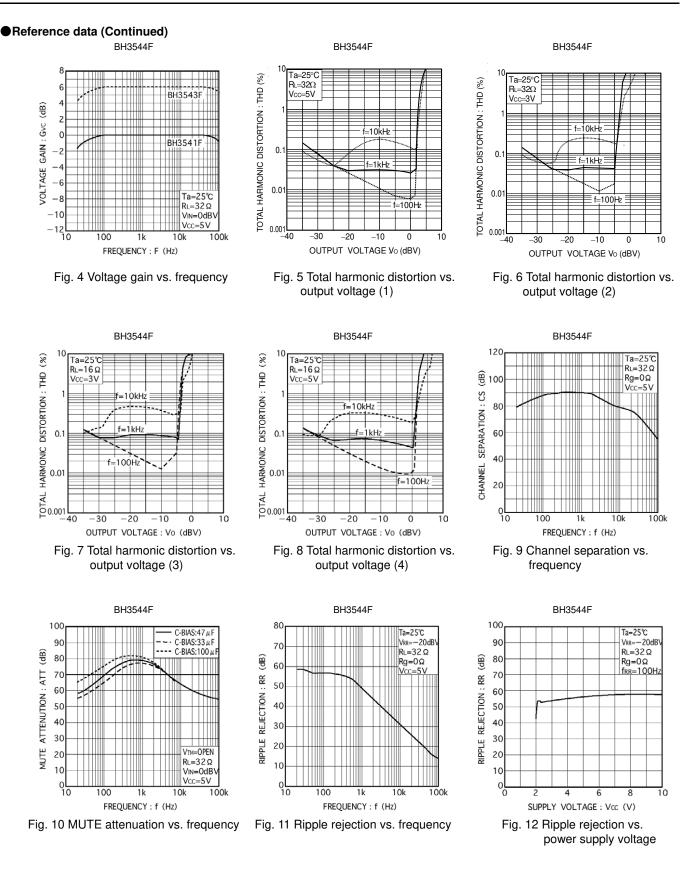

www.rohm.com © 2011 ROHM Co., Ltd. All rights reserved.

Block diagram

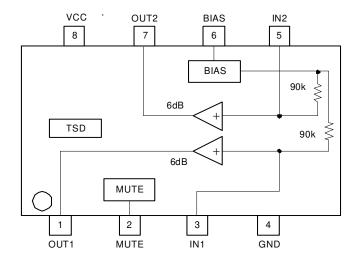



Measurement circuit

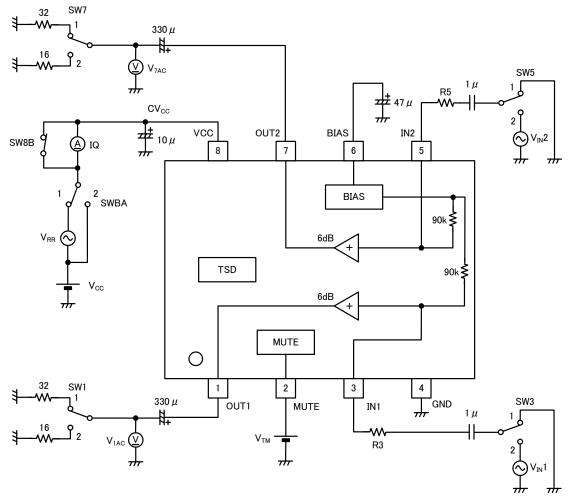



Fig. 14

Terminal Equivalent Circuit / Description

Pin No.	Pin Name	I /O	Pin voltage	Equivale BH3544F, BH3548F	ent circuit BH3547F	Function
1 7	OUT1 OUT2	0	2.1V (VCC=5V)			Output pin
2	MUTE	I	0.1V (When open)			Mute control pin Mute on:Hi Mute off:Lo (open)
3 5	IN1 IN2	I	2.1V (VCC=5V)	3 5 BIAS	3 5 BIAS VCC 90k 90k 90k 90k 90k	Input pin
6	BIAS	I/O	2.1V (VCC=5V)	6 6 60k 60k 60k 60k 60k	6 6 6 6 6 4 70k BIAS	Bias pin (Since the 47 μF externally attached capacitor also serves as the time constant for pop noise countermeasures, evaluate adequately when changing it.)
4	GND	I	-	-	-	GND pin
8	VCC	I	-	-	-	Power supply pin

%The figure in the pin explanation and input/output equivalent circuit is reference value, it doesn't guarantee the value.

•Application circuit

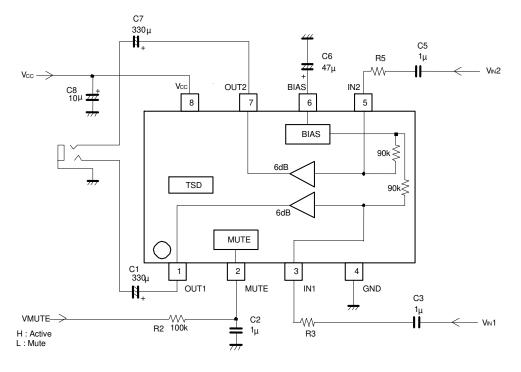



Description of external components

1) Input coupling capacitors (C3, C5)

These are determined according to the lower cutoff frequency fc. Moreover, since lowering the capacitance can cause the occurrence of pop noise, when changing this, determine it after adequate checking.

Since the input impedance is $90k\Omega$, these are found by the expressions below, although drift, temperature characteristics, and other considerations are necessary. (Layered ceramic capacitors are recommended.)

 $C3(C5)=1/(2 \pi \times 90 k\Omega \times fc)$

2) Bias capacitor (C6)

When VCC=5V, 47µF is recommended. Since lowering the capacitance too much can cause worsening of electrical characteristics or the occurrence of pop noise, when changing this, determine it after checking this adequately.

3) Mute pin pop noise countermeasures (R2, C2)

Since BH3544F,BH3548F have an impedance of $190k\Omega$ against GND and the BH3547F has $200k\Omega$, it may be impossible to cancel mute mode if R2 is made too large.

4) Output coupling capacitors (C1, C7)

These are determined by the lower cutoff frequency. If RL is the output load resistance (assuming a resistance Rx is put in for output protection or current restriction), these are found by the expression below.

 $C1(C7) = 1/(2\pi \times (RL+R \times) \times fc)$

- 5) Input gain adjustment resistances (R3, R5)
- Externally attached resistances (R3, R5) make input gain adjustment possible. The gain found by the expression below can be set.

Gvc=6+20log(90kΩ/(90kΩ+R3[R5])) [dB]

When input gain is not accommodated, these resistors have no use.

Notes for use

- 1) Numbers and data in entries are representative design values and are not guaranteed values of the items.
- 2) Although we are confident in recommending the sample application circuits, carefully check their characteristics further when using them. When modifying externally attached component constants before use, determine them so that they have sufficient margins by taking into account variations in externally attached components and the Rohm LSI, not only for static characteristics but also including transient characteristics.
- 3) Absolute maximum ratings

If applied voltage, operating temperature range, or other absolute maximum ratings are exceeded, the LSI may be damaged. Do not apply voltages or temperatures that exceed the absolute maximum ratings. If you think of a case in which absolute maximum ratings are exceeded, enforce fuses or other physical safety measures and investigate how not to apply the conditions under which absolute maximum ratings are exceeded to the LSI.

4) GND potential

Make the GND pin voltage such that it is the lowest voltage even when operating below it. Actually confirm that the voltage of each pin does not become a lower voltage than the GND pin, including transient phenomena.

5) Thermal design

Perform thermal design in which there are adequate margins by taking into account the allowable power dissipation in actual states of use.


- 6) Shorts between pins and misinstallation When mounting the LSI on a board, pay adequate attention to orientation and placement discrepancies of the LSI. If it is misinstalled and the power is turned on, the LSI may be damaged. It also may be damaged if it is shorted by a foreign substance coming between pins of the LSI or between a pin and a power supply or a pin and a GND.
- 7) Operation in strong magnetic fields

Adequately evaluate use in a strong magnetic field, since there is a possibility of malfunction.

8) Pop noise countermeasures

In order to prevent the pop noise that occurs when the power supply turns ON or OFF, make the rise and fall with reference to the timing diagram shown below.

1)BH3544F/BH3548F

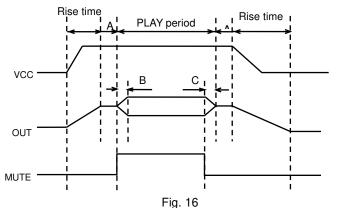

(A):Mute period (Use as pop noise countermeasure when power supply turns ON/OFF by makingVMUTE=Lo.)(B):Mute cancellation period (This has a time constant because it is used by the externally attached C2 and R2 as

a pop noise countermeasure on mute cancellation, so be careful of the timing.)

(C):Mute start time (As on cancellation, this has a time constant.)

2)BH3547F


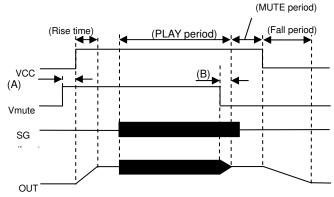



Fig. 17

(A):Before VCC rise (or at the same time as VCC) make mute cancelled (VMUTE=Hi). (B):Soft mute period (This time can be set by externally attached R2 and C2)

Ordering part number

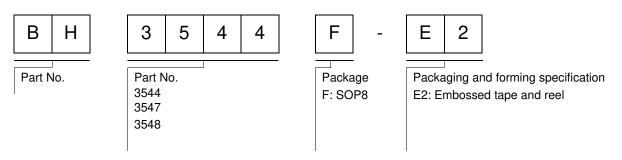

SOP8

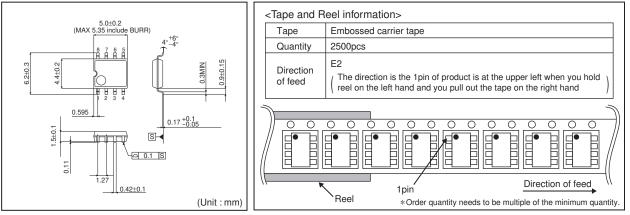

	Notes
	or reproduction of this document, in part or in whole, is permitted without the OHM Co.,Ltd.
The content s	specified herein is subject to change for improvement without notice.
"Products").	specified herein is for the purpose of introducing ROHM's products (hereinafte If you wish to use any such Product, please be sure to refer to the specifications obtained from ROHM upon request.
illustrate the	application circuits, circuit constants and any other information contained hereir standard usage and operations of the Products. The peripheral conditions mus account when designing circuits for mass production.
However, she	as taken in ensuring the accuracy of the information specified in this document ould you incur any damage arising from any inaccuracy or misprint of such ROHM shall bear no responsibility for such damage.
examples of implicitly, any other parties	I information specified herein is intended only to show the typical functions of and application circuits for the Products. ROHM does not grant you, explicitly o r license to use or exercise intellectual property or other rights held by ROHM and . ROHM shall bear no responsibility whatsoever for any dispute arising from the echnical information.
equipment or	s specified in this document are intended to be used with general-use electronic r devices (such as audio visual equipment, office-automation equipment, commu- ces, electronic appliances and amusement devices).
The Products	specified in this document are not designed to be radiation tolerant.
	always makes efforts to enhance the quality and reliability of its Products, a fail or malfunction for a variety of reasons.
against the p failure of any shall bear no	re to implement in your equipment using the Products safety measures to guard possibility of physical injury, fire or any other damage caused in the event of the Product, such as derating, redundancy, fire control and fail-safe designs. ROHM responsibility whatsoever for your use of any Product outside of the prescribed in accordance with the instruction manual.
system which may result in instrument, to controller or of the Produc	s are not designed or manufactured to be used with any equipment, device on n requires an extremely high level of reliability the failure or malfunction of which a direct threat to human life or create a risk of human injury (such as a medica ransportation equipment, aerospace machinery, nuclear-reactor controller, fuel- other safety device). ROHM shall bear no responsibility in any way for use of any cts for the above special purposes. If a Product is intended to be used for any purpose, please contact a ROHM sales representative before purchasing.
be controlled	to export or ship overseas any Product or technology specified herein that may I under the Foreign Exchange and the Foreign Trade Law, you will be required to use or permit under the Law.



Thank you for your accessing to ROHM product informations. More detail product informations and catalogs are available, please contact us.

ROHM Customer Support System

http://www.rohm.com/contact/