imall

Chipsmall Limited consists of a professional team with an average of over 10 year of expertise in the distribution of electronic components. Based in Hongkong, we have already established firm and mutual-benefit business relationships with customers from, Europe, America and south Asia, supplying obsolete and hard-to-find components to meet their specific needs.

With the principle of "Quality Parts, Customers Priority, Honest Operation, and Considerate Service", our business mainly focus on the distribution of electronic components. Line cards we deal with include Microchip, ALPS, ROHM, Xilinx, Pulse, ON, Everlight and Freescale. Main products comprise IC, Modules, Potentiometer, IC Socket, Relay, Connector. Our parts cover such applications as commercial, industrial, and automotives areas.

We are looking forward to setting up business relationship with you and hope to provide you with the best service and solution. Let us make a better world for our industry!



Contact us

Tel: +86-755-8981 8866 Fax: +86-755-8427 6832 Email & Skype: info@chipsmall.com Web: www.chipsmall.com Address: A1208, Overseas Decoration Building, #122 Zhenhua RD., Futian, Shenzhen, China



Smart Fiber Amplifier Unit E3X-HD

CSM_E3X-HD_DS_E_6_1

Easy and optimum settings for anyone


- Smart Fiber Amplifier Unit with Long-term Stable Detection
- Equipped with Smart Tuning, which automatically configures the settings to their optimum values with the press of a single button.
- Highly usable design enables anyone to configure the settings easily.
- Detects dirt, vibrations, and LED deterioration, and automatically compensates the incident level and the light intensity.
- Unparalleled best-in-class power provides stable detections for lowreflective workpieces and large workpieces (equipped with GIGA RAY II).

Refer to the Fiber Sensors Technical Guide and Safety Precautions on page 9.



For the most recent information on models that have been certified for safety standards, refer to your OMRON website.

Features

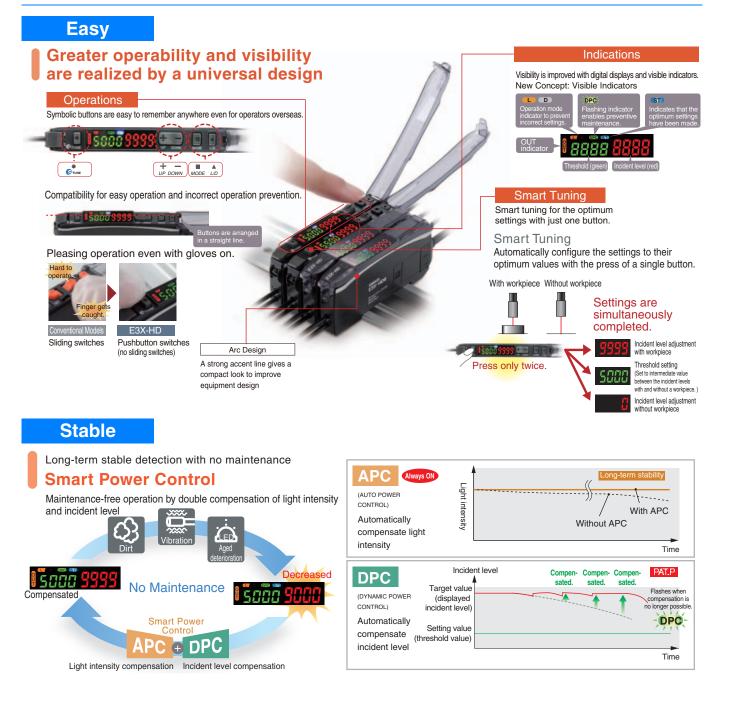

Ordering Information

Fiber Amplifier Units

Standard models (Dimensions → page 12)

Appearance	Connecting method	Мос	dels
Appearance	connecting method	NPN output	PNP output
1 21	Pre-wired (2 m)	E3X-HD11 2M	E3X-HD41 2M
1 2 2	Wire-saving Connector	E3X-HD6	E3X-HD8
C el C	M8 Connector	E3X-HD14	E3X-HD44

Model for Sensor Communications Unit (Dimensions → page 12)

Appearance	Model	Applicable Sensor Communications Unit
E2Y HE		E3X-ECT
1	E3X-HD0	E3X-CRT

Accessories (sold separately)

Wire-saving connectors (Required for models for Wire-saving Connectors.)

Connectors are not provided with the Fiber Amplifier Unit and must be ordered separately. * Protective stickers: provided.

Туре	Appearance	Cable length	Number of conductors	Models
Master Connector	-	2 m	3	E3X-CN11
Slave Connector	-	2 m -	1	E3X-CN12

Sensor I/O Connectors (Required for models with M8 Connectors.)

Connectors are not provided with the Fiber Amplifier Unit and must be ordered separately.

Size	Cable	Appearance		Cable	e type	Models
		Straight		2 m		XS3F-M421-402-A
Mo	M8 Standard	g	Q Mit and	5 m	4	XS3F-M421-405-A
IVI8		L-shaped		2 m	4-wire	XS3F-M422-402-A
			5 m		XS3F-M422-405-A	

Mounting Bracket

A Mounting Bracket is not provided with the Fiber Amplifier Unit and must be ordered separately as required.

Appearance	Model	Quantity
Contraction of the second seco	E39-L143	1

DIN Track

A Din Track is not provided with the Fiber Amplifier Unit and must be ordered separately as required.

Appearance	Туре	Models	Quantity
	Shallow type, total length: 1 m	PFP-100N	
	Shallow type, total length: 0.5 m	PFP-50N	1
	Deep type, total length: 1 m	PFP-100N2	

End Plate

Two End Plates are provided with the Sensor Communications Unit. End Plates are not provided with the Fiber Amplifier Unit and must be ordered separately as required.

Appearance	Model	Quantity
5	PFP-M	1

E3X-HD

Ratings and Specifications

		Туре		Standard		Model for Sensor Communications Unit *1		
		NPN output	E3X-HD11	E3X-HD6	E3X-HD14	E3X-HD0		
	PNP output		E3X-HD41 E3X-HD8 E3X-HD44		Lox-not			
Item		Connecting method	Pre-wired	Wire-saving Connector *2	M8 Connector	Connector for Sensor Communications Unit		
Light sour	ce (wavele	ength)	Red, 4-element LED	(625 nm)				
Power sup	ply voltage	e	12 to 24 VDC \pm 10%,	ripple (P-P) 10% max.		Supplied from the connector through the Sensor Communications Unit		
_	Normal me	ode	720 mW max. (Curre	nt consumption: 30 mA	a max. at 24 VDC, 60 r	nA max. at 12 VDC)		
Power consump	Eco ON		530 mW max. (Curre	nt consumption: 22 mA	a max. at 24 VDC, 44 r	nA max. at 12 VDC)		
tion	Eco LO		640 mW max. (Current at 12 VI	consumption: 26 mA max DC)	. at 24 VDC, 53 mA max.	-		
Control ou	tput		Load current: Groups Groups Residual voltage: At l	bltage: 26.4 VDC max., s of 1 to 3 Amplifier Un s of 4 to 16 Amplifier U bad current of less that bad current of 10 to 10 max.	its: 100mA max., nits: 20mA max. n 10 mA: 1 V max.,	_		
Protection	circuits			e polarity protection, ou reverse polarity protec		Power supply reverse polarity protection and output short-circuit protection		
	Super-hig mode (SH		NPN outputs: Operate PNP outputs: Operate			-		
Response	High-spee	ed mode (HS)	Operate or reset: 250 μs (default setting)					
time	Standard	mode (Stnd)	Operate or reset: 1 ms					
	Giga-power	r mode (GIGA)	Operate or reset: 16 ms					
Maximum	connectab	le Units	16 units			with E3X-CRT: 16 units with E3X-ECT: 30 units		
Mutual inte	erference p	prevention	Possible for up to 10 units (optical communications sync) *3					
Auto powe	r control (APC)	Always ON					
Other fund	tions		Power tuning, differential detection, DPC, timer (OFF-delay, ON-delay, or one-shot), zero reset, resetting settings, and Eco mode					
Ambient il (Receiver		I	Incandescent lamp: 20,000 lx max., Sunlight: 30,000 lx max.					
Ambient temperature range		Operating: Groups of 1 to 2 Amplifiers: -25 to 55°C, Groups of 3 to 10 Amplifiers: -25 to 50°C, Groups of 11 to 16 Amplifiers: -25 to 45°C Storage: -30 to 70°C (with no icing or condensation)			Operating: Groups of 1 to 2 Amplifiers: 0 to 55°C Groups of 3 to 10 Amplifiers: 0 to 50°C, Groups of 11 to 16 Amplifiers: 0 to 45°C Groups of 17 to 30 Amplifiers: 0 to 40°C Storage: –30 to 70°C (with no icing or condensation)			
Ambient h	umidity rai	nge	Operating and storag	e: 35% to 85% (with n	o condensation)			
Insulation	resistance)	20 MΩ min. (at 500 VDC)					
Dielectric	strength		1,000 VAC at 50/60 H	Iz for 1 minute				
Vibration r (destructio			10 to 55 Hz with a 1.5-mm double amplitude for 2 hours each in X, Y, and Z directions			10 to 150 Hz with a 0.7-mm double amplitude for 80 minutes each in X, Y, and Z directions		
Shock resi	stance (de	estruction)	500 m/s ² for 3 times each in X, Y, and Z directions			150 m/s ² for 3 times each in X, Y, and Z directions		
Degree of	protection		IEC 60529 IP50 (with Protective Cover attached)			_		
Weight (pa	cked state	e/unit only)	Approx. 105 g/ Approx. 65 g	Approx. 60 g/ Approx. 20 g	Approx. 70 g/ Approx. 25 g	Approx. 65 g/Approx. 25 g		
Motoriala	Case		Polycarbonate (PC)	1	1	Heat-resistant ABS (connector: PBT)		
Materials	Cover		Polycarbonate (PC)					
Accessori	es		Instruction Manual					

*1. The E3X-ECT EtherCAT Sensor Communications Unit and the E3X-CRT CompoNet Sensor Communications Unit can be used.
*2. Use either the E3X-CN11 (master connector, 3 conductors) or the E3X-CN12 (slave connector, 1 conductor).
*3. The communications function and mutual interference prevention function are disabled when the detection mode is set to Super-high-speed mode (SHS). When including E3X-DA-S with activated power tuning, mutual interference prevention is possible for up to 6 units. When including E3X-MDA with activated power tuning, mutual interference prevention is possible for up to 5 units.

Sensing Distances

Threaded Models

A A A					Sensing distance (mm)			
Sensing method	Sensing direction	Size	Model	Giga mode	Standard mode	High-speed mode	Super-high- speed mode	
	Dight angle		E32-T11N 2M	2,000	1,000	700	280	
	Right-angle		E32-LT11N 2M	4,000 *	3,500	2,300	920	
Through-beam		M4	E32-T11R 2M	2,000	1,000	700	280	
	Straight		E32-LT11 2M	4,000 *	4,000 *	2,700	1,080	
			E32-LT11R 2M	4,000 *	3,500	2,300	920	
	Right-angle	M3	E32-C31N 2M	110	50	46	14	
		IVI3	E32-C21N 2M	290	130	90	39	
		M4	E32-D21N 2M	840	350	240	100	
		M6	E32-C11N 2M	780	350	320	100	
		IVIO	E32-LD11N 2M	840	350	240	100	
			E32-D21R 2M	140	60	40	16	
Reflective		M3	E32-C31 2M	000	150	100		
			E32-C31M 1M	330	150	100	44	
	Otusiaht	M4	E32-D211R 2M	140	60	40	16	
	Straight		E32-D11R 2M	840	350	240	100	
			E32-CC200 2M	1,400	600	400	180	
		M6	E32-LD11 2M	860	360	250	110	
			E32-LD11R 2M	840	350	240	100	

* The fiber length is 2 m on each side, so the sensing distance is given as 4,000 mm.

Cylindrical Models

Sensing				Sensing distance (mm)			
method	Size	Sensing direction	Model	Giga mode	Standard mode	High-speed mode	Super-high- speed mode
	1 dia.		E32-T223R 2M	450	250	150	60
Through beem	1.5 dia.	Top-view	E32-T22B 2M	680	400	220	90
Through-beam	3 dia.		E32-T12R 2M	2,000	1,000	700	280
	5 ula.	Side-view	E32-T14LR 2M	750	450	260	100
	1.5 dia.	-	E32-D22B 2M	140	60	40	16
	1.5 dia. + 0.5 dia.		E32-D43M 1M	28	12	8	4
Reflective		Top-view	E32-D22R 2M	140	60	40	16
nellective	3 dia.	TOP-VIEW	E32-D221B 2M	300	140	90	40
			E32-D32L 2M	700	300	200	90
	3 dia. + 0.8 dia.		E32-D33 2M	70	30	20	8

Flat Models

Sensing			Sensing distance (mm)				
method	Sensing direction	Model	Giga mode	Standard mode	High-speed mode	Super-high- speed mode	
Through-beam	Top-view	E32-T15XR 2M	2,000	1,000	700	280	
	Side-view	E32-T15YR 2M	750	450	260	100	
	Flat-view	E32-T15ZR 2M	750				
	Top-view	E32-D15XR 2M	840	350	240	100	
Reflective	Side-view	E32-D15YR 2M	200	100	52	24	
	Flat-view	E32-D15ZR 2M	200	100	52	24	

Sleeve Models

Ormalma				Sensing distance (mm)				
Sensing method	Sensing direction	Model	Giga mode	Standard mode	High-speed mode	Super-high- speed mode		
	Side-view	E32-T24R 2M	170	100	50	20		
	Side-view	E32-T24E 2M	450	250	150	60		
Through-beam		E32-T33 1M	150	90	50	20		
	Top-view	E32-T21-S1 2M	510	300	170	68		
		E32-TC200BR 2M	2,000	1,000	700	280		
	Side-view	E32-D24R 2M	70	30	20	8		
		E32-D24-S2 2M	120	53	45	14		
		E32-D43M 1M	28	12	8	4		
		E32-D331 2M	14	6	4	2		
		E32-D33 2M	70	30	20	8		
Deflective		E32-D32-S1 0.5M	- 63	07	10	7		
Reflective	Tan siaw	E32-D31-S1 0.5M	- 63	27	18	/		
	Top-view	E32-DC200F4R 2M	140	60	40	16		
		E32-D22-S1 2M	050	110	70	00		
		E32-D21-S3 2M	250	110	72	30		
		E32-DC200BR 2M	840	350	240	100		
		E32-D25-S3 2M	250	110	72	30		

Small-spot, Reflective Models

		Center			Sensing dis	tance (mm)			
Туре	Spot diameter	distance (mm)	Model	Giga mode	Standard mode	High-speed mode	Super-high- speed mode		
Variable apot	0.1 to 0.6 dia.	6 to 15	E32-C42 1M+E39-F3A	Spot diameter of	0.1 to 0.6 mm at 6	to 15 mm.			
Variable spot	0.3 to 1.6 dia.	10 to 30	E32-C42 1M+E39-F17	Spot diameter of	0.3 to 1.6 mm at 10) to 30 mm.			
Parallel light	4 dia.	0 to 20	E32-C31 2M+E39-F3C	Spot diameter of 4 mm max. at 0 to 20 mm.					
Faraller light	4 uia.	01020	E32-C31N 2M+E39-F3C	Spot diameter of 4 mm max. at 0 to 20 mm.					
Integrated lane	0.1 dia.	5	E32-C42S 1M	Spot diameter of 0.1 mm at 5 mm.					
Integrated lens	6 dia.	50	E32-L15 2M	Spot diameter of 6 mm at 50 mm.					
	0.1 dia.		E32-C41 1M+E39-F3A-5	Spot diameter of	0.1 mm at 7 mm.				
	0.5 dia.	7	E32-C31 2M+E39-F3A-5	Cost diameter of	0 E mm at 7 mm				
	0.5 dia.		E32-C31N 2M+E39-F3A-5	Spot diameter of	0.5 mm at 7 mm.				
Cmall anat	0.2 dia.		E32-C41 1M+E39-F3B	Spot diameter of	0.2 mm at 17 mm.				
Small-spot	0.5 -11-	17	E32-C31 2M+E39-F3B	On at diamaten at	0.5				
	0.5 dia.		E32-C31N 2M+E39-F3B	Spot diameter of 0.5 mm at 17 mm.					
	0 dia	3 dia. 50 E	E32-CC200 2M+E39-F18	On at all and at an at	Spot diameter of 3 mm at 50 mm.				
	3 dia.		E32-C11N 2M+E39-F18	Spot diameter of					

High-power Beam Models

		Anartura			Sensing dis	tance (mm)	
Туре	Sensing direction	Aperture angle	Model	Giga mode	Standard mode	High-speed mode	Super-high- speed mode
	Right-angle	15°	E32-LT11N 2M	4,000 *2	3,500	2,300	920
Through-beam		10°	E32-T17L 10M	20,000 *1	20,000 *1	20,000 *1	8,000
models with	Top-view	150	E32-LT11 2M	4,000 *2	4,000 *2	2,700	1,080
integrated lens		15°	E32-LT11R 2M	4,000 *2	3,500	2,300	920
	Side-view	30°	E32-T14 2M	4,000 *2	4,000 *2	4,000 *2	1,800
	Dight onglo	12°	E32-T11N 2M+E39-F1	4,000 *2	4,000 *2	4,000 *2	2,000
	Right-angle	6°	E32-T11N 2M+E39-F16	4,000 *2	4,000 *2	4,000 *2	3,600
-	Tan view	12°	E32-T11R 2M+E39-F1	4,000 *2	4,000 *2	4,000 *2	2,000
	Top-view	6°	E32-T11R 2M+E39-F16	4,000 *2	4,000 *2	4,000 *2	3,600
	Side-view	60°	E32-T11R 2M+E39-F2	1,450	800	500	200
	Top-view	12°	E32-T11 2M+E39-F1	4,000 *2	4,000 *2	4,000 *2	1,860
		6°	E32-T11 2M+E39-F16	4,000 *2	4,000 *2	4,000 *2	4,000 *2
	Side-view	60°	E32-T11 2M+E39-F2	2,300	1,320	860	320
Through-beam	Top view	12°	E32-T51R 2M+E39-F1	4,000 *2	4,000 *2	3,900	1,500
models with	Top-view	6°	E32-T51R 2M+E39-F16	4,000 *2	4,000 *2	4,000 *2	4,000 *2
lenses	Side-view	60°	E32-T51R 2M+E39-F2	1,400	720	500	200
	Tan view	12°	E32-T81R-S 2M+E39-F1	4,000 *2	4,000 *2	2,700	1,000
	Top-view	6°	E32-T81R-S 2M+E39-F16	4,000 *2	4,000 *2	4,000 *2	1,800
	Side-view	60°	E32-T81R-S 2M+E39-F2	1,000	550	360	140
	Territori	12°	E32-T61-S 2M+E39-F1	4,000 *2	4,000 *2	4,000 *2	1,800
	Top-view	6°	E32-T61-S 2M+E39-F16	4,000 *2	4,000 *2	4,000 *2	3,100
	Side-view	60°	E32-T61-S 2M+E39-F2	1,680	900	600	240
	Ten view	12°	E32-T51 2M+E39-F1-33	4,000 *2	4,000 *2	2,300	1,400
	Top-view	6°	E32-T51 2M+E39-F16	4,000 *2	4,000 *2	4,000 *2	4,000 *2
Reflective models with integrated lens	Top-view	4°	E32-D16 2M	40 to 2,800	40 to 1,400	40 to 900	40 to 480

*1. The fiber length is 10 m on each side, so the sensing distance is given as 20,000 mm.
*2. The fiber length is 2 m on each side, so the sensing distance is given as 4,000 mm.

Narrow View Models

Sensing			Model	Sensing distance (mm)			
method	Sensing direction	Aperture angle		Giga mode	Standard mode	High-speed mode	Super-high- speed mode
		1.5°	E32-A03 2M	3,220	1,780	1.200	500
		1.5	E32-A03-1 2M	5,220	1,700	1,200	
Through hears		3.4°	E32-A04 2M	1,280	680	450	200
Through-beam	Side-view	4°	E32-T24SR 2M	4,000 *	2,200	1,460	580
			E32-T24S 2M	4,000 *	2,600	1,740	700
			E32-T22S 2M	4,000 *	3,800	2,500	1,000

* The fiber length is 2 m on each side, so the sensing distance is given as 4,000 mm.

Models for Detection without Background Interference

			Sensing distance (mm)			
Sensing method	Sensing direction	Sensing direction Model		Standard mode	High-speed mode	Super-high- speed mode
	Flat-view	E32-L16-N 2M	0 to 15 0 to 1			
Limited-reflective	Flat-view	E32-L24S 2M	0 to 4			
	Side-view	E32-L25L 2M	5.4 to 9 (center 7.2)			

Transparent Object Detection (Retro-reflective Models)

				Sensing distance (mm)				
Sensing method	Feature	Size	Model	Giga mode	Standard mode	High-speed mode	Super-high- speed mode	
	Film detection	M3	E32-C31 2M +E39-F3R +E39-RP37	250		200		
Retro-reflective	Square		E32-R16 5M	150 to 1		1,500		
	Threaded		E32-R21 2M		10 to	250		
-	Hex-shaped	M6	E32-LR11NP 2M +E39-RP1	1,350	1,200	1,000	550	

Transparent Object Detection (Limited-reflective Models)

					Sensing dis	tance (mm)		
Sensing method	Feature	Sensing direction	Model	Giga mode	Standard mode	High-speed mode	Super-high- speed mode	
	Small size		E32-L24S 2M	0 to 4				
	Standard		E32-L16-N 2M	0 to 15			0 to 12	
Limited-reflective	Glass substrate alignment, 70°C	Flat-view	E32-A08 2M	10 to 20				
Limited-renective	Standard/long-distance		E32-A12 2M	12 to 30				
	Side-view form	Side-view	E32-L25L 2M	5.4 to 9 (center 7.2)				
-	Glass substrate mapping, 70°C	Top-view	E32-A09 2M	15 to 38				

Chemical-resistant, Oil-resistant Models

Consina			Model		Sensing distance (mm)			
Sensing method	Туре	Sensing direction		Giga mode	Standard mode	High-speed mode	Super-high- speed mode	
	Oil-resistant	Right-angle	E32-T11NF 2M	4,000 *1	4,000 *1	4,000 *1	2,200	
		Tonviou	E32-T12F 2M	4,000 *1	4,000 *1	4,000 *1	1,600	
Through-	Chemical/oil-resistant	Top-view	E32-T11F 2M	4,000 *1	4,000 *1	2,600	1,000	
beam Chemical/oil-resistant at 150°C		Side-view	E32-T14F 2M	1,400	800	500	200	
		Top-view	E32-T51F 2M	4,000 *1	2,800	1,800	700	
	Semiconductors: Cleaning, developing, and etching; 60°C		E32-L11FP 5M		of lens (Recommended nter of mounting hole A			
Reflective	Semiconductors: Resist stripping; 85°C	Top-view	E32-L11FS 5M		8 to 20 mm from tip of lens (Recommended sensing distance: 11 mm), 32 to 44 mm from center of mounting hole A (Recommended sensing distance: 35			
	Chemical/oil-resistant		E32-D12F 2M	*2	190	130	60	
	Chemical-resistant cable		E32-D11U 2M	840	350	240	100	

*1. The fiber length is 2 m on each side, so the sensing distance is given as 4,000 mm.
*2. Even if there is no sensing object, the Sensor will detect light that is reflected by the fluororesin.

Bending-resistant Models

			Sensing distance (mm)				
Sensing method	Size	Model	Giga mode	Standard mode	High-speed mode	Super-high- speed mode	
Through-beam	1.5 dia.	E32-T22B 2M	680	400	220	90	
	M3	E32-T21 2M	060	400	220	90	
	M4	E32-T11 2M	2,500	1,350	900	360	
-	Square	E32-T25XB 2M	500	300	170	70	
	1.5 dia.	E32-D22B 2M	140	60	40	16	
	M3	E32-D21 2M	140	60	40		
Reflective	3 dia.	E32-D221B 2M	300	140	90	40	
nellective	M4	E32-D21B 2M	300	140	90	40	
-	M6	E32-D11 2M	840	350	240	100	
	Square	E32-D25XB 2M	240	100	60	30	

Heat-resistant Models

				Sensing dis	tance (mm)	
Sensing method	Size	Model	Giga mode	Standard mode	High-speed mode	Super-high- speed mode
	100°C	E32-T51R 2M	1,600	800	560	225
Through beem	150°C	E32-T51 2M	2,800	1,500	1,000	400
Through-beam	200°C	E32-T81R-S 2M	1,000	550	360	140
	350°C	E32-T61-S 2M	1,680	900	600	240
	100°C	E32-D51R 2M	670	280	190	80
	150°C	E32-D51 2M	1,120	450	320	144
	200°C	E32-D81R-S 2M	420	180	120	54
Deflective	000%	E32-A08H2 2M		10 to 20		
Reflective	300°C	E32-A09H2 2M		20 to 30 (center 25)		
	05000	E32-D611-S 2M	- 420	100	100	54
	350°C	E32-D61-S 2M		180	120	54
	400°C	E32-D73-S 2M	280	120	80	36

Area Detection Models

			Model	Sensing distance (mm)				
Sensing method	Туре	Sensing width		Giga mode	Standard mode	High-speed mode	Super-high- speed mode	
		11 mm	E32-T16PR 2M	3,100	1,700	1,120	440	
Through-beam	Area		E32-T16JR 2M	2,750	1,500	960	380	
		30 mm	E32-T16WR 2M	4,000 *	2,600	1,700	680	
Reflective	Array	11 mm	E32-D36P1 2M	700	300	200	90	

* The fiber length is 2 m on each side, so the sensing distance is given as 4,000 mm.

Liquid-level Detection Models

	Tube diameter	Feature		Sensing distance (mm)				
Sensing method			Model	Giga mode	Standard mode	High-speed mode	Super-high- speed mode	
	3.2, 6.4, or 9.5 dia.	Stable residual quantity detection	E32-A01 5M	Applicable tube: Transparent tube with a diameter of 3.2, 6.4, or 9.5 mm, Recommended wall thickness: 1 mm				
Tube-mounting	8 to 10 dia.	Mounting at multiple levels	E32-L25T 2M	Applicable tube: Transparent tube with a diameter of 8 to 10 mm, Recommended wall thickness: 1 mm				
	No restrictions	Large tubes	E32-D36T 5M	Applicable tube: Transparent tube (no restrictions on diameter)				
Liquid contact (heat-resistant up to 200°C)			E32-D82F1 4M	Liquid-contact type				

Vacuum-resistant Models

			Sensing distance (mm)						
Sensing method	Heat-resistant temperature	Model	Giga mode	Standard mode	High-speed mode	Super-high- speed mode			
	120°C	E32-T51V 1M	720	400	260	100			
Through-beam	120°C	E32-T51V 1M+E39-F1V	2,000 *	2,000 *	1,360	520			
	200°C	E32-T84SV 1M	1,760	950	640	260			
* The fiber leng	* The fiber length is 1 m on each side, so the sensing distance is given as 2,000 mm.								

Models for FPD, Semiconductors, and Solar Cells

Sensing method		Operating temperature	Model	Sensing distance (mm)			
	Application			Giga mode	Standard mode	High-speed mode	Super-high- speed mode
	Glass presence detection	- 70°C	E32-L16-N 2M	0 to 15			0 to 12
Limited-reflective	Glass substrate alignment		E32-A08 2M	- 10 to 20			
		300°C	E32-A08H2 3M				
		70°C	E32-A12 2M	12 to 30			
	Glass substrate mapping		E32-A09 2M	15 to 38			
		300°C	E32-A09H2 2M	20 to 30 (center 25)			
	Wet processes: Cleaning, Resist developing and etching	60°C	E32-L11FP 5M	8 to 20 mm from tip of lens (Recommended sensing distance: 11 mm), 19 to 31 mm from center of mounting hole A (Recommended sensing distance: 22 mm			<i>,</i> ,
	Wet process: Resist stripping	85°C	E32-L11FS 5M	8 to 20 mm from tip of lens (Recommended sensing distance: 11 mm), 32 to 44 mm from center of mounting hole A (Recommended sensing distance: 35 mm			
Through-beam	Wafer mapping	70°C	E32-A03 2M	3,220	1 700	1,200	500
			E32-A03-1 2M		1,780		500
			E32-A04 2M	1,280	680	450	200
			E32-T24SR 2M	4,000 *	2,200	1,460	580
			E32-T24S 2M	4,000 *	2,600	1,740	700

* The fiber length is 2 m on each side, so the sensing distance is given as 4,000 mm.

I/O Circuit Diagrams

NPN Output

Models	Operation mode	Timing chart	L/D indicators	Output circuit
E3X-HD11 E3X-HD6 E3X-HD14	Light-ON	Incident light No incident light (orange) Not lit Output ON transistor OFF Load Set (e.g., relay) Reset (Between blue and black leads)	L lit.	Display OUT indicator (orange) Brown Black Photeetoric Sensor main Grout Control output Control output
	Dark-ON	Incident light No incident light (orange) Not lit Output ON transistor OFF Load Set (e.g., relay) Reset (Between blue and black leads)	D lit.	M8 Connector Pin Arrangement O O O O O O O O O O O O O

PNP Output

Models	Operation mode	Timing chart	L/D indicators	Output circuit
E3X-HD41 E3X-HD8 E3X-HD44	Light-ON	Incident light No incident light (orange) Not lit Output ON transistor OFF Load Set (e.g., relay) Reset (Between blue and black leads)	L lit.	Display OUT indicator (orange) Brown Photoelectric Sensor main drout Brown Brown Brown Control output Black Control output Load
	Dark-ON	Incident light OUT indicator Lit (orange) Not lit Output ON transistor OFF Load Set (e.g., relay) Reset (Between blue and black leads)	D lit.	M8 Connector Pin Arrangement O O O O O O O O

ON delay	OFF delay	One-shot	
Incident light No incident light Light-ON OFF Dark-ON OFF	Incident light No incident light Light-ON Dark-ON OFF	Incident light No incident light Light-ON OFF Dark-ON OFF ON OFF	


Note: Timing Charts for Timer Settings (T: Set Time)

Plug (Sensor I/O Connector)

(4 2) (3 (1) (3) (4) (4) (4) (4) (4) (4) (4) (4) (4) (4	inal number	Wire color Brown White Blue Black	
	XS3F-M421-402-A XS3F-M421-405-A	XS3F-M422-402-A XS3F-M422-405-A	
Wire color	Connection pin	Application	
Brown	1	Power supply (+V)	
White	2		
Blue	3	Power supply (0 V)	
Black	4	Output	

Note: Pin 2 is not used.

Nomenclature

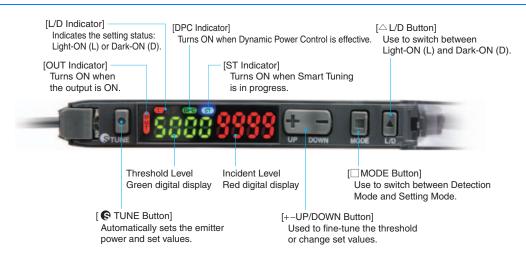

Safety Precautions

Refer to the Fiber Sensors Technical Guide for precautions that apply to all Fiber Sensors.

<u> W</u>arning

This product is not designed or rated for ensuring safety of persons either directly or indirectly. Do not use it for such purposes.



•

Do not use the product with voltage in excess of the rated voltage.

Excess voltage may result in malfunction or fire.



Never use the product with AC power supply. Otherwise, explosion may result.



Precautions for Safe Use


The following precautions must be observed to ensure safe operation of the product. Doing so may cause damage or fire.

- 1. Do not install the product in the following locations.
 - Locations subject to direct sunlight
 - · Locations subject to condensation due to high humidity
 - Locations subject to corrosive gas
 - Locations subject to vibration or mechanical shocks exceeding the rated values
 - Locations subject to exposure to water, oil, chemicals
 - Locations subject to stream
 - · Locations subjected to strong magnetic field or electric field
- 2. Do not use the product in environments subject to flammable or explosive gases.
- To secure the safety of operation and maintenance, do not install the product close to high-voltage devices and power devices.
- High-Voltage lines and power lines must be wired separately from this product. Wiring them together or placing them in the same duct may cause induction, resulting in malfunction or damage.
- Do not apply load exceeding the ratings. Otherwise, damage or fire may result.
- 6. Do not short the load. Otherwise, damage or fire may result.
- 7. Connect the load correctly.
- 8. Do not miswire such as the polarity of the power supply.
- 9. Do not use the product if the case is damaged.
- **10.** Burn injury may occur. The product surface temperature rises depending on application conditions, such as the ambient temperature and the power supply voltage. Attention must be paid during operation or cleaning.
- **11.** When setting the Sensor, be sure to check safety, such as by stopping the equipment.
- **12.** Be sure to turn off the power supply before connecting or disconnecting wires.
- **13.** Do not attempt to disassemble, repair, or modify the product Unit in any way.
- 14. When disposing of the product, treat it as industrial waste.
- 15. Do not use the Sensor in water, rainfall, or outdoors.

Precautions for Correct Use

- Be sure to mount the unit to the DIN track until it clicks.
- Use an extension cable with a minimum thickness of 0.3 mm² and less than 100 m long.
- Do not subject the cable to more than the following forces. Pull: 40 N; torque: 0.1 N·m; pressure: 20 N; bending: 29.4 N
- The Sensor is ready to operate 200 ms after the power supply is turned ON.
- When using Amplifier Units with Wire-saving Connectors, attach the protective stickers (provided with E3X-CN-series Connectors) on the unused power pins to prevent electrical shock and short circuiting.

When using Amplifier Units with Connectors for Communications Units, attach the protective caps (provided with E3X-CRT/ECT Sensor Communications Unit).

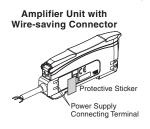



- Output pulses may occur when the power supply is turned OFF. Turn OFF the power supply to the load or load line first.
- Excessive incident light cannot be sufficiently handled by the mutual interference prevention function and may cause malfunction. To prevent this, set a higher threshold level.
- Make sure that the power supply is turned OFF before connecting, separating, or adding Amplifier Units.
- Do not pull on or apply excessive pressure or force to the Fiber Unit when it is attached to the Amplifier Unit.
- The E3X-MC11, E3X-MC11-SV2 and E3X-MC11-S Mobile Consoles cannot be used.
- Mutual interference prevention on the E3X-HD Series does not function among the E3NX-FA, E3X-DA-N, E3X-SD, or E3X-NA Fiber Amplifier Units.


Mutual interference prevention on the E3X-HD Series does function among the E3X-DA-S and E3X-MDA Fiber Amplifier Units.

- The E3X-CRT and E3X-ECT Sensor Communications Unit can be used with the E3X-HD0, but the E3X-DRT21-S and E3NW-ECT Sensor Communications Units cannot be used.
- Always keep the protective cover in place when using the Amplifier Unit.
- Do not use thinner, benzine, acetone, and kerosene for cleaning.

For technical information and product FAQs, refer to the *Technical Guide* on your OMRON website.

Mounting the Fiber Amplifier Units Mounting on DIN Track

1. Let the hook on the Amplifier Unit's Fiber Unit connection side catch the track and push the unit until it clicks.




Removing from DIN Track

- 1. Push the unit in the direction 1.
- 2. Lift it up in the direction 2. Note: Refer to I/O Circuit Diagrams or check the side of the unit for wire color and role indications.

Mounting Amplifier Units in Group (Connector Type Models)

- 1. Mount the Fiber Amplifier units one at a time onto the DIN track and push them until they click.
- 2. Slide the Fiber Amplifier units in the direction 2.
- 3. Use End Plates (PFP-M: separately sold) at the both ends of the grouped Fiber Amplifier units to prevent them from separating due to vibration or other cause.
- 4. Tighten the screw on the End Plates using a driver.

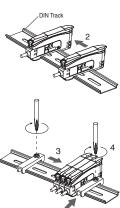

Tighten the screw while pressing the End Plate


- · Under environments such as vibration, use an end plates even with a single Fiber Amplifier Unit
- The maximum numbers of connectable Amplifier Units are given in the following table.

		Maximum number of interconnected	Maximum number of mutual interference prevention	
E3X-HD series standard models (E3X-HD11/HD41/HD6/HD8)		16	10	
E3X-HD0	With E3X-ECT	30	10	
	With E3X-CRT	16	10	

- The mutual interference prevention function cannot be used if the detection mode is set to super-high-speed mode (SHS).
- If Units are to be connected, the allowable ambient temperature will change with the number of Units that are connected. Check the Ratings and Specifications
- Always turn OFF the power before connecting or disconnecting Units.





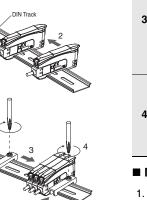


Mounting Fiber Units

■ Use Fiber Cutter


Cut a thin fiber as follows.


For standard fibers, insert to the desired cutting position and cut.

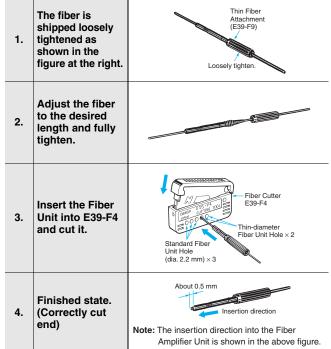

Mount Fiber Unit

- 1. Open the protective cover.
- 2. Raise the lock lever.
- 3. Insert the Fiber Unit in the fiber unit hole to the bottom.
- 4. Return the lock lever to the original position and fix the Fiber Unit.
- When mounting a coaxial reflective Fiber Unit. insert the single-core Fiber Unit to the upper hole (Emitter side) and the multi-core Fiber Unit to the lower hole (Receiver side). The cables for the Single-core Fiber Single Core (Multi Core Units (Emitters) have identification marks. Refer to the dimensions diagrams for details.






• When removing the Fiber Unit, follow the above steps in reverse order. To maintain the characteristics of the Fiber Unit, make sure the lock is released before removing the Fiber Unit.


Dimensions

(Unit: mm) Tolerance class IT16 applies to dimensions in this data sheet unless otherwise specified.

Fiber Amplifier Units

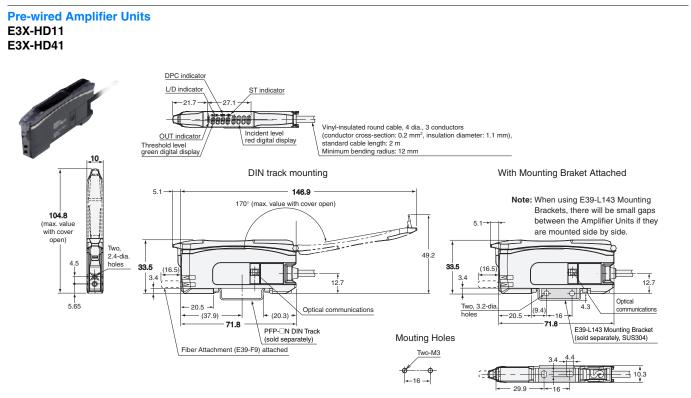


Amplifier Units with Wire-saving Connectors E3X-HD6 E3X-HD8

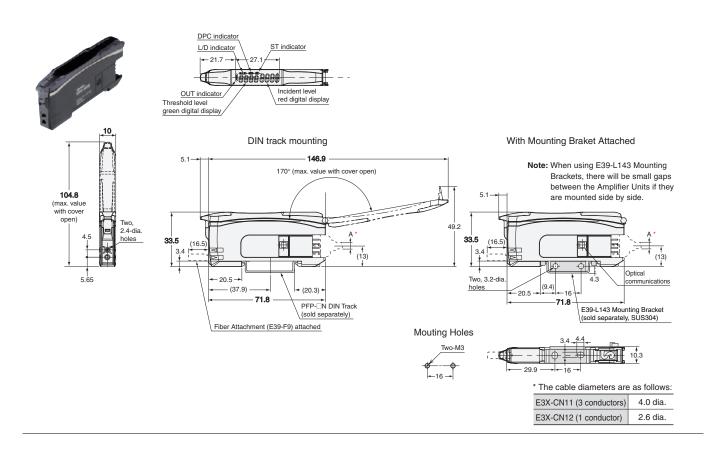


11

Amplifier Units with M8 Connectors E3X-HD14 E3X-HD44

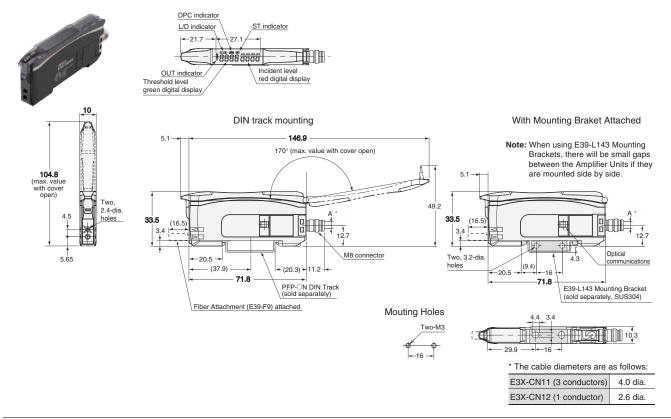

Amplifier Unit with Connector for Sensor Communications Unit E3X-HD0

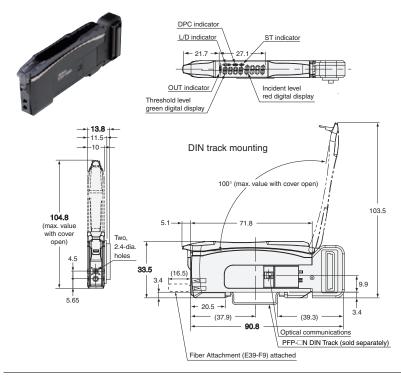

Refer to E32 Series for details on Fiber Units.

OMRON

Read and understand this catalog.

Please read and understand this catalog before purchasing the products. Please consult your OMRON representative if you have any questions or comments.

Warranties.

(a) Exclusive Warranty. Omron's exclusive warranty is that the Products will be free from defects in materials and workmanship for a period of twelve months from the date of sale by Omron (or such other period expressed in writing by Omron). Omron disclaims all other warranties, express or implied.

(b) Limitations. OMRON MAKES NO WARRANTY OR REPRESENTATION, EXPRESS OR IMPLIED, ABOUT NON-INFRINGEMENT, MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE OF THE PRODUCTS. BUYER ACKNOWLEDGES THAT IT ALONE HAS DETERMINED THAT THE

PRODUCTS WILL SUITABLY MEET THE REQUIREMENTS OF THEIR INTENDED USE.

Omron further disclaims all warranties and responsibility of any type for claims or expenses based on infringement by the Products or otherwise of any intellectual property right. (c) Buyer Remedy. Omron's sole obligation hereunder shall be, at Omron's election, to (i) replace (in the form originally shipped with Buyer responsible for labor charges for removal or replacement thereof) the non-complying Product, (ii) repair the non-complying Product, or (iii) repay or credit Buyer an amount equal to the purchase price of the non-complying Product; provided that in no event shall Omron be responsible for warranty, repair, indemnity or any other claims or expenses regarding the Products unless Omron's analysis confirms that the Products were properly handled, stored, installed and maintained and not subject to contamination, abuse, misuse or inappropriate modification. Return of any Products by Buyer must be approved in writing by Omron before shipment. Omron Companies shall not be liable for the suitability or unsuitability or the results from the use of Products in combination with any electrical or electronic components, circuits, system assemblies or any other materials or substances or environments. Any advice, recommendations or information given orally or in writing, are not to be construed as an amendment or addition to the above warranty.

See http://www.omron.com/global/ or contact your Omron representative for published information.

Limitation on Liability; Etc.

OMRON COMPANIES SHALL NOT BE LIABLE FOR SPECIAL, INDIRECT, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, LOSS OF PROFITS OR PRODUCTION OR COMMERCIAL LOSS IN ANY WAY CONNECTED WITH THE PRODUCTS, WHETHER SUCH CLAIM IS BASED IN CONTRACT, WARRANTY, NEGLIGENCE OR STRICT LIABILITY.

Further, in no event shall liability of Omron Companies exceed the individual price of the Product on which liability is asserted.

Suitability of Use.

Omron Companies shall not be responsible for conformity with any standards, codes or regulations which apply to the combination of the Product in the Buyer's application or use of the Product. At Buyer's request, Omron will provide applicable third party certification documents identifying ratings and limitations of use which apply to the Product. This information by itself is not sufficient for a complete determination of the suitability of the Product in combination with the end product, machine, system, or other application or use. Buyer shall be solely responsible for determining appropriateness of the particular Product with respect to Buyer's application, product or system. Buyer shall take application responsibility in all cases.

NEVER USE THE PRODUCT FOR AN APPLICATION INVOLVING SERIOUS RISK TO LIFE OR PROPERTY OR IN LARGE QUANTITIES WITHOUT ENSURING THAT THE SYSTEM AS A WHOLE HAS BEEN DESIGNED TO ADDRESS THE RISKS, AND THAT THE OMRON PRODUCT(S) IS PROPERLY RATED AND INSTALLED FOR THE INTENDED USE WITHIN THE OVERALL EQUIPMENT OR SYSTEM.

Programmable Products.

Omron Companies shall not be responsible for the user's programming of a programmable Product, or any consequence thereof.

Performance Data.

Data presented in Omron Company websites, catalogs and other materials is provided as a guide for the user in determining suitability and does not constitute a warranty. It may represent the result of Omron's test conditions, and the user must correlate it to actual application requirements. Actual performance is subject to the Omron's Warranty and Limitations of Liability.

Change in Specifications.

Product specifications and accessories may be changed at any time based on improvements and other reasons. It is our practice to change part numbers when published ratings or features are changed, or when significant construction changes are made. However, some specifications of the Product may be changed without any notice. When in doubt, special part numbers may be assigned to fix or establish key specifications for your application. Please consult with your Omron's representative at any time to confirm actual specifications of purchased Product.

Errors and Omissions. Information presented by Omron Companies has been checked and is believed to be accurate; however, no responsibility is assumed for clerical, typographical or proofreading errors or omissions.

In the interest of product improvement, specifications are subject to change without notice.

OMRON Corporation Industrial Automation Company