imall

Chipsmall Limited consists of a professional team with an average of over 10 year of expertise in the distribution of electronic components. Based in Hongkong, we have already established firm and mutual-benefit business relationships with customers from, Europe, America and south Asia, supplying obsolete and hard-to-find components to meet their specific needs.

With the principle of "Quality Parts, Customers Priority, Honest Operation, and Considerate Service", our business mainly focus on the distribution of electronic components. Line cards we deal with include Microchip, ALPS, ROHM, Xilinx, Pulse, ON, Everlight and Freescale. Main products comprise IC, Modules, Potentiometer, IC Socket, Relay, Connector. Our parts cover such applications as commercial, industrial, and automotives areas.

We are looking forward to setting up business relationship with you and hope to provide you with the best service and solution. Let us make a better world for our industry!



Contact us

Tel: +86-755-8981 8866 Fax: +86-755-8427 6832 Email & Skype: info@chipsmall.com Web: www.chipsmall.com Address: A1208, Overseas Decoration Building, #122 Zhenhua RD., Futian, Shenzhen, China



1211

Electrostatic Sensor **ELS**1 SERIES

General terms and conditions...... F-7 Related Information

Selection guide P.1157~

CE




Achieve easier in-line measurement

Constantly check static in lines!

With this inline-capable surface potential sensor, you can constantly monitor static that will be generated in various places in a process while running a line and, if there is any abnormality, you can respond to it immediately. It will clarify damage or failure caused by static which has been hard to find out before, allowing the maintenance of stable quality.

Reduce the inspection man-hours for the ionizer

You can see the neutralizing effect of the ionizer in real time, so it is possible to objectively verify damage on the ionizer or time to replace expendable parts. By quickly finding decrease in the effect of the ionizer, it will relieve concerns like "Is it really neutralizing?", and reduce the man-hours required for inspection and verification.

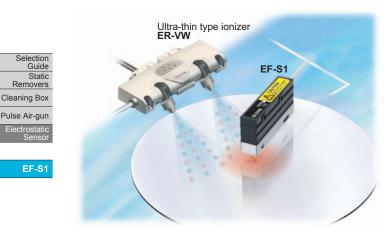

New proposal for electrostatic measurement

Unlike the off-line measurement with a handheld instrument, it can be installed in a line in the same way as photoelectric sensors, thus reduces variation in measurements caused by differences in workers, measurement sites and distance to help improve reliability. In addition, with its variety of features such as the window comparator output that outputs a signal when the measured value exceeds the measurement range, and analog output essential for data collection and analysis, it enables line control for anti-static measures similar to the beam sensor (photoelectric sensor).

FIBER SENSORS LASER SENSORS

PHOTOELECTRIC SENSORS MICRO

PHOTOELECTRIC SENSORS AREA SENSORS

LIGHT CURTAINS / SAFETY PRESSURE / FLOW SENSORS INDUCTIVE PROXIMITY

SENSORS PARTICULAR USE SENSORS

SENSOR OPTIONS SIMPLE WIRE-SAVING UNITS

WIRE-SAVING SYSTEMS MEASUREMENT SENSORS


LASER MARKERS PLC

HUMAN MACHINE INTERFACES ENERGY CONSUMPTION VISUALIZATION COMPONENTS FA COMPONENTS

> MACHINE VISION SYSTEMS UV CURING SYSTEMS

Electrostatic Sensor **EF-S1 SERIES**

1212

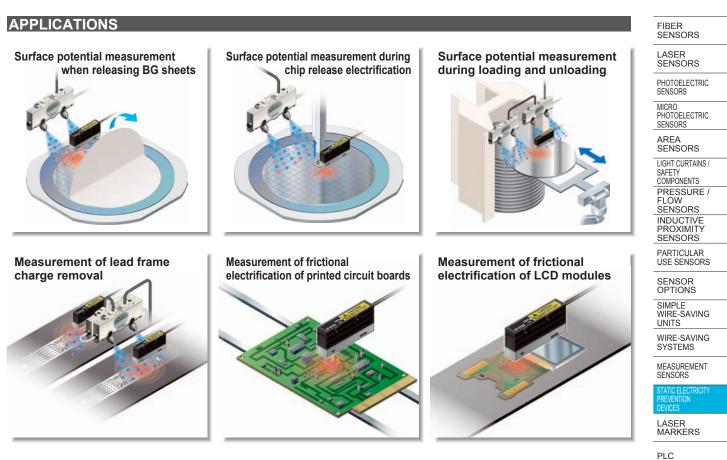

BASIC PERFORMANCE

Suitable for measuring under severe conditions

High-precision design with a repeatability precision of ± 0.3 % F.S. Even very slight differences in potential will not be skipped over.

MOUNTING / SIZE

Lightweight and compact for easy setup in any location

The sensor head only weighs 90 g approx. Installation can be carried out easily using just a bracket so that it is suitable for use in a wide variety of applications. In addition, power consumption is low so the devices can be utilized without concerns of high running costs.



.....

Selection Guide Static Removers Cleaning Box Pulse Air-gun Electrostatic Sensor

HUMAN MACHINE

ENERGY CONSUMPTION VISUALIZATION COMPONENTS

FA COMPONENTS

MACHINE VISION SYSTEMS

UV CURING SYSTEMS

EF-S1

FUNCTIONS

Easy-to-read 2-color dual display

The controller is equipped with a red and a green display. Current values and threshold values can be viewed at a glance.



FUNCTIONS

FIBER SENSORS

LASER SENSORS

SENSORS

MICRO PHOTOELECTRIC SENSORS

PHOTOELECTRIC

AREA SENSORS

SAFETY

SENSORS

INDUCTIVE PROXIMITY

SENSORS

PARTICULAR

SENSOR

WIRE-SAVING UNITS

WIRE-SAVING SYSTEMS

MEASUREMENT SENSORS

> LASER MARKERS

HUMAN MACHINE INTERFACES ENERGY CONSUMPTION VISUALIZATION COMPONENTS

MACHINE VISION SYSTEMS

UV CURING SYSTEMS

PLC

SIMPLE

USE SENSORS

FLOW

PRESSURE /


1213


A variety of functions for a wide range of applications

A large number of functions for a variety of applications are available, including 0-adjust, hysteresis setting, window comparator output, and +potential / –potential peak hold (external timing input) measurement.

Easy data management with analog output

Data logger can collect and analyze data, which will be helpful when reviewing the installation angle of the ionizer and the number of ionizers.

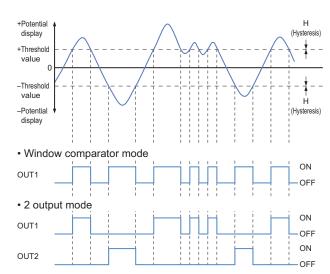

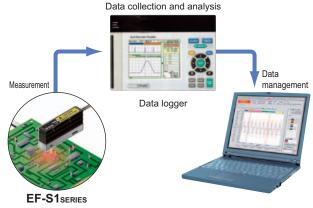

ORDER GUIDE

Sensor head

Appearance	Model No.	Measurement range (Note)
-	EF-S1HS	8.0 to 20.5 mm 0.315 to 0.807 in (±1 kV range mode) 21.0 to 100 mm 0.827 to 3.937 in (±2 kV range mode)


Note: Set the distance between the sensor head and the sensing object by using the controller before use.

Controller

Appearance	Model No.	Output type
4	EF-S1C	NPN open-collector transistor Analog output • Output voltage: 1 to 5 V

Accessory

• CN-EP1 (Connector for controller) 5 pcs. per set (Note)



OPTIONS

Designation	Appearance	Model No.	Description
Controller mounting bracket	Carling and the second	MS-DIN-2	Mounting bracket for controller
End plates		MS-DIN-E	If the controller moves because of the way it has been installed to the DIN rail, use clamps at both sides to secure the controller so that it will not move. 2 pcs. per set

Selection Guide Static Removers Cleaning Box

Pulse Air-gun Electrostatic Sensor

EF-S1

SPECIFICATIONS

Sonsor hoad

Sensor head		LASER SENSORS
Model No.	EF-S1HS	PHOTO- ELECTRIC SENSORS
Applicable controller	EF-S1C	MICRO PHOTO- ELECTRIC SENSORS
Measurement range (Measurement range) (Note 2, 3, 4)	8.0 to 20.5 mm 0.315 to 0.807 in (±1 kV range mode) 21.0 to 100 mm 0.827 to 3.937 in (±2 kV range mode)	AREA SENSORS
Power indicator	Green LED	LIGHT
Ambient temperature	0 to +40 °C +0 to +104 °F (No dew condensation), Storage: -20 to +60 °C -4 to +140 °F	CURTAINS / SAFETY COMPONENTS
Ambient humidity	35 to 65 % RH, Storage: 35 to 85 % RH	PRESSURE / FLOW
Vibration resistance	10 to 150 Hz frequency, 0.75 mm 0.030 in amplitude in X, Y and Z directions for two hours each	SENSORS
Shock resistance	98 m/s ² acceleration (10 G approx.) in X, Y and Z directions for five times each	INDUCTIVE PROXIMITY SENSORS
Material	Enclosure: Heat resistant ABS, Measuring part cover: Stainless steel (SUS304)	PARTICULAR
Cable	0.09 mm ² , 3-core shielded cable, 5 m 16.404 ft long (with controller connector) (Note 5)	USE SENSORS
Weight	Net weight: 90 g approx., Gross weight: 130 g approx.	SENSOR
Notoo: 1) Whore measurement condition	$x = x^{2}$	OPTIONS

Notes: 1) Where measurement conditions have not been specified precisely, the conditions used were an ambient temperature of +20 °C +68 °F.

2) Set the distance between the sensor head and the sensing object by using the controller before use.

3) The measurement range mode is switched automatically when the measurement range setting is changed at the controller.

4) Measurement areas will vary depending on the measurement distances.

5) Cable cannot be extended.

Controller

Model No.		S
Item	EF-S1C	
Applicable sensor head	EF-S1HS	L
Supply voltage	24V DC ±10 %	
Current consumption	Normal operation: 50 mA or less, ECO mode: 40 mA or less	
Display range Measurement range) (Note 2)	-1,000 to 1,000 (±1 kV range mode) -1,999 to 1,999 (±2 kV range mode)	
Repeatability	±0.3 % F.S.(Note 3)	
inearity	±0.5 % F.S. (Note 3, 4, 6)	
Temperature characteristics	0.05 % F.S./°C (Note 3, 5)	
ludgment outputs OUT 1, OUT 2)	 NPN open-collector transistor Maximum sink current: 100 mA Applied voltage: 30 V DC or less (between judgment output and 0 V) Residual voltage: 1.5 V or less (at 100 mA sink current) 	-
Response time	10 ms, 20 ms (STD), 100 ms, 200 ms, 400 ms, 800 ms switching method	
Output operation	OUT1: +potential measurement output or window comparator output OUT2: –potential measurement output or error output	
Short-circuit protection	Incorporated	
Analog output (Note 6)	Analog voltage • Output voltage: 1 to 5 V • Output impedance: 100 Ω approx.	
Response time	20 ms, 30 ms (STD), 110 ms, 210 ms, 410 ms, 810 ms switching method	
Timing input / 0-adjust input	NPN non-contact input • Signal condition High: +V or open, Low: 0 to +2 V (source current 0.5 mA or less) • Input impedance: 10 kΩ approx.	
Ambient temperature	-10 to +55 °C +14 to +131 °F (No dew condensation or icing allowed), Storage: -20 to +70 °C -4 to +158 °F	
Ambient humidity	35 to 85 % RH, Storage: 35 to 85 % RH	_
Vaterial	Enclosure: Heat-resistant ABS, Case cover: Polycarbonate, Mode key: Acrylic, Jog switch: Heat-resistant ABS	
Cable	0.2 mm ² 6-core cabtyre cable, 2 m 6.562 ft long	
Cable extension	Extension up to total 10 m 32.808 ft is possible with 0.3 mm ² , or more, cable.	
Weight	Net weight: 65 g approx., Gross weight: 110 g approx.	
Jotes: 1) Where measurement cond	litions have not been specified precisely, the conditions used were an ambient temperature of +20 °C +68 °F.	

Notes: 1) Where measurement conditions have not been specified precisely, the conditions used were an ambient temperature of +20 °C +68 °F. 2) The display range (measurement range) is switched automatically when the measurement distance setting is changed at the controller.

3) F.S. is 2,000 V (-1,000 V to 1,000 V) for the ±1 kV range mode and 4,000 V (-2,000 V to 2,000 V) for the ±2 kV range mode.

4) The values given are for when the measured potential is ±200 V or less in the ±1 kV range mode and ±400 V or less in the ±2 kV range mode.

If the measured potentials are outside these values, the values will be equal to the displayed values ±5 %. 5) The values given are for when the measured potential is ±200 V or less in the ±1 kV range mode and ±400 V or less in the ±2 kV range mode. If the measured potentials are outside these values, the values will be 0.5 %/°C of the displayed values.

6) In order to satisfy the linearity specifications for the analog output, do not use the judgment output.

MEASURE-MENT SENSORS

SIMPLE WIRE-SAVING UNITS

WIRE-SAVING SYSTEMS

1214

FIBER SENSORS

I/O CIRCUIT AND WIRING DIAGRAMS LASER SENSORS

FIBER SENSORS

PHOTO-ELECTRIC SENSORS

MICRO

PHOTO-ELECTRIC SENSORS

AREA SENSORS

LIGHT CURTAINS / SAFETY

COMPONENTS

PRESSURE /

SENSORS

INDUCTIVE PROXIMITY SENSORS

PARTICULAR

SENSORS

SENSOR OPTIONS

SIMPLE WIRE-SAVING UNITS


WIRE-SAVING SYSTEMS

PLC


HUMAN MACHINE CONSUMPTION VISUALIZATION COMPONENTS

FA COMPONENTS

Electrosta Sen:

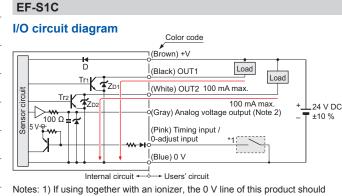


- be connected to the ionizer ground. In addition, the metal parts of the sensor head (EF-S1HS) are connected to the 0 V line, so it should be insulated during installation.
- 2) In case of using the analog voltage output, connect a device having a input impedance of $1M\Omega$ or more. Further, the analog voltage output does not incorporate a short-circuit protection circuit.
 - Do not connect it directly to a power supply or a capacitive load.



Symbols ... D: Reverse supply polarity protection diode ZD1, ZD2: Surge absorption zener diode Tr1, Tr2 : NPN output transistor


SENSING CHARACTERISTICS (TYPICAL)






<Points to note when using analog output> Because the 0 V lines for judgment output and analog voltage output are common, the analog voltage output may vary depending on the load current. In order to satisfy the linearity specifications for the analog voltage output, do not use the iudament output.


*Connector for controller (CN-EP1) pin position



EF-S1HS MACHINE VISION SYSTEMS Measurement range - field of measurement CURING 0 40 amount of potential Measurement range from sensor (mm in) Measurement range L (mm ▶ ø23 ø0.906 30 ø30 ø1.181 20 0.787 20 ø112 ø4.409 Selection Guide 40 1.575 10 ø200 Static Removers ment accuracy. Field of measurement (mm in) Cleaning Box 0 0 40 80 3.150 120 160 200 Pulse Air-gun - Field of measurement ø (mm in) surrounding objects. Installation tolerance -**Display value tolerance characteristics** Angular deviation ① Angular deviation 2 EF-S1 6 surrounding environment. I = 8 mm 0.315 inL = 20 mm (L = 40 mm) 4 0 0 Display value tolerance (%)--(%) tolerance (%) 2 tolerance (0 -2 -Directio -Direction +Direction value . value +Direction L = 8 mm L = 8 mm-2 Ð -3 -3 θ Display = 20 mm L = 20 mm-4 _4 = 40 mm 40 mm L+α

-6+ -0.6 0.4 -0.4 -0.2 Ó 0.2 0.6 Installation tolerance a (mm in) Note: If the installation tolerance is greater than 0.5 mm 0.020 in, change the measurement range setting at the controller.

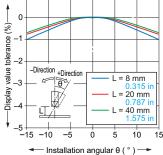

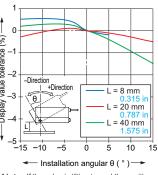

Note: If the value is tilting toward the positive side, the enclosure is causing interference, so if L = 8 mm 0.315 in, there will be no graph display at 5 degrees or higher.

This product is not an instrument for measuring the absolute

This product measures the electric field. Thus, the presence of objects other than the object to be measured that disturb the electric field in the measurement area (see left) or around the sensor head will affect measure-

The closer the measurement distance, the less affected by

For accurate measurement, install the sensor head considering measurement distance, measurement area and the

PRECAUTIONS FOR PROPER USE

• Never use this product as a sensing device for personnel protection.



 In case of using sensing devices for personnel protection, use products which meet laws and standards, such as OSHA, ANSI or IEC etc., for personnel protection applicable in each region or country.

- The sensor head is manufactured according to specifications that are complete for use in combination with the optional exclusive controller. Be sure to use it together with the exclusive controller.
- Do not touch the sensor head and surrounding parts. If this is not observed, it may cause measurement accuracy to drop.
- The metal parts of the sensor head are connected to the 0V line of the exclusive controller power supply, so it should be insulated during use.
- Do not use with a plus ground.

Mounting

Sensor head

- Do not let dust stick to the measurement unit. When dust has adhered to the measurement unit and its surroundings, it may interfere with proper measurement. If dust has adhered to the measuring unit, blow it off using an air blower, etc.
- When fittings are charged, it affects the measurement accuracy, so use after grounding the fittings. However, the metal part of the case must be insulated.
- This product has higher sensitivity when used in the measurement distance of 21 to 100 mm 0.827 to 3.937 in compared to when used in the measurement distance of 8 to 20.5 mm 0.315 to 0.807 in, thus it becomes more susceptible to disturbance noise. Check the usage environment before using this product.

DIMENSIONS (Unit: mm in)

EF-S1HS Sensor head 26.7 Sensing 22.8 part 12.2 25.4 58 Power indicator (Green) 2-ø3 5 ø0 13 3 mounting holes ŧ ø3.2 ø0.126 cable, 5 m 16.404 ft long 86 3.3 0 130 CN-EP1 12 18 Metal (0 V) + 16 +


Refer to p.1501 for general precautions.

Wiring

- Make sure that the power supply is off while wiring.
- If power is supplied from a commercial switching regulator, ensure that the frame ground (F.G.) terminal of the power supply is connected to an actual ground.
- In case noise generating equipment (switching regulator, inverter motor, etc.) is used in the vicinity of this product, connect the frame ground (F.G.) terminal of the equipment to an actual ground.
- Do not run the wires together with high-voltage lines or power lines or put them in the same raceway. This can cause malfunction due to induction.
- A thin cable of 0.09 mm² is employed for the sensor head. Note that pulling the cable with force may break the cable.
- · Cannot extend the cable of the sensor head.
- Make sure that stress is not applied directly to the sensor head cable joint.
- Extension up to total 10m 32.81 ft is possible with 0.3mm², or more, cable. However, in order to reduce noise, make the wiring as short as possible.

Others

- Do not use during the initial transient time (3 sec.) after the power supply is switched on.
- In order for stable sensing to be carried out, wait for 10 min. after turning on the power before use.
- Do not use in places where there are strong electric fields apart from those for the object being measured.
- Do not use in strong magnetic fields.

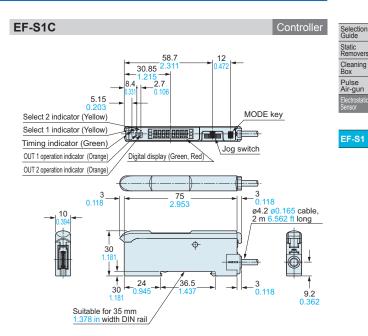

The CAD data in the dimensions can be downloaded from our website.

FIBER SENSORS

LASER SENSORS

PHOTO-ELECTRIC SENSORS

MICRO PHOTO-ELECTRIC SENSORS

AREA SENSORS

LIGHT CURTAINS / SAFETY COMPONENTS

PRESSURE

FLOW SENSORS

INDUCTIVE PROXIMITY SENSORS

PARTICULAR

USE SENSORS

SENSOR OPTIONS

SIMPLE WIRE-SAVING UNITS

WIRE-SAVING SYSTEMS

MEASURE

MENT SENSORS

LASER MARKERS