imall

Chipsmall Limited consists of a professional team with an average of over 10 year of expertise in the distribution of electronic components. Based in Hongkong, we have already established firm and mutual-benefit business relationships with customers from, Europe, America and south Asia, supplying obsolete and hard-to-find components to meet their specific needs.

With the principle of "Quality Parts, Customers Priority, Honest Operation, and Considerate Service", our business mainly focus on the distribution of electronic components. Line cards we deal with include Microchip, ALPS, ROHM, Xilinx, Pulse, ON, Everlight and Freescale. Main products comprise IC, Modules, Potentiometer, IC Socket, Relay, Connector. Our parts cover such applications as commercial, industrial, and automotives areas.

We are looking forward to setting up business relationship with you and hope to provide you with the best service and solution. Let us make a better world for our industry!



Contact us

Tel: +86-755-8981 8866 Fax: +86-755-8427 6832 Email & Skype: info@chipsmall.com Web: www.chipsmall.com Address: A1208, Overseas Decoration Building, #122 Zhenhua RD., Futian, Shenzhen, China



Energy Management Energy Analyzer Type EM112



- Single phase energy analyzer
- Class 1 (kWh) according to EN62053-21
- Class B (kWh) according to EN50470-3
- Accuracy ±0.5% RDG (current/voltage)
- Direct current measurement up to 100AAC
- · Backlit LCD display (3x 8-digit) with integrated touch key-pad
- Energy readout on display: 8 digit
- · Variable readout on display: 4 digit
- Energy measurement: kWh and kvarh (imported/exported); kWh+ by 2 tariffs
- System variables, kW, kvar, V, A, PF, Hz, kWdmd, kWdmd peak
- · Self power supply
- Dimensions: 2-DIN module
- Protection degree (front): IP51
- Pulse output (optional, by open collector PNP)
- RS485 Modbus port (optional)
- M-bus port (optional)
- Digital input (for tariff management)
- Easy connection or wrong current direction detection
- Certified according to MID Directive (option PF only): see
 "how to order" below

Product description

Single-phase energy analyzer with backlit LCD display with integrated touch keypad. Particularly indicated for active energy metering and for cost allocation in applications up to 100 A (direct connection), with dual tariff management availability. It can measure imported and exported energy or be programmed to consider only the imported one. Housing for DIN-rail mounting, with IP51 front degree protection. The analyzer is optionally provided with pulse output proportional to the active energy being measured, RS485 Modbus port or M-bus port.

Certified according to MID Directive, Module B and Module D of Annex II, for legal metrology relevant to active electrical energy meters (see Annex V, MI003, of MID). Can be used for fiscal (legal) metrology.

How to order EM112-DIN AVO 1 X O1 PF B

Model	
Range code	
System	
Power supply	
Output	
Option	
Measurement ——	

Type Selection

Range code System		Pow	Power supply		Output		
AV0: AV1:	230VLN AC - 5(100)A (Direct connection) 120VLN AC - 5(100)A (Direct connection)	1:	1-phase 2-wire	X:	Self power supply -30% +20% of the rated measuring input voltage, 50Hz	O1: S1: M1:	pulse output RS485 Modbus port M-bus port
Optic	'n			Моэ	surement		
-				Mea	Surement		
PF:	Certified according to N fiscal (legal) metrology.		ective. Can be used for	A:	The power is always in positive imported and n the total energy meter i	egative	e exported power) and

CARLO GAVAZZI



STANDARD

Not certified according to MID Directive. Cannot be used for fiscal (legal) metrology.

How to order EM112-DIN AV0 1 X O1 X

L

Model — Range code — System — Power supply – Output —

Option

Type Selection

Rang	e code	Syst	em	Pow	er supply	Outp	ut
AV0: AV1:	(Direct connection)	1:	1-phase 2-wire	X :	Self power supply -30% +20% of the rated measuring input voltage, 45 to 65Hz	O1: S1: M1:	pulse output RS485 Modbus port M-bus port

Option

X: none

Input specifications

Rated Inputs		Memory energy storage	
Current type	1-phase loads, direct	Energy	10^10 cycles. Energy value
	connection		is saved every time the less
Current range	5(100)A		significant digit increases.
Nominal voltage	230VLN AC (AV0 option),	Programming parameters	10^10 cycles. When a
A 001/2001	120 VLN (AV1 option)		parameter is modified, only
Accuracy (@25°C ±5°C, R.H. ≤60%,			the relevant memory cell is overwritten
(@25 C ±5 C, R.H. ≤00 %, 45 to 65 Hz)		LEDs	Flashing red light pulses
AV1	Imin=0.25A; Ib: 5A, Imax:	2203	according to EN50470-3,
	100A; Un: 120VLN -30%		EN62052-11, 1000 imp./
	+30%		kWh (min. period: 90ms,
AV0	Imin=0.25A; lb: 5A, Imax:		max. frequency: 11 Hz)
	100A; Un: 230VLN -30%		Fix orange light: wrong
	+20%		current direction (only with
Energies			PFB option or with "B"
Active energy	Class 1 according to		measurement selection in
	EN62053-21		case of X option)
	Class B (kWh) according to	Current overloads	
	EN50470-3	Continuous	100A, @ 50Hz
Reactive energy	Class 2 according to	For 10ms	3000 A
Otherst and a summaria	EN62053-23	Voltage Overloads	
Start-up current:	40mA (AV0, AV1), positive	Continuous	1.2 Un
	or negative Self-consumption is not	For 500ms	2 Un
	measured.	Input impedance	
Start-up voltage	84VLN (AV1), 161VLN	Voltage input 230VL-N	1.2Mohm
otart up voltage	(AV0)	Voltage input 120VL-N	1.2Mohm
Resolution	Display/serial	Current inputs: 5(100) A	< 1.25VA
	communication		
Current	0.1/0.001 A		
Voltage	0.1/0.1 V		
Power	0.01 kW or kVar/ 0.1 kW or		
_	kvar		
Frequency	0.1 Hz/0.1Hz		
	0.01/0.001		
Energies (positive)	0.01 kWh or kvarh / 0.1 kWh or kvarh		
Energies (negative)	0.01 kWh or kvarh / 0.1		
	kWh or kvarh		
Energy additional errors			
Influence quantities	According to EN62053-21		
Temperature drift	≤200ppm/°C		
Sampling rate	4096 samples/s @ 50Hz		
	4096 samples/s @ 60Hz		
Display and touch key-pad			
Туре	Backlit LCD, 3 rows by		
	8-digit each, h 5 mm		
Read-out	Energy: 8 digit. Variables: 4		
	digit		
Touch key	2 (Enter/DOWN and UP).		
Max. and Min. indication	May 00 000 000		
Energies	Max. 99 999 999		
Variables	Min. 0.01 Max. 9999		
Variables	Max. 9999 Min. 0.01		

Digital input specifications

Digital inputs

Function

Number of inputs Contact measurement voltage Input impedance Contact resistance

Free of voltage contact Tariff management (switch between 7-8) 1 5 ∨ ≤ 1kohm ≥ 1kohm, close contact 100kohm, open contact Overload

In case a voltage is erroneously applied to the digital input, the input is not damaged up to 30 V ac/dc.

Output specifications

RS485 serial port	RS485 by screw	Other	Available functions: wild
	connection.		card, header, initialisation
Function	For communication		SND_NKE, and req_udr
	of measured data,		management. Management
	programming parameters		of primary address
Protocol	Modbus RTU (slave		modification via M-bus.
	function)		VIF, VIFE, DIF and DIFE:
Baud rate	9.6, 19.2, 38.4, 57.6, 115.2		see protocol
	kbaud, even or no parity,	Static output	
Address	1 to 247 (default: 1)	Purpose	For pulse output
Driver input capability	1/8 unit load. Maximum 247	i dipodo	proportional to the active
Driver input supublicy	transceivers on the same		energy (kWh)
	bus.	Pulse rate	Selectable in multiple of
Data refresh time	1s		100
Read command	50 words available in 1		Max 500 or 2000
	read command		pulses/kWh according to
Rx/Tx indication			pulse ON duration
RX/1X Indication	Rx segment on display	Dulas ON duration	•
	is shown when a valid	Pulse ON duration	Selectable: 30ms or
	Modbus command is sent		100 ms according to
	to that specific meter;		EN62052-31
	Tx segment on display	Output type	open collector PNP
	is shown when a valid	Load	V _{on} 1 V dc max. 100mA
	Modbus reply is sent back		V _{OFF} 80 V dc max.
	to the master		
M-bus port	M-bus by screw		
	connection.		
Function	For communication of		
	measured data		
Protocol	M-bus according to		
	EN13757-3		
Baud rate	0.3, 2.4, 9.6 kbaud		
Meters in the M-bus network	250		
Primary address	Selectable		
Secondary address	Univocally defined in each		
,	unit		
Secondary address range	from 7000 0000 to		
,	7999 9999		

General specifications

Operating temperature	-25 to +65 °C, indoor,	Housing	
	(R.H. from 0 to 90% non-	Dimensions (WxHxD)	35 x 63 x 90 mm
	condensing @ 40°C)	Material	PTB, self-extinguishing: UL
Storage temperature	-30°C to +80°C (R.H. <	a	94 V-0
	90% non-condensing @	Sealing covers	Included
	40°C)	Mounting	DIN-rail
Overvoltage category	Cat. III	Protection degree	
Insulation (for 1 minute)	4000 VAC RMS between	Front	IP51
	measuring inputs and	Screw terminals (cable inputs)	IP20
	digital/serial output (see table) 4000 VAC RMS	Weight	Approx. 160 g (packing included)
Dielectric strength	4000 VAC RMS for 1 minute		
EMC	According to EN62052-11		
Standard compliance			
Safety	EN62052-11		
Metrology	EN62053-21, EN50470-3		
Approvals	CE, MID (PF option only), UL (AV1 model only)		
Connections			
Cable cross-section area	Measuring inputs: max. 25 mm ² , min. 5 mm ² with/ without metallic cable ferrule; Max. screw tightening torque: 2.8 Nm		
Other terminals	1.5 mm², Min./Max. screws tightening torque: 0.5 Nm		

Power supply specifications


Self power supply		Power consumption	≤ 1W, ≤ 8VA
AV0	230VAC VL-N, -30% +20%		
	45-65Hz		
AV1	120VAC VL-N, -30% +30%		
	45-65Hz		

Insulation (for 1 minute) between inputs and outputs


	Measuring input	Digital or serial output	Digital input
Measuring input	-	4 kV	4 kV
Digital or serial output	4 kV	-	0 kV
Digital input	4 kV	0 kV	-



Accuracy (according to EN50470-3 and EN62053-23)

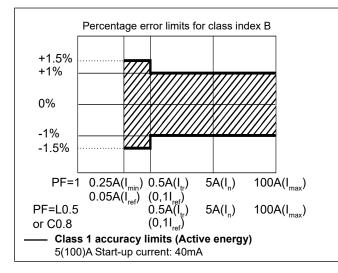

kWh, accuracy (RDG) depending on the current

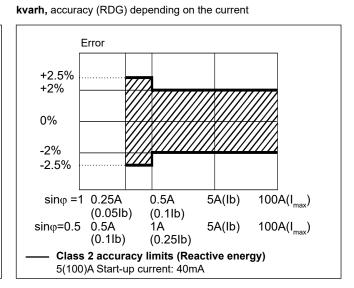

MID compliance (PF option only)

Accuracy	$0.9 \text{ Un} \le U \le 1.1 \text{ Un}; 0.98 \text{ fn} \le f \le 1.02 \text{ fn}; \text{ fn}: 50 \text{ Hz};$ $\cos\varphi: 0.5$ inductive to 0.8 capacitive. Class B Considering listed Ib or In values
Operating temperature	-25 to +55°C (-13°F to 131°F) (R.H. from 0 to 90% non-condensing @ 40°C)
EMC compliance	E2
Mechanical compliance	M2

Display pages

No	1 st row	2 nd row	3 rd row	"Full" mode	"Easy" mode	Note
0	kWh+ (imported)		kW	X	Х	In PF version (MID) this is the only certified energy meter. In PFA version and in X version with Measurement menu set to "A", this is considering the total energy without considering the current direction.
1	kWh- (exported)		kW	Х	Х	In PFB version and in X version with Measurement menu set to "B"
2	kWh+ (imported)		V	Х	Х	
3	kWh+ (imported)		A	Х	Х	
4	kWh+ (imported)		PF	Х		
5	kWh+ (imported)		Hz	Х		
6	kvarh+ (imported)		kvar	Х		In PFA version and in X version with Measurement menu set to "A", this is considering the total positive reactive energy without considering the current direction.
7	kvarh- (exported)		kvar	Х		In PFB version and in X version with Measurement menu set to "B"
8	kWh+ (imported)	kWdmd peak	kWdmd	X		
9	kWh (t1)	"t1"	kW	Х		Only relevant to kWh+, with Tariff menu set to ON.
10	kWh (t2)	"t2"	kW	X		Only relevant to kWh+, with Tariff menu set to ON.

List of available menus

Menu name and desc	ription	Range	Default setting
PASS	Password request	From 0000 to 9999	0000
nPASS	New password	From 0000 to 9999	0000
Measure	Measurement type (A=easy connection; B=bidirectional, imported and exported energy). Not available in PFA and PFB versions (MID)	A; b	A
P int	Integration time for Wdmd calculation	1 to 30 min	1
Mode	Selection of complete or simplified set of variables on display	Full or Easy	Full
Tariff	Tariff enabling	Yes/No	No
Home	Home page selection (default page at power-on and after 120 s time-out from other pages). Not available in PFA and PFB versions (MID).	0 to 9	0
PULSE (O1 option)	Selection of pulse ON duration	30 or 100 ms	30
	Selection of the pulse weight (multiples of 100 pulses/kWh)	100 to 500 (if duration is 100ms) 100 to 2000 (if 30 ms)	100
Address (S1 option)	Modbus serial address	1 to 247	01
Kbaud (S1)	Modbus baud rate	9.6; 19.2; 38.4; 57.6, 115.2 kbps	9.6
ParltY (S1)	Modbus parity	No/even	No
Prl Add (M1 option)	M-bus primary address	1 to 250	0
Kbaud (M1)	M-bus baud rate	0.3; 2.4; 9.6 kbps	2.4
RESET Allow the reset of tariff meters and W dmd peak (kWh/kvarh meter reset available only via serial communication)		Yes/No	No
End	Exit to measuring mode		

Note: after the confirmation of a new parameter value, the value is stored in the memory without the need to exit the programming mode.

Additional available information on the display (*)

Page	Code	Description
YEAr	InFO 1	Year of manufacture
SErIAL n	InFO 2	Serial number, corresponds to the one indicated on the front print
rEVISIon	InFO 3	Firmware revision – XY.nn:
PuLS Led	InFO 4	Front LED pulse weight
MEASurE	P3	Measurement type (only X option)
P int	P4	Requested average power calculation interval
ModE	P5	Display mode
tArIFF	P6	Enabling tariff management and any current tariff
НоМЕ	P7	Measurement page set as home page (only X option)
Pages specific to the	S1 version	
AddrESS	P10	Modbus address
bAUd	P11	Baud rate
PArITY	P12	Parity
StoP bit	P12–2	Stop bit
Pages specific to the	O1 version	
PULSE	P8	Duration
PuL rAtE	P8–2	Pulse weight
Pages specific to the	M1 version	
Pr I Add	Р9	M-Bus primary address
bAUd	P11	Baud rate
SEC Add	InFO 5	M-Bus secondary address, univocal and set during production


(*) can be reached by pressing simultaneously the 2 touch keys


Fig.4


R


GND Out /dc

Wiring diagrams

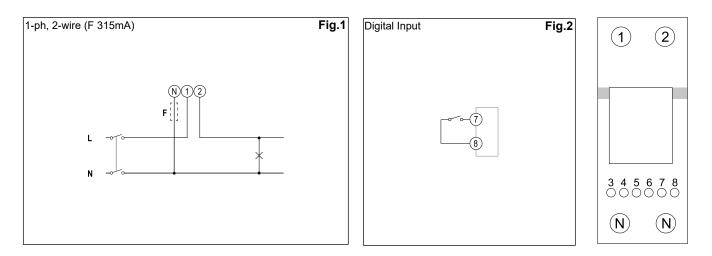

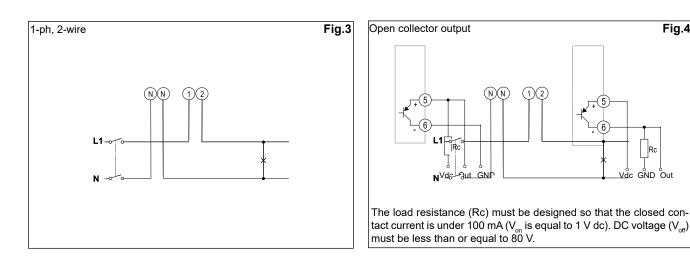

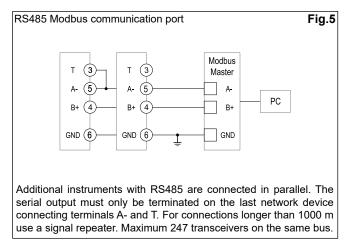

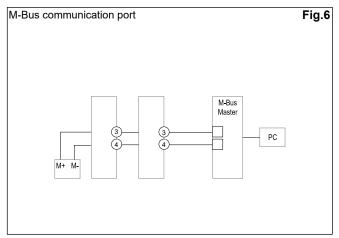


(N)

(1)(2)



Front panel description

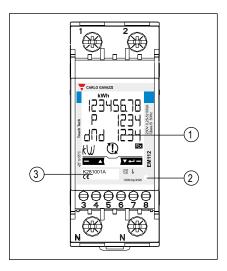

- Display Backlit LCD display with touch key-pad. Right key: enter, down Left key: up
- 2. LED LED proportional to kWh reading
- 3. Serial number and MID data Area reserved to serial number and MID-relevant data in PF versions

Dimensions (mm)

