

Chipsmall Limited consists of a professional team with an average of over 10 year of expertise in the distribution of electronic components. Based in Hongkong, we have already established firm and mutual-benefit business relationships with customers from, Europe, America and south Asia, supplying obsolete and hard-to-find components to meet their specific needs.

With the principle of "Quality Parts, Customers Priority, Honest Operation, and Considerate Service", our business mainly focus on the distribution of electronic components. Line cards we deal with include Microchip, ALPS, ROHM, Xilinx, Pulse, ON, Everlight and Freescale. Main products comprise IC, Modules, Potentiometer, IC Socket, Relay, Connector. Our parts cover such applications as commercial, industrial, and automotives areas.

We are looking forward to setting up business relationship with you and hope to provide you with the best service and solution. Let us make a better world for our industry!



# Contact us

Tel: +86-755-8981 8866 Fax: +86-755-8427 6832

Email & Skype: info@chipsmall.com Web: www.chipsmall.com

Address: A1208, Overseas Decoration Building, #122 Zhenhua RD., Futian, Shenzhen, China








# **Panasonic**

# Pulse AC Method **Area Ionizer**

**ER-X** SERIES






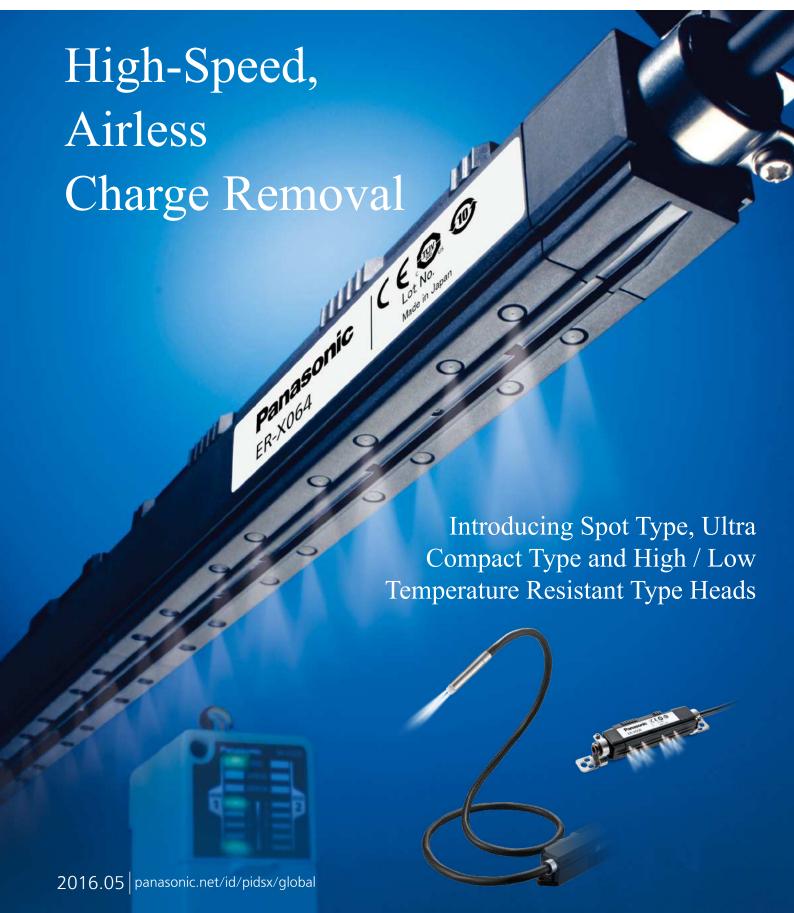

# Three charge removal modes for diverse application coverage

The **ER-X** series offers an airless charge removal capability to eliminate the need for compressed air in addition to low pressure and high speed compressed air based modes. Furthermore, it supports dual-head configurations for expanded application coverage.

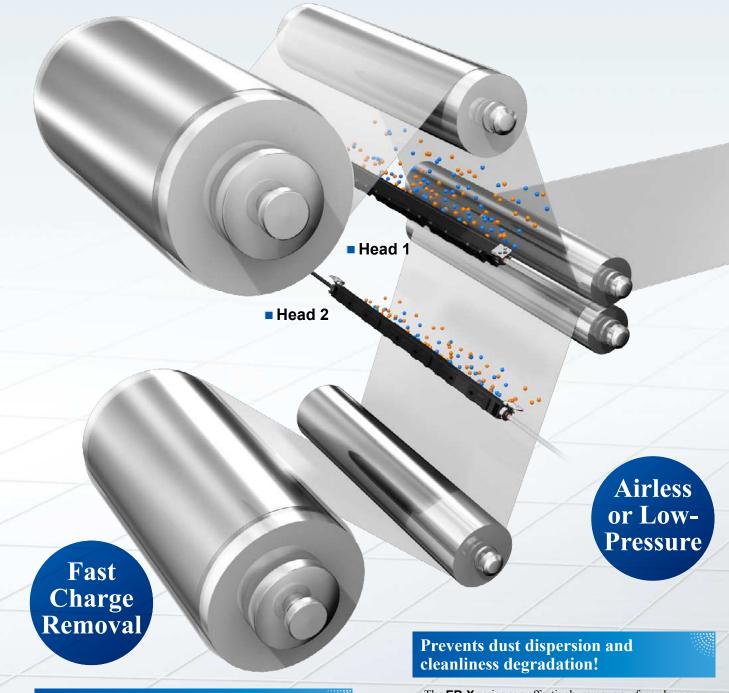

# Massive ion discharge when using air reduces charge removal time.

By applying a compressed air source, the ion volume increases providing an improved tact time for substrate ionization. This makes the **ER-X** suitable for applications such as electronic paper and thin film solar cells, where charge removal time is directly linked to productivity.

The **ER-X** series can effectively remove surface charges with an air pressure of less than 0.05 MPa. With the advantage of minimal dust dispersion, it is suitable for charge removal in semiconductor, FPD (mobile panel), and other applications that require high degree of cleanliness. The presence of air also helps prevent adhesion of dust to the discharge needles, requiring less cleaning than in the airless charge removal mode.


# ER-X SERIES

# Pulse AC method for faster charge removal

The **ER-X** series has adopted the pulse AC method that alternately applies positive and negative voltages to each discharge needle. This enables generation and discharge of a large amount of ions, resulting in faster charge removal. Select from eight pulse frequencies according to your application, from 100 Hz for charge removal on nearby or moving workpieces to 1 Hz for charge removal on far-away workpieces or in a threedimensional space.

# Charge removal time characteristics (TYPICAL)

Measured at a charge removal distance of 100 mm 3.937 in using a 150 × 150 mm  $5.906\times5.906$  in CPM (at center of CPM).

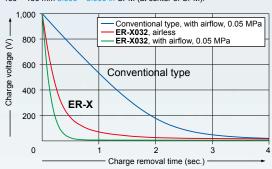

### Automatic ion balance control

The **ER-X** series provides an automatic ion balance control mechanism that senses the amount of ions being generated (which changes according to environmental factors) and compensate for this deviation in the controller, thus maintaining a highly stable ion balance as an original operator setting.

#### **Pulse AC method**

Positive ion generation

Example of variable discharge frequency / ion balance

H

Negative ion generation

Negative ion generation

Variable ion balance

# Prevention of part feeder clogging

### High-speed charge removal on FPCs



# Bar type head


# Helping save time with high-speed charge removal made possible by high ion volume



# Applications



Charge removal and dust removal while separating TAB protective film



Charge removal of molded plastic components on a conveyor belt



Charge removal and dust removal of digital camera cases on a conveyor belt

# Super-compact slim head

By thoroughly redesigning the discharge needle, we have created a super-compact slim head that combines high-speed charge removal\*1 with a maintenance-saving design\*2. The **ER-X** series can be embedded in, or retrofitted onto, equipment that did not provide enough space for antistatic measures in the past.

- \*1 Pulse AC method with built-in air tubes (max. pressure 0.5 MPa)
- \*2 Discharge needle air barrier structure, discharge needle unit for simple need replacement




# Flat discharge surface for easy cleaning

The **ER-X** series heads have a flat discharge face, allowing effortless cleaning of the discharge needles and air outlets by simply brushing along the groove provided.




### Discharge needle air barrier design for reduced contamination

A barrier of clean air around the discharge needle keeps foreign matter from adhering to it, preventing degraded performance. Additionally, by using separate air sources for the discharge needle barrier and ion transport, the **ER-X** series keeps discharge from becoming unstable due to pressure concentration, allowing the device to efficiently generate and transport ions.









# Carefully designed to prevent contamination in manufacturing processes

In consideration of the manufacturing process (secondary cells etc.), the **ER-X** series heads neither use copper nor plate processing. This minimizes the risk of contamination with foreign substances.

# Discharge needle unit for simple needle replacement

The removable discharge needle unit (including a set of four needles) substantially simplifies maintenance. To remove the unit, just slide it toward both ends as indicated by the arrows.

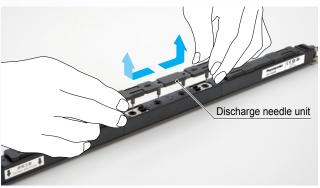

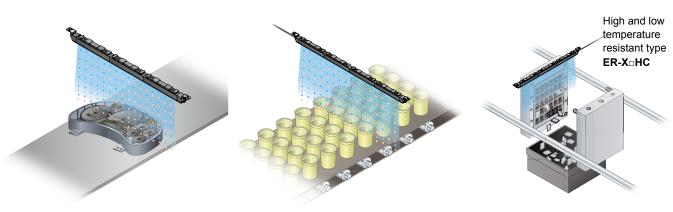

Removing dust during instrument panel assembly

Removing dust during food product cup transport

Preventing adhesion of molded parts to molds

# Spot type head

# Fastest charge removal\* in the industry with ER-X area ionizer with spot type head

company as of March 2016.

#### **ER-X001**

Effective charge removal width: 50 mm 1.969 in approx.



# 0.3 sec. or less\*1 fastest charge removal achieved with pulse AC method spot type ionizer\*2.

The pulse AC method enables the ER-X001 to generate and discharge a large amount of ions, which makes charge removal faster. Furthermore, as a spot type ionizer, it achieves the fastest charge removal of 0.3 sec. or less\*2 ( $\pm 1,000 \text{ V} \rightarrow \pm 100 \text{ V}$ ).

\*1: Spot diameter of ø15 mm ø0.591 in or less \*2: Based on research conducted by our company as of March 2016.

Supports airless and low-pressure charge removal, which means charge removal is possible without blowing away tiny work pieces.

Free head placement is possible thanks to flexible cable with internal air tube.

# Air supply port angle can be adjusted.

■ER-X001 high-voltage unit



Joint for ø6 mm ø0.236 in air tube 360° angle adjustment

# **Applications**



Preventing electrostatic damage during bonding


High-speed charge removal on a taping machine

Airless charge removal of minute components on a conveyor belt



# Dual head configuration for enhanced charge area and layout expansion



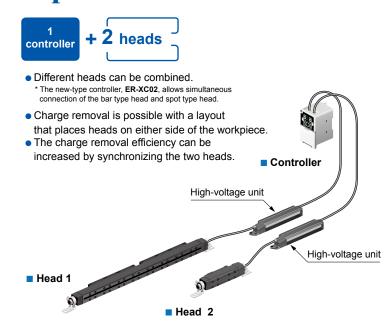

## **Equipped with charging function**

The charging function is useful when charging paper or parts for static electricity adsorption transport.

Notes: 1) Head 2 performs the ordinary charge neutralizing operation.

 The ER-X001 cannot use the charging function. (Discharge operation stops.)

# All-in-one model equipped with various functions for optimal removal of charge

#### Level meter indicator (green)

Indicates static buildup around the head or the amount of ion generated from the head.

#### Discharge control switch

Turn ion generation on and off.

#### **SET UP button**

Determines the settings of discharge frequency and ion balance.

#### **Discharge control input**

Turn ion generation on and off from an external device.

#### Alarm output, error output

Report maintenance timing and malfunctions to an external device.

#### Discharge indicator (green)

Lights up during discharge

#### **CHECK indicator (orange)**

Lights up when dirt, wear, etc. of the discharge needle is detected.

#### **ERROR** indicator (red)

Lights up when abnormal discharge is detected.

#### Discharge frequency setting switch

Select from eight ion generation frequencies ranging from 100 Hz to 1 Hz according to your application. Head 1 can be used as a charger when the discharge frequency setting switch for Head 1 is set to "+ Charge" or "- Charge."

Notes: 1) Head 2 performs the ordinary charge removal operation.

 The ER-X001 cannot use the charging function. (Discharge operation stops.)

#### Ion balance setting switch

Adjust the ion balance to any of 15 levels according to the strength of the charge on the workpieces.

#### Various setting switch

#### • Check level changeover switch

Set the maintenance notification level to "standard" or "high-sensitivity."

#### • Ion balance control switch

Enable or disable the ion balance auto control function.

#### · Indicator changeover switch

Set the level meter indicator display mode to "charge strength display" or "ion generation volume display."

#### • 2 heads control switch

Set the ion generation timing for the two heads to "synchronize" or "inverse."

#### • Error output changeover switch

Set the error output condition to "generation of abnormal discharge" or "generation of abnormal discharge + discharge stop setting ON."

### ORDER GUIDE

#### **Heads** Head connection cable is not supplied with the head. Please order it separately.

	Туре	Appearance	Charge removal time (±1,000 V→±100 V)	lon balance	Effective charge removal width	Model No.
Spot type			0.3 second or less (Note 1), 0.5 second or less (Note 2)		50 mm 1.969 in approx.	ER-X001 (Note 4)
					80 mm 3.150 in	ER-X008 (Note 4)
	High and low temperature resistant	Street All And			approx.	NEW ER-X008HC (Note 5)
		High and low demperature resistant  High and low demperature resistant  High and low demperature resistant			160 mm 6.299 in	ER-X016
	High and low temperature resistant			±30 V or less	арргох.	NEW ER-X016HC (Note 5)
Bar				(Note 2, 3)	320 mm 12.598 in	ER-X032
type	High and low temperature resistant				арргох.	NEW ER-X032HC (Note 5)
					480 mm 18.898 in	ER-X048
	High and low temperature resistant				approx.	ER-X048HC (Note 5)
					640mm 25.197 in	ER-X064
	High and low temperature resistant	CHANNEL COMPANY			арргох.	NEW ER-X064HC (Note 5)

Notes: 1) Typical value in condition of discharge distance 50 mm 1.969 in, center of the product, discharge frequency 50 Hz and air supply 60 l/min.(0.3 MPa).

<sup>2)</sup> Typical value in condition of discharge distance 100 mm 3.937 in (ER-X001: 50 mm 1.969 in), center of the product, discharge frequency 50 Hz (ER-X□HC: 30 Hz) and no air supply.

<sup>3)</sup> Ion balance refers to the average value of plus and minus. The specification value is the typical one in condition used when ambient temperature change is less than ±10 °C, ion balance is set after 30 minutes from the discharge start, the ion balance control function is set ON.

<sup>4)</sup> The ER-X001 and ER-X008 must be combined with the new-type ER-XC02 controller (produced from April 2014 on). For the Identification of previous-type and new-type controllers and for the combination with the head, refer to p.17.

<sup>5)</sup> The ER-XciHC high / low temperature resistant type head can be used under temperatures from -60 to +200 °C -76 to +392 °F. Be sure to use this head in combination with the new-type controller, ER-XC02 (produced from April 2016 on).

For the Identification of previous-type and new-type controllers and for the combination with the head, refer to p.17.

### ORDER GUIDE

#### Controller Please order power cable or AC adapter separately.

Туре	Appearance	Model No.	Number of heads connected	Output
Standard type		ER-XC02	Max. 2 units	PhotoMOS relay

# Head connection cable Head connection cable is not supplied with the head. Please order it separately.

Appearance Model No.		Description		
	ER-XCCJ2H	Length: 2 m 6.562 ft, Net weight: 120 g approx.		
	ER-XCCJ5H	Length: 5 m 16.404 ft, Net weight: 290 g approx.	Cabtyre cable with both connector	
	ER-XCCJ10H (Note)	Length: 10 m 32.808 ft, Net weight: 560 g approx.		

Note: Cannot be used with the high and low temperature resistant type head ER-X□HC.

# OPTIONS

Designation	Model No.	Description		
Power cable	ER-XCC2	Length: 2 m 6.562 ft, Net weight: 80 g approx.	0.15 mm² 10-core cabtyre cable with connector Cable outer	
Power cable	ER-XCC5	Length: 5 m 16.404 ft, Net weight: 190 g approx.	diameter: ø5.3 mm ø0.209 in	
AC adapter	ER-XAPS-EX	IN: 100-240 V AC, 50 / 60 Hz OUT: 24 V DC, 1.5 A Ambient temperature: 0 to +40 °C +	-32 to +104 °F	
AC adapter	ER-XAPS	Ground wire: 3.7 m 12.139 ft AC cable: 1 pc., Cable length 1.8 m 5.906 ft, Rating 125 V AC (Note 1 Wiring connector terminals: 6 pcs.		
AC cable CN-ACCN-C2		AC cable (conforming to CCC), Length: 2 m 6.562 ft		
AC cable	CN-ACKR-C2	AC cable (conforming to KTL), Length: 2 m 6.562 ft		
	ER-XANT	For <b>ER-X016/X032/X048/X064</b> . (Note 2) Unit with replacement tungsten needles: 1 pc.		
	ER-XANT1	For <b>ER-X001</b> . Unit with replacement tungsten needles: 1 pc.		
Discharge needle unit	ER-XANT2	For <b>ER-X008</b> . (Note 2) Unit with replacement tungsten needles: 1 pc.		
	NEW ER-XANTHC	For ER-X016HC/X032HC/X048HC/X064HC. Unit with replacement tungsten needles: 1 pc.		
	NEW ER-XANT2HC	For ER-X008HC. Unit with replacement tungsten needles: 1 pc.		
Discharge part protective cover  ER-XACVR  For ER-X016/X032/X048/X064. (Note Enables to prevent electric shock by m 2 pcs per set. (Note 3) Material: Polycarbonate, Weight: 20 g * No effect on charge removal capacity discharge part protection cover		y mounting to the heads. ) g approx. (1 set)		

Notes: 1) Rating of the AC cable is 125 V AC. If the voltage used exceeds 125 V AC, prepare a proper cable by yourself or purchase our optional cable CN-ACCN-C2 or CN-ACKR-C2. And, the AC cable is not enclosed with ER-XAPS-EX.

- 2) Cannot be used with the high and low temperature resistanttype head ER-X□HC.
- 3) The number of set(s) you need depends on the head model No.

Model No.	ER-X016	ER-X032	ER-X048	ER-X064
No. of set (2 pcs per set)	1 set	2 sets	3 sets	4 sets

#### **Power cable**

• ER-XCC



#### **AC** adapter

• ER-XAPS-EX



• ER-XAPS



#### Discharge needle unit

- ER-XANT
- ER-XANTHC




• ER-XANT1



- ER-XANT2
- ER-XANT2HC



## Discharge part protective cover



### **SPECIFICATIONS**

#### **Heads**

Туре	Spot type	Bar type				
Item Model No.	ER-X001	ER-X008	ER-X016	ER-X032	ER-X048	ER-X064
Effective charge removal width	50 mm 1.969 in approx.	80 mm 3.150 in approx.	160 mm 6.299 in approx.	320 mm 12.598 in approx.	480 mm 18.898 in approx.	640 mm 25.197 in approx.
Charge removal time (±1,000 V→±100 V)	0.3 sec. or less (Note 1), 0.5 sec. or less (Note 2)			1 sec. or less (Note 2)	)	
Ion balance			±30 V or les	s (Note 2, 3)		
Discharge method			Pulse AC	method		
Discharge frequency	50 Hz / 20 Hz	50 Hz / 30 Hz / 20 Hz / 10 Hz / 5 Hz / 1 Hz 100 Hz / 70 Hz / 50 Hz / 30 Hz / 20 Hz / 10 Hz / 5 Hz / 1 Hz (Note 4)				Hz (Note 4)
Discharge output voltage		±7,000 V approx.				
Ozone generation			0.01 ppm or	less (Note 2)		
Maximum air pressure			0.5	MPa		
Applicable fluid			Air (dried clea	n air) (Note 5)		
Operating altitude			2,000 m 6561.68	ft or less (Note 6)		
Ambient temperature	0 to +50 °C +32 to +1	122 °F (ER-X001: 0 to	+40 °C +32 to +104 °	F) (No dew condensat	ion), Storage: -10 to +	65 °C +14 to +149 °F
Ambient humidity			35 to 65 % RH, Stor	rage: 35 to 85 % RH		
Vibration resistance	10 to 55 Hz ( <b>ER-X00</b>	<b>11</b> : 10 to 150 Hz) frequ	uency, 0.75 mm 0.030	in double amplitude i	in X, Y and Z direction	s for two hours each
Shock resistance		100 m/s <sup>2</sup> accelera	tion (10 G approx.), ir	X, Y and Z directions	s three times each	
Enclosure grounding method			Floa	ating		
Material Main unit enclosure: PPS, Stainless steal (SUS), Head mounting bracket: Stainless steal (SUS), Discharge needle: PC, PPS, Tu [ER-X001 – Main unit enclosure: Stainless steel (SUS), Head mounting bracket: Stainless steel (SUS), Discharge needle: PFA						
Length of high-voltage cable	1.2 m 3.937 ft	0.5 m 1.640 ft 0.5 m 1.640 ft (Note 4)				
Net weight	370 g approx.	330 g approx.	410 g approx.	530 g approx.	650 g approx.	780 g approx.
Accessory		He	ad mounting bracket	(mounted at the facto	ry)	

Ту	ре	High and low temperature resistant					
Item Model N	o. <b>ER-X008HC</b>	ER-X016HC	ER-X032HC	ER-X048HC	ER-X064HC		
Effective charge removal wid	th 80 mm 3.150 in approx.	160 mm 6.299 in approx.	320 mm 12.598 in approx.	480 mm 18.898 in approx.	640 mm 25.197 in approx.		
Charge removal time (±1,000 V→±100 V)			1 sec. or less (Note 2)				
Ion balance			±30 V or less (Note 2, 3)				
Discharge method			Pulse AC method				
Discharge frequency			30 Hz (Note 8)				
Discharge output voltage			±7,000 V approx.				
Ozone generation		0.01 ppm or less (Note 2)					
Maximum air pressure		0.1 MPa					
Applicable fluid		Air (dried clean air) (Note 5)					
Operating altitude		2,000 m 6561.68 ft or less (Note 6)					
Ambient temperature		Head: -60 to +200 °C -76 to +392 °F (No dew condensation or icing) (Note 9), Storage: -10 to +65 °C +14 to +149 °F High voltage unit: 0 to +50 °C +32 to +122 °F (No dew condensation), Storage: -10 to +65 °C +14 to +149 °F					
Ambient humidity		35 to 65 % RH, Storage: 35 to 85 % RH					
Vibration resistance	10 to 55 Hz	10 to 55 Hz frequency, 0.75 mm 0.030 in double amplitude in X, Y and Z directions for two hours each					
Shock resistance		100 m/s <sup>2</sup> acceleration (10	G approx.), in X, Y and Z	directions three times eac	h		
Enclosure grounding method		Floating					
Material		Main unit enclosure: PPS, Stainless steal (SUS), Head mounting bracket: Stainless steal (SUS), Discharge needle: PC, PPS, Tungsten, Main unit enclosure of high-voltage unit: ABS					
Length of high-voltage cable		Heat-resistant shielded cable, 1.8 m 5.906 ft					
Net weight	Net weight         420 g approx.         490 g approx.         620 g approx.         760 g approx.         900			900 g approx.			
Accessories	ø6 ø0.236	6-4 Air tube joint: 1 pc., Se	eal cap: 1 pc., Head mount	ing bracket (mounted at the	ne factory)		

- Notes: 1) Typical value in condition of discharge distance 50 mm 1.969 in, center of the product, discharge frequency 50 Hz and air supply 60 l/min.(0.3 MPa).

  2) Typical value in condition of discharge distance 100 mm 3.937 in (ER-X001: 50 mm 1.969 in), center of the product, discharge frequency 50 Hz (ER-X□HC: 30 Hz) and no air supply.


  3) Ion balance refers to the average value of plus and minus. The specification value is the typical one in condition used when ambient temperature
  - change is less than ±10 °C, ion balance is set after 30 minutes from the discharge start, the ion balance control function is set ON.
  - 4) The high-voltage cable is also available in lengths of 1 m 3.281 ft and 2 m 6.562 ft. The discharge frequency of 1 m 3.281 ft / 2 m 6.562 ft cables is 50 / 4) The high-voltage cable is also available in lengths of This.261 it and 2 in 0.302 it. The distribution of This.261 it and 2 in 0.302 it. This distribution of This.261 it and 2 in 0.302 it. This distribution of This.261 it and 2 in 0.302 it. This distribution of This.261 it and 2 in 0.302 it. This distribution of This.261 it and 2 in 0.302 it. This distribution of This.261 it and 2 in 0.302 it. This distribution of This.261 it and 2 in 0.302 it. This distribution of This.261 it and 2 in 0.302 it. This distribution of This.261 it and 2 it. This distribution of This.261 it and 2 it. This distribution of This.261 it and 2 it. This distribution of T

  - 8) Set the discharge frequency to 30 Hz. Do not use any other frequency.
  - 9) Discoloration of the head may occur when used under high temperatures, but it does not affect the charge removal performance.

### SPECIFICATIONS

#### Allowable ambient temperature of high and low temperature resistant type head ER-X<sub>□</sub>HC and its installation

When installing, make sure to expose a section measuring 500 mm 19.685 in or more to the normal temperature area as shown below for the protection of the high-voltage unit.



Note: The high and low temperature resistant type ER-X□HC cannot be connected with the ER-XCCJ10H head connection cable (10 m 32.808 ft in length).

#### Controller

	Туре	Controller		
Item	Model No.	ER-XC02		
Number of heads connected		Maximum 2 units		
Supply vol	ltage	24 V DC ±10 %		
Current co	onsumption	450 mA or less when connecting 1 heads, 800 mA or less when connecting 2 heads		
Indictor		Displays status of Head 1 and 2		
DSC (Discharge)		Green LED (lights up when discharging)		
	CHECK	Orange LED (lights up when dirt, wear, etc. of the discharge needle is detected)		
	ERROR	Red LED (lights up when abnormal discharge is detected)		
	Level meter	Green LED (5 levels, lights up depending on amount of the charge or ion generation)		
Output  ALARM  ERROR  COM (Co	ommon)	PhotoMOS relay output  • Maximum load current: 100 mA  • Applied voltage: 30 V DC or less (between output-output common)  • Residual voltage: 1.5 V or less (at load current of 100 mA)		
	Output operation	ALARM: ON when dirt or wear of the discharge needle is detected; OFF when operation is normal. ERROR: OFF when abnormal discharge is detected; ON when operation is normal.		
	Short-circuit protection	Incorporated (automatic reset type)		
Discharge of	control input (DSC OFF)	Discharge allowed: Open, Discharge halt: 24 V or 0 V shorted		
Contamina	ation level	2		
Overvoltag	ge category	I		
Elevation		2,000 m 6561.68 ft or less (Note)		
Ambient te	emperature	0 to +50 °C +32 to +122 °F (No dew condensation), Storage: –10 to +65 °C +14 to +149 °F		
Ambient h	umidity	35 to 65 % RH, Storage: 35 to 85 % RH		
Voltage wi	ithstandability	1,000 V AC for one min. between all supply terminals connected together and enclosure 500 V AC for on min. between supply terminals and F.G.		
Insulation	resistance	$20\ \text{M}\Omega,$ or more, with $250\ \text{V}$ megger between all supply terminals connected together and enclosure		
Vibration resistance		10 to 150 Hz frequency, 0.75 mm 0.030 in double amplitude in X, Y and Z directions for two hours each		
Shock res	istance	100 m/s <sup>2</sup> acceleration (10 G approx.) in X, Y and Z directions three times each		
Enclosure	grounding method	Floating		
Material		Enclosure: ABS		
Weight		130 g approx.		
Accessorie	es	Power supply / I/O connector: 1 set (Housing 5557-10R, Terminal 5556TL [manufactured by Molex]) Ground wire (3.7 m 12.139 ft approx.): 1 pc.		


Note: Do not use or store in an environment that has been pressurized to an air pressure higher than the atmospheric pressure at 0 m.

# CHARGE REMOVAL CHARACTERISTICS (TYPICAL) Please contact our office for details on data that is not listed here.

Measured using a 150 × 150 mm 5.906 × 5.906 in CPM (charge plate monitor). (At center of CPM)


#### Common to ER-X001/X008

Air flow

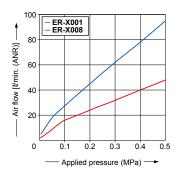


#### ER-X001

Correlation between charge removal distance and charge removal time (50 Hz)

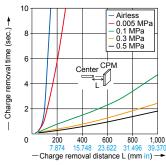


Correlation between charge removal distance and charge removal time (20 Hz)

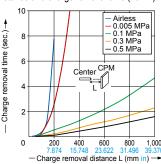


#### ER-X001


Charge removal field (airless, 50 Hz)

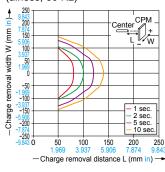


Charge removal field (airless, 20 Hz)

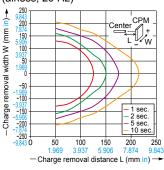

Charge removal field (0.005 MPa, 50 Hz)

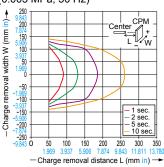


Charge removal field

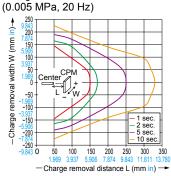


#### ER-X001

Charge removal field (0.5 MPa, 50 Hz)

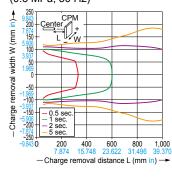


Charge removal field (0.5 MPa, 20 Hz)

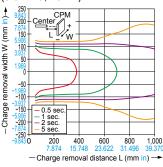


**ER-X008** 


Correlation between charge removal distance and charge removal time (50 Hz)

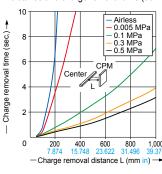


Correlation between charge removal distance and charge removal time (10 Hz)

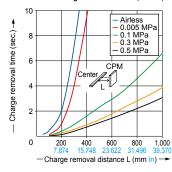

Charge removal field (vertical direction, airless, 50 Hz)

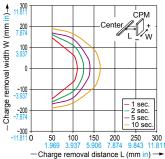


Charge removal field (vertical direction, airless, 10 Hz)

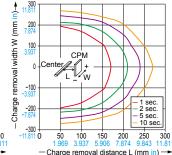


Measured using a 150 × 150 mm 5.906 × 5.906 in CPM (charge plate monitor). (At center of CPM)

#### ER-X008


Charge removal field (vertical direction, 0.005 MPa, 50 Hz)

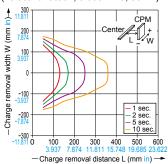


Charge removal field (vertical direction, 0.005 MPa, 10 Hz)

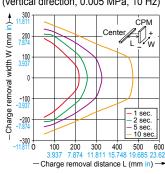

Charge removal field (vertical direction, 0.5 MPa, 50 Hz)

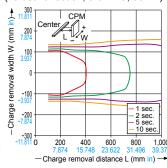


Charge removal field (vertical direction, 0.5 MPa, 10 Hz)

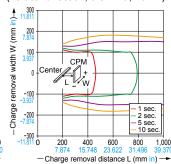


#### Common to ER-X016/X032/X048/X064


Air flow

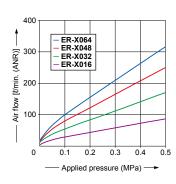


Correlation between charge removal distance and charge removal time (50 Hz)

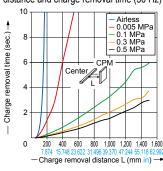

Correlation between charge removal distance and charge removal time (10 Hz)

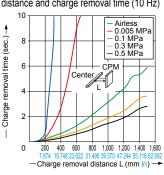


Correlation between charge removal distance and charge removal time (1 Hz)

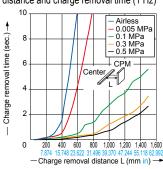


#### Common to ER-X016/X032/X048/X064


Charge removal field (horizontal direction, airless, 50 Hz)

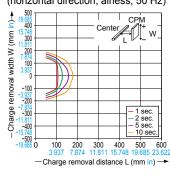


Charge removal field (horizontal direction, airless, 10 Hz)

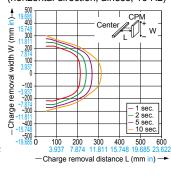

Charge removal field (horizontal direction, airless, 1 Hz)

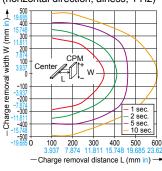


Charge removal field

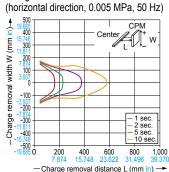


#### Common to ER-X016/X032/X048/X064


Charge removal field (horizontal direction, 0.005 MPa, 10 Hz)

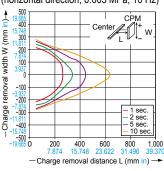


Charge removal field (horizontal direction, 0.005 MPa, 1 Hz)

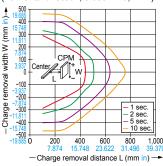

Charge removal field (horizontal direction, 0.5 MPa, 50 Hz)

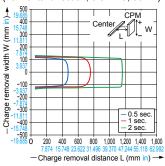

Charge removal field

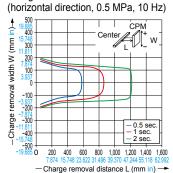

# CHARGE REMOVAL CHARACTERISTICS (TYPICAL) Please contact our office for details on data that is not listed here.

800 1,000 1,200 1,400 1,600

Charge removal distance L (mm in) -

100 200 300 400

Charge removal distance L (mm in) -

500

300 400


Charge removal distance L (mm in)


Measured using a 150 × 150 mm 5.906 × 5.906 in CPM (charge plate monitor). (At center of CPM)


300 400 11 811 15 741

Charge removal distance L (mm in)

#### Common to ER-X016/X032/X048/X064 ER-X032 Charge removal field Charge removal field Charge removal field Charge removal field (horizontal direction, 0.5 MPa, 1 Hz) (vertical direction, airless, 50 Hz) (vertical direction, airless, 10 Hz) (vertical direction, airless, 1 Hz) (mm Charge removal width W (mm width W (mm removal width W (mm 301 .811 200 .811 200 .811 200 200 ≥ 100 width 100 100 -100 -100 -100 -100 -200 -200 -200 -Charge Charge Charge -300 -300 1,811 -300 -300 -400 -400 10 sec 10 sec 5./48 -500

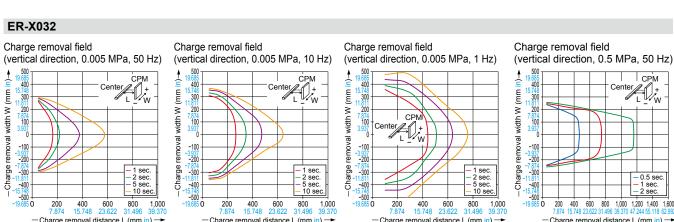

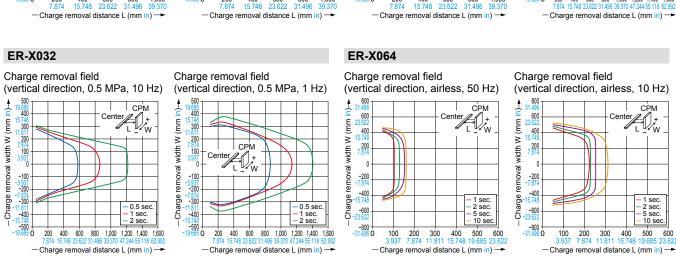


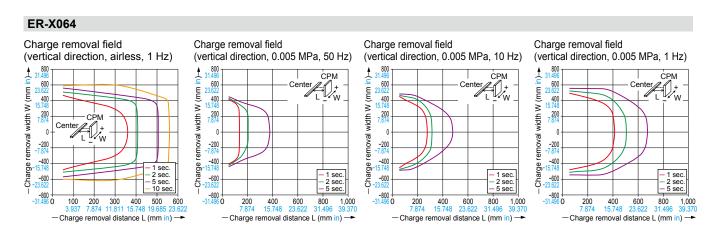


Measured using a 150 × 150 mm 5.906 × 5.906 in CPM (charge plate monitor). (At center of CPM)




Charge removal field (vertical direction, 0.5 MPa, 50 Hz)

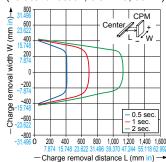

Charge removal field (vertical direction, 0.5 MPa, 10 Hz)

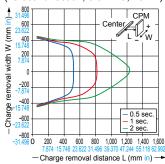


Charge removal field (vertical direction, 0.5 MPa, 1 Hz)

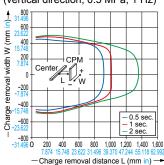



#### Common to ER-X□HC

#### Air flow

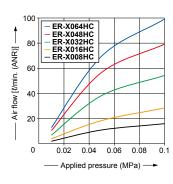


#### ER-X008HC



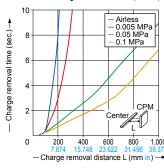

#### ER-X016HC

Correlation between charge removal distance and charge removal time (30 Hz)

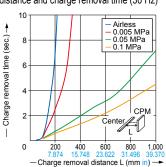

Please contact our office for details on data that is not listed here.

## I/O CIRCUIT AND WIRING DIAGRAMS

#### New-type controller (produced from April 2014 on)

Notice: Products manufactured from April 2014 and before April 2016 cannot be used with the high and low temperature resistant type head **ER-X008HC**. For the Identification of previous-type and new-type controllers and for the combination with the head, refer to p.17.

#### Power connector pin arrangement




(Front view)


Housing: 5569-10A [Manufactured by Molex]

Terminal	Terminal	Color
No.	name	code
1	0 V	Blue
2	COM(-)	-
3	Discharge control input	Pink
4	COM(OUT)	Violet
5	F.G. terminal	Green / Yellow
6	24 V	Brown
7	COM(+)	_
8	COM(IN)	White
9	Alarm output	Orange
10	Error output	Black


Note: Color code refers to cable colors of an optional power supply cable.


#### When connecting the output to negative common

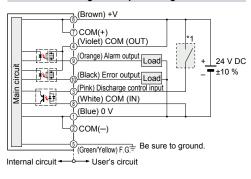

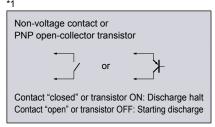

#### When connecting the output to positive common

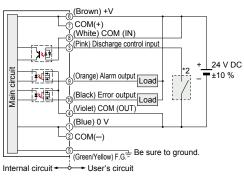

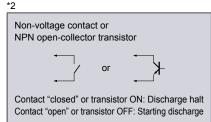

Notes: 1) Be sure to ground the F.G. terminal. If F.G. terminal is not connected properly, it may cause electric shock. In the case of **ER-X001**, the head mounting bracket and F.G. terminal are internally connected.

2) To stop discharge, turn ON the discharge control input for 20 ms or longer. To start discharge, turn OFF (open) the discharge control input. Discharge will start in 20 ms.

#### Previous-type controller (produced before March 2014)

Notice: Products manufactured before March 2014 cannot be used with ER-X001, ER-X008 and the high and low temperature resistant type head ER-X□HC.

For the Identification of previous-type and new-type controllers and for the combination with the head, refer to p.17.

#### Power connector pin arrangement




(Front view)


Housing: 5569-10A [Manufactured by Molex]

Terminal	Terminal	Color
No.	name	code
1	0 V	Blue
2	COM(-)	_
3	Discharge control input	Pink
4	COM(OUT)	Violet
5	F.G. terminal	Green / Yellow
6	24 V	Brown
7	COM(+)	_
8	-	White
9	Alarm output	Orange
10	Error output	Black


Note: Color code refers to cable colors of an optional power supply cable.


#### When connecting the output to negative common

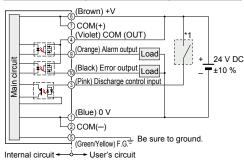

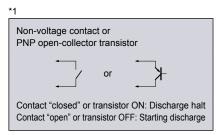

#### When connecting the output to positive common

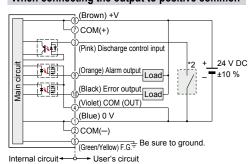

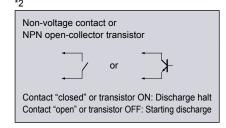

- Notes: 1) Be sure to ground the F.G. terminal. If F.G. terminal is not connected properly, it may cause electric shock.
  - 2) To stop discharge, turn ON the discharge control input for 20 ms or longer. To start discharge, turn OFF (open) the discharge control input. Discharge will start in 20 ms.

#### PRECAUTIONS FOR PROPER USE

- Never use this product as device for personnel protection.
- In case of using devices for personnel protection, use products which meet laws or standards, such as OSHA, ANSI or IEC etc., for personnel protection applicable in each region or country.
- · This product produces high voltages.
- Do not use this product in places where there may be a danger of flammable or combustible items being present.
- To prevent electric shock and to conduct proper discharge, be sure to ground a frame ground (F.G.) terminal of a controller.
- Do not place hands near the discharge needle. Doing so may cause electric shock.
- Since the tip of the discharge needle is sharp, take sufficient care in handling the discharge needle, or injuries may result.



- The high-voltage cable between the head and the high-voltage unit must be fixed and the minimum bend radius is R30 mm R1.181 in or more. In case of using at the bend radius R30 mm R1.181 in or less and using at moving part may cause fire and break down, etc. of the high-voltage cable.
- Clean the discharge needle regularly (about once a week). Otherwise, optimum charge removal performance may not be achieved, and accidents or operating problems may occur.
- If this product is used in a confined space, ozone emitted from this product may be detrimental. Be sure to provide ventilation.
- Do not direct ionized air toward the face. Ozone may cause irritation to places such as the nose and throat.
- When the product has been used under very high or low temperatures, do not touch the product with a bare hand.
   Failure to observe this caution can result in burn or injury.
   Be sure to let the product cool sufficiently when touching the product for maintenance or other purposes.
- NRTL (National Recognized Testing Laboratories) certification means
  that the product was tested by the third-party private testing organization
  (TÜV SÜD America) authorized by the Occupational Safety and Health
  Administration (OSHA) and found to comply with the safety standards
  (ANSI/UL) established by American National Standards Institute and the
  standards (CAN/CSA) established by Canadian Standards Association.

- When using as a CSA and UL compliant product, use a CLASS 2 CSA/ UL certified power supply, or a CSA/UL certified power supply that has been evaluated as a Limited Power Source as specified in CAN/ CSA-C22.2 No.60950-1/UL60950-1.
- This product has been developed / produced for industrial use only.
- Do not use this product for purposes other than electric charge removal.
- Do not use this product in environments which are outside the specification range, otherwise operating problems or damage may occur. In addition, the operating life of the product may become significantly reduced.
- This product is a precision device. Do not apply a shock to it by dropping, for example. Accidents or operating problems may occur.
- Never disassemble, repair or modify this product. Accidents or operating problems may occur.
- Do not throw this product in fire. It may explode or toxic fumes may be generated.
- Do not run the wires together with high-voltage lines or power lines or put them in the same raceway. This can cause malfunction due to induction.
- · Verify that the supply voltage variation is within the rating.
- · In case using switching regulator, be sure to connect F.G. terminal.
- When connecting / removing the head or performing wiring or inspection work, be sure to turn off the power first. Not doing so may result in accidents, electric shock or operating problems.
- After connecting the cables, check that the connections are correct before turning on the power. If the cables are connected incorrectly, operating problems or accidents may occur.
- Do not use a cable with any damage such as cracks or splitting. Risk of accidents and failure.
- Avoid use in a location with significant steam or dust, or in a location where the product may come in direct contact with water, oil, or welding spatter.
- Do not touch the discharge needle with hard objects such as tools. If the discharge needle becomes broken, it will not provide sufficient charge removal performance, and moreover operating problems or accidents may occur.
- During installation, fasten the product securely. If it is not securely fastened or it is subjected to continuous vibration or shock, accidents or operating problems may result.
- Power cable that are 0.15mm<sup>2</sup> or more and 30 m 98.425 ft or less in total length for wiring. Also, keep the wiring as short as possible in order to prevent noise.
- When disposing of this product, treat it appropriately as industrial waste.
- After starting discharge, it takes 30 minutes approx. for charge removal performance to stabilize. Therefore, wait 30 minutes before adjusting ion balance.

Previous-type controller (Note)

 Use the correct combination of head, discharge needle unit and controller.

#### Identification of previous-type and new-type controllers and combination with the head



			New-type controller (Note)		Frevious-type controller (Note)	
			Produced from April 2016 on	Produced from April 2014 and before April 2016	Produced before March 2014	
Combination			Front nameplate	Front nameplate	Front nameplate	
			Panasonio ERXCOZ DSC CHECK ERROR PARA CONTROL PARA CONTRO	Panasono ERXCO2  GOS  GOS  GOS  GOS  GOS  GOS  GOS  G	Panasonic ER XCO2  OSC CHECK ERROR  ERROR  1 0 0 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1	
			Bottom nameplate	Bottom nameplate	Bottom nameplate	
			mark indicated	mark not indicated	mark not indicated	
	Spot type	ER-X001	OK	OK	Cannot be used	
		ER-X008			Cannot be used	
		ER-X016				
	Bar type	ER-X032	ОК	OK	ОК	
		ER-X048				
Head		ER-X064				
		ER-X008HC		Cannot be used		
	High and Low	ER-X016HC				
	temperature	ER-X032HC	ок	ОК	Cannot be used	
	resistant	ER-X048HC		J OK		
		ER-X064HC				

New-type controller (Note)


Note: The layout of the power supply connector pins differ between new-type controllers and previous-type controllers. For details refer to "I/O CIRCUIT AND WIRING DIAGRAMS" (p.16).

## PRECAUTIONS FOR PROPER USE

#### Mounting


#### **Head installation**

- · Using 2 M4 screws or 1 M6 screw, mount the head onto the equipment housing.
- · Loosen the angle adjustment screw, adjust the head angle, and then fasten the head with the tightening torque of 0.5 N·m or less.
- · Position the head mounting bracket of the ER-X001 at least 20 mm 0.787 in away from the tip of the head. The tightening torque for the head fixing screw must be 0.5 N·m or less.



After mounting and setting up the head, set the controller according to the procedures described in the instruction manual in order to properly remove electrical charge.


- Notes: 1) Be sure to ground the equipment housing onto which the head is mounted.
  - 2) The distance between the head and the charge removing object should be 30 mm 1.181 in or more. If the static buildup of the charge removing object is 30 kV or more, set the distance to 50 mm 1.969 in or more.
  - 3) If there is metal near the head or between the head and the charge removing object, ion is absorbed, hindering appropriate static removal. Install the head under the following installation condition.
  - 4) In case using the side mounting, the discharge frequency should be 10 Hz or more.




5) When installing two or more heads set the same frequency and keep the distance as below. In face to face or parallel using different frequency, keep the distance between the heads 400 mm 15.748 in or more

When installing the heads face to face, install heads in distance that the heads can perform the charge removal of a side of the object individualy

· Face-to-face installation



Parallel installation



M6 screw

10 mm

or more

#### High-voltage unit installation

- · Use 2 M4 screws or 2 M6 screws to fasten the head. The tightening torques for fastening, are as follows.
  - When using M4 screws: 1.2 N·m
- When using M6 screws: 2.5 N·m

Notes: 1) Do not place any objects on top of the high-voltage unit.


- 2) When using multiple heads, keep the distance of at least 10 mm 0.39 between the high-voltage units.
- 3) When fastening the high-voltage unit using M6 screws, fasten before connecting the head connection cable.
- 4) Use M6 screws for the installation of the high-voltage unit of the ER-X001.
- 5) The minimum bending radius of the high-voltage cable is 30 mm

#### **Controller installation**

• Mount the controller on a 35 mm 1.378 in wide DIN rail or using M4 screws.

#### <When mounting on a DIN rail>

• Pull the lock release lever to remove this product from the DIN rail.



#### <When mounting using M4 screws>

· The tightening torque should be 1.2 N·m or less




#### **Piping**

- · Air supplied to this product will reduce contamination of the discharge needle and improve the charge removal speed.
- · The outer diameter of the air tube to fit to the air inlet portion of this product should be ø6 mm ø0.236 in.
- · Make sure that clean air (air containing no water, no oil and no dust) should be supplied.
- Since the pressure will drop when the air piping from the main pressure supply is extended or pneumatic components (e.g., needle valve, speed controller, mini filter) are added, keep an eye on the pressure supply to the ionizer making sure it is not in short supply. For the pneumatic components, select those that can accommodate the air supply flow rate.


#### ER-X008/X016/X032/X048/X064

<Connection of pipe to head section>




#### ER-X008HC/X016HC/X032HC/X048HC/X064HC

<Connection of pipe to head section>




#### ER-X001

<Connection to high-voltage unit>

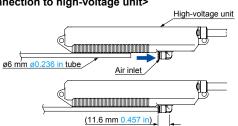


Note: After inserting the tube into the joint of this product, always make sure that the tube is all the way in and securely inserted. Insufficient tube insertion will cause air leakage.

# DIMENSIONS (Unit: mm in)

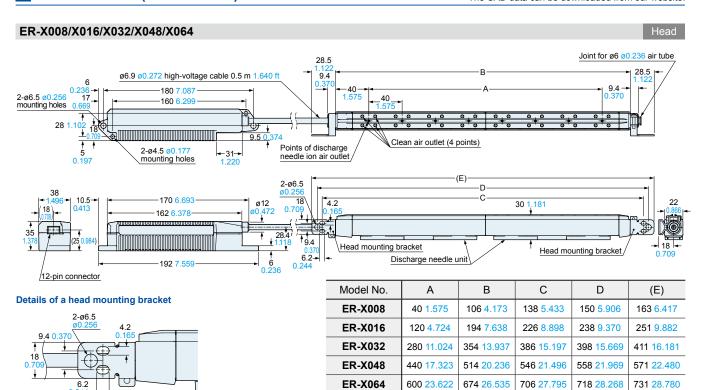


#### Mounting drawing with discharge part protective cover (ER-XACVR)

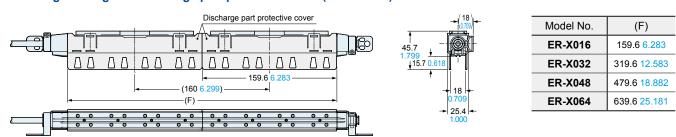


Note: The ER-XACVR discharge part protective cover cannot be used on the ER-X008 or high and low temperature resistant type head ER-X□HC.

#### ER-X008HC/X016HC/X032HC/X048HC/X064HC

Head

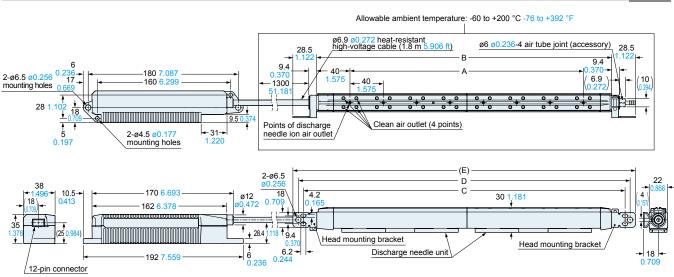


#### Details of a head mounting bracket



Model No.	Α	В	С	D	(E)
ER-X008HC	40 1.575	106 4.173	138 5.433	150 5.906	163 6.417
ER-X016HC	120 4.724	194 7.638	226 8.898	238 9.370	251 9.882
ER-X032HC	280 11.024	354 13.937	386 15.197	398 15.669	411 16.181
ER-X048HC	440 17.323	514 20.236	546 21.496	558 21.969	571 22.480
ER-X064HC	600 23.622	674 26.535	706 27.795	718 28.268	731 28.780

## DIMENSIONS (Unit: mm in)

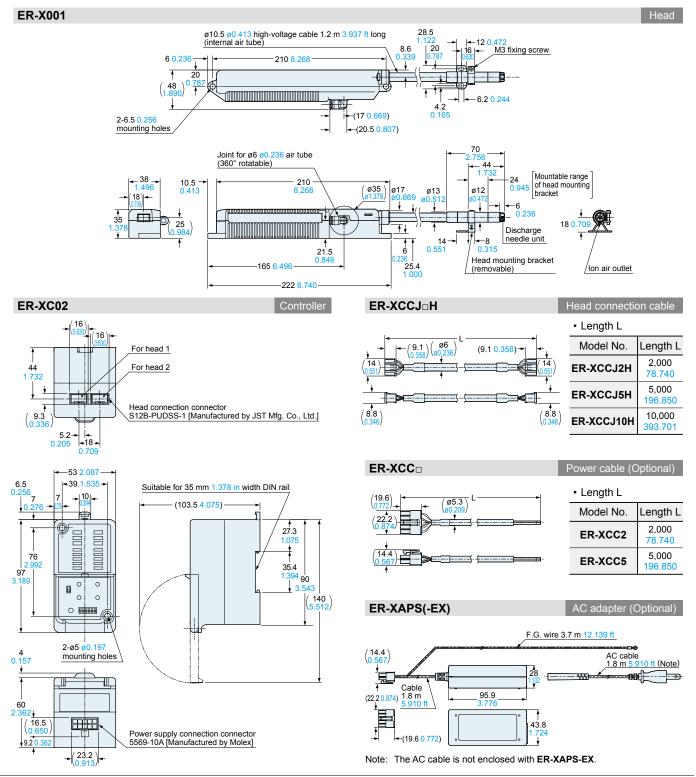

Please contact:

# Panasonic Industrial Devices SUNX Co., Ltd.

2431-1 Ushiyama-cho, Kasugai-shi, Aichi, 486-0901, Japan Global Sales Department

■Telephone: +81-568-33-7861 ■Facsimile: +81-568-33-8591 panasonic.net/id/pidsx/global



All Rights Reserved © Panasonic Industrial Devices SUNX Co., Ltd. 2016