



Chipsmall Limited consists of a professional team with an average of over 10 year of expertise in the distribution of electronic components. Based in Hongkong, we have already established firm and mutual-benefit business relationships with customers from,Europe,America and south Asia,supplying obsolete and hard-to-find components to meet their specific needs.

With the principle of “Quality Parts,Customers Priority,Honest Operation,and Considerate Service”,our business mainly focus on the distribution of electronic components. Line cards we deal with include Microchip,ALPS,ROHM,Xilinx,Pulse,ON,Everlight and Freescale. Main products comprise IC,Modules,Potentiometer,IC Socket,Relay,Connector.Our parts cover such applications as commercial,industrial, and automotives areas.

We are looking forward to setting up business relationship with you and hope to provide you with the best service and solution. Let us make a better world for our industry!



Contact us

Tel: +86-755-8981 8866 Fax: +86-755-8427 6832

Email & Skype: info@chipsmall.com Web: www.chipsmall.com

Address: A1208, Overseas Decoration Building, #122 Zhenhua RD., Futian, Shenzhen, China





IQS572EV02 Arduino Shield Module Datasheet

Trackpad Arduino Shield PCB using IQS572

1 Overview

The IQS572-B000 is a trackpad solution including on-chip gesture recognition, flexible device setup and leading sensitivity management and adjustment. The IQS572EV02 uses an 8x8 diamond sensor pattern to detect user proximity and touch, identify finger position co-ordinates, and generate gesture outputs based on the finger interaction. With effective on-chip sensor co-ordinate filtering, and advanced processing algorithms, the IQS572 provides reliable and stable operational outputs.

The sensor reports these outputs via standard I²C protocol to the master (in this case the Arduino), and is also fully configurable and programmable via this interface.

The IQS572-B000 is a standard IQS5xx-B000 product, and thus the complete IQS5xx-B000 product datasheet can be referenced for all IQS572-B000 trackpad information:

🔗 http://www.azoteq.com/images/stories/pdf/iqs5xx-b000_trackpad_datasheet.pdf

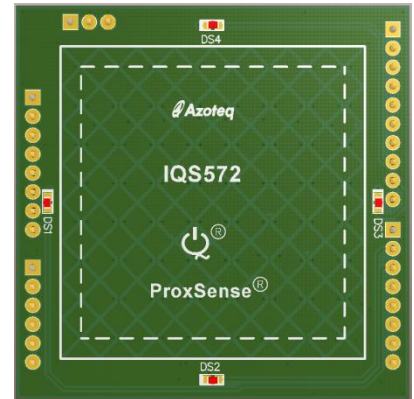


Figure 1.1 IQS572EV02 Shield Board

2 Device Configuration

The IQS572EV02 is programmed with the standard B000 trackpad firmware, with the setup parameters pre-configured for this PCB. Some of the important parameter configurations are shown in the table below.

Since this is just an example configuration, all normal IQS572-B000 setup flexibility exists, and the configuration can be modified as required by the user.

Table 2.1 IQS572EV02 Parameter / Setup Summary

Settings parameter	Value	Settings parameter	Value
Total Rx	8	Total Tx	8
Rx mapping	{2, 1, 3, 5, 4, 8, 6, 7, ...}	Tx mapping	{0, 1, 2, 3, 4, 5, 6, 7, ...}
ALP channel	Enabled	-	-
ALP Rxs	0x00 0xFF	ALP TxS	0x00 0x55
Prox threshold (TP)	23	Prox threshold (ALP)	8
Touch threshold – set	28	Touch threshold – clear	22
ATI Target (TP)	800	ATI Target (ALP)	500



ATI C (TP)	2	ATI C (ALP)	18
Active Mode report rate	13	Idle Touch report rate	50
Idle Mode report rate	75	LP1 report rate	60
LP2 report rate	120	-	-
Active Mode timeout	5	Idle Touch timeout	60
Idle Mode timeout	45	LP1 timeout	30
Total multi-touches	5	X & Y resolution	1024

To obtain the full device configuration, simply connect the trackpad module to a CT210 (or DS100), and run it with the IQS5xx-B000 PC GUI software. At start up all GUI parameters are updated to match the on-chip values, and can therefore easily be read in the GUI.

3 Connecting to PC

Although the module is designed to be used as a plug-in shield PCB for the Arduino Uno, it can also be connected to the Azoteq PC software for evaluation, visualisation, configuration and programming.

3.1 Hardware connections

To connect the IQS572EV02 to the PC, the following needs to be linked between the CT210/DS100 and the module.

Table 3.1 Hardware connections to CT210/DS100

Function	CT210 Pin	IQS572EV02 (AZP691A01) Pin
GND	Pin 1	P1 Pin 6 or 7 or P4 Pin 4
VDDHI	Pin 3	P1 Pin 4
SDA	Pin 7	P4 Pin 2
SCL	Pin 9	P4 Pin 1
RDY	Pin 10	P3 Pin 6

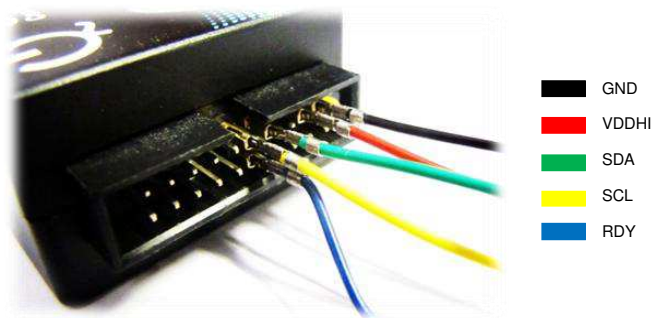


Figure 3.1 CT210 I²C connections

3.2 Evaluation in GUI

The features of the IQS572-B000 product can be evaluated and visualised using the following PC GUI software:

http://www.azoteq.com/images/stories/software/azoteq_iqs5xxb000_setup.zip

This allows the designer to see the full power and information available from the IQS572 trackpad product. For more information on the GUI itself, including the device setup procedure, please see the following application note:

<http://www.azoteq.com/images/stories/pdf/AZD087%20-%20IQS5xx-B000%20Setup%20and%20User%20Guide.pdf>

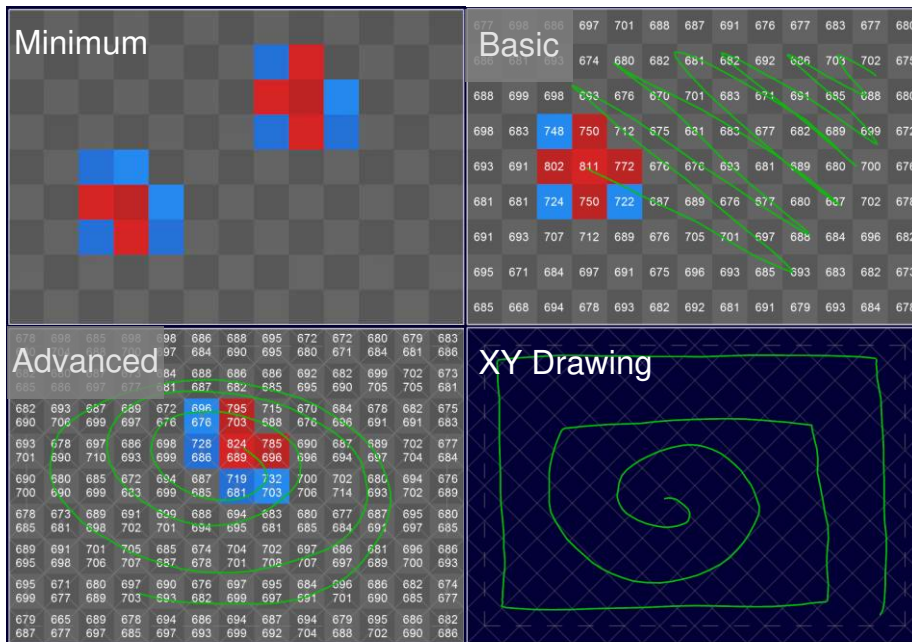


Figure 3.2 2D preset display examples

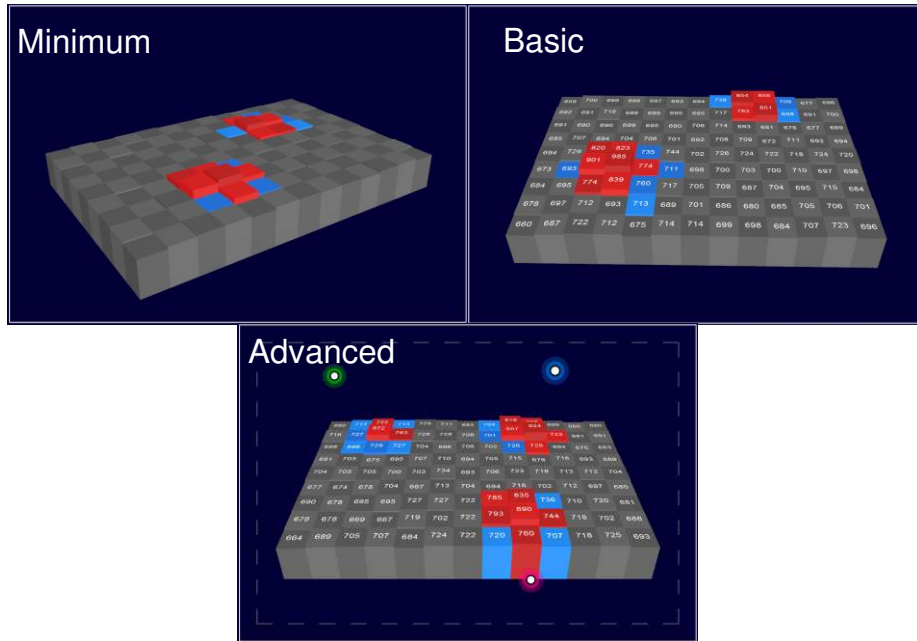


Figure 3.3 3D preset display examples

3.3 Programming

The IQS5xx-B000 GUI enables a user to modify the configuration of a trackpad and to subsequently program the device with a new hex file containing the new settings.

This is explained further in the AZD087 application note.

4 Connecting to Arduino

The main purpose of the module is to be used together with an Arduino Uno mainboard, providing a trackpad input shield module for the popular development environment.

4.1 Hardware connections

Simply plug the module into the aligning sockets on the Arduino mainboard.

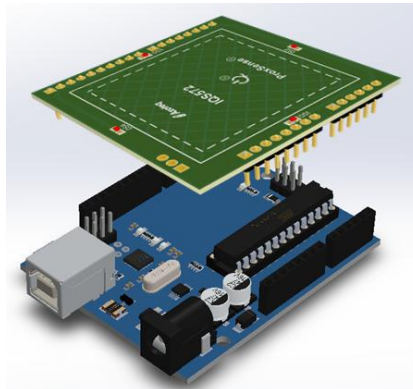


Figure 4.1 Shield + Arduino Uno




4.2 Arduino source code


An example project is provided to allow for fast integration into the Arduino environment. The example source code communicates with the IQS572EV02 module, handles the I²C interaction with the device, and then displays relevant output data on the serial monitor.


The source code for the IQS572EV02 module can be obtained here:

http://www.azoteq.com/images/stories/software/iqs572ev02_arduino_shield_v1.0.zip


4.3 User guide

The project must be compiled (), and the serial COM port must be configured.

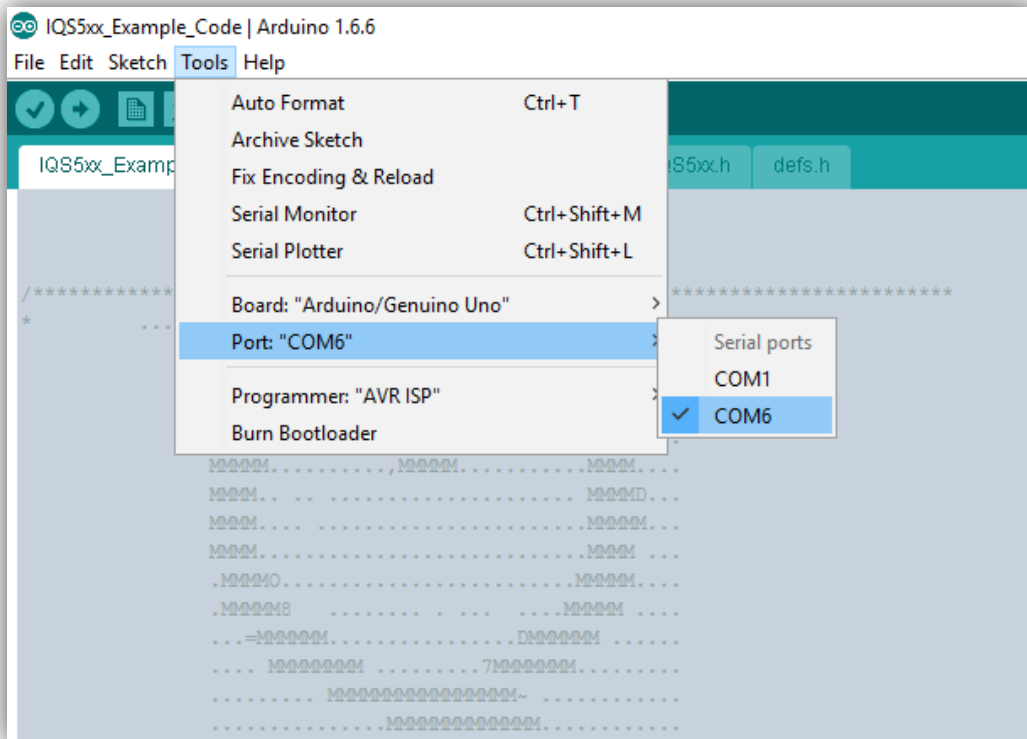

After this the program must be uploaded (), and once this is successful, the serial monitor can be opened (Tools->Serial Monitor) to view the data from the IQS572.

With a successful setup, shortly after opening the serial monitor window, you will see the version number details displayed as follows:

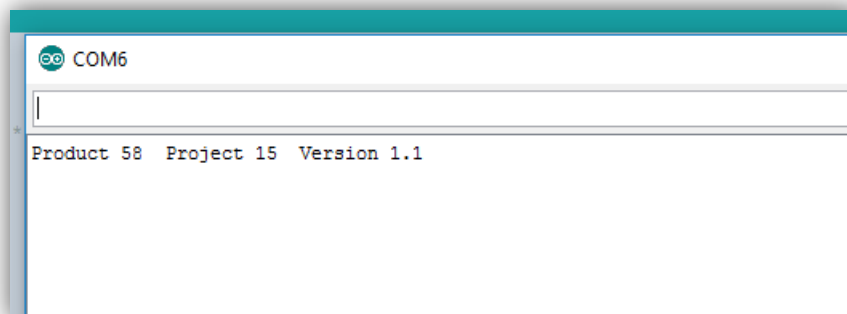



Now when interacting with the trackpad you will see finger position data and gesture outputs displayed on the window, here is an example of such data:

```

COM6
Product 58 Project 15 Version 1.1
Gestures:  RelX: RelY: Fig: X1:  Y1:  TS1: TA1: X2:  Y2:  TS2: TA2: X3:  Y3:  TS3: TA3: X4:  Y4:  TS4: TA4: X5:  Y5:  TS5: TA5:
           0  0  1  158  593  728  0 xxx xxx  0  0 xxx xxx  0  0 xxx xxx  0  0 xxx xxx  0  0
           0  0  1  157  591  768  1 xxx xxx  0  0 xxx xxx  0  0 xxx xxx  0  0 xxx xxx  0  0
           0  0  1  164  583  832  2 xxx xxx  0  0 xxx xxx  0  0 xxx xxx  0  0 xxx xxx  0  0
           0  0  1  194  568  900  2 xxx xxx  0  0 xxx xxx  0  0 xxx xxx  0  0 xxx xxx  0  0
           0  0  1  272  549  971  3 xxx xxx  0  0 xxx xxx  0  0 xxx xxx  0  0 xxx xxx  0  0
           82 -15  1  354  534  1038  3 xxx xxx  0  0 xxx xxx  0  0 xxx xxx  0  0 xxx xxx  0  0
          107 -5  1  461  529  1095  3 xxx xxx  0  0 xxx xxx  0  0 xxx xxx  0  0 xxx xxx  0  0
          155  3  1  616  532  1131  3 xxx xxx  0  0 xxx xxx  0  0 xxx xxx  0  0 xxx xxx  0  0
Swipe X+
Gestures:  RelX: RelY: Fig: X1:  Y1:  TS1: TA1: X2:  Y2:  TS2: TA2: X3:  Y3:  TS3: TA3: X4:  Y4:  TS4: TA4: X5:  Y5:  TS5: TA5:
           0  0  1  765  596  1463  0 xxx xxx  0  0 xxx xxx  0  0 xxx xxx  0  0 xxx xxx  0  0
           0  0  1  752  590  1480  1 xxx xxx  0  0 xxx xxx  0  0 xxx xxx  0  0 xxx xxx  0  0
           0  0  1  703  584  1494  1 xxx xxx  0  0 xxx xxx  0  0 xxx xxx  0  0 xxx xxx  0  0
           0  0  1  602  584  1514  1 xxx xxx  0  0 xxx xxx  0  0 xxx xxx  0  0 xxx xxx  0  0
          -106 16  1  496  600  1552  2 xxx xxx  0  0 xxx xxx  0  0 xxx xxx  0  0 xxx xxx  0  0
          -105 27  1  391  627  1572  2 xxx xxx  0  0 xxx xxx  0  0 xxx xxx  0  0 xxx xxx  0  0
          -126 0  1  265  653  1573  3 xxx xxx  0  0 xxx xxx  0  0 xxx xxx  0  0 xxx xxx  0  0
Swipe X-
Gestures:  RelX: RelY: Fig: X1:  Y1:  TS1: TA1: X2:  Y2:  TS2: TA2: X3:  Y3:  TS3: TA3: X4:  Y4:  TS4: TA4: X5:  Y5:  TS5: TA5:
           0  0  1  278  605  2626  0 xxx xxx  0  0 xxx xxx  0  0 xxx xxx  0  0 xxx xxx  0  0
           0  0  1  278  605  2633  2 xxx xxx  0  0 xxx xxx  0  0 xxx xxx  0  0 xxx xxx  0  0
           0  0  1  278  605  2642  3 xxx xxx  0  0 xxx xxx  0  0 xxx xxx  0  0 xxx xxx  0  0
           0  0  1  277  609  2633  3 xxx xxx  0  0 xxx xxx  0  0 xxx xxx  0  0 xxx xxx  0  0
           0  0  1  272  622  2592  3 xxx xxx  0  0 xxx xxx  0  0 xxx xxx  0  0 xxx xxx  0  0
Single Tap

```

5 Electrical characteristics

For all general electrical characteristics, please refer to the IQS5xx-B000 datasheet.

5.1 Current consumption

With the parameters configured for the specific module, some expected current consumption values can be provided. Please note these are bench measured values, and can vary depending on numerous factors. For example in Active mode (during a user touch), the current varies according to the size of the touch due to change in the amount of processing required. The following are simply to provide an estimate of what can be expected.

Table 5.1 Total Current Consumption

User Interaction	Mode	I ² C bytes read	Report Rate	Current	Unit
1 standard 8mm finger	Active Mode	16 bytes	13ms	1.86	mA
2 standard 8mm fingers	Active Mode	16 bytes	13ms	2.26	mA
None	Idle Mode	None	75ms	227	uA
None	LP1	None	60ms	58	uA
None	LP2	None	120ms	30	uA
None	Suspend	None	n/a	<1	uA




6 Contact Information

	USA	Asia	South Africa
Physical Address	6507 Jester Blvd Bldg 5, suite 510G Austin TX 78750 USA	Rm2125, Glittery City Shennan Rd Futian District Shenzhen, 518033 China	109 Main Street Paarl 7646 South Africa
Postal Address	6507 Jester Blvd Bldg 5, suite 510G Austin TX 78750 USA	Rm2125, Glittery City Shennan Rd Futian District Shenzhen, 518033 China	PO Box 3534 Paarl 7620 South Africa
Tel	+1 512 538 1995	+86 755 8303 5294 ext 808	+27 21 863 0033
Fax	+1 512 672 8442		+27 21 863 1512
Email	info@azoteq.com	info@azoteq.com	info@azoteq.com

Please visit www.azoteq.com for a list of distributors and worldwide representation.

The following patents relate to the device or usage of the device: US 6,249,089; US 6,952,084; US 6,984,900; US 7,084,526; US 7,084,531; US 8,395,395; US 8,531,120; US 8,659,306; US 8,823,273; US 9,209,803; US 9,360,510; EP 2,351,220; EP 2,559,164; EP 2,656,189; HK 1,156,120; HK 1,157,080; SA 2001/2151; SA 2006/05363; SA 2014/01541; SA 2015/023634

IQ Switch®, SwipeSwitch™, ProxSense®, LightSense™, AirButton™, ProxFusion™, Crystal Driver™ and the  logo are trademarks of Azoteq.

The information in this Datasheet is believed to be accurate at the time of publication. Azoteq uses reasonable effort to maintain the information up-to-date and accurate, but does not warrant the accuracy, completeness or reliability of the information contained herein. All content and information are provided on an "as is" basis only, without any representations or warranties, express or implied, of any kind, including representations about the suitability of these products or information for any purpose. Values in the datasheet is subject to change without notice, please ensure to always use the latest version of this document. Application specific operating conditions should be taken into account during design and verified before mass production. Azoteq disclaims all warranties and conditions with regard to these products and information, including but not limited to all implied warranties and conditions of merchantability, fitness for a particular purpose, title and non-infringement of any third party intellectual property rights. Azoteq assumes no liability for any damages or injury arising from any use of the information or the product or caused by, without limitation, failure of performance, error, omission, interruption, defect, delay in operation or transmission, even if Azoteq has been advised of the possibility of such damages. The applications mentioned herein are used solely for the purpose of illustration and Azoteq makes no warranty or representation that such applications will be suitable without further modification, nor recommends the use of its products for application that may present a risk to human life due to malfunction or otherwise. Azoteq products are not authorized for use as critical components in life support devices or systems. No licenses to patents are granted, implicitly, express or implied, by estoppel or otherwise, under any intellectual property rights. In the event that any of the abovementioned limitations or exclusions does not apply, it is agreed that Azoteq's total liability for all losses, damages and causes of action (in contract, tort (including without limitation, negligence) or otherwise) will not exceed the amount already paid by the customer for the products. Azoteq reserves the right to alter its products, to make corrections, deletions, modifications, enhancements, improvements and other changes to the content and information, its products, programs and services at any time or to move or discontinue any contents, products, programs or services without prior notification. For the most up-to-date information and binding Terms and Conditions please refer to www.azoteq.com

www.azoteq.com/ip

info@azoteq.com