# imall

Chipsmall Limited consists of a professional team with an average of over 10 year of expertise in the distribution of electronic components. Based in Hongkong, we have already established firm and mutual-benefit business relationships with customers from, Europe, America and south Asia, supplying obsolete and hard-to-find components to meet their specific needs.

With the principle of "Quality Parts, Customers Priority, Honest Operation, and Considerate Service", our business mainly focus on the distribution of electronic components. Line cards we deal with include Microchip, ALPS, ROHM, Xilinx, Pulse, ON, Everlight and Freescale. Main products comprise IC, Modules, Potentiometer, IC Socket, Relay, Connector. Our parts cover such applications as commercial, industrial, and automotives areas.

We are looking forward to setting up business relationship with you and hope to provide you with the best service and solution. Let us make a better world for our industry!



## Contact us

Tel: +86-755-8981 8866 Fax: +86-755-8427 6832 Email & Skype: info@chipsmall.com Web: www.chipsmall.com Address: A1208, Overseas Decoration Building, #122 Zhenhua RD., Futian, Shenzhen, China



## Evaluates: MAX17502F in TDFN Package

#### **General Description**

The MAX17502F evaluation kit (EV kit) provides a proven design to evaluate the MAX17502F high-efficiency, high-voltage, synchronous step-down DC-DC converter. The EV kit uses the device to generate a fixed 5V at load currents up to 1A from a 7V to 60V input supply. The device features a forced-PWM control scheme that provides constant switching-frequency operation at all load and line conditions.

Ordering Information appears at end of data sheet.

#### **Features**

- Operates from a 7V to 60V Input Supply
- 5V Fixed Output Voltage
- 1A Output Current
- 600kHz Switching Frequency
- Enable/UVLO Input
- Resistor-Programmable UVLO Threshold
- Open-Drain RESET Output
- Overcurrent and Overtemperature Protection
- Proven PCB Layout
- Fully Assembled and Tested

DESIGNATION	QTY	DESCRIPTION		
C1	1	2.2µF ±10%, 100V X7R ceramic capacitor (1210) Murata GRM32ER72A225K		
C2	1	1μF ±10%, 6.3V X7R ceramic capacitor (0603) Murata GRM188R70J105K		
C3	1	3300pF ±10%, 50V X7R ceramic capacitor (0402) Murata GRM155R71H332K		
C4	1	10µF ±10%, 10V X7R ceramic capacitor (1210) Murata GRM32DR71A106K		
C7	C7 1 33µF, 80V aluminum electrol (D = 8mm) Panasonic EEEFK1K330P			

#### **Component List**

DESIGNATION	QTY	DESCRIPTION		
JU1	1	3-pin header		
L1	1	22µH, 1.7A inductor (6mm x 6mm x 3.5mm) Coilcraft LPS6235-223ML		
R1	1	3.32MΩ ±1% resistor (0402)		
R2	1	866kΩ ±1% resistor (0402)		
R4	R4 1 100Ω resistor (0402)			
R6	1	10kΩ ±1% resistor (0402)		
TP1, TP2	0	Not installed, test points		
U1	1	Buck converter (10 TDFN-EP*) Maxim MAX17502FATB+		
— 1 Shunt   — 1 PCB: MAX17502FT EVALUA KIT		Shunt		
		PCB: MAX17502FT EVALUATION KIT		

\*EP = Exposed pad.



## Evaluates: MAX17502F in TDFN Package

### **Component Suppliers**

SUPPLIER	PHONE	WEBSITE
Coilcraft, Inc.	847-639-6400	www.coilcraft.com
Murata Electronics North America, Inc.	770-436-1300	www.murata-northamerica.com
Panasonic Corp.	800-344-2112	www.panasonic.com

Note: Indicate that you are using the MAX17502 when contacting these component suppliers.

#### **Quick Start**

#### **Recommended Equipment**

- MAX17502F EV kit
- 7V to 60V, 2A DC input power supply
- Load capable of sinking 1A
- Digital voltmeter (DVM)
- Function generator

#### Procedure

The EV kit is fully assembled and tested. Follow the steps below to verify the board operation. **Caution: Do not turn on power supply until all connections are completed.** 

- Set the power supply at a voltage between 7V and 60V. Disable the power supply.
- 2) Connect the positive terminal of the power supply to the VIN PCB pad and the negative terminal to the nearest PGND PCB pad. Connect the positive terminal of the 1A load to the VOUT PCB pad and the negative terminal to the nearest PGND PCB pad.
- Connect the DVM across the VOUT PCB pad and the nearest PGND PCB pad.
- 4) Verify that a shunt is installed across pins 1-2 on jumper JU1.
- 5) Turn on the DC power supply.
- 6) Enable the load.
- 7) Verify that the DVM displays the expected voltage.

To turn-on/off the part from EN/UVLO, follow the steps below:

- 1) Remove resistors R1 and R2 and the jumper installed across pins 1-2 on jumper JU1.
- Connect the power supply to the EV kit and turn on the power supply. Set the power supply at a voltage between 7V and 60V.
- Connect the function generator output to the EN/UVLO test loop.
- 4) EN/UVLO rising threshold is 1.24V and falling threshold is 1.24V. Make sure that the voltage-high and

voltage-low levels of the function generator output are greater than 1.24V and less than 1.11V, respectively.

5) While powering down the EV kit, first disconnect the function generator output from the EN/UVLO test loop and then turn off the DC power supply.

Care should be taken in board layout and systems wiring to prevent violation of the absolute maximum rating of the FB/VO pin under short-circuit conditions. Under such conditions, it is possible for the ceramic output capacitor to oscillate with the board or wiring inductance between the capacitor and short-circuited load, and thereby cause the absolute maximum rating of FB/VO (-0.3V) to be exceeded. This parasitic board or wiring inductance should be minimized and the output voltage waveform under shortcircuit operation should be verified to ensure that the absolute maximum rating of FB/VO is not exceeded.

#### **Detailed Description of Hardware**

The MAX17502F EV kit provides a proven design to evaluate the MAX17502F high-efficiency, high-voltage, synchronous step-down DC-DC converter. The EV kit generates a fixed 5V, at load currents up to 1A, from a 7V to 60V input supply. The EV kit features a 600kHz fixed switching frequency for optimum efficiency and component size. The EV kit features a forced-PWM control scheme that provides constant switching-frequency operation at all load and line conditions.

The EV kit includes an EN/UVLO PCB pad and jumper JU1 to enable control of the converter output. An additional  $\overrightarrow{\text{RESET}}$  PCB pad is available for monitoring the converter output. The VCC PCB pad helps measure the internal LDO voltage.

#### Soft-Start Input (SS)

The device utilizes an adjustable soft-start function to limit inrush current during startup. The soft-start time is adjusted by the value of C3, the external capacitor from SS to GND. To adjust the soft-start time, determine C3 using the following formula:

#### $C3 = 5.55 \text{ x } t_{SS}$

where  $t_{SS}$  is the required soft-start time in milliseconds and C3 is in nanofarads.

## Evaluates: MAX17502F in TDFN Package

#### Table 1. Regulator Enable (EN/UVLO) Jumper JU1 Settings

SHUNT POSITION	EN/UVLO PIN	MAX17501_OUTPUT	
1-2*	Connected to IN	Enabled	
Not installed	Connected to the center node of resistor-divider R1 and R2	Enabled, UVLO level set through the R1 and R2 resistor-divider	
2-3	Connected to GND	Disabled	

\*EP = Exposed pad.

#### Regulator Enable/Undervoltage-Lockout Level (EN/UVLO)

The device features an EN/UVLO input. For normal operation, a shunt should be installed across pins 1-2 on jumper JU1. To disable the output, install a shunt across pins 2-3 on JU1 and the EN/UVLO pin is pulled to GND. See Table 1 for JU1 settings.

#### Setting the Undervoltage-Lockout Level

The device offers an adjustable input undervoltage-lockout level. Set the voltage at which the device turns on with a resistive voltage-divider connected from VIN to GND. Connect the center node of the divider to EN/UVLO.

Choose R1 to be  $3.3M\Omega$  and then calculate R2 as follows:

$$R2 = \frac{R1 \times 1.218}{(V_{INU} - 1.218)}$$

where  $\mathsf{V}_{\text{INU}}$  is the voltage at which the IC is required to turn on.

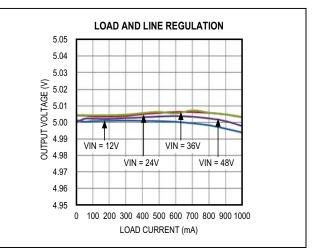


Figure 1. MAX17502F Load and Line Regulation

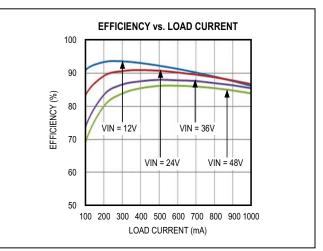


Figure 2. MAX17502F Efficiency

## Evaluates: MAX17502F in TDFN Package

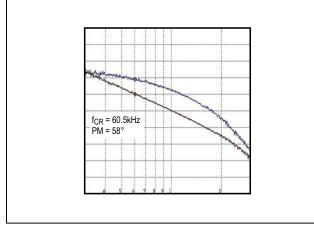
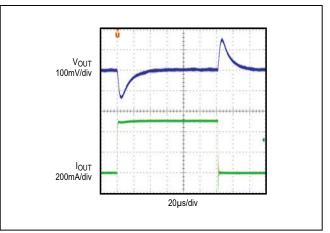



Figure 3. MAX17502F Full Load Bode Plot (VIN = 24V)






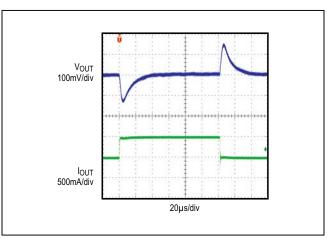


Figure 5. MAX17502F 500mA to 1A Load Transient





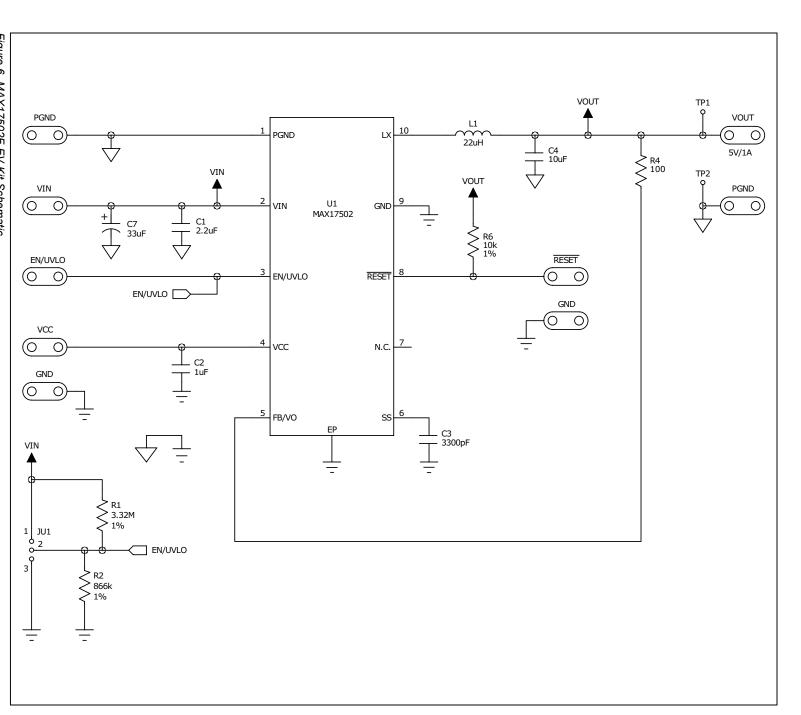

## Evaluates: MAX17502F in TDFN Package

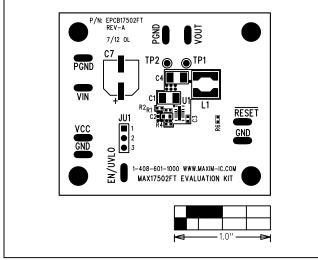


Figure 7. MAX17502F EV Kit Component Placement Guide— Component Side

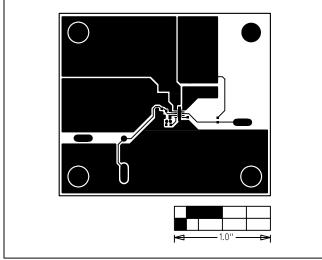


Figure 8. MAX17502F EV PCB Layout—Component Side

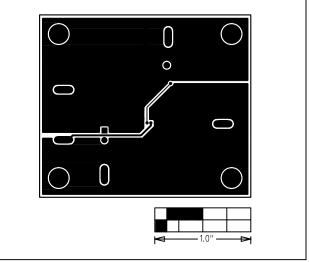


Figure 9. MAX17502F EV Kit PCB Layout—Solder Side

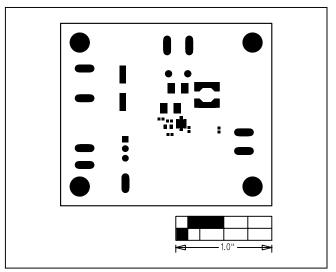


Figure 10. MAX17502F EV Kit PCB Layout—Top Solder Mask

## Evaluates: MAX17502F in TDFN Package

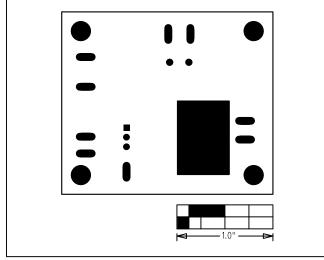


Figure 11. MAX17502F EV Kit PCB Layout—Bottom Solder Mask

## **Ordering Information**

PART	TYPE	
MAX17502FTEVKIT#	EV Kit	
#Denotes RoHS compliant.		

## Evaluates: MAX17502F in TDFN Package

#### **Revision History**

REVISION NUMBER	REVISION DATE	DESCRIPTION	PAGES CHANGED
0	11/12	Initial release	—
1	10/13	Replaced the R4 resistor value from $0\Omega$ to $100\Omega$ in the <i>Component List</i> and Figure 6 schematic; added new paragraph to the <i>Procedure</i> section about preventing violation of the abs max rating for FB/VO	1, 2, 5

For pricing, delivery, and ordering information, please contact Maxim Direct at 1-888-629-4642, or visit Maxim Integrated's website at www.maximintegrated.com.

Maxim Integrated cannot assume responsibility for use of any circuitry other than circuitry entirely embodied in a Maxim Integrated product. No circuit patent licenses are implied. Maxim Integrated reserves the right to change the circuitry and specifications without notice at any time.