



Chipsmall Limited consists of a professional team with an average of over 10 year of expertise in the distribution of electronic components. Based in Hongkong, we have already established firm and mutual-benefit business relationships with customers from,Europe,America and south Asia,supplying obsolete and hard-to-find components to meet their specific needs.

With the principle of “Quality Parts,Customers Priority,Honest Operation,and Considerate Service”,our business mainly focus on the distribution of electronic components. Line cards we deal with include Microchip,ALPS,ROHM,Xilinx,Pulse,ON,Everlight and Freescale. Main products comprise IC,Modules,Potentiometer,IC Socket,Relay,Connector.Our parts cover such applications as commercial,industrial, and automotives areas.

We are looking forward to setting up business relationship with you and hope to provide you with the best service and solution. Let us make a better world for our industry!



Contact us

Tel: +86-755-8981 8866 Fax: +86-755-8427 6832

Email & Skype: info@chipsmall.com Web: www.chipsmall.com

Address: A1208, Overseas Decoration Building, #122 Zhenhua RD., Futian, Shenzhen, China




Ammeter click

From MikroElektronika Documentation

Ammeter click is a mikroBUS™ add-on board with circuitry for measuring electric current (both AC and DC).

Features and usage notes

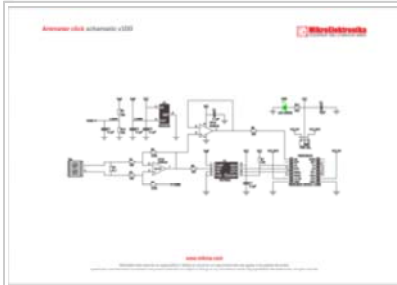

Schematic also available in PDF (<http://cdn-docs.mikroe.com/images/6/6d/Ammeter-click-board-schematic-v100.pdf>)

Two onboard screw terminals (probe+ and probe-) are bringing in the current, which then passes through a shunt resistor. A voltage proportional to the strength of the current is generated across the resistor. This voltage passes through an AD8615 operational amplifier before it's fed into a 12-bit ADC which then outputs a digital value through the mikroBUS™ SPI interface.

Ammeter click carries MCP3201, a 12-bit ADC. In case you need more precise measurements with a higher sample rate, you can use

Ammeter click with a DSP microcontroller. In such case you would take the analog voltage directly through the click's AN pin.

In both cases, the firmware processes the digital value to determine the exact amperage between 1mA and 1A for DC current. It's also possible to measure AC current by deriving the value from peak to peak measurements. At the same time, the voltage can be directly monitored through the AN pin.

The maximum safe voltage range for the current measured is 48V.

The board uses either a 3.3V or 5V power supply (it's important not to power the board from the same power source you wish to measure).

Programming

This code snippet shows how to read the ADC values from the board.

```

1 unsigned int getADC()
2 {
3     char i, buffer;
4     volatile unsigned int read, read1, avrg, sum;
5     sum = 0;
6     for(i=0; i<10; i++)
7     {
8         Chip_Select = 0;
9         read = SPI1_Read(buffer);
10        read1 = SPI1_Read(buffer);
11        Chip_Select = 1;
12        read = ((read & 0x1F) << 8);
13        read = ((read | read1) >> 1);
14        sum = sum + read;
15    }
16
17    avrg = sum / 10;
18    return avrg;
19 }


```

Code examples that demonstrate the usage of Ammeter click with MikroElektronika hardware, written for mikroC for PIC are available on Libstock (<http://libstock.mikroe.com/projects/view/1884/ammeter-click>).

Resources

- Vendor's data sheet (<http://ww1.microchip.com/downloads/en/DeviceDoc/21290D.pdf>)
- Three electronic helper, a learn.mikroe.com article covering Ammeter click (<http://learn.mikroe.com/three-electronic-helpers>)

Ammeter click

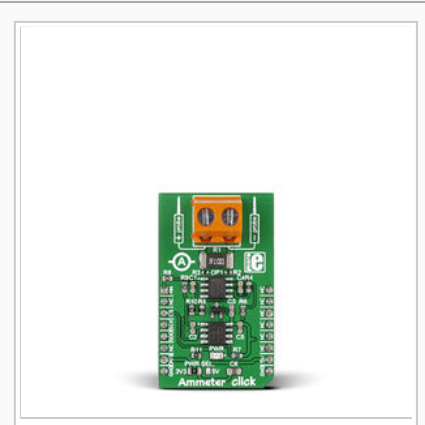

Ammeter click

IC/Module	MCP3201 (http://ww1.microchip.com/downloads/en/DeviceDoc/21290D.pdf) MAX6106 (https://www.maximintegrated.com/en/products/analog/voltage-references/MAX6106.html) AD8616 (http://www.analog.com/media/en/technical-documentation/data-sheets/AD8615_8616_8618.pdf)
Interface	SPI, AN
Power supply	3.3V, 5V
Website	www.mikroe.com/click/ammeter/ (http://www.mikroe.com/click/ammeter/)

- Ammeter click example on Libstock (<http://libstock.mikroe.com/projects/view/1884/ammeter-click>)

Retrieved from "http://docs.mikroe.com/index.php?title=Ammeter_click&oldid=608"

- This page was last modified on 4 August 2016, at 18:37.
- Content is available under Creative Commons Attribution unless otherwise noted.