



Chipsmall Limited consists of a professional team with an average of over 10 year of expertise in the distribution of electronic components. Based in Hongkong, we have already established firm and mutual-benefit business relationships with customers from,Europe,America and south Asia,supplying obsolete and hard-to-find components to meet their specific needs.

With the principle of “Quality Parts,Customers Priority,Honest Operation,and Considerate Service”,our business mainly focus on the distribution of electronic components. Line cards we deal with include Microchip,ALPS,ROHM,Xilinx,Pulse,ON,Everlight and Freescale. Main products comprise IC,Modules,Potentiometer,IC Socket,Relay,Connector.Our parts cover such applications as commercial,industrial, and automotives areas.

We are looking forward to setting up business relationship with you and hope to provide you with the best service and solution. Let us make a better world for our industry!



## Contact us

Tel: +86-755-8981 8866 Fax: +86-755-8427 6832


Email & Skype: info@chipsmall.com Web: www.chipsmall.com

Address: A1208, Overseas Decoration Building, #122 Zhenhua RD., Futian, Shenzhen, China



# BUZZ 2 click

PID: MIKROE-2720

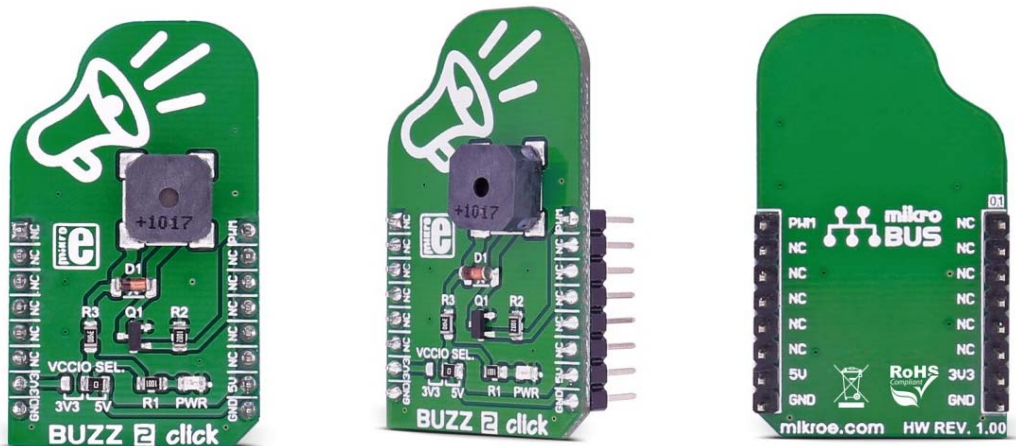

**BUZZ 2 click** carries the CMT-8540S-SMT magnetic buzzer transducer. The buzzer's resonant frequency is 4kHz. The click is designed to run on either 3.3V or 5V power supply.

How the click works

The CMT-8540S-SMT magnetic buzzer is controlled by the PWM pin on the mikroBUS™ line.

You can create different sound patterns using the Sound library supported in our compilers, or utilize the microcontroller internal PWM module to create the signal for the buzzer. Signal frequency determines the sound pitch, and the duty cycle determines the amplitude (sound volume).

## Power supply selection


Onboard VCCIO SEL zero-ohm resistor (SMD jumper) is used to determine whether 5V or 3.3V power supply is used. This resistor is placed in 5V position by default.

## Specifications

Type	Magnetic
Applications	The click is ideal for adding audio signalization feature to your prototype device
On-board modules	CMT-8540S-SMT magnetic buzzer transducer
Key Features	4kHz resonant frequency
Interface	PWM
Input Voltage	3.3V or 5V
Click board size	M (42.9 x 25.4 mm)

## Pinout diagram

This table shows how the pinout on **BUZZ 2 click** corresponds to the pinout on the mikroBUS™ socket (the latter shown in the two middle columns).

Notes	Pin					Pin	Notes
	NC	1	AN	PWM	16	<b>PWM</b>	PWM input
	NC	2	RST	INT	15	NC	
	NC	3	CS	TX	14	NC	
	NC	4	SCK	RX	13	NC	
	NC	5	MISO	SCL	12	NC	
	NC	6	MOSI	SDA	11	NC	
Power supply	<b>+3.3V</b>	7	3.3V	5V	10	<b>+5V</b>	Power supply
Ground	<b>GND</b>	8	GND	GND	9	<b>GND</b>	Ground



## Programming

Code examples for BUZZ 2 click, written for MikroElektronika hardware and compilers are available on Libstock.

### *Code snippet*

The following code snippet defines the notes and initializes the Sound library.

```
01 // notes
02 #define cS 261
03 #define dS 294
04 #define e 329
05 #define fS 349
06 #define g 391
07 #define gS 415
08 #define aHa 440
09 #define aS 455
10 #define b 466
11 #define cH 523
12 #define cSH 554
13 #define dH 587
14 #define dSH 622
15 #define eH 659
16 #define fH 698
17 #define fSH 740
18 #define gH 784
19 #define gSH 830
20 #define aH 880
21 void systemInit ()
22 {
23     AD1PCFG = 0xFFFF;
24     TRISD = 0;
25 }
26 void Buzz_2_Init ()
27 {
28     Sound_Init (&LATD, 0);
29 }
30 void Buzz_2_Task ()
31 {
32     Sound_Play (aHa, 500);
33     Sound_Play (aHa, 500);
34     Sound_Play (aHa, 500);
```

```
35     Sound_Play (fS, 350);
36     Sound_Play (cH, 150);
37     Sound_Play (aHa, 500);
38     Sound_Play (fS, 350);
39     Sound_Play (cH, 150);
40     Sound_Play (aHa, 650);
41     delay_ms (500);
42     Sound_Play (eH, 500);
43     Sound_Play (eH, 500);
44     Sound_Play (eH, 500);
45     Sound_Play (fH, 350);
46     Sound_Play (cH, 150);
47     Sound_Play (gS, 500);
48     Sound_Play (fS, 350);
49     Sound_Play (cH, 150);
50     Sound_Play (aHa, 650);
51 }
52 void main()
53 {
54     systemInit ();
55     Buzz_2_Init ();
56     while( 1 )
57     {
58         Buzz_2_Task ();
59     }
60 }
```