Chipsmall Limited consists of a professional team with an average of over 10 year of expertise in the distribution of electronic components. Based in Hongkong, we have already established firm and mutual-benefit business relationships with customers from,Europe,America and south Asia,supplying obsolete and hard-to-find components to meet their specific needs.

With the principle of "Quality Parts,Customers Priority,Honest Operation,and Considerate Service",our business mainly focus on the distribution of electronic components. Line cards we deal with include Microchip,ALPS,ROHM,Xilinx,Pulse,ON,Everlight and Freescale. Main products comprise IC,Modules,Potentiometer,IC Socket,Relay,Connector.Our parts cover such applications as commercial,industrial, and automotives areas.

We are looking forward to setting up business relationship with you and hope to provide you with the best service and solution. Let us make a better world for our industry!

Contact us

NCN511010GEVB, NCN512010GEVB, NCN512110GEVB, NCN513010GEVB

NCN51XX10GEVB Evaluation Board User's Manual

ON Semiconductor®

EVAL BOARD USER'S MANUAL

Introduction

The NCN51XX10GEVB Evaluation Board is the ideal solution for developing your KNX application with an ON Semiconductor KNX transceiver. The evaluation board contains the KNX transceiver which handles the transmission and reception of data on the bus. It will also generate all necessary voltages to power the board and external loads.

The NCN51XX10GEVB Evaluation Board assures safe coupling to and decoupling from the KNX bus. Bus monitoring warns the external microcontroller for loss of power so that critical data can be stored in time.

Features

- 9,600 baud KNX Communication Speed
- Supervision of KNX Bus Voltage
- High Efficient 1.2 V to 21 V Selectable DC−DC

- Converter to Drive External Loads
- Monitoring of Power Regulators
- No Additional Power Supply Required
- Buffering of Sent Data Frames (Extended Frames Supported)
- Selectable UART or SPI Interface to Host Controller
- Selectable UART and SPI Baud Rate to Host Controller
- Optional CRC on UART to the Host
- Optional MARKER Character to the Host
- Optional Direct Coupling of RxD and TxD to Host (Analog Mode)
- Auto Polling (Optional)
- Temperature Monitoring
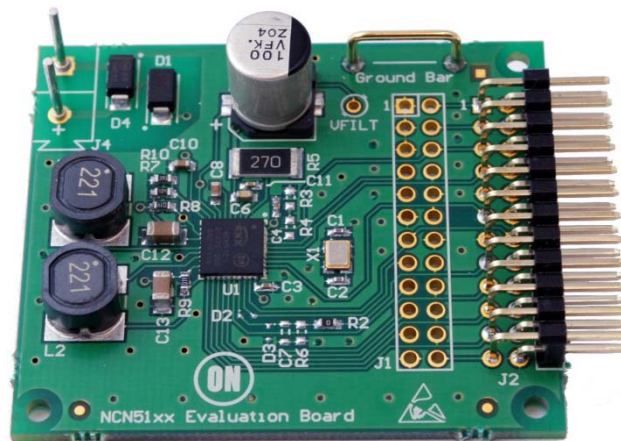- Operating Temperature Range of −40°C to +105°C

Figure 1.The NCN51XX10GEVB Evaluation Board

NCN51XX Description

The NCN51XX10GEVB provides an evaluation board for ON Semiconductor KNX transceivers that can be easily connected to a prototype design. Table 1 lists the available connectors on this board.

Table 1. CONNECTOR DESCRIPTION OF THE NCN51XX10GEVB BOARD

Connector	Description
J4	KNX Bus Connection
J2	Interface Connector
J1	Interface Connector (alternate)

Electrical Characteristics

Operating ranges define the limits for functional operation and parametric characteristics of the evaluation board. Note that the functionality of the evaluation board outside these operating ranges is not guaranteed. Operating outside the recommended operating ranges for extended periods of time may affect device reliability.

Table 2. OPERATING RANGES

Symbol	Parameter	Min	Max	Units
V_{BUS}	Voltage on positive pin of J4 (Note 1)	+20	+33	V
V_{DIG}	Voltage on J1 (Pins 7, 8, 12, 13, 15–22) and J2 (Pins 7, 8, 11, 14–22)	0	+3.3	V
V_{ANA}	Output Voltage on J1 (Pin 6) or J2 (Pin 5)	0	+3.3	V
V_{DD1}	Output Voltage on J1 (Pin 24) or J2 (Pin 23)	0	+3.3	V
V_{DD2}	Output Voltage on J1 (Pin 2) or J2 (Pin 1) (Note 2)	0	+21	V
V_{20V}	Output Voltage on J1 (Pin 4) or J2 (Pin 3)	0	+22	V
T_a	Ambient Temperature	−40	+105	°C

1. Voltage indicates DC value. With equalization and active pulse, bus voltage must be between 11 V and 45 V
2. See Adjustable DC – DC Converter page 7 for the limitations!

NCN51XX10NGEVB
NCN51010GEVB, NCN51020100GEVB, NCN5121010GEVB, NCN512110GEVB, NCN513010GEVB
NCN51XX10NGEVB Description
Schematic Diagram – BOM List – PCB Layout

3

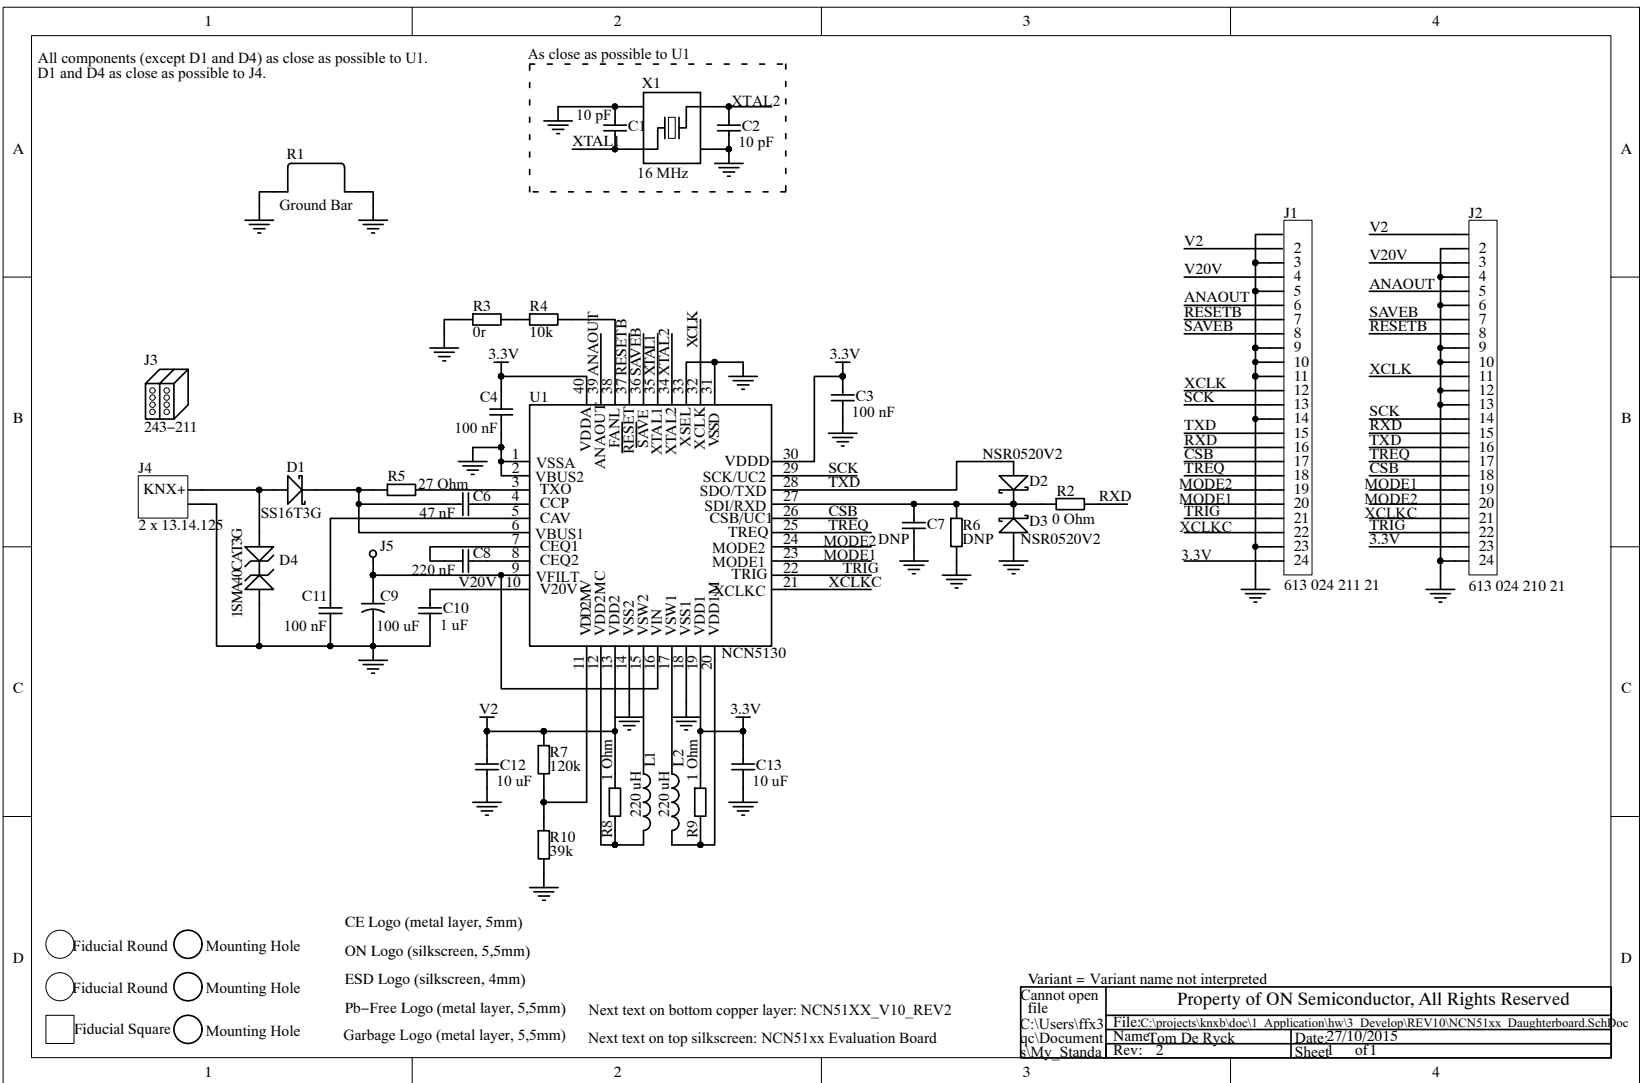**Figure 2.Schematic of NCN51XX10NGEVB**

All components (except D1 and D4) as close as possible to U1.
D1 and D4 as close as possible to J4.

As close as possible to U1

X1
10 pF   C1
XTAL   XTAL2
                C2
              10 pF
16 MHz

R1
Ground Bar

J3
243–211

J4
KNX+
2 x 13.14.125

R3 0r   R4 10k

3.3V

C4 100 nF

U1
VSSA
VBUS2
TXO
CCP
CAV
VBUS1
CEQ1
CEQ2
VFILT
V20V

VDDA
ANAOUT
FANL
RESET
SAVE
XTAL1
XTAL2
XSEL
XCLK
VSSD

VDDD
SCK/UC2
SDO/TXD
SDI/RXD
CSB/UC1
TREQ
MODE2
MODE1
TRIG
XCLKC

NCN5130

SCK
TXD
CSB
TREQ
MODE2 DNP
MODE1
TRIG
XCLKC

3.3V
C3 100 nF

NSR0520V2
D2
R2 RXD
D3 0 Ohm
NSR0520V2

C7   R6 DNP

D1
SS16T3G
R5 27 Ohm
C6 47 nF

J5
C8 220 nF
V20V
C10 1 uF

D4
1SMA40CAT3G
C11 100 nF
C9 100 uF

VDD2MV
VDD2MC
VDD2
VSS2
VSW2
VIN
VSW1
VSS1
VDD1
VDD1M

V2
C12 10 uF
R7 120k
R8 1 Ohm
L1 220 uH
L2 220 uH
R9 1 Ohm
3.3V
C13 10 uF

R10 39k

J1
V2
V20V
ANAOUT
RESETB
SAVEB
XCLK
SCK
TXD
RXD
CSB
TREQ
MODE2
MODE1
TRIG
XCLKC
3.3V
613 024 211 21

J2
V2
V20V
ANAOUT
SAVEB
RESETB
XCLK
SCK
RXD
TXD
TREQ
CSB
MODE1
MODE2
XCLKC
TRIG
3.3V
613 024 210 21

Fiducial Round   Mounting Hole
Fiducial Round   Mounting Hole
Fiducial Square Mounting Hole

CE Logo (metal layer, 5mm)
ON Logo (silkscreen, 5,5mm)
ESD Logo (silkscreen, 4mm)
Pb–Free Logo (metal layer, 5,5mm)
Garbage Logo (metal layer, 5,5mm)

Next text on bottom copper layer: NCN51XX_V10_REV2
Next text on top silkscreen: NCN51xx Evaluation Board

Variant = Variant name not interpreted

Cannot open file
C:\Users\ffx3qc\Documents\My_Standa
File:C:\projects\knxb\doc\1_Application\hw\3_Develop\REV10\NCN51xx_Daughterboard.SchDoc
Name Tom De Ryck
Date:27/10/2015
Rev: 2
Sheet of 1

Table 3. NCN51XX10NGEVB BILL OF MATERIALS

Designator	Qty	Description	Value (NCN5110)	Value (NCN5120)	Value (NCN5121)	Value (NCN5130)
C1, C2	2	Multilayer Ceramic, COG, 50 V, ±0, 5 pF, 0402	DNP	10 pF		
C3, C4, C11	3	Multilayer Ceramic, X7R, 10 V, ±10%, 0402	100 nF			
C6	1	Multilayer Ceramic, X7R, 50 V, ±10%, 0603	47 nF			
C7			DNP			
C8	1	Multilayer Ceramic, X7R, 50 V, ±10%, 0603	220 nF	4.7 nF	220 nF	
C9	1	SMD Electrolytic Capacitor, 35 V, ±20%, 8x10	100 µF			
C10	1	Multilayer Ceramic, X7R, 35 V, ±10%, 0603	1 µF			
C12, C13	2	Multilayer Ceramic, X7R, 25 V, ±20%, 1206	10 µF			
D1	1	1 A Schottky Rectifier, SMA	SS16T3G			
D2, D3			DNP			
D4	1	400 Watt SMA Transient Voltage Suppressor, 40 V Bidirectional, SMA	1SMA40CAT3G			
J2	1	WR−PHD Angled Pin Header, Dual Row, 24 Pins, 2,54 mm Pitch	Wurth Elektronik 613 024 210 21			
J3	1	EIB (KNX) Bus Coupler Unit Connector, Dark Grey and Red	Wago 243−211			
J4	1	EIB (KNX) Bus Coupler Unit Pins, 8,5 mm Length, 5,75 mm pitch	Ettinger 13.14.125			
L1, L2	2	WE−PD2SR SMD Shielded Power Inductor, 7,5x8,0	220 µH			
R1	1	Shorting Link, Pitch 10.16 mm, Height 9 mm, Not−Isolated	0r			
R2		Thick Film Resistor, 100 mW, ±5%, 0603	0r			
R3	1	Thick Film Resistor, 100 mW, ±5%, 0603	0r	DNP		0r
R4	1	Thick Film Resistor, 100 mW, ±1%, 0603	10k	DNP		10k
R5	1	Thick Film Resistor, 1 W, ±5%, 2512	27r	22r	27r	
R7	1	Thick Film Resistor, 100 mW, ±5%, 0603	120k	33k	120k	
R6			DNP			
R8, R9	2	Thick Film Resistor, 100 mW, ±1%, 0603	1r			
R10	1	Thick Film Resistor, 100 mW, ±5%, 0603	39k	180k	39k	
U1	1	ON Semiconductor KNX Transceiver, NQFP−40	NCN5110	NCN5120	NCN5121	NCN5130
X1	1	Crystal, SMD, 4 Pins, 3,2 x 2,5 mm	DNP	16 MHz		
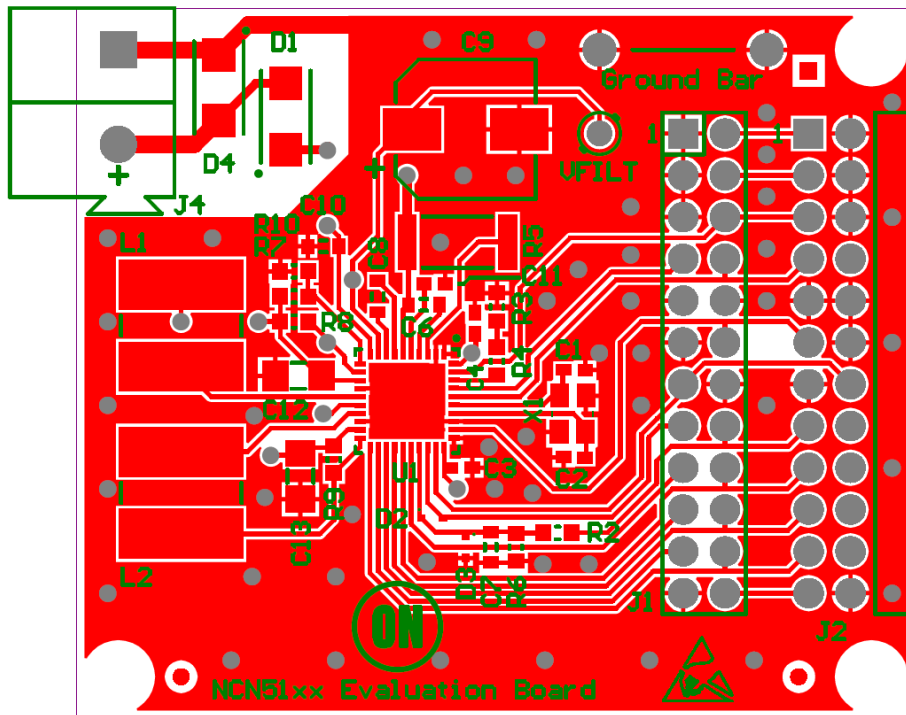
Figure 3.Top Layer Layout
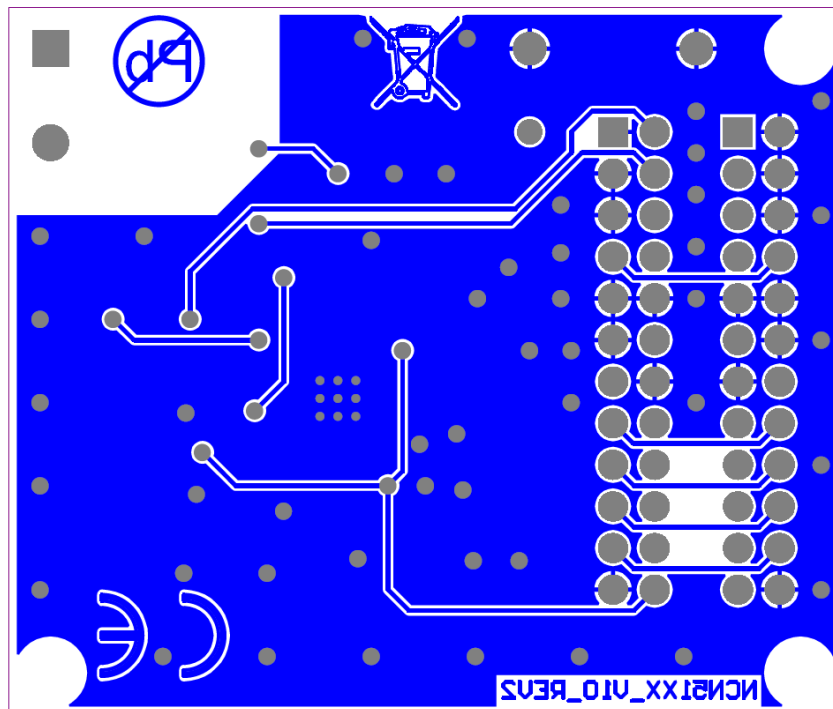
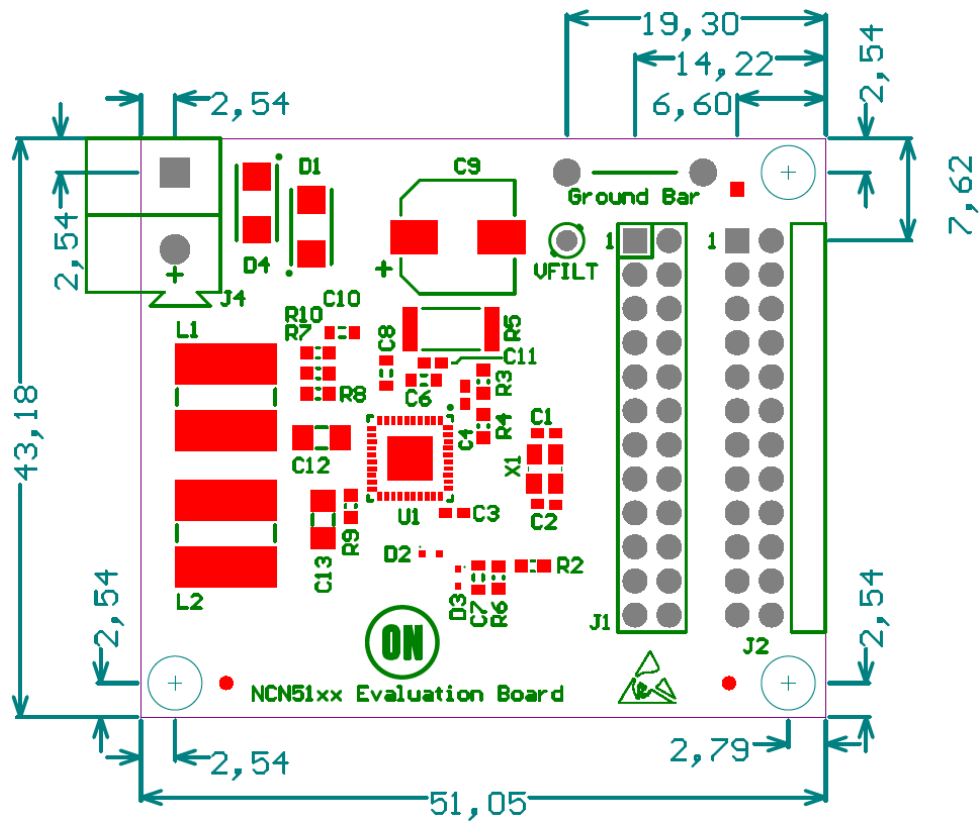**Figure 4.Bottom Layer Layout**

Figure 5.PCB Dimensions

General Overview

Because the NCN5120 Development Board contains a KNX Certified KNX Transceiver no further details on KNX will be given in this document. Detailed information on the ON Semiconductor Certified KNX Transceivers can be found in the NCN5110/NCN5120/NCN5121/NCN5130 datasheets (www.onsemi.com). Detailed information on the KNX Bus can be found on the KNX website and in the KNX standards (www.knx.org).

KNX Bus Connection

Connection to the KNX bus is done by means of J4. A standard Wago connector (type $243 - 211$) can be used for this (see Figure 6). A reverse protection diode (D1, Figure 2)

is foreseen (mandatory) as also a Transient Voltage Suppressor (D2, Figure 2). Minimum V_{BUS} is 20 V (see KNX standard).

I_{BUS} is limited by the transceiver, as well as the rate of change of I_{BUS}. This limitation is required by the KNX standard.

If the FANIN pin is open, I_{BUS} can maximum be 12 mA and change at 0.5 mA/ms. If the FANIN pin is shorted to ground, I_{BUS} can maximum be 24 mA and change at 1 mA/ms. For NCN5110 and NCN5130, the FANIN pin can also have a resistance to ground to set the current limit to any value between 6mA and 47 mA, with an associated current slope limitation of 0.23 mA/ms to 1.95 mA/ms.

Figure 6.KNX Bus Connector

Power Supplies

The KNX transceiver provides the power from the bus for the complete application. The evaluation board will provide the following voltages to the application.

VFILT

This is an unregulated voltage resulting on a buffer capacitance, after observing the bus current (slope) limits. All other voltages are derived from this voltage. If the application has sharp load transients on any voltage rail, enough buffer capacitance must be placed on VFILT. See the datasheet for more information.

V20V:

This is a linear regulated +20 V. Since this voltage is derived from VFILT, it may be that this voltage is lower than 20 V when the bus voltage is low or when during a load transient VFILT drops below 20 V. For more information on this rail and the current limit, see the datasheet.

+3V3

A +3V3 is provided from one DCDC convertor. This voltage is also used as the supply for the transceiver. Although V_{DD2} is capable of delivering 100 mA, the maximum current capability will not always be usable. One needs to make sure that the KNX bus power consumption stays within the KNX specification.

VDD2

This is a second power supply which can be used to drive external loads. The voltage is programmable between 1.2 V (NCN5110/NCN5121/NCN5130) or 3.3 V (NCN5120) and 21 V by means of an external resistor divider (R7 and R10, see Figure 2).

The voltage divider can be calculated as follows for NCN5120:

$$R_7 = \frac{R_{10} \times R_{VDD2M}}{R_{10} + R_{VDD2M}} \times \frac{V_{DD2} - 3.3}{3.3}$$

R_{VDD2M} is between 60 k and 140 k (typical 100 k).

The voltage divider can be calculated as follows for NCN5110/NCN5121/NCN5130:

$$R_7 = R_{10} \times \frac{V_{DD2} - 1.2}{1.2}$$

The DC value of the VFILT line should be higher than V_{DD2}.

Although V_{DD2} is capable of delivering 100 mA, the maximum current capability will not always be usable. One needs to make sure that the KNX bus power consumption stays within the KNX specification.

Crystal Oscillator

A crystal of 16 MHz (X1, see Figure 11) is foreseen on the development board. This clock signal is also supplied to the microcontroller. As the clock signal is only used for digital services, the NCN5110 does not require a crystal. See the datasheet (www.onsemi.com) for more details on this block.

Interface

The device can communicate with the host controller by means of a UART interface or an SPI interface. The selection of the interface and communication speed is done by the pins MODE1, MODE2, TREQ, SCK/UC2 and CSB/UC1 which can be pulled up or down, or connected to the microcontroller. More details on the different interfaces can be found in the datasheet.

Monitoring

RESETB and SAVEB

The KNX transceiver controls the reset state of the microcontroller by means of the RESETB signal. An additional SAVEB signal can be monitored by the microcontroller to detect possible issues. See datasheet for more details on these two signals.

Voltage Supervisors

On Semiconductor KNX transceivers have different voltage supervisors, which can be read out through registers. Please check the datasheet for more details.

Temperature Monitor

The transceiver produces an over−temperature warning (TW) and a thermal shutdown warning (TSD), which can be read out through resistors. Please check the datasheet for more details.

FAQ

1. *Is this development board KNX Certified?*

No, only the transceiver is KNX Certified. The development board may only be used for evaluation of the transceiver. It is not allowed to use the development board in a final product or to sell it as a KNX Certified product. Contact ON Semiconductor if you want to use the development board as a final product.

2. *What 3rd party companies do you recommend for the higher layer stacks?*

ON Semiconductor does not recommend any 3rd party company in particular. Several 3rd party companies have KNX Certified stacks and it's always advised to use one of these stacks. Some companies have experience with ON Semiconductor KNX transceivers. Contact ON Semiconductor for more information.

3. *Can we freely reuse the schematic and layout of this development board?*

It is allowed to reuse the schematic, components and layout of the evaluation board for your own application. Because the operating conditions of your design are not known by ON Semiconductor, one must always fully verify the design even if it's based on this evaluation board. Contact ON Semiconductor if additional information is required.

4. *Can we request ON Semiconductor to supply the higher layer stacks?*

By no means will ON Semiconductor provide any higher layer stacks. Certified higher layer stacks can be provided by 3rd party companies.

5. *How much load can the outputs drive?*

The maximum allow load can be calculated with the formula as given in Adjustable DC−DC Converter (page x13). I_{DD2} defines the maximum load the outputs can drive in total.

6. *Is it possible to test all interfaces (UART, SPI, Analog Mode) with this evaluation board?*

Yes, the board can be used with all possible interfaces. One has to be careful however when using the Analog Mode. In the Analog Mode the digital of NCN5120 is bypassed. If the microcontroller would force the RXD−pin (pin 29) high, the transceiver would pull the KNX bus low continuously, which could lead to issues.

7. *I'm having issues with the voltage regulators whenever I'm going above a certain current. What could be the issue?*

To be able to take more than 13 mA from the KNX bus one needs to pull the FANIN −pin of NCN5120 low. This can be done by shorting J5 (add jumper). See datasheet for more info on the FANIN −pin.

Additionally, there is a current limit on V20/3V3/VDD2