

Chipsmall Limited consists of a professional team with an average of over 10 year of expertise in the distribution of electronic components. Based in Hongkong, we have already established firm and mutual-benefit business relationships with customers from, Europe, America and south Asia, supplying obsolete and hard-to-find components to meet their specific needs.

With the principle of "Quality Parts, Customers Priority, Honest Operation, and Considerate Service", our business mainly focus on the distribution of electronic components. Line cards we deal with include Microchip, ALPS, ROHM, Xilinx, Pulse, ON, Everlight and Freescale. Main products comprise IC, Modules, Potentiometer, IC Socket, Relay, Connector. Our parts cover such applications as commercial, industrial, and automotives areas.

We are looking forward to setting up business relationship with you and hope to provide you with the best service and solution. Let us make a better world for our industry!



Contact us

Tel: +86-755-8981 8866 Fax: +86-755-8427 6832

Email & Skype: info@chipsmall.com Web: www.chipsmall.com

Address: A1208, Overseas Decoration Building, #122 Zhenhua RD., Futian, Shenzhen, China









PD-IM-7648M

PD-IM-7648MH

PD-IM-7648T4

PD-IM-7648T4H

Evaluation System User Guide

Featuring:

PD69208M/T4 - PoE Manager,

PD69200 - PoE Controller

Document Issue: 1.3

Security Status: Restricted

Date: March 2018

PRODUCTION DATA: Information contained in this document is proprietary to Microsemi and is current as of publication date. This document may not be modified in any way without the express written consent of Microsemi. Product processing does not necessarily include testing of all parameters. Microsemi reserves the right to change the configuration and performance of the product and to discontinue product at any time.



Reference Documents

- IEEE 802.3af-2003 Standard, DTE Power via MDI
- IEEE802.3at-2009 Standard, DTE Power via MDI
- PD69208M/T4 and PD69200 datasheet.
- Application note 211: Designing a PD69208M/T4 48-port Enhanced PoE Systems and Layout Design Guidelines, catalogue PD69208M/T4_AN_211
- PD69200 Serial Communication Protocol User Guide,

The above documents can be obtained via Microsemi customer support. To access other documents, go to our website at http://www.microsemi.com/.





Table of Contents

1	Abou	ıt this Guide	4
•	1.1	Objectives	4
	1.2	Audience	
	1.3	Organization	
2	Intro	ductionduction	
	2.1	Evaluation Board/System Ordering Information	7
	2.2	Evaluation System Features	
	2.3	Evaluation System Interfaces & Connections	
	2.4	Physical Characteristics	
3	Phys	ical Description	8
	3.1	Switches and Jumpers	
	3.1.1	UART Communication Selection	8
	3.1.2	Reset Button	8
	3.2	Connectors	
	3.2.1		
	3.2.2		9
4	Elect	rical Characteristics	. 17
5	Insta	llation	
	5.1	Mechanical Assembly	
	5.2	Electrical Assembly	
	5.3	Initial Configuration	. 18



1 About this Guide

1.1 Objectives

This user guide provides both a description of, and operating procedures for, Microsemi's PD-IM-7648 evaluation system. This system is used to evaluate the performance of DB's (daughterboard) PoE applications.

1.2 Audience

This user guide is intended for qualified personnel, meaning operators and technicians who have a background in basic electronics.

1.3 Organization

This guide is divided into several sections:

Chapter 1	"About this Guide," which describes the objectives, audience and organization.
Chapter 2	"Introduction," which gives an overview of the main functions, features, physical
	characteristics, and ordering information.
Chapter 3	"Physical Description," which provides a physical description of the components (switches, jumpers, connectors).
Chapter 4	"Electrical Characteristics," which lists the electrical characteristics of the PoE evaluation system.
Chapter 5	"Installation," which describes the installation process.



2 Introduction

Microsemi's PD-IM-7648 evaluation system consists of: PD-IM-7500 MB Motherboard (see Figure 2), PD-DB-7648 Daughterboard (see Figure 3), power supply, case, and cables. The evaluation system (Figure 1) provides designers with the needed environment to evaluate the performance and implementation of PD69208M/T4-PoE Manager and PD69200-PoE Controller mounted on the PD-DB-7648 Daughterboard.

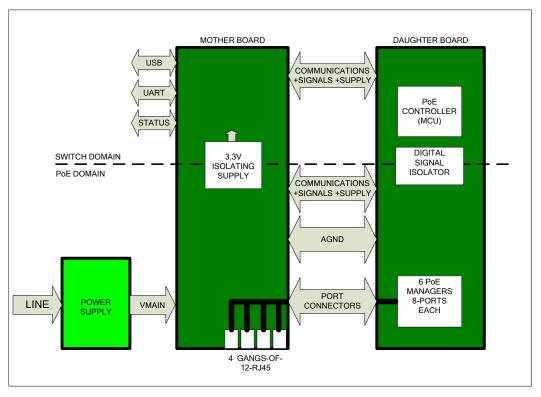


Figure 1:PD-IM-7648x Evaluation System Block Diagram

This document details the steps and connection instructions required to install and operate this board.

The Evaluation Board enables PoE designers to evaluate Microsemi's PoE solution with maximum flexibility and ease in configuration.

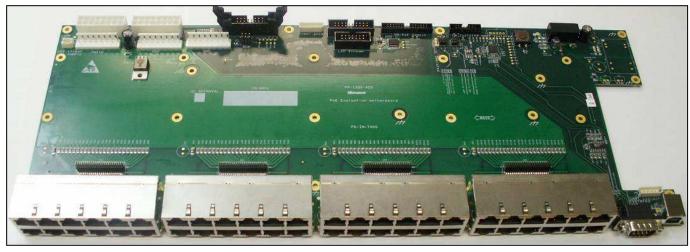


Figure 2: PD-IM-7500 MB (Motherboard) Evaluation Board - General View



Figure 3: PD-DB-7648x (Daughterboard) Evaluation Board - General View

VMAIN power supply can output 225W. It supplies power via connector J6 (Vmain) and J7 (AGND).



Figure 4: Power Supply

The enclosure houses power supply, motherboard, and the daughterboard.



Figure 5: System in the Enclosure



2.1 Evaluation Board/System Ordering Information

The following table lists EVB ordering information.

Ordering Number	Description
PD-IM-7648M	48 ports PoE system: MB evaluation board (PD-IM-7500), DB evaluation board (PD-DB-7648M) in an enclosure with power supply.
PD-IM-7648MH	48 ports PoE system: MB evaluation board (PD-IM-7500), DB evaluation board (PD-DB-7648M) in an enclosure with power supply. Including 4pair cables for high power applications evaluation.
PD-IM-7648T4	48 ports PoE system: MB evaluation board (PD-IM-7500), DB evaluation board (PD-DB-7648T4) in an enclosure with power supply.
PD-IM-7648T4H	48 ports PoE system: MB evaluation board (PD-IM-7500), DB evaluation board (PD-DB-7648T4H) in an enclosure with power supply. Including 4pair cables for high power applications evaluation.

2.2 Evaluation System Features

- Four gangs (each contains 12 X RJ45 connectors)
- Switch domain isolated from PoE domain
- Switch domain USB interface
- Switch domain UART (RS232) interface
- External power supplies interface
- PoE Manager Manual Reset (on daughterboard)
- PoE Controller Manual Reset (on motherboard)
- There are no pulse transformers nor common mode chocks per port
- Evaluation system working temperature: 0° to +50°C
- RoHS compliant

2.3 Evaluation System Interfaces & Connections

The board has several interfaces:

- RJ45: Running from MB to PD (powered device) (MB:J29-J32)
- Ports Interface: Ports connection between MB (J22-J25) and DB (J11-J14)
- Vin Connectors: DC in (Vmain) connection to MB (J6, J7), and MB (J15, J18) to DB (J9, J10)
- Communication and Indication: Communication and indication signals transferred from MB (J2, J3) to DB (J4, J7)
- Isolated Host Control and Indication: Hosting system to MB (J4)
- Isolated USB: USB to UART communication between hosting system and MB (U7)
- Isolated RS232: RS232 communication between hosting system and MB (J33)
- Isolated UART: UART communication between hosting system and MB (J26)
- Isolated I²C: I²C communication between hosting system and MB (J14)
- External Power Supplies: 'Power good' signals coming from power supplies indicates operational/failed power supply to MB (J1)
- JTAG/SWD: PoE controller burning interface to DB (J3)

2.4 Physical Characteristics

Table 1 lists the evaluation system's physical characteristics.

Table 1: Physical Characteristics

Parameter	Value
Mechanical dimensions: MB	420 x 168 x 30mm (l x w x h)
Mechanical dimensions: DB	420 x 50 x 20mm (l x w x h)
Mechanical dimensions: Case	435 x 305 x 42mm (l x w x h)



3 Physical Description

3.1 Switches and Jumpers

The evaluation system comprises switches and jumpers used to select the desired configuration states of the board. Default configurations are indicated as 'default.'

3.1.1 UART Communication Selection

There are three UART communication options:

- USB to UART (connecting USB cable to U7).
 For this connection a driver for CP210x should be installed. The driver can be downloaded from http://www.silabs.com/products/mcu/Pages/USBtoUARTBridgeVCPDrivers.aspx.
- RS232 to UART (connecting RS232 cable to J33).
- UART input (connecting UART cable to J26).
- J6 on DB must be open in order to work in UART mode.

Using J11 and J12 jumpers, the following three options are available (see Table 2).

Table 2: UART Communication Selection

RS232 to UART	USB to UART	UART input
J11 – N.C	J11 – Short from pin "1" to "2"	Short from J11 pin
J12 – Short from pin "1" to "2"	J12 – N.C	2 to J12 pin 2

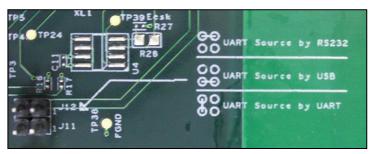


Figure 6: UART Communication Selection (J11, J12)

3.1.2 Reset Button

The dedicated Reset push button SW1 (see Figure 7) resets DB PoE controller PD69200.



Figure 7: Reset Push Button (SW1)

3.2 Connectors

The following sections provide both a general and a detailed description of the board connectors.

3.2.1 Connectors Table

The evaluation system's connectors are listed in Table 3.



Table 3: Connector List

Number	Connector	Name	Description
1	MB: J29-J32	RJ45 Connectors	48 'RJ45' ports connecting MB to Powered Device load.
2	MB: J22-J25 DB: J11-J14	Port Connection	Port connection (Vport_pos and Vport_neg) between MB and DB implemented by using four connectors.
3	MB: J6, J7, J15, J17, J18 DB: J9, J10 (GND only)	Vin Connectors	DC in (Vmain) connection used to power MB and DB Evaluation systems.
4	MB: J2, J3 DB: J4, J7	Communication and Indication	Communication (UART, I ² C and ESPI) and indication signals (reset, disable, etc) running between MB and DB, using flat cables connected to J2 (PoE domain) and J3 (Host Domain) connectors.
5	MB: J4	Isolated External HOST	Control and indication signals running between an external hosting system and MB (Host Domain on the daughterboard), of limited use as most of the communication is via USB, UART, and RS232.
6	MB: U7	Isolated USB	USB communication coming from hosting system (U7), converted to UART or I ² C communication and directed to DB (Host Domain on daughterboard)
7	MB: J33	Isolated RS232	RS232 signal levels coming from the hosting system (J33) and converted to UART signal levels, then directed to DB (Host Domain on daughterboard).
8	MB: J26	Isolated UART	UART interface from hosting system and MB, then directed to DB (Host Domain on daughterboard).
9	MB: J16	LEDs Indication	Not Used
10	MB: J8	Daisy Chaining	Not Used
11	MB: J1	External Power Supplies	'Power Good' indication signals coming from power supplies, indicating operating/failed power supply status. It is also a hot-swap signal for hot swappable PoE applications.
12	MB: J5	Tester	Not Used
13	MB: J13	BDM	Not Used
14	DB: J1	LED Stream	Port's status presented via LEDs indication signals running to LED board.
15	DB: J3	JTAG	PoE Controller burning interface

3.2.2 Connectors Detailed Explanation

The numbering is in reference to the numbers given in Table 3.

1. RJ45 Connectors (see Figure 8)

There are four dedicated RJ45 connectors; each contains 12 RJ45 ports.

Pin No. (Each RJ45)	Signal Name	Description
4, 5	SPARE - Vport_Pos	The PoE's Positive spare port
7, 8	SPARE - Vport_Neg	The PoE's Negative spare port
1, 2	DATA - Vport_neg	The PoE's negative data port
3, 6	DATA - Vport_neg	The PoE's positive data port

Manufacturer: FOXCONN

Manufacture part number: JM371B3-KD10-4F



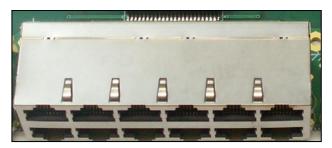


Figure 8: RJ45 Connectors

2. Port Connection (see Figure 9)

Ports Connection (spare_NEG, spare_POS, data_NEG and data_POS) between MB's RJ45 and DB PoE circuitry is utilized by four connectors.

Pin No.	Signal Name	Description
1, 5, 9, 13, 17, 21, 25, 29, 33, 37, 41, 45	spare_NEGx	PoE's negative spare port
2, 6, 10, 14, 18, 22, 26, 30, 34, 38, 42, 46	spare_POSx	PoE's positive spare port
3, 7, 11, 15, 19, 23, 27,31, 35, 39, 43, 47	data_NEGx	PoE's negative data port
4, 8, 12, 16, 20, 24, 28, 32, 36, 40, 44, 48	data_POSx	PoE's positive data port

Manufacturer: CviLux

Manufacture part number: CH57482M100-PA

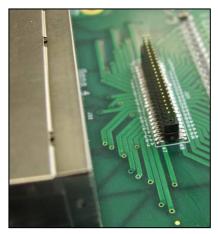


Figure 9: Port Connection

3. Vin Connectors (see Figure 10)

DC in (Vmain) connection, used for powering the MB and DB Evaluation systems. 44 VDC > Vmain> 57 V DC.

MB: J6

Pin No.	Signal Name	Description
1-16	Vmain (Vin +)	Main positive voltage (referenced to AGND)

MB: J7

Pin No.	Signal Name	Description
1-16	AGND (Vin -)	Analog ground

Manufacturer: CviLux

Manufacture part number: CP01-316130

MB: J17



Pin No.	Signal Name	Description
1-8	Vmain (Vin +)	Main positive voltage (referenced to AGND)

MB: J15. DB: J7

Pin No.	Signal Name	Description
1(MB only)	Vmain (Vin +)	Main positive voltage (referenced to AGND)
2-8	AGND (Vin -)	Analog ground

MB: J18. DB: J8

Pin No.	Signal Name	Description	
1(MB only)	Vmain (Vin +)	Main positive voltage (referenced to AGND)	
2-8	AGND (Vin -)	Analog ground	

Manufacturer: CviLux

Manufacture part number: CI5208P1VOO

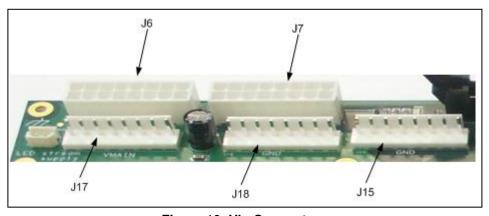


Figure 10: Vin Connectors

4. Communication and Indication (see Figure 11)

Communication (UART, I2C and ESPI) and indication signals (reset, disable, etc.) run between MB and DB using flat cables connected to J2 (PoE domain) and J3 (Host Domain) connectors.

MB: J3, DB: J4

Pin No.	Signal Name	Description	
1	xReset_IN_isolated	Reset signal sent from hosting system.	
2	xDisable_ports_isolated	Disable signal sent from hosting system.	
3	xSystem_ok_isolated	System_ok signal sent from hosting system.	
4	RTS	Reserved	
5	xInt_out_isolated	Int_out signal sent from hosting system.	
6	reserved	Reserved	
7	3_3V_iso	3.3 VDC sent from hosting system (isolated from PoE domain), referenced to 'GND_Floating.'	
8, 13, 16	GND_Floating	Hosting system ground (isolated from PoE domain)	
9	UART_Tx_isolated	Tx signal (transmit), direction sent from PoE controller (3.3V tolerate).	
10	UART_Rx_isolated	Rx signal (receive), to PoE controller (3.3V tolerate).	
11	SDA_auto_mode_isolated	I ² C SDA: data I ² C signal between hosting system and PD69208M/T4	
12	SCL_auto_mode_isolated	I ² C SCL: clock I ² C signal between hosting system and PD69208M/T4	
14	SDA_enhanced_mode_isolated	I ² C SDA: Data I ² C signal between hosting system and PD69200.	



15	SCL enhanced mode isolated	I ² C SCL: Clock I ² C signal between hosting system and PD69200.

Manufacturer: CviLux

Manufacture part number: CH74162V100

MB: J2, DB: J7

Pin No.	Signal Name	Description	
1	PG0	Power good signal, power supply status indication	
2	PG1	Power good signal, power supply status indication	
3	PG2	Power good signal, power supply status indication	
4	PG3	Power good signal, power supply status indication	
5	xReset_IN	Reset signal to PoE application (used for cascading purposes).	
6	xDisable_ports	Disable_ports signal to PoE application (used for cascading purposes).	
7	xPoE_RESET	Reset signal to PD69208M/T4 ICs (used for cascading purposes).	
8	xHSWP	Hot Swap control signal, used when PoE application is hot swappable.	
9	BKGD	PoE controller burning signal.	
10, 11,	GND_D	Digital ground at PoE domain.	
17, 18,			
21, 23,			
24, 29			
12, 13	Reserved	Reserved	
12	SDA_in_auto_mode	I ² C SDA_in – Data I ² C signal (used for cascading purposes).	
14	SDA_out_auto_mode	I ² C SDA_out – Data I ² C signal (used for cascading purposes).	
15	SCL_auto_mode	I ² C SCL – Clock I ² C signal (used for cascading purposes).	
19	LED_SCK	Clock LED signal – Running to LED indication board.	
20	LED_DATA	Data LED signal – Running to LED indication board.	
22	LED_Latch	Latch LED signal – Running to LED indication board.	
25	ESPI_CS	ESPI 'chip select' signal (used for cascading purposes).	
26	ESPI_MOSI	ESPI 'master out slave in' signal (used for cascading purposes).	
27	ESPI_MISO	ESPI 'master in' slave out' signal (used for cascading purposes).	
28	ESPI_SCK	ESPI clock (used for cascading purposes).	
30	VAUX3P3	3.3 VDC = VAUX3P3 and 3V3_AUX, application's reference voltage	
		(isolated from hosting system domain), referenced to 'GND_D.'	

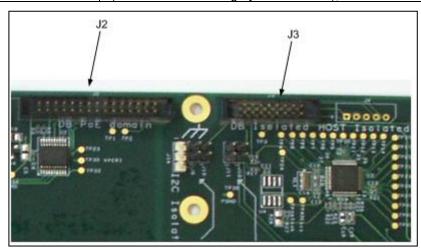


Figure 11: Communication and Indication Connectors

Manufacturer: CviLux

Manufacture part number: CH74302V100

5. Isolated External Host (see Figure 12)

This host transmits control and indication signals beween the hosting system and MB. There is limited use for this connector as most communication is via USB, RS232 or UART.



MB: J4

Pin No.	Signal Name	Description
1	xReset_IN_isolated	Reset signal from hosting system.
2	xDisable_ports_isolated	Disable signal from hosting system.
3	xInt_out_isolated	Int_out signal from hosting system.
4	xSystem_ok_isolated	System_ok signal from hosting system.
5	GND_Floating	Hosting system ground (isolated from PoE domain).

Manufacturer: CviLux

Manufacture part number: CI25-05P1V00



Figure 12: Isolated External Host

6. Isolated USB Interface (see Figure 13)

This interface supplies USB communication coming from hosting system (U7), converted to UART or I2C communication and directed to DB (Isolation circuitry on the daughterboard).

MB: U7

Pin No.	Signal Name	Description	
1	Vbus	Voltage supply from USB bus.	
2	D-	Dedicated USB signal.	
3	D+	Dedicated USB signal.	
4	GND F	Floating ground.	

Manufacturer: Samtec

Manufacture part number: USB-B-S-S-B-TH



Figure 13: Isolated USB Interface

7. Isolated RS232 (see Figure 14)



RS232 signal level comes from hosting system and has been converted to UART signals levels, then directed to DB (Isolation circuitry on daughterboard).

MB: J33

Pin No.	Signal Name	Description
1, 4, 6, 7, 8, 9	N.C	Not connected.
2	Rx_RS232	Rx RS232 level signal (receive), between the hosting system and the MB.
3	Tx_RS232	Tx RS232 level signal (transmit), between the hosting system and the MB.
5	GND F	Floating ground.

Manufacturer: Coxoc

Manufacture part number: 205A-09MGPBBA3

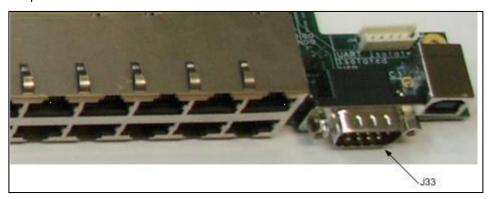


Figure 14: Isolated RS232

8. Isolated UART Interface (see Figure 15)

UART interface from hosting system and MB, then directed to DB (Isolation circuitry on daughterboard).

MB: J26

Pin No.	Signal Name	Description
1	3_3V_iso	3.3 VDC coming from hosting system (isolated from PoE domain), referenced to 'GND Floating.'
2	UART_Rx_isolated	Rx UART level signal (receive), between hosting system and MB (3.3 VDC).
3	UART_Tx_isolated	Tx UART level signal (transmit), between hosting system and MB (3.3 VDC).
4	GND_F	Floating ground.
5	N.C	Not connected.

Manufacturer: CviLux

Manufacture part number: CI25-05P1V00





Figure 15: Isolated UART Interface

9. LEDs Indication (see Figure 16)

This interface controls port status indication LEDs. Using four dedicated signals, LEDs indicate port status (on, off, and so on)

DB: J1

Pin No.	Signal Name	Description
1	MOSI_B	Data LED signal running to LED indication board ('b' – buffered signal).
2	+5V	
3	SCK_B	Clock LED signal running to LED indication board ('b' – buffered signal).
4	FGND	Floating ground
5	LED_latch_b	Latch LED signal running to LED indication board ('b' – buffered signal).
6	Led_output_enable_b	Enable LED signal running to LED indication board ('b' – buffered signal).

Manufacturer: CviLux

Manufacture part number: CH87-142V200



Figure 16: LEDs Indication

10. Daisy Chain (not used)

MB: J8

11. External Power Supplies Indication (see Figure 17)



This interface supplies 'Power Good' indication signals coming from power supplies, indicating operating/failed power supply status and a hot-swap signal for a hot-swappable PoE application.

MB: J1

Pin No.	Signal Name	Description	
1	PG0	'Power good' signal – power supply status indication.	
2	PG1	'Power good' signal – power supply status indication.	
3	PG2	'Power good' signal – power supply status indication.	
4	PG3	'Power good' signal – power supply status indication.	
5	GND_D	Digital ground at PoE domain.	
6	xHSWP	Hot Swap control signal, indicating PoE application is hot swappable.	

Manufacturer: CviLux

Manufacture part number: CI25-06P1V00

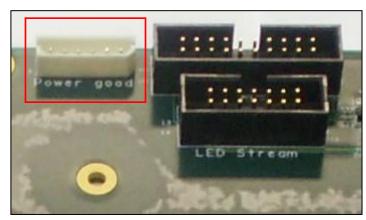


Figure 17: External Power Supplies



4 Electrical Characteristics

The evaluation system's electrical characteristics are described below:

Parameter	Symbol	Min.	Max.	Units
Main DC supply Vmain		44	57	V
Port Isolation to chassis		-	1.5	kVrms
All communication's Isolation to chassis		-	1.5	kVrms

MB's electrical characteristics depend on the daughterboard to which it is connected.



5 Installation

This chapter describes the steps required for installing and operating the PD-IM-7648M/T4 evaluation system. Some necessary precautions:

- Verify board's power supply is turned on before peripheral devices are turned on.
- Connect all required peripherals prior to powering board.
- Do not hot swap any components!
- Verify board is well configured prior to turning on power supply.

5.1 Mechanical Assembly

Step	Action	Comments
1	Assemble Line Filter	
2	Assemble Power Supply	 Mount power supply with 4 screws to enclosure. Mount all required cables.
3	Assemble Motherboard	 Assemble 5 spacers for DB. Assemble MB with 13 screws to enclosure. Recommended USB communication: install jumper on J11. Mount all required cables.
4	Assemble Daughterboard	Mount DB with 5 spacers to accommodate LED Display board. Mount all required cables.
5	Assemble LED Display Board	 Mount LED Display board with 5 screws. Mount all required cables. Mount light pipes as required.

5.2 Electrical Assembly

#	Cable	Source	Destination	Comments
1	Internal Line Power	Line Filter	Power Supply/CN1	
2	48V	Power Supply/CN2	MB/J6/J7	
3	Analog Ground 1	MB/J18	DB/J9	
4	Analog Ground 2	MB/J15	DB/J10	
5	PoE Domain Signals	MB/J2	DB/J7	
6	Host (Switch) Domain Signals	MB/J3	DB/J4	
7	Display Data	DB/J1	LED Display/J4	Custom Cable

5.3 Initial Configuration

It is highly important to verify that the valuation board is properly configured prior to starting any operation. Refer to *Software GUI User Guide, Catalogue Number 06-0027-056* for detailed information related to software and the GUI used for Enhance Mode operation.



PD-IM-7648M/T4 Evaluation System - User Guide

The information contained in the document is PROPRIETARY AND CONFIDENTIAL information of Microsemi and cannot be copied, published, uploaded, posted, transmitted, distributed or disclosed or used without the express duly signed written consent of Microsemi If the recipient of this document has entered into a disclosure agreement with Microsemi, then the terms of such Agreement will also apply. This document and the information contained herein may not be modified, by any person other than authorized personnel of Microsemi. No license under any patent, copyright, trade secret or other intellectual property right is granted to or conferred upon you by disclosure or delivery of the information, either expressly, by implication, inducement, estoppels or otherwise. Any license under such intellectual property rights must be approved by Microsemi in writing signed by an officer of Microsemi.

Microsemi reserves the right to change the configuration, functionality and performance of its products at anytime without any notice. This product has been subject to limited testing and should not be used in conjunction with life-support or other mission-critical equipment or applications. Microsemi assumes no liability whatsoever, and Microsemi disclaims any express or implied warranty, relating to sale and/or use of Microsemi products including liability or warranties relating to fitness for a particular purpose, merchantability, or infringement of any patent, copyright or other intellectual property right. The product is subject to other terms and conditions which can be located on the web at http://www.microsemi.com/legal/tnc.asp

Revision History

Revision Level / Date	Para. Affected	Description
0.1 / 12 Dec 2013		Initial revision
1.0 25 Dec 2013		Whole document editing
1.1 20 Jan 2015		Adding PD-IM-7648H ordering option
1.3 / March 2018		Changing PD69208 to PD69208M/T4

Catalog Number: PD-IM-7648_UG_EVB



Microsemi Corporate Headquarters
One Enterprise, Aliso Viejo, CA 92656 USA
Within the USA: +1 (800) 713-4113
Outside the USA: +1 (949) 380-6100
Fax: +1 (949) 215-4996

Email: sales.support@microsemi.com www.microsemi.com

©2018 Microsemi Corporation. All rights reserved. Microsemi and the Microsemi logo are registered trademarks of Microsemi Corporation. All other trademarks and service marks are the property of their respective owners. The technology discussed in this document may be protected by one or more patent grants.

Microsemi Corporation (Nasdaq: MSCC) offers a comprehensive portfolio of semiconductor and system solutions for aerospace & defense, communications, data center and industrial markets. Products include high-performance and radiation-hardened analog mixed-signal integrated circuits, FPGAs, SoCs and ASICs; power management products; timing and synchronization devices and precise time solutions, setting the world's standard for time; voice processing devices; RF solutions; discrete components; enterprise storage and communication solutions; security technologies and scalable anti-tamper products; Ethernet solutions; Power-over-Ethernet ICs and midspans; as well as custom design capabilities and services. Microsemi is headouaritered in Aliso Vieto, California, and has approximately 4.800 employees globally. Learn more at www.microsemi.com.

Microsemi makes no warranty, representation, or guarantee regarding the information contained herein or the suitability of its products and services for any particular purpose, nor does Microsemi assume any liability whatsoever arising out of the application or use of any product or circuit. The products sold hereunder and any other products sold by Microsemi have been subject to limited testing and should not be used in conjunction with mission-critical equipment or applications. Any performance specifications are believed to be reliable but are not verified, and Buyer must conduct and complete all performance and other testing of the products, alone and together with, or installed in, any end-products. Buyer shall not rely on any data and performance specifications or parameters provided by Microsemi. It is the Buyer's responsibility to independently determine suitability of any products and to test and verify the same. The information provided by Microsemi hereunder is provided "as is, where is" and with all faults, and the entire risk associated with such information is entirely with the Buyer. Microsemi does not grant, explicitly or implicitly, to any party any patent rights, licenses, or any other IP rights, whether with regard to such information itself or anything described by such information. Information provided in this document is proprietary to Microsemi, and Microsemi reserves the right to make any changes to the information in this document or to any products and services at any time without notice.