



Chipsmall Limited consists of a professional team with an average of over 10 year of expertise in the distribution of electronic components. Based in Hongkong, we have already established firm and mutual-benefit business relationships with customers from,Europe,America and south Asia,supplying obsolete and hard-to-find components to meet their specific needs.

With the principle of “Quality Parts,Customers Priority,Honest Operation,and Considerate Service”,our business mainly focus on the distribution of electronic components. Line cards we deal with include Microchip,ALPS,ROHM,Xilinx,Pulse,ON,Everlight and Freescale. Main products comprise IC,Modules,Potentiometer,IC Socket,Relay,Connector.Our parts cover such applications as commercial,industrial, and automotives areas.

We are looking forward to setting up business relationship with you and hope to provide you with the best service and solution. Let us make a better world for our industry!



Contact us

Tel: +86-755-8981 8866 Fax: +86-755-8427 6832

Email & Skype: info@chipsmall.com Web: www.chipsmall.com

Address: A1208, Overseas Decoration Building, #122 Zhenhua RD., Futian, Shenzhen, China



Gravity: Analog Current to Voltage Converter(for 4~20mA Application) SKU:SEN0262



Introduction

This current-to-voltage module linearly converts 0~25mA current signals into 0~3V voltage signals. Industrial sensors or devices usually have the current signal output of 4~20 mA. With this current-to-voltage module, your main control board can easily read the current signals output from industrial sensors or devices.


Normally, current signals lower than 4mA can be used for fault diagnosis, and current signals higher than 20mA can be used for overrun detection. Therefore, this module is designed with a wide range of 0~25mA detection range, which is compatible with fault detection, overrun detection applications. This module uses 0.1% high precision sense resistor and ultra-low noise rail-to-rail zero-drift op amp, so it is high accuracy, no need to calibration, and easy to use. 3.3V~5.5V wide voltage power supply, 0~3V voltage signal output, which are compatible with more main control boards, adapt to more applications.

NOTE: For higher accuracy, it is recommended to use 12 or more bit ADC!

Specification

- Supply Voltage: 3.3~5.5V
- Detection Range: 0~25mA DC
- Measurement Accuracy: $\pm 0.5\%$ F.S. @ 16-bit ADC, $\pm 2\%$ F.S. @ 10-bit ADC
- Termination Resistance: 120Ω
- Connector Type: PH2.0-3P
- Product Size: 30mm * 22mm(1.18inch * 0.87inch)

Board Overview

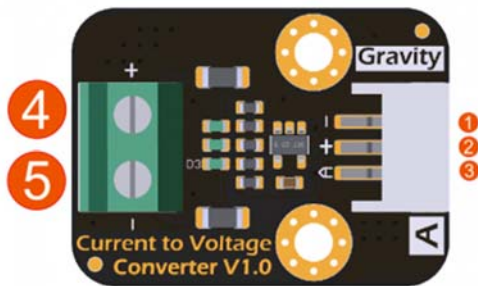

Gravity: Analog Current to Voltage Converter

Num	Label	Description
1	GND	Power GND(0V)
2	VCC	Power VCC(3.3~5.5V)
3	SIGNAL	Voltage Signal Output
4	I+	Current Input
5	I-	Current Output


Tutorial

This tutorial will demonstrate how to use this module with Arduino control board to read current signal of 4~20mA. Please prepare a sensor or device that outputs current signal of 4~20mA.

Requirements

- **Hardware**
 - DFRduino UNO R3 (or similar) x 1
 - Analog Current to Voltage Converter x 1
 - Sensor or Device(output 4~20mA current) x1
 - Gravity 3pin Sensor Cable (or several DuPont cables) x1
- **Software**
 - Arduino IDE, Click to Download Arduino IDE from Arduino®

Connection Diagram

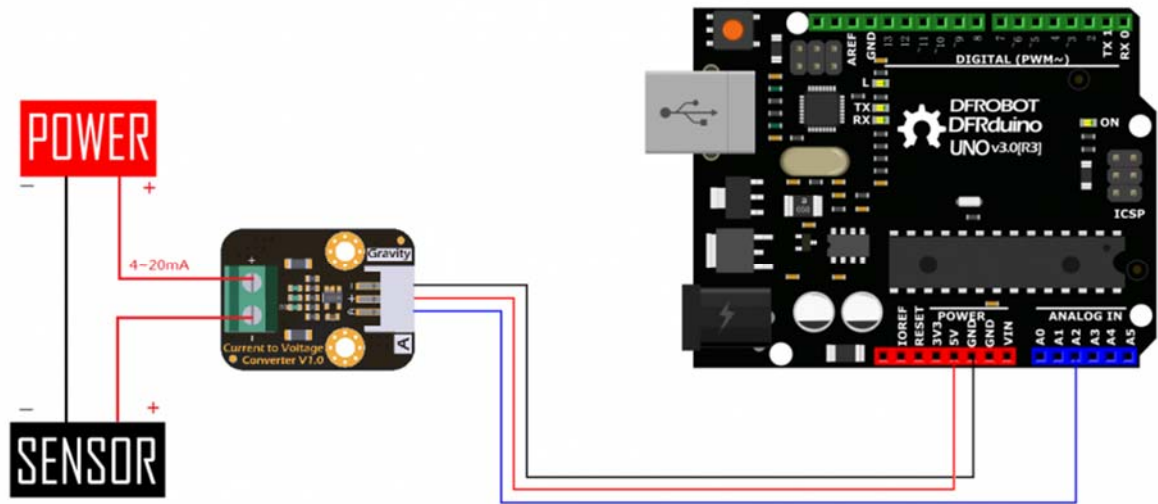

Sample Code

Before uploading the sample code, it is recommended that you use a voltmeter to confirm the actual reference voltage of the ADC on the main control board, and then modify VREF in the sample code, to improve the measurement accuracy.

```
/******  
  
  DFRobot Gravity: Analog Current to Voltage Converter(For 4~20mA Applicati  
on)  
  
  SKU:SEN0262  
  
  GNU Lesser General Public License.  
  See <http://www.gnu.org/licenses/> for details.  
  All above must be included in any redistribution  
  *****/  
  
#define CurrentSensorPin  A2  
  
#define VREF 5000 // ADC's reference voltage on your Arduino,typical value  
:5000mV  
  
unsigned int voltage; //unit:mV  
float current; //unit:mA
```

```

void setup()
{
    Serial.begin(115200);
}

void loop()
{
    voltage = analogRead(CurrentSensorPin)/1024.0*VREF;
    Serial.print("voltage:");
    Serial.print(voltage);
    Serial.print("mV ");
    current = voltage/120.0; //Sense Resistor:120ohm
    Serial.print("current:");
    Serial.print(current);
    Serial.println("mA");
    delay(1000);
}

```

Expected Results

