



Chipsmall Limited consists of a professional team with an average of over 10 year of expertise in the distribution of electronic components. Based in Hongkong, we have already established firm and mutual-benefit business relationships with customers from,Europe,America and south Asia,supplying obsolete and hard-to-find components to meet their specific needs.

With the principle of “Quality Parts,Customers Priority,Honest Operation,and Considerate Service”,our business mainly focus on the distribution of electronic components. Line cards we deal with include Microchip,ALPS,ROHM,Xilinx,Pulse,ON,Everlight and Freescale. Main products comprise IC,Modules,Potentiometer,IC Socket,Relay,Connector.Our parts cover such applications as commercial,industrial, and automotives areas.

We are looking forward to setting up business relationship with you and hope to provide you with the best service and solution. Let us make a better world for our industry!



Contact us

Tel: +86-755-8981 8866 Fax: +86-755-8427 6832

Email & Skype: info@chipsmall.com Web: www.chipsmall.com

Address: A1208, Overseas Decoration Building, #122 Zhenhua RD., Futian, Shenzhen, China



Mega Vac Commercial Vacuum Operation and Maintenance



Made in America



Figure 1: The Mega Vac, Item [35851](#)

Description

The Menda [35851](#) Mega Vac is a high capacity, high performance, service vacuum. This model has been specifically designed with large clean-ups jobs in mind. The powerful by-pass motor can handle almost any job. It was designed for those technicians who require a large, mobile vacuum for use in and around sensitive electronic equipment such as copy centers, telecom center, rechargers, garages, refineries, shops and schools. The standard 0.3 micron filter canister is ideal for dust, glass, pollens, soot, drywall dust, brake dust, toner, and other fine particles. The optional .12 micron HEPA filter canister is suitable for lead and other ultra-fine particles. The filters are fully container for safe, easy disposal.

The Mega Vac is safe for ESD susceptible electronics. The 10' long hose and the utensils are static dissipative. The internal ground-wire in the flex-hose and enclosure, virtually eliminate static charge generation is safely dissipated back through the electrically grounded motor.

Note: The Menda Mega Vac is designed for commercial use only.

Inspection

Remove the Mega Vac from the shipping carton and inspect for exterior damage.

Items included with model [35851](#):

- 1 0.3 Micron 5 Gallon Filter Canister
- 1 10' Flex-Hose (Toner Proof and Static Dissipative)
- 1 Goose Neck Attachment
- 1 Crevice Attachment
- 1 Crevice Attachment Brush
- 1 Detachable Power Cord (110V Only)
- 1 Base With Easy Rollers
- 1 Foot Switch

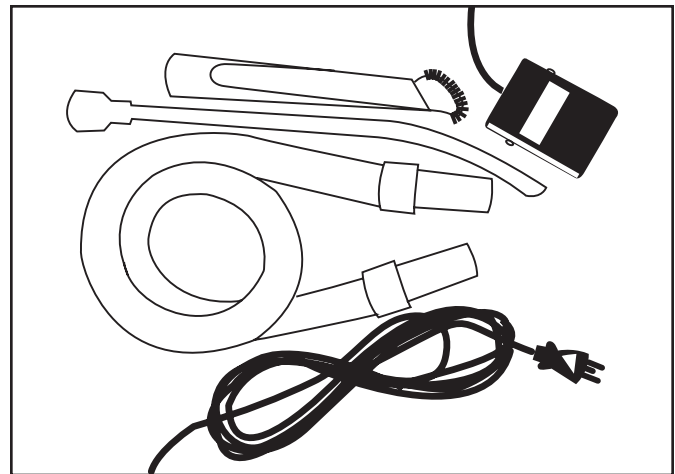


Figure 2: Items included with Model [35851](#)

Optional Accessories

- [35858](#) Replacement 0.3 Micron Filter Canister

Operation

Place the vacuum head onto the filter canister by inserting the white down tube into the corresponding size hole in the filter (fig. 3). Align the rubber retaining clips with the corresponding chrome retainer latches on the vacuum head and stretch into the place (fig. 4). Place the head and canister into the mobile base. Insert either end of the flex hose into the knurled aluminum receptacle on the top of the vacuum head (fig. 5).

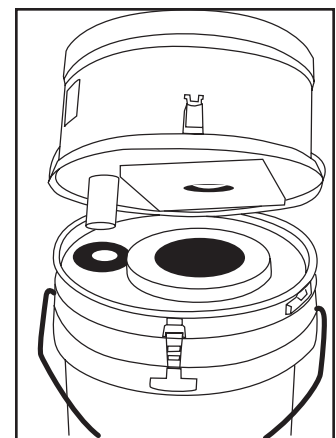


Figure 3: Aligning down tube

3651 Walnut Avenue, Chino, CA 91710

Phone: (909) 627-2453 • Fax (909) 755-8848 • Web Site: MendaPump.com

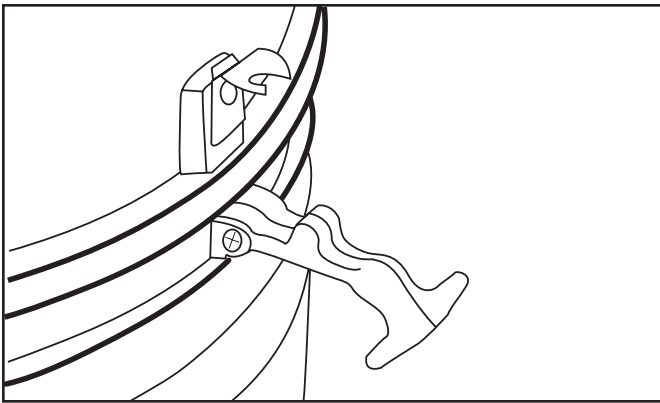


Figure 4: Align retaining clips

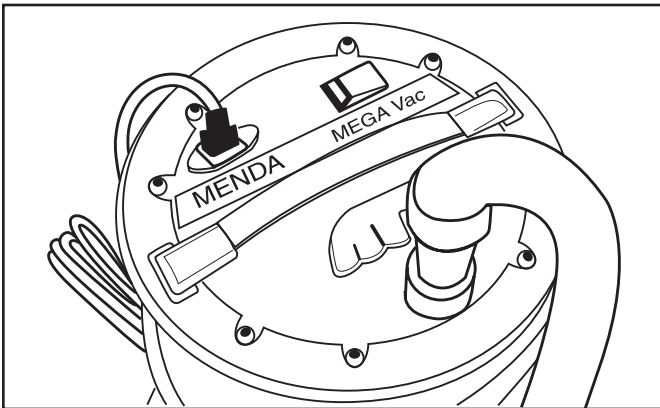


Figure 5: Insert hose into receptacle

Insert the female end of the power cord into the power receptacle on the vacuum head. Plug the power cord into an electrical outlet that is properly grounded in accordance with all local codes and ordinances. The power switch is located on the top of the vacuum head. Select an appropriate attachment for the job and the Mega Vac is now ready to operate.

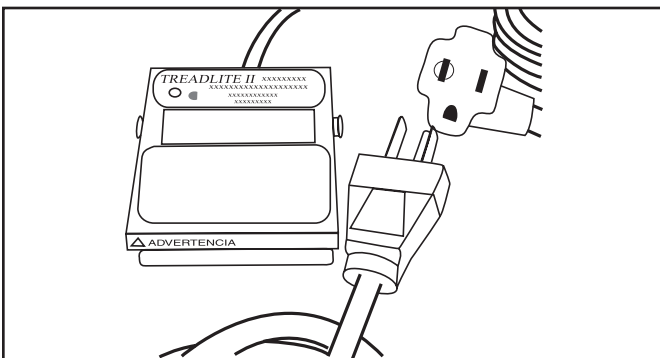


Figure 6: Using foot switch

Foot Switch Operation

Unplug the Mega Vac from the power source. Leave the standard power cord plugged into the receptacle on the vacuum head. Plug the male end of the power cord

into the female end of the foot switch power cord, and the male end into the 120 VAC electrical receptacle. You are now ready footswitch operation.

Filter Change-Out Instructions

Remove the power cord from the electrical power source. Unfasten the rubber retaining clips from the vacuum head and filter canister. Lift the vacuum head from the filter canister and set aside. Place the filter canister lid securely on the filter and dispose of in a proper manner. Place the vacuum head on the new filter making sure to align the rubber retaining with the retaining latches. If they do not line up properly, unsnap the metal band latch on the filter and rotate the band until they lineup, then secure the band.

Specifications

Noise Level:	84 decibels
Suction:	Approx. 60"/H2O
Amps:	2
Watts (maximum):	459

Limited Warranty

Menda expressly warrants that for a period of one (1) year from the date of purchase, Menda Mega Vacs will be free of defects in material (parts) and workmanship (labor). Within the warranty period, the product will be tested, repaired, or replaced at Menda's option, free of charge. Call our Customer Service Department at 909-627-2453 for a Return Material Authorization (RMA) and proper shipping instructions and address. Include a copy of your original packing slip, invoice, or other proof of purchase date. Any unit under warranty should be shipped prepaid to the Menda factory. Warranty repairs will take approximately two weeks.

If your unit is out of warranty, call Customer Service at 909-627-2453 for a Return Material Authorization (RMA) and proper shipping instructions and address. Menda will quote repair charges necessary to bring your unit up to factory standards.

Warranty Exclusions

THE FOREGOING EXPRESS WARRANTY IS MADE IN LIEU OF ALL OTHER PRODUCT WARRANTIES, EXPRESSED AND IMPLIED, INCLUDING MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE WHICH ARE SPECIFICALLY DISCLAIMED. The express warranty will not apply to defects or damage due to accidents, neglect, misuse, alterations, operator error, or failure to properly maintain, clean or repair products.

Limit of Liability

In no event will Menda or any seller be responsible or liable for any injury, loss or damage, direct or consequential, arising out of the use of or the inability to use the product. Before using, users shall determine the suitability of the product for their intended use, and users assume all risk and liability whatsoever in connection therewith.

RoHS Compliance Statement

None of the following materials are intentionally added in manufacturing this product: lead, mercury, cadmium, hexavalent chromium, polybrominated biphenyls (PBB) or polybrominated diphenyl ethers (PBDE) as outlined in the Directive 2002/95/EC Article 4.1. See Desco Industries Inc. letter on-line at MendaPump.com.

3651 Walnut Avenue, Chino, CA 91710

Phone: (909) 627-2453 • Fax (909) 755-8848 • Web Site: MendaPump.com