



Chipsmall Limited consists of a professional team with an average of over 10 year of expertise in the distribution of electronic components. Based in Hongkong, we have already established firm and mutual-benefit business relationships with customers from,Europe,America and south Asia,supplying obsolete and hard-to-find components to meet their specific needs.

With the principle of “Quality Parts,Customers Priority,Honest Operation,and Considerate Service”,our business mainly focus on the distribution of electronic components. Line cards we deal with include Microchip,ALPS,ROHM,Xilinx,Pulse,ON,Everlight and Freescale. Main products comprise IC,Modules,Potentiometer,IC Socket,Relay,Connector.Our parts cover such applications as commercial,industrial, and automotives areas.

We are looking forward to setting up business relationship with you and hope to provide you with the best service and solution. Let us make a better world for our industry!



## Contact us

Tel: +86-755-8981 8866 Fax: +86-755-8427 6832

Email & Skype: info@chipsmall.com Web: www.chipsmall.com

Address: A1208, Overseas Decoration Building, #122 Zhenhua RD., Futian, Shenzhen, China



### **BU-CRIMPER** (Alligator Clip Crimping Tool)



**Size:** Length = 7" (178mm), Width at jaws = .25" (6.4mm)  
**RoHS Compliant**

Will work with the following Mueller Alligator Clips:

BU-30BL	(Small Crimp Die)
BU-60	(Large Crimp Die)
BU-60S	(Large Crimp Die)
BU-60C	(Large Crimp Die)
BU-60CS	(Large Crimp Die)
BU-60M	(Large Crimp Die)
BU-60X	(Large Crimp Die)
BU-P2240-*	(Large Crimp Die)
BU-P6567	(Large Crimp Die)

**IMPORTANT! See the following page for crimping instructions.**

### Crimping Instructions




1) Strip the wire and fold the end back on itself

---



2) Insert the wire into the clip (folded end facing the bottom of the alligator clip)

---

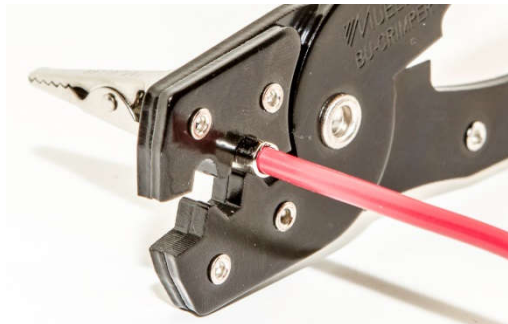

3) **Important! Align the clip such that the “tooth” of the crimper faces the bottom of the clip.**  
Squeeze tight on the crimpers handles.

---



4) Final crimped alligator clip should look as shown with the tooth mark on the bottom of the clip.