

Chipsmall Limited consists of a professional team with an average of over 10 year of expertise in the distribution of electronic components. Based in Hongkong, we have already established firm and mutual-benefit business relationships with customers from, Europe, America and south Asia, supplying obsolete and hard-to-find components to meet their specific needs.

With the principle of "Quality Parts, Customers Priority, Honest Operation, and Considerate Service", our business mainly focus on the distribution of electronic components. Line cards we deal with include Microchip, ALPS, ROHM, Xilinx, Pulse, ON, Everlight and Freescale. Main products comprise IC, Modules, Potentiometer, IC Socket, Relay, Connector. Our parts cover such applications as commercial, industrial, and automotives areas.

We are looking forward to setting up business relationship with you and hope to provide you with the best service and solution. Let us make a better world for our industry!



Contact us

Tel: +86-755-8981 8866 Fax: +86-755-8427 6832

Email & Skype: info@chipsmall.com Web: www.chipsmall.com

Address: A1208, Overseas Decoration Building, #122 Zhenhua RD., Futian, Shenzhen, China









QT-Brightek PLCC Series

Dome Type PLCC2 LED

Part No.: QBLP670D Series

Product: QBLP670D Series	Date: December 03, 2015	Page 1 of 13
	Version# 1.5	



Table of Contents:	
Introduction	3
Electrical / Optical Characteristic (Ta=25 °C)	4
Absolute Maximum Rating	
Characteristic Curves	
Solder Profile & Footprint	9
Recommended Handling Precautions	10
Packing	11
Labeling	12
Ordering Information	12
Revision History	13
Disclaimer	13



Introduction

Feature:

- Water Clear lens
- Ultra bright dome type PLCC2 LED
- AlInGaP technology for R/S/Y/O/AG
- InGaN technology for IG/BG/IB
- 30 degree viewing angle
- MSL: Level 3

Description:

This dome type PLCC2 LED has a height profile of 3.6mm. Combination of high brightness output and robust package, this LED is ideal for architecture lighting, status indication, and color mixing applications.

Application:


- Status indication
- Industrial equipment backlighting
- Architecture lighting

Certification & Compliance:

- TS16949
- ISO9001
- RoHS Compliant



Dimension:

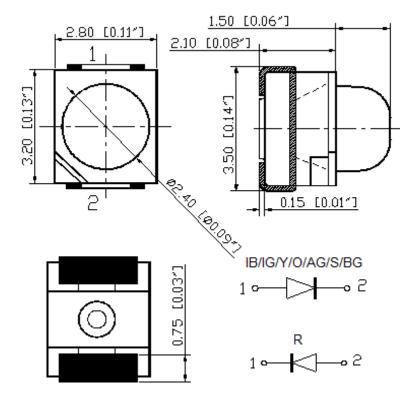

Units: mm / tolerance = +/-0.2mm

Product: QBLP670D Series	Date: December 03, 2015	Page 3 of 13
	Version# 1.5	



Electrical / Optical Characteristic (Ta=25 °C)

Product	Color	I _F (mA)	$V_F(V)$			λ _D (nm)		I _V (n	ncd)
Product	Coloi	IF (IIIA)	Тур.	Max.	Min.	Тур.	Max.	Min.	Тур.
QBLP670D-R	Red	20	2.0	2.5	620	625	630	2000	3500
QBLP670D-S	Deep Red	20	2.0	2.5	625	630	635	500	900
QBLP670D-Y	Yellow	20	2.1	2.5	585	590	595	1000	1700
QBLP670D-AG	Yellow Green	20	2.0	2.5	565	570	576	200	400
QBLP670D-O	Orange	20	2.0	2.5	600	605	610	1250	2000
QBLP670D-IG	True Green	20	3.3	3.7	520	525	530	2500	4200
QBLP670D-BG	Cyan	20	3.3	3.7	500	505	510	2000	3400
QBLP670D-IB	Blue	20	3.2	3.7	465	470	475	500	900

Absolute Maximum Rating

Material	P _d (mW)	I _F (mA)	I _{FP} (mA)*	V _R (V)	T _{OP} (°C)	T _{ST} (°C)
AllnGaP	75	30	125	5	-40 ~ +80	-40 ~ +85
InGaN	111	30	125	5	-40 ~+80	-40 ~+85

^{*}Duty 1/8 @ 1KHz

Forward Voltage V_F for AllnGaP @ I_F=20mA

Bin	Min.	Max.	Unit
	1.7	2.5	V

Forward Voltage V_F for InGaN @ I_F=20mA

Bin	Min.	Max.	Unit
f	2.8	3.1	
g	3.1	3.4	V
h	3.4	3.7	

Product: QBLP670D Series	Date: December 03, 2015	Page 4 of 13
	Version# 1.5	



Luminous Intensity I_V @ I_F=20mA

	210) 10 C 1 = 011111		1
Bin	Min.	Max.	Unit
M	200	250	
N	250	320	
0	320	400	
Р	400	500	
Q	500	630	
R	630	800	
S	800	1000	
Т	1000	1250	mcd
U	1250	1600	
V	1600	2000	
W	2000	2500	
X	2500	3200	
Υ	3200	4000	
Z	4000	5200	
а	5200	6800	

Dominant Wavelength λ_D for Red @ I_F=20mA

Bin	Min.	Max.	Unit
t	620	625	nm
u	625	630	nm

Dominant Wavelength λ_D for Deep Red @ I_F=20mA

Bin	Min.	Max.	Unit
u	625	630	nm
V	630	635	nm

Dominant Wavelength λ_D for Yellow @ I_F=20mA

Bin	Min.	Max.	Unit
m	585	590	nm
n	590	595	nm

Dominant Wavelength λ_D for Orange @ I_F=20mA

Bin	Min.	Max.	Unit	
р	600	605	nm	
q	605	610	nm	

Product: QBLP670D Series	Date: December 03, 2015	Page 5 of 13
	Version# 1.5	



Dominant Wavelength λ_D for True Green @ I_F=20mA

Bin	Min.	Max.	Unit
U	520	522.5	
V	522.5	525	nm.
W	525	527.5	nm
Χ	527.5	530	

Dominant Wavelength λ_D for Yellow Green @ I_F =20mA

Bin	Min.	Max.	Unit
h	565	568	
i	568	572	nm
j	572	576	

Dominant Wavelength λ_D for Cyan @ I_F=20mA

		<i>y</i> • • •	
Bin	Min.	Max.	Unit
M	500	502.5	
N	502.5	505	nm
0	505	507.5	nm
Р	507.5	510	

Dominant Wavelength λ_D for Blue @ I_F=20mA

Bin	Min.	Max.	Unit
G	465	467.5	
Н	467.5	470	nm
1	470	472.5	nm
J	472.5	475	


Note:

Tolerance of measurement of forward voltage: ±0.1V
Tolerance of measurement of dominant wavelength: ±1nm
Tolerance of measurement of luminous intensity: ±15%
All parameters are measured by QT-Brightek equipment

Product: QBLP670D Series	Date: December 03, 2015	Page 6 of 13
	Version# 1.5	




Characteristic Curves

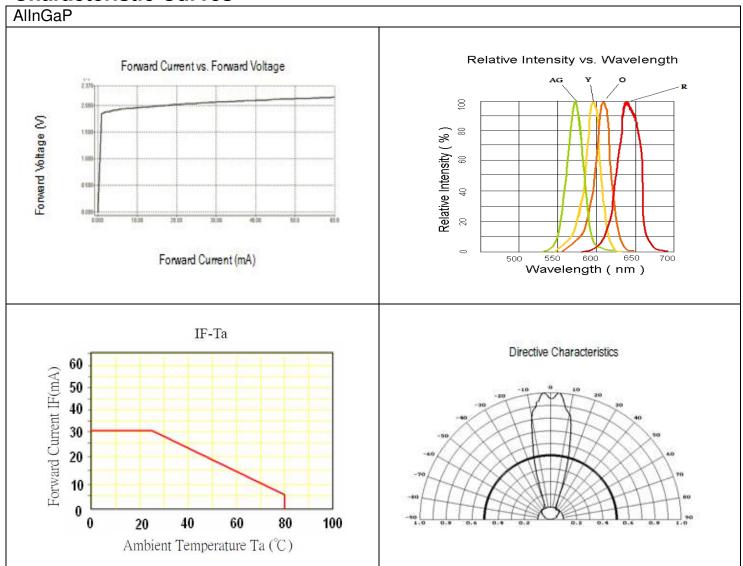

Product: QBLP670D Series	Date: December 03, 2015	Page 7 of 13
	Version# 1.5	



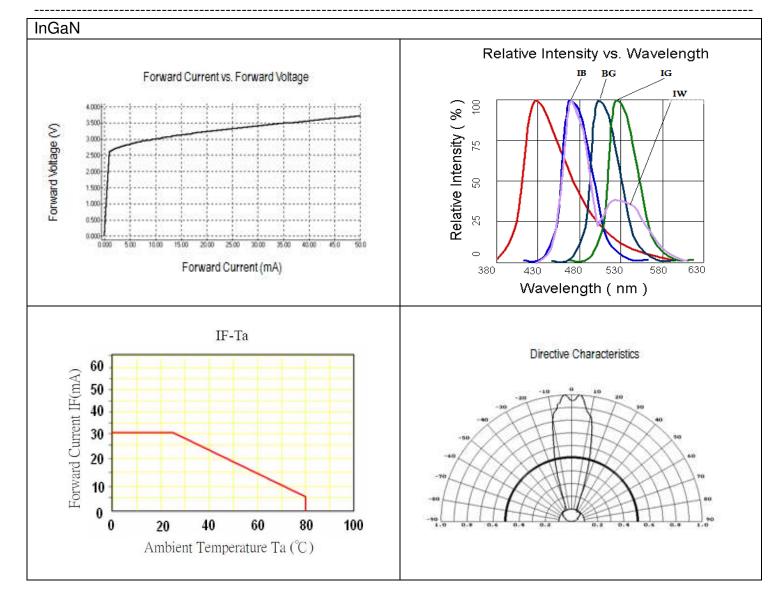


Product: QBLP670D Series	Date: December 03, 2015	Page 8 of 13
	Version# 1.5	



Solder Profile & Footprint



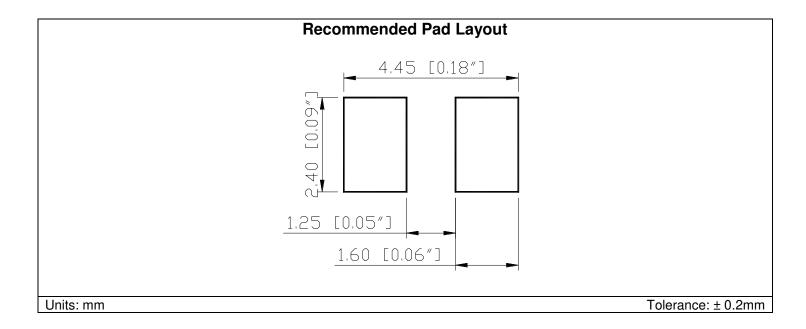

Product: QBLP670D Series	Date: December 03, 2015	Page 9 of 13
	Version# 1.5	



Recommended Handling Precautions


- 1. It is recommended to store the products in sealed and anti-static bags with desiccant inside at the following condition:
 - Humidity: <60% RHTemperature: 5°C~30°C
- 2. Shelf life in sealed bag: 12 month at 5°C~30°C and <60% R.H
- 3. After the package is opened:
 - 3.1 The products should be used within a week (168 hours)
 - 3.2 Or product should be stored at ≤ 20% RH and (5°C~30°C) with zip-lock sealed bag
 - 3.3 It is recommended to bake before soldering when the package is unsealed after 72hrs;
 - 3.3.1 Baking condition (Tape and Reel Type): 60±3°C (24~36 hrs) and < 5% RH
 - 3.4 Products require baking before soldering/mounting if **3.1** or **3.2** is not met. Baking condition refers to **3.3.1**
- 4. If the product is not used within 3 months since manufacturing date, it is recommended to bake for 24 hrs @ 60°C before use.
- 5. If the product is not used after 3 months since manufacturing date, it is recommended to bake for 36~48 hrs @ 60°C before use.

Product: QBLP670D Series	Date: December 03, 2015	
	Version# 1.5	




Packing


Reel Dimension:

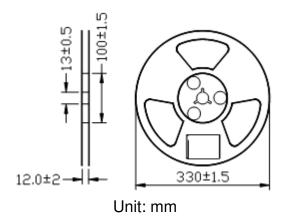


Tape Dimension:

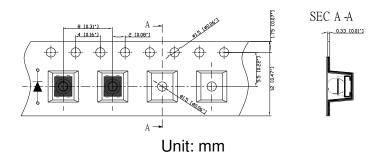

Arrangement of Tape:

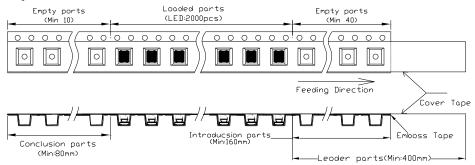

Packaging Specifications:

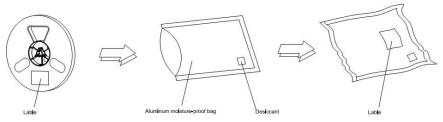

Product: QBLP670D Series	Date: December 03, 2015	Page 11 of 13
	Version# 1.5	



Labeling

🚱 QT-Brightek 🗳				
Part No:				
Customer P/N:				
tem:				
Q'ty:				
∀f :				
lv:				
WI:				
Date:				
Made in China				

Ordering Information

	<u> </u>					
Part #	Orderable Part #	Spec Range	Quantity per Reel			
QBLP670D-R	QBLP670D-R	$Iv=3500mcd$ typ. @ $I_F=20mA$ / $\lambda_D=620nm$ to 630nm	2,000 units			
QBLP670D-S	QBLP670D-S	$Iv=900mcd$ typ. @ $I_F=20mA$ / $\lambda_D=625nm$ to 635nm	2,000 units			
QBLP670D-Y	QBLP670D-Y	$Iv=1700mcd$ typ. @ $I_F=20mA$ / $\lambda_D=585nm$ to 595nm	2,000 units			
QBLP670D-O	QBLP670D-O	Iv=2000mcd typ. @ IF=20mA / λD=600nm to 610nm	2,000 units			
QBLP670D-AG	QBLP670D-AG	$Iv=400mcd$ typ. @ $I_F=20mA$ / $\lambda_D=565nm$ to 576nm	2,000 units			
QBLP670D-IG	QBLP670D-IG	$Iv=4200mcd$ typ. @ $I_F=20mA$ / $\lambda_D=520nm$ to 530nm	2,000 units			
QBLP670D-BG	QBLP670D-BG	Iv=3400mcd typ. @ I_F =20mA / λD =500nm to 510nm	2,000 units			
QBLP670D-IB	QBLP670D-IB	$Iv=900mcd$ typ. @ $I_F=20mA$ / $\lambda_D=465nm$ to 475nm	2,000 units			

Product: QBLP670D Series	Date: December 03, 2015	Page 12 of 13
	Version# 1.5	



Revision History

Description:	Revision #	Revision Date
New Release of QBLP670D Series	V1.0	02/13/2013
Update spec and drawing	V1.1	03/26/2014
Add yellow green and deep red	V1.2	04/01/2014
Add cyan color	V1.3	09/23/2014
Add orange color	V1.4	01/19/2015
Fix wavelength bin code typo for yellow green (AG)	V1.5	12/03/2015

Disclaimer

QT-BRIGHTEK reserves the right to make changes without further notice to any products herein to improve reliability, function or design. QT-BRIGHTEK does not assume any liability arising out of the application or use of any product or circuit described herein; neither does it convey any license under its patent rights, nor the rights of others.

Life Support Policy

QT-BRIGHTEK's products are not authorized for use as critical components in life support devices or systems without the express written approval of QT-BRIGHTEK. As used herein:

- 1. Life support devices or systems are devices or systems which, (a) are intended for surgical implant into the body, or (b) support or sustain life, and (c) whose failure to perform when properly used in accordance with instructions for use provided in the labeling, can be reasonably expected to result in a significant injury of the user.
- 2. A critical component in any component of a life support device or system whose failure to perform can be reasonably expected to cause the failure of the life support device or system, or to affect its safety or effectiveness.

Product: QBLP670D Series	Date: December 03, 2015	Page 13 of 13
	Version# 1.5	