# imall

Chipsmall Limited consists of a professional team with an average of over 10 year of expertise in the distribution of electronic components. Based in Hongkong, we have already established firm and mutual-benefit business relationships with customers from, Europe, America and south Asia, supplying obsolete and hard-to-find components to meet their specific needs.

With the principle of "Quality Parts, Customers Priority, Honest Operation, and Considerate Service", our business mainly focus on the distribution of electronic components. Line cards we deal with include Microchip, ALPS, ROHM, Xilinx, Pulse, ON, Everlight and Freescale. Main products comprise IC, Modules, Potentiometer, IC Socket, Relay, Connector. Our parts cover such applications as commercial, industrial, and automotives areas.

We are looking forward to setting up business relationship with you and hope to provide you with the best service and solution. Let us make a better world for our industry!



## Contact us

Tel: +86-755-8981 8866 Fax: +86-755-8427 6832 Email & Skype: info@chipsmall.com Web: www.chipsmall.com Address: A1208, Overseas Decoration Building, #122 Zhenhua RD., Futian, Shenzhen, China



	Specifications No.	
Messrs.		
(first · revised )	/ Specificati	ons
Product No : Quartz Crystal Unit	SP-T7-F	
Item code : Q-SPT7H0327620C5	GL	
Product form : 32.768kHz ± 20 × 1	0 <sup>-6</sup> / 12.5 pF	
The number of copies : 1copy		
Date of Registrantion :		
Receipt Column	Note	
NOTICE >		
1. Advance agreement will be needed before cha	nging any contents of the spe	cification herein.
2. Provided that the information herein is subject	to change, only revised pages	s shall be reissued.
<ol> <li>When the product described herein includes R etc, they may not be exported without authorization</li> </ol>		
<ol> <li>The contents of this specification including all f (copyright or know-how) of Seiko Instruments I specifications to third parties without permissio</li> </ol>	nc. It is strictly prohibited to co	
<ol> <li>In the case that the products described herein influence any one of the human body, human lit medical equipment or vehicles, please let us kn</li> </ol>	e and property, such as physi ow that.	cal exercise equipment,
Seiko Instruments Inc. Quartz Crystal Division	Dept. of Issue Sales Section	Dept. of Control Quality Assurance Section
Network Components Business		
1-8, Nakase, Mihamaku, Chiba shi, Chiba 261-8507 Japan		

## 1.Scope

These specifications apply to QUARTZ CRYSTAL RESONATORS (hereinafter referred to as RESONATORS) to be manufactured by Seiko Instruments Inc. (hereinafter referred to as <u>SII</u>) to \_\_\_\_\_

## 2.Designation

RESONATORS are designated "SSP-T7-F"(32.768kHz).

### 3.Shape and dimensions

As per the SSP-T7-F drawing shown on page 5.

### **4.Electrical characteristics**

Specified on page 2 through 3.

#### 5.Shipment and packaging

5.1 (3,000) pcs are the standard lot size to which the lot number shall be allotted 5.2 The packaging shall conform to the resonator packaging standards.

#### 6.Outgoing inspection

- 6.1 When mutually agreed, the outgoing inspection shall be conducted as per the standard on page 4.
- 6.2 The outgoing inspection slip is not basically affixed to each packaging.

## 7.Warranty

In the event that any defective RESONATORS or defective lot is found at incoming inspection at \_\_\_\_\_\_ and that any defect resulting from failures in process-control at SII after incoming inspection is found, good RESONATORS shall be supplied to \_\_\_\_\_\_\_ free of charge as a replacement . In the event that any trouble or problems rising directly from RESONATORS occurs, it will be amicably settled between both parties, provided that warranty shall be done within the score of replacement of good RESONATORS.

#### 8.Amendment or abolition of the specifications

Amendment or abolition of the specifications shall be made upon mutual consent between \_\_\_\_\_\_ and SII. If any problem arises , it shall be amicably settled between both parties.

### 9.Effectiveness of the specifications

These specifications are effective after receipt of returned copies with your approved sign.

#### 10.Ohters

**RoHS** compliant

These products use Pb in high melting temperature type solders exempted by RoHS directive.

Resin inluding brominated Flame retardant and Antnimony Trioxide (Sb203), is not used on the product.

## [1] The maximum rating

	Item	Symbol	Rating	Note
1	Storage temperature range	T_stg	-55 ~ +125℃	
2	Maximum drive level	DL max.	1.0 µW max.	

## [2] Recommended Operating Condition

	Item	Symbol	Rating	Note
1	Operating temperature range	T_use	-40 ~ +85°C	
2	Drive level	DL	0.1 µW typ.	

## [3] Electrical -Characteristics

Measurement temperature :25±2°C

	Item	Symbol	Specifications	Conditions
1	Nominal frequency	f_nom	32.768 kHz	
2	Frequency tolerance	f_tol	± 20 × 10 <sup>-6</sup>	
3	Load capacitance	CL	12.5 pF	
4	Motional resistance	R <sub>1</sub>	65 kΩ max.	Measured with ATI 4192A Impedance analyzer. OSC LEVEL = 0.1V
5	Q-value	Q	40 × 10 <sup>3</sup> min.	calculated with the following equation $Q=(2\pi + rL_1)/R_1$
6	Motional capacitance	C <sub>1</sub>	1.9 fF typ.	
7	Shunt capacitance	C <sub>0</sub>	0.8 pF typ.	Measured with ATI 4192A Impedance analyzer. OSC LEVEL = 0.1V
8	Turnover temperature	Ti	25 ± 5°C	Measure this coefficient at 3 points of 10°C, 25°C, and 40°C using
9	Parabolic coefficient	В	(-3.5±1.0) × 10 <sup>-8</sup> /°C <sup>2</sup>	C-MOS circuit.
10	Frequency ageing	f_age	± 5 × 10 <sup>-6</sup> / year	25±3℃、 First year
11	Insulation resistance	IR	500 MΩ min.	Measured with ATI 4329A Insulation Resistance Meter. Apply DC100V.

			· J	
No	ltem	Specifications	Conditions	
1	High temperature storage	△ f/f =±10 × 10 <sup>-6</sup>	After storage under 85°C for 500 hrs,	*1
			measure at room temperature.	
2	Low temperature storage	△ $f/f = \pm 10 \times 10^{-6}$	After storage under -40°C for 500	*1
			hrs, measure at room temperature.	
3	High temperature and	△ f/f =±10 × 10 <sup>-6</sup>	After storage under 60°C±2°C, 90 to	*1
	high humidity storage		95% RH for 500 hrs, measure at room	
			temperature.	
4	Thermal shock resistance	△ $f/f = \pm 10 \times 10^{-6}$	Measured at room temperature after	*1
			20 cycles.	
			-25°C ↔ +80°C for 30 minutes.	
5	Mechanical shock resistance	△ f/f =±5 × 10 <sup>-6</sup>	Measure after free drop of the	*2
			RESONATOR three times from the	
			height of 75cm onto a wooden board.	
6	Vibration resistance	△ f/f =±5 × 10 <sup>-6</sup>	Amplitude 1.5mm and 10 ~ 60Hz with	*2
			cycle time 2 ~ 3 minutes in 3 direction	
			(X,Y,and Z axis)each for 2 hrs.	
7	IR Reflow	△ f/f =±10 × $10^{-6}$	Measure after 1 time reflow under	*1
			reflow profile specified in page 10	

[4] Environment-proof Mechanical property

Note:

1. The adove tests no. 1 to 7 must be conducted independently (not series tests)

2. \*1: Measure after 24 hours soak at room temperature .

3. \*2: Measure after 2 hours soak at room temperature .

4. R1 is  $85k\Omega$  max. after the each above tests.

## [5] Precautions

(1) Recommended mounting conditions		
Reflow profile	As per reflow profile shown in page 10.	
Manual soldering	350°C max. for 4 sec. max.	

## (2) Cleaning

The crystal resonator may be destroyed by ultrasonic cleaning. We don't guarantee the quality of the product with that cleaning method because such conditions as type of the washing machine, power, time, position in the bath, etc. can not be specified.

Please confirm ultrasonic cleaning is not giving any damage to the product before use when that cleaning method must be used.


## [6] Outgoing inspection standard

•The outgoing inspection shall be conducted as per the following standard .

•The sampling shall be performed according to the ANSI/ASQCZ1.4-1996 .

No	Item	Sampling level	AQL(%)
1	Frequency tolerance	I	1.0
2	Equivalent series resistance	Ι	1.0
3	Outer appearance	Ι	1.5
4	Others characteristics	Periodical quality insp	pection

## [7] Out Line Drawing 1. Out Line Drawing

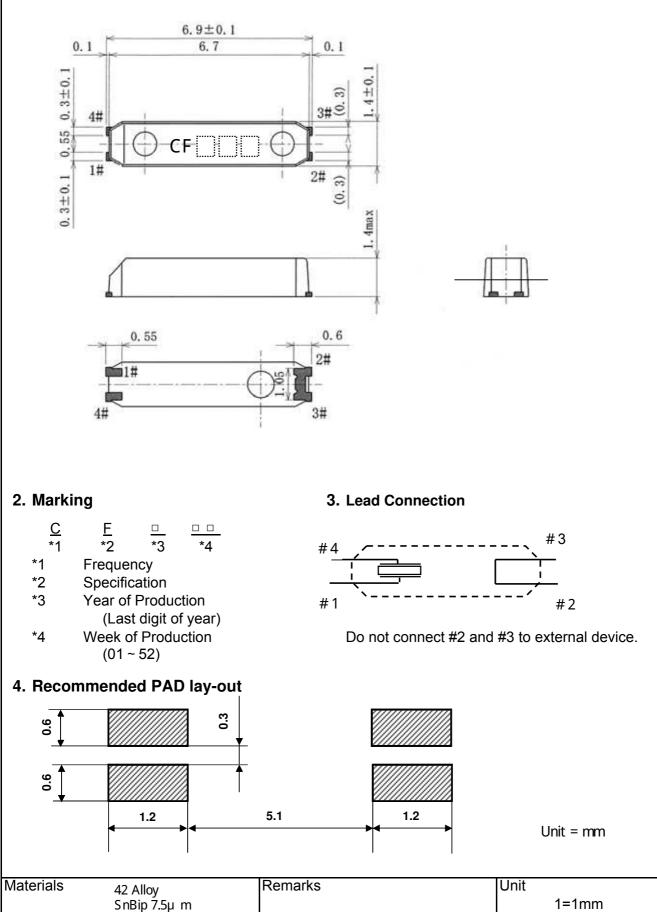

## **8** Taping specification

## 1 .Drawing of tape dimensions


- ① Carrier tape see Drawing page 8.
- 2 Reel for carrier tape see Drawing page 9.

### 2 .Material

- ① Carrier tape : PS
- ② Reel for carrier tape : HIPS


### 3 .Taping method

(1) Taping shall be placed in tapes in such manner as to assure that marking of the components is visible as per Fig. 1

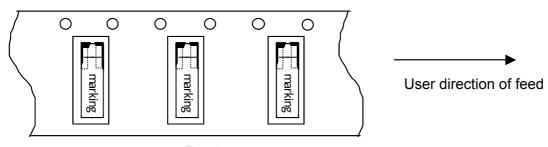


<u>Fig. 1</u>


- (2)Reel
  - On the side of reel there shall be more than 20 blocks of "No components".
  - ② The beginning of Carrier Tape shall be bent vertically and hooked on groove of reel.
- (3) Leader
  - ① On the side of leader, there shall be more than 20 blocks of "No components "
  - ② The length of Leader shall be over 400 mm.
  - ③ The Length of Stick Tape for Cover Tape shall be about 100 mm and Stick Tape shall never be detached.

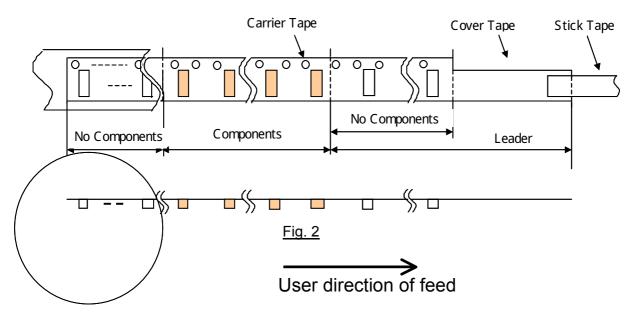

(4) Gap between Carrier Tape and Cover Tape ①Cover Tape protrudes from Carrier Tape by 0.5mm max.

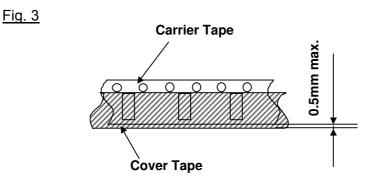


② Holes of Carrier Tape are covered with Cover Tape by 0.75mm max.

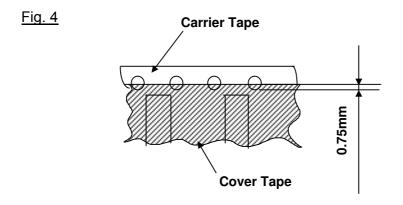


## (5) Peel strength

- 1) The method of testing is done as shown below.
- <sup>②</sup>The value of force is at the beginning of desealing.
- ③ The Cover Tape peel forth shall be 0.1 ~ 1.3N at a peel speed of 300±10mm/min.

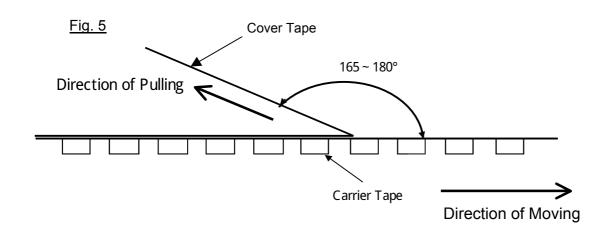

## Carrier tape

- (1) Conforms with EIA 481
- (2) Tolerance : ± 0.2

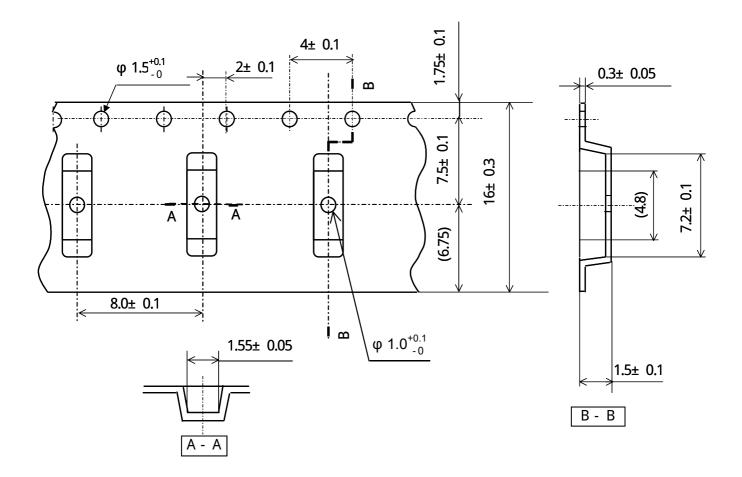


8/11


Unit = mm

## Taping reel

- (1) Conforms with EIAJ ET-7200B
- (2) Quantity per reel : 3,000pcs./ for a reel

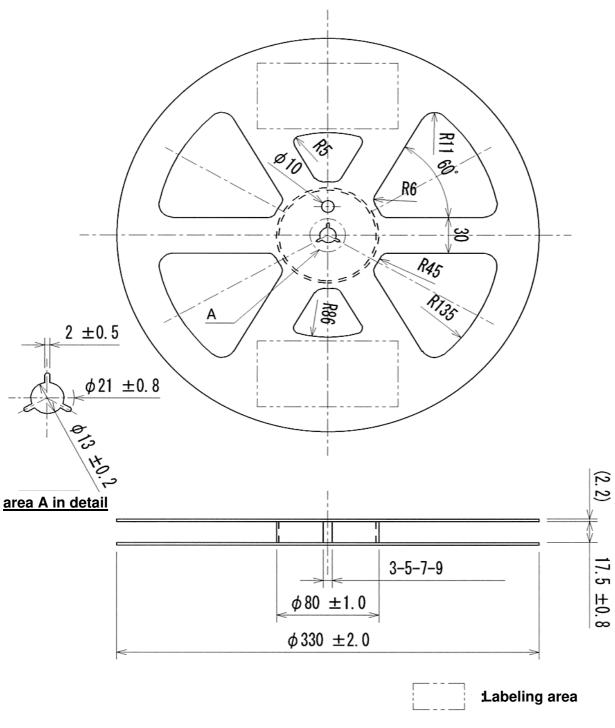




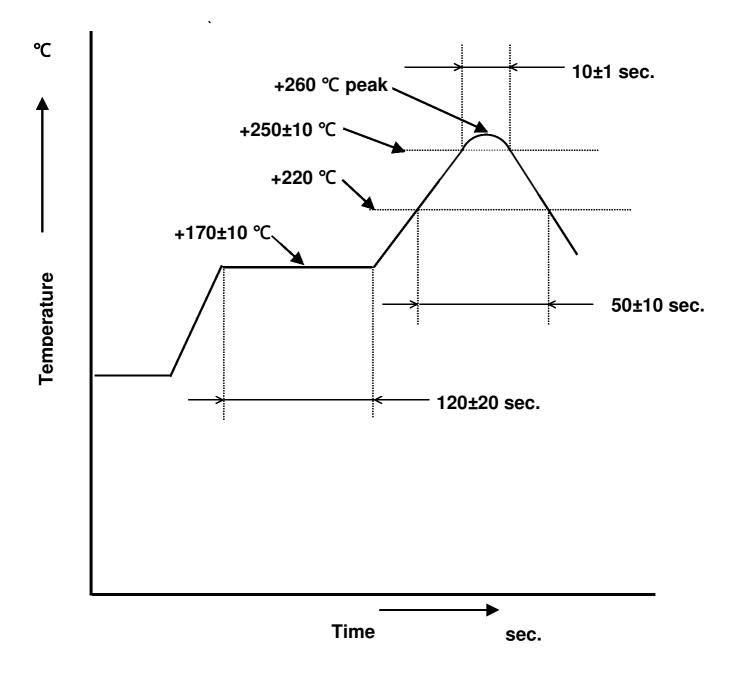


# Note: The temperature used herein means the temperature on the circuit board.

**Reflow : 2 times max.** 

## [10] Outside box packing specification

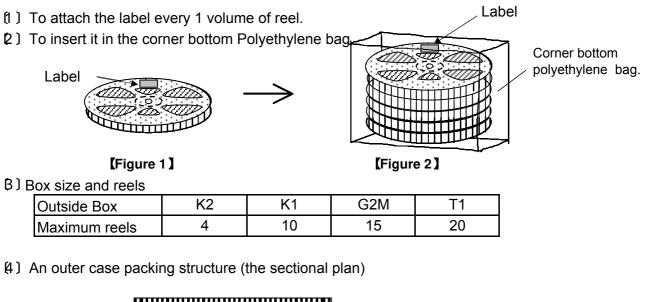

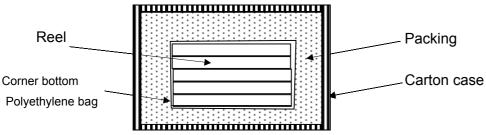

[Figure 3]

5) Storage quantity It makes N=3,000 pieces/Lot

6) Sample of the label display (display department, please refer to Figure 1) [Figure 2])

	PART	SSP-T7-F	
Product bar code	Lot No.		
	Quantity	3 ,000 pcs	
Item bar code*	Calibre	32.768kHz	
		12.5pF/± 20× 10 <sup>-6</sup>	
Quantity Lot. No. bar code	Remar	ks	
3,000 XXXX			

PART	:	Our company product name
Lot No.	:	Lot No. display
Quantity	:	Quantity
Calibre	:	Frequency, CL value, F0 deviation
Remarks	S :	Marking etc.
*	:	Item code

## 7) Storage environment

A product avoids the direct ray and please store with the normal temperature and humidity .

\* Temperature :5 to 30°C \* Humidity range :80% max.