



Chipsmall Limited consists of a professional team with an average of over 10 year of expertise in the distribution of electronic components. Based in Hongkong, we have already established firm and mutual-benefit business relationships with customers from,Europe,America and south Asia,supplying obsolete and hard-to-find components to meet their specific needs.

With the principle of “Quality Parts,Customers Priority,Honest Operation,and Considerate Service”,our business mainly focus on the distribution of electronic components. Line cards we deal with include Microchip,ALPS,ROHM,Xilinx,Pulse,ON,Everlight and Freescale. Main products comprise IC,Modules,Potentiometer,IC Socket,Relay,Connector.Our parts cover such applications as commercial,industrial, and automotives areas.

We are looking forward to setting up business relationship with you and hope to provide you with the best service and solution. Let us make a better world for our industry!



Contact us

Tel: +86-755-8981 8866 Fax: +86-755-8427 6832

Email & Skype: info@chipsmall.com Web: www.chipsmall.com

Address: A1208, Overseas Decoration Building, #122 Zhenhua RD., Futian, Shenzhen, China






Joystick Shield Quickstart Guide

by followr | May 18, 2010

Skill Level: ★ Beginner

Joystick Shield

Congratulations! Welcome to the wonderful world of joystick control. You'll be surprised by the multitude of uses you'll find for your new joystick. This page serves as a starting point for everything you need to get up and running with the Joystick Shield for the Arduino.

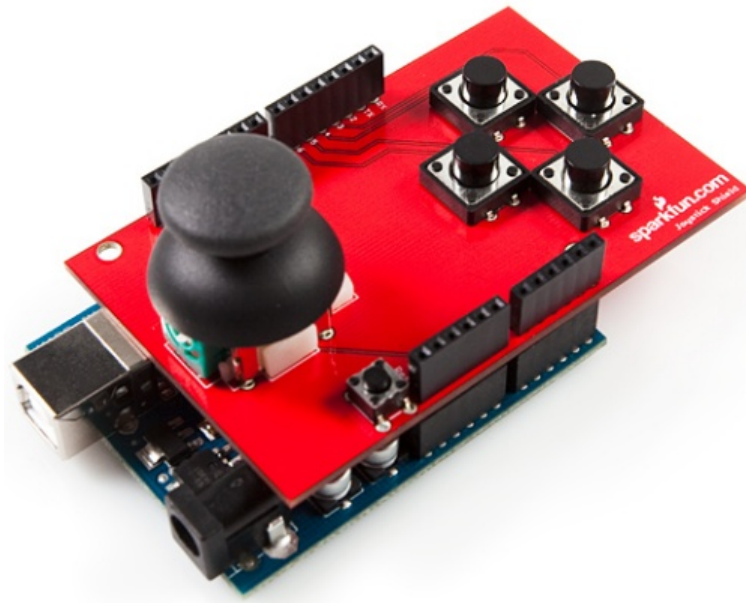

How do I assemble it?

For a step by step guide to assemble the joystick shield, see the [Assembly Guide](#).

What do I do with it?

The joystick shield provides simple analog inputs along with four separate buttons and one button under the joystick itself. The joystick can be used for controlling outputs such as a melody or pixels on a screen. The buttons can be used for navigation or game control. If you want to jump directly into the example sketches, go for it:

- Basic Arduino code (printing joystick values and button presses to the console)
- Crazy Arduino code (controlling a melody and tempo with the joystick)
- Basic Processing code (basic Processing integration)
- Advanced Processing code (painting on a window)

If you have no idea what to do with a joystick, checkout this video:



How do I make it work?

Once you've got the shield assembled, you can begin to change the example code to make the joystick do your bidding:

- How do I find the current position of the joystick?
- How do I find the current direction of the joystick?
- How do I set up the Arduino so I can know when a button has been pushed on the Joystick Shield?
- How do I know when a button on the Joystick Shield has been pressed?
- How can I avoid repeating the setup code for each button?
- How can I use the joystick with Processing (and Firmata)?

How do I find the current position of the joystick?

The position of the joystick is calculated from the two potentiometers in the joystick. The joystick can move in two dimensions which typically would represent X and Y coordinates but could represent any two dimensional quantity. To read the potentiometers we use the *analogRead()* function which returns a number from 0 to 1023. We need to supply an analog pin number to the function—for the joystick shield the X position is read from analog pin 0 and the Y position is read from analog pin 1:

```
Serial.println(analogRead(0)); // Prints current X position
Serial.println(analogRead(1)); // Prints current Y position
```

It is a good technique—because it clarifies your intent—to use "constants" for values that will not change when your sketch runs. With this in mind, the following sketch snippet sets up constants for the analog pins used and prints the current X and Y positions to the serial console:

```

const byte PIN_ANALOG_X = 0;
const byte PIN_ANALOG_Y = 1;

void setup() {
  Serial.begin(9600);
}

void loop() {

  Serial.print("x:");
  Serial.print(analogRead(PIN_ANALOG_X));
  Serial.print(" ");

  Serial.print("y:");
  Serial.print(analogRead(PIN_ANALOG_Y));
  Serial.print(" ");

  Serial.println();
}

```

How do I find the current direction of the joystick?

It can be useful to use the value of the X and Y position to determine if the joystick is centered or moved in one of 8 directions (i.e. up, right-up, right, right-down, down, left-down, left, left-up).

Since we know the value in each dimension will be between 0 and 1023 you might expect the centre value to be around 511 or 512 but because the joysticks are physical devices the actual value is unlikely to be that exact. If we choose the wrong value we'll find that our joystick will be detected as moving in a particular direction even though it is centered.

To work around this issue we specify two "threshold" values and consider that any value within that range should be considered "centered":

```

|-----|----|-----|
0       505 515       1023

```

The threshold values you choose may be different depending on your joystick. We specify the values as constants in the code:

```

const int X_THRESHOLD_LOW = 505;
const int X_THRESHOLD_HIGH = 515;

const int Y_THRESHOLD_LOW = 500;
const int Y_THRESHOLD_HIGH = 510;

```

Next, we want to map our value in each dimension from a position range of 0 to 1023 to a direction value in the range -1 to 1. For the X dimension -1 means moved to the left, 0 means not moved in the X dimension and 1 means moved to the right. For the Y dimension -1 means moved down, 0 means not moved in the Y dimension and 1 means moved up.

We start by setting the direction in each dimension to 0 ("centered") and then we use if/else statements to check if the position value in either dimension is above or below our threshold values:

```
x_direction = 0;
y_direction = 0;

x_position = analogRead(PIN_ANALOG_X);
y_position = analogRead(PIN_ANALOG_Y);

if (x_position > X_THRESHOLD_HIGH) {
  x_direction = 1;
} else if (x_position < X_THRESHOLD_LOW) {
  x_direction = -1;
}

if (y_position > Y_THRESHOLD_HIGH) {
  y_direction = 1;
} else if (y_position < Y_THRESHOLD_LOW) {
  y_direction = -1;
}
```

The Arduino provides a *map()* function which in theory we could use instead of *if/else* but the method is complicated by the centering issues so we won't consider that approach here.

As you can see in the next complete example we then use *if/else* statements to print the direction—you can modify this example to perform whatever action you need:

```
const byte PIN_ANALOG_X = 0;
const byte PIN_ANALOG_Y = 1;

const int X_THRESHOLD_LOW = 505;
const int X_THRESHOLD_HIGH = 515;

const int Y_THRESHOLD_LOW = 500;
const int Y_THRESHOLD_HIGH = 510;

int x_position;
int y_position;

int x_direction;
int y_direction;

void setup() {
  Serial.begin(9600);
}

void loop () {
  x_direction = 0;
  y_direction = 0;

  x_position = analogRead(PIN_ANALOG_X);
  y_position = analogRead(PIN_ANALOG_Y);

  if (x_position > X_THRESHOLD_HIGH) {
    x_direction = 1;
  } else if (x_position < X_THRESHOLD_LOW) {
    x_direction = -1;
  }

  if (y_position > Y_THRESHOLD_HIGH) {
    y_direction = 1;
  } else if (y_position < Y_THRESHOLD_LOW) {
    y_direction = -1;
  }

  if (x_direction == -1) {
    if (y_direction == -1) {
      Serial.println("left-down");
    } else if (y_direction == 0) {
      Serial.println("left");
    } else {
      // y_direction == 1
      Serial.println("left-up");
    }
  } else if (x_direction == 0) {
    if (y_direction == -1) {
      Serial.println("down");
    } else if (y_direction == 0) {
      Serial.println("centered");
    } else {
      // y_direction == 1
      Serial.println("up");
    }
  } else {
    // x_direction == 1
    if (y_direction == -1) {
      Serial.println("right-down");
    } else if (y_direction == 0) {
      Serial.println("right");
    }
  }
}
```

```

    } else {
      // y_direction == 1
      Serial.println("right-up");
    }
  }
}

```

How do I set up the Arduino so I can know when a button has been pushed on the Joystick Shield?

Before you can know if a button on the shield has been pushed you need to set up your Arduino to recognize the buttons. Unsurprisingly you will perform this setup in the... *setup()* function!

First we define constants for the Arduino pin associated with each button:

```

// Select button is triggered when joystick is pressed
const byte PIN_BUTTON_SELECT = 2;

const byte PIN_BUTTON_RIGHT = 3;
const byte PIN_BUTTON_UP = 4;
const byte PIN_BUTTON_DOWN = 5;
const byte PIN_BUTTON_LEFT = 6;

```

If you've used a pushbutton switch before you may have noticed a resistor is normally required in order to detect a known voltage when the button is not pressed. To reduce the number of parts required this shield has been designed not to require resistors on the shield itself. Are you thinking to yourself *"if push buttons require resistors and the shield has no resistors how can we get the shield to work?"*? If you're not thinking that then you can probably skip reading this bit. (And if you're thinking *"I'm really hungry"* it might be time to put down the electronics and get some food.)

It turns out your Arduino actually has internal resistors connected to the pins inside the microcontroller. In order to use the internal resistors we need to *"enable the internal pull-up resistors"*. If that sounds to you like *"hoist the jib and unfurl the main stay"* then I can explain some more:

When a *"pull-up"* resistor is connected to a push button it means that the voltage level when the button is not pressed will be HIGH because the resistors *"pulls the voltage level up"* to HIGH when the button is not pressed. On a typical Arduino a pin that is HIGH will be at 5 volts. When the push button is pressed the pin will read as LOW because there is less resistance between the pin and ground than there is between the pin and 5 volts.

To enable a pin's pull-up resistor you first set the pin as an input and then enable the pull-up:

```

pinMode(PIN_BUTTON_RIGHT, INPUT);
digitalWrite(PIN_BUTTON_RIGHT, HIGH);

```

The actual code to enable the pull-up doesn't really make any sense if you read it literally but that's the way it works.

Other than remembering that an unpressed button will read as HIGH with a pull-up resistor and a pressed button will read as LOW you don't need to remember or understand the other details.

In order to configure each pin to be an input and enable the pull up resistors we use the following code:

```
void setup() {  
  
  pinMode(PIN_BUTTON_RIGHT, INPUT);  
  digitalWrite(PIN_BUTTON_RIGHT, HIGH);  
  
  pinMode(PIN_BUTTON_LEFT, INPUT);  
  digitalWrite(PIN_BUTTON_LEFT, HIGH);  
  
  pinMode(PIN_BUTTON_UP, INPUT);  
  digitalWrite(PIN_BUTTON_UP, HIGH);  
  
  pinMode(PIN_BUTTON_DOWN, INPUT);  
  digitalWrite(PIN_BUTTON_DOWN, HIGH);  
  
  pinMode(PIN_BUTTON_SELECT, INPUT);  
  digitalWrite(PIN_BUTTON_SELECT, HIGH);  
  
}
```

See the next section to learn how to read whether a button is pressed or not.

How do I know when a button on the Joystick Shield has been pressed?

Once you have set up your Arduino to recognize the buttons (see above) you can tell whether the button is pressed with the *digitalRead()* function. When the value read is LOW the button is pressed and when the value is HIGH the button is not pressed.

```
if (digitalRead(PIN_BUTTON_LEFT) == LOW) {  
  // Button is pressed  
} else {  
  // Button is not pressed  
}
```

The following complete example will print the state of each button and the value of the joystick to the Arduino serial console:


```
// Store the Arduino pin associated with each input

// Select button is triggered when joystick is pressed
const byte PIN_BUTTON_SELECT = 2;

const byte PIN_BUTTON_RIGHT = 3;
const byte PIN_BUTTON_UP = 4;
const byte PIN_BUTTON_DOWN = 5;
const byte PIN_BUTTON_LEFT = 6;

const byte PIN_ANALOG_X = 0;
const byte PIN_ANALOG_Y = 1;

void setup() {
  Serial.begin(9600);

  pinMode(PIN_BUTTON_RIGHT, INPUT);
  digitalWrite(PIN_BUTTON_RIGHT, HIGH);

  pinMode(PIN_BUTTON_LEFT, INPUT);
  digitalWrite(PIN_BUTTON_LEFT, HIGH);

  pinMode(PIN_BUTTON_UP, INPUT);
  digitalWrite(PIN_BUTTON_UP, HIGH);

  pinMode(PIN_BUTTON_DOWN, INPUT);
  digitalWrite(PIN_BUTTON_DOWN, HIGH);

  pinMode(PIN_BUTTON_SELECT, INPUT);
  digitalWrite(PIN_BUTTON_SELECT, HIGH);
}

void loop() {
  Serial.print("l:");
  Serial.print(digitalRead(PIN_BUTTON_LEFT));
  Serial.print(" ");

  Serial.print("r:");
  Serial.print(digitalRead(PIN_BUTTON_RIGHT));
  Serial.print(" ");

  Serial.print("u:");
  Serial.print(digitalRead(PIN_BUTTON_UP));
  Serial.print(" ");

  Serial.print("d:");
  Serial.print(digitalRead(PIN_BUTTON_DOWN));
  Serial.print(" ");

  Serial.print("x:");
  Serial.print(analogRead(PIN_ANALOG_X));
  Serial.print(" ");

  Serial.print("y:");
  Serial.print(analogRead(PIN_ANALOG_Y));
  Serial.print(" ");

  Serial.print("s:");
  Serial.print(digitalRead(PIN_BUTTON_SELECT));
  Serial.print(" ");
}
```

```
Serial.println();  
}
```

How can I avoid repeating the setup code for each button?

An *excellent* question—see if you can work out the answer before we write one up. :)

How can I use the joystick with Processing (and Firmata)?

Also an excellent question—see if you can work out the answer before we write one up. :)

Schematic and PCB Layout

For technical information including the schematic and design files, please see the product page. You may also want to add/review the comments on this page or do a google search for example projects that use the joystick shield.

Have a suggestion for how we can improve this quickstart guide? Concepts not explained clearly? Need more example code? Please let us know. You can leave a comment below or email us spark@sparkfun.com. Also let us know if this is the most awesome Quickstart guide you have ever encountered and we will stop trying to improve it.