

Chipsmall Limited consists of a professional team with an average of over 10 year of expertise in the distribution of electronic components. Based in Hongkong, we have already established firm and mutual-benefit business relationships with customers from, Europe, America and south Asia, supplying obsolete and hard-to-find components to meet their specific needs.

With the principle of "Quality Parts, Customers Priority, Honest Operation, and Considerate Service", our business mainly focus on the distribution of electronic components. Line cards we deal with include Microchip, ALPS, ROHM, Xilinx, Pulse, ON, Everlight and Freescale. Main products comprise IC, Modules, Potentiometer, IC Socket, Relay, Connector. Our parts cover such applications as commercial, industrial, and automotives areas.

We are looking forward to setting up business relationship with you and hope to provide you with the best service and solution. Let us make a better world for our industry!



Contact us

Tel: +86-755-8981 8866 Fax: +86-755-8427 6832

Email & Skype: info@chipsmall.com Web: www.chipsmall.com

Address: A1208, Overseas Decoration Building, #122 Zhenhua RD., Futian, Shenzhen, China











Large Current External FET Controller Type Switching Regulators

Single-output Step-up, Negative Voltage, Step-down Switching Regulators (Controller type)

BD9300F/BD9300FV

Description

The BD9300F/FV 1-channel DC/DC Step-up, step-down, and inverting converter controller.


This IC has a wide input voltage range of 3.6 to 35 V, providing for a variety of applications. The pin assignment is similar to that of the BA9700, facilitating a space-saving application.


Features


- 1) 1-channel PWM control DC/DC converter controller
- 2) High voltage input of 3.6 to 35 V
- 3) Reference voltage accuracy of ±1%
- 4) Oscillation frequency variable in the range of 20 to 800 kHz
- 5) Built-in UVLO (Under Voltage Lock Out) circuit and SCP (Short Circuit Prevention) circuit
- 6) Current in standby mode: 0 µA (typ.)
- 7) Switching external synchronization available (Slave operation)
- 8) SSOP-B14 Package (for BD9300FV) or SOP14 Package (for BD9300F)

Applications

- TV, power supply for liquid crystal display TV, and backlight
- DSC, DVD, printer, DVD/DVD recorder, and other consumer products

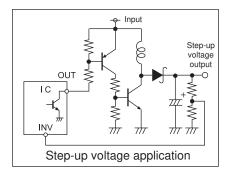

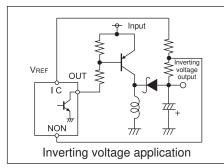

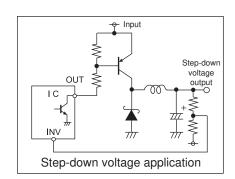

Absolute maximum ratings(Ta=25°C)

Item	Symbol	Rating	Unit
Power supply voltage	Vcc	36	V
Power dissipation	Pd	400 *	mW
Operating temperature	Topr	-40 to +85	°C
Storage temperature	Tstg	-55 to +125	°C
Output current	lo	100 **	mA
Output voltage	Vo	36	V
Maximum junction temperature	Tjmax	125	°C

^{*} Reduce by 4 mW/ *C over 25*C, when mounted on a glass epoxy PCB of 70mmX70mmX1.6mm) ** Should not exceed Pd-value.

Recommended operating range (Ta=25°C)

là a na	C. weeks al		1.1		
Item	Symbol	Min	Тур	Max	Unit
Power supply voltage	Vcc	3.6	12	35	V
Output sink current	lo	_	_	30	mA
Output voltage	Vo	_	_	35	V
Timing capacitance	СТ	33	_	1000	pF
Timing resistance	RT	5	_	100	kΩ
Oscillation frequency	Fosc	20	_	800	kHz

• Electrical characteristics (Unless otherwise specified, Ta=25°C, Vcc=12V, CT=200pF, RT=20kΩ)

Item	Symbol	Limits		Unit	Conditions	
	iviin Typ Max		Max	Offic	Conditions	
[Reference voltage block]						
Reference voltage	VREF	2.475	2.500	2.525	V	IREF=1mA
Input stability	V _{DLI}	_	1.5	20	mV	Vcc=3.6 to 35V IREF=1mA
Load stability	VDLD	_	0.5	20	mV	IREF=0 ~ 1mA
1/2 reference voltage	1/2VREF	1.212	1.25	1.288	V	
[Triangular wave oscillator block]						
Oscillation frequency	Fosc	165	220	275	kHz	
Charge mode threshold voltage	Vosc+	_	1.95	_	V	
Discharge mode threshold voltage	Vosc-	_	1.45	-	V	
Frequency variation	Fovo	_	1	_	%	Vcc=3.6 to 35V
[Protection circuit block]	rotection circuit block]					
Threshold voltage	VIT	1.5	1.8	2.1	V	
Charge current	Iscp	_	7	11	μΑ	
[Rest period adjustment circuit block]						
Upper limit threshold voltage	Vtн	2.05	_	_	V	Duty Cycle=0%
Lower limit threshold voltage	Vt∟	_	_	1.35	V	Duty Cycle=100%
Input bias current	lbd	_	0.1	1	μΑ	DTC=1.5V
Latch mode charge current	Idtc	200	500	_	μΑ	DTC=0V
[Under voltage lock out block]						
Threshold voltage	V uт	_	2.8	_	V	
ONLY 1 - 2 11-1 Park 2-11	Not decigned to be radiation recistant					

 $[\]bigcirc\,\mbox{Not}$ designed to be radiation-resistant.

• Electrical characteristics (Unless otherwise specified, Ta=25°C, Vcc=12 V, CT=200pF, RT=20 kΩ)

Itom	Cymbal	Limits		Unit	Conditions	
Item	Symbol	Min	Тур	Max	Unit	Conditions
[Error amplifier block]						
Input bias current	Ів	ı	0.1	1	μA	
Open loop gain	AV	_	85	_	dB	Null AMP
Maximum output voltage	Vон	2.3	2.5	_	V	
Minimum output voltage	Vol	_	0.7	0.9	V	
Output sink current	loı	0.1	1	I	mA	V _{FB} =1.25V
Output source current	loo	40	70	-	μA	V _{FB} =1.25V
[Output block]						
Saturation voltage	VSAT	ı	1.0	1.4	٧	Io=30mA
Leak current	ILEAK	_	_	10	μA	OUT=35V
[Control block]						
CTL ON voltage	Von	2	_	_	V	
CTL OFF voltage	Voff	_	_	0.7	V	
CTL sink current	ICTL	_	57	90	μA	VcTL=5V
[Whole device]						
Standby current	Іѕтв	_	0	10	μA	Vctl=0V
Average supply current	Icc	_	1.2	2.4	mA	RT=VREF

 $[\]bigcirc\,\mbox{Not designed to be radiation-resistant.}$

Measurement circuit diagram

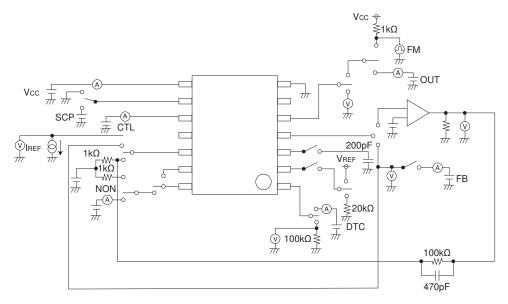


Fig. 1 Typical measurement circuit

■ Reference characteristics data (Unless otherwise specified, Ta=25°C)

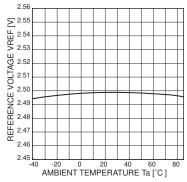


Fig.2 Reference voltage vs.
Ambient temperature

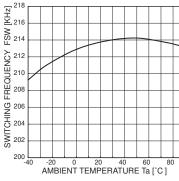


Fig.3 Switching frequency vs. Ambient temperature

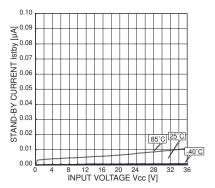


Fig.4 Standby current

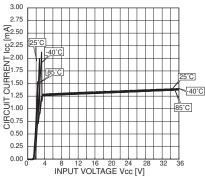


Fig.5 Circuit current

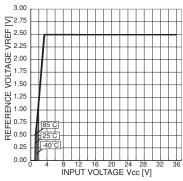


Fig.6 Reference voltage

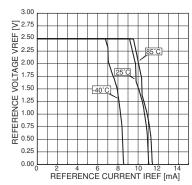


Fig.7 Reference voltage vs. Output current

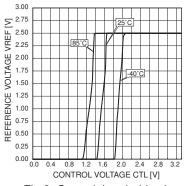


Fig.8 Control threshold voltage

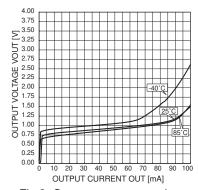


Fig.9 Output current capacitance

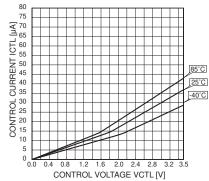


Fig.10 Control sink current

Pin assignment

Block diagram

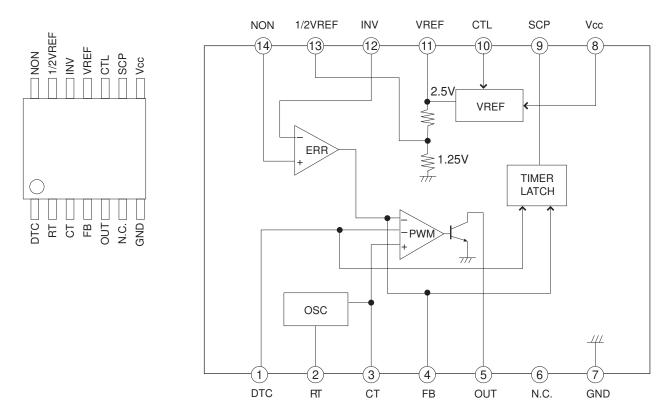


Fig. 11 Pin assignment / Block diagram

Pin assignment and function

Pin No.	Pin name	Function
1	DTC	Rest period setting voltage input
2	RT	External timing resistance
3	СТ	External timing capacitance
4	FB	Error amplifier output
5	OUT	PWM output (open collector)
6	N.C.	_
7	GND	Ground
8	Vcc	Power supply
9	SCP	External timer latch setting capacitance (Ground if not used)
10	CTL	Control input
11	VREF	Reference voltage output
12	INV	Inverting input for error amplifier
13	1/2VREF	1/2 reference voltage output
14	NON	Non-inverting input for error amplifier

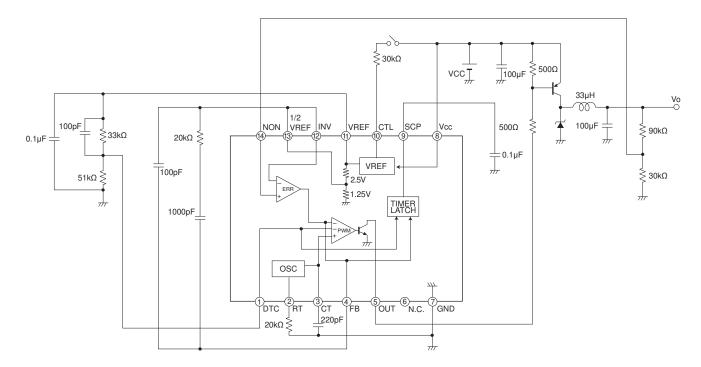


Fig. 12 Typical application circuit

VREF block

The VREF block is a block to output a reference voltage of 2.5 V (TYP), which is used as the operating power supply for all the Internal. The CTL pin is used to turn ON/OFF the reference voltage. Furthermore, this reference voltage has a current capacitance of 1 mA (MIN) or more, from which a high-accuracy reference voltage can be generated through dividing resistance.

FRRAMP block

The ERRAMP block is an error amplifier to amplify potential between the NON and the INV pins and then output a voltage. The FB pin output voltage determines the output pulse Duty. When the FB voltage reaches 1.95 V (TYP) or more, switching will be OFF (Duty=0%). When the FB voltage reaches 1.45 V (TYP) or less, the output NPN Tr will be FULL ON (Duty=100%).

OSC block

The OSC block is a block to determine the switching frequency through the RT and the CT pins. RT and CT voltages determine the triangular waveform.

TIMER LATCH block

The TIMER LATCH block is an output short circuit protection circuit to detect output short circuit when the output voltage from the FB pin of the error amplifier reaches 1 V (TYP) or less. When the FB voltage reaches 1 V (TYP) or less, the TIMER will starts operating to charge the SCP pin at a current capacitance of 7 μ A (TYP). When the SCP voltage reaches 1.8 V (TYP), the LATCH will be activated to shut down the circuit.

PWM/Driver block

The PWM/Driver block is a PWM comparator to determine Duty value differences between output from the error amplifier and the oscillator triangular wave. The DTC voltage determines the maximum duty ratio. When the DTC voltage reaches 1.95 V (TYP), the switching OFF is activated. FULL ON will be activated when the DTC voltage reaches 1.45 V (TYP). The DTC voltage setting should be made through dividing resistance with the VREF block.

Timing chart

· Basic operation

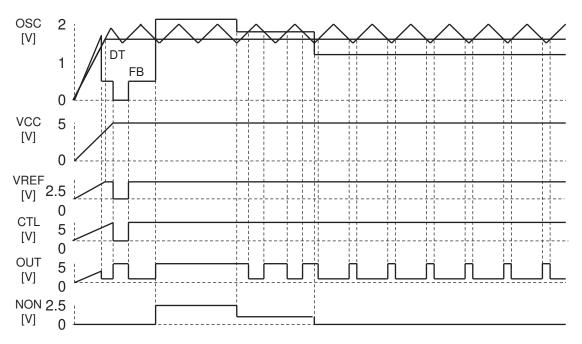


Fig. 13 Basic operation

· When the short circuit protection is activated


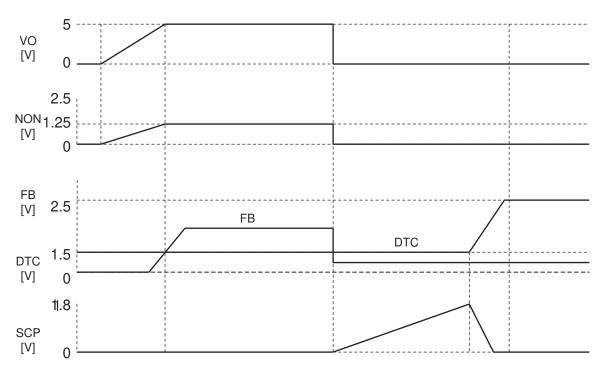


Fig. 14 Timing when the short circuit protection is activated

External component setting procedure

(1) Design of feedback resistance constant

Set step-down, step-up, and inverting feedback resistance as shown below. Set resistance in the range of 1 k Ω to 330 k Ω . Setting the resistance to 1 k Ω or less will result in degraded power efficiency, while setting it to 330 k Ω or more will increase the offset voltage due to the input bias current of 0.1µA (TYP) of the error amplifier.

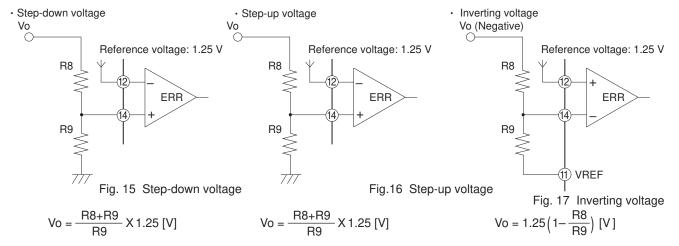

(2) Setting of oscillation frequency

Connecting a resistor and capacitor to the RT pin (pin 2) and the CT pin (pin 3) will set the triangular wave oscillation frequency. The RT determines the charge/discharge current to the capacitor. Referring to Fig. 18, set RT resistor and the CT capacitor. Recommended setting ranges are 5 to 100 k Ω for the CT resistor, 33 to 1000 pF for the CT capacitor, and 20 kHz to 800 kHz for the oscillation frequency. Any setting outside of these ranges may turn OFF switching, thus impairing the operation guarantee.

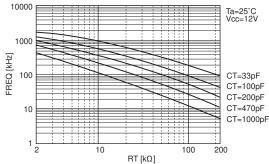


Fig. 18 RT/CT vs. Frequency

(3) Setting of DTC voltage

Applying the VDTC voltage to the DTC pin (pin 1) will fix the maximum duty ratio. This will serve to prevent the power transistor (FET) from being FULL ON. Fig. 19 shows the relationship between the DTC voltage and the maximum duty ratio. Referring to this Figure, set the DTC voltage. Next, generate the VDTC by dividing the VREF voltage with resistance and then input the VDTC in the DTC pin.

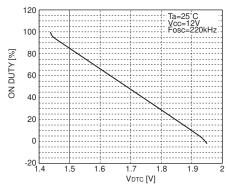


Fig. 19 DTC voltage vs. Maximum duty

Furthermore, the maximum duty ratio should be designed so as not to become a maximum duty for the normal use. The following section shows ranges for the normal use.

• Step-down voltage
$$ONDutyMAX = \frac{VOMAX}{VCCMIN}$$

· Step-up voltage
$$ONDutyMAX = \frac{VOMAX - VOMIN}{VOMAX}$$

· nverting voltage
$$ONDutyMAX = \frac{VOMAX}{VOMAX - VCCMIN}$$

(4) Setting of soft start time

Adding a capacitor to the DTC resistance divider will enable the soft start function activation.

The soft start function will be required to prevent an excessive increase in the coil current and overshoot of the output voltage, while in startup operation. Fig. 20 shows the relationship between the capacitor and the soft start time. Referring to this Figure, set the capacitor. It is recommended to set the capacitance value in the range of 0.01 to 10 μ F. Setting the capacitance value to 0.01 μ F or less, may cause overshoot to the output voltage, while setting it to 10 μ F or more may cause an inverse current in the internal parasitic diode when the power supply is grounded, thus resulting in damage to the internal element. the internal element.


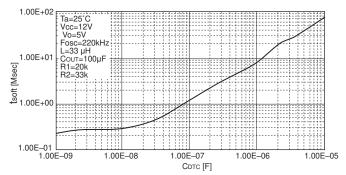


Fig. 20 Soft start capacitance vs. Delay time

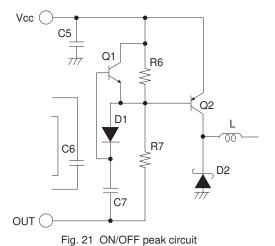

Since the PNP Tr is generally slow in switching, in terms of the sat characteristics , the ON/OFF peak circuit is used as an acceleration circuit. The D1 and the C7 generate an ON peak current, while the Q1 and the C7 forms an OFF peak circuit. Set pull-up resistance to 510 Ω as a guide at VCC=12 V. It is recommended to set this resistance in the range of 100 k Ω to 10 k Ω . In order to make adjustment of the R6 and R7, however, pay attention of the points listed in table below.

NO.	Item	To reduce R6	To reduce R7	
1	Efficiency Degraded		Degraded	
2	Tr Turn ON / Turn OFF	Tr Turn ON / Turn OFF Faster Turn OFF		
3	Switching frequency	Increasable	Increasable	
4	Load current capacitance	Degraded	Degraded	

Take 1000 pF as a guide for the C7 setting. If the ON/OFF peak currents are inadequate, increase the C7 capacitance value. It is recommended to set capacitance values in the range of 100 pF to 10000 pF. Setting the capacitance value to 10000 pF or more may increase the peak current and degrade the power efficiency.

(6) Phase compensation

Phase compensation setting procedure

The phase compensation setting procedure varies with the selection of output capacitors used for DC/DC converter application. In this connection, the following section describes the procedure by classifying into the two types. Furthermore, the application stability conditions are described in the Description section.

- 1. Application stability conditions
- 2. For output capacitors having high ESR, such as electrolytic capacitor
- 3. For output capacitors having low ESR, such as ceramic capacitor or OS-CON

1. Application stability conditions

The following section shows the stability conditions of negative feedback system.

• DSC, DVD, printer, DVD/DVD recorder, and other consumer productsAt a 1 (0-dB) gain, the phase delay is 150° or less (i.e., the phase margin is 30° or more).

Furthermore, since the DC/DC converter application is sampled according to the switching frequency, GBW of the overall system should be set to 1/10 or less of the switching frequency. The following section summarizes the targeted characteristics of this application.


- DSC, DVD, printer, DVD/DVD recorder, and other consumer productsAt a 1 (0-dB) gain, the phase delay is 150° or less (i.e., the phase margin is 30° or more).
- DSC, DVD, printer, DVD/DVD recorder, and other consumer productsThe GBW (i.e., frequency at 0-dB gain) for this occasion is 1/10 or less of the switching frequency.

In other words, the responsiveness is determined with restrictions on the GBW. Consequently, in order to upgrade the responsiveness, higher switching frequency should be provided.

In order to ensure the stability through the phase compensation, a secondary phase delay (–180°) resulting from LC resonance should be canceled with a secondary phase lead (i.e., through inserting two phase leads). Furthermore, the GBW (i.e., frequency at 1-dB gain) is determined according to phase compensation capacitance to be provided for the error amplifier. Consequently, in order to reduce the GBW, increase the capacitance value.

(1) Typical (sun) integrator (Low pass filter)

(2) Open loop characteristics of (mon) integrator

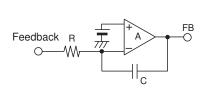


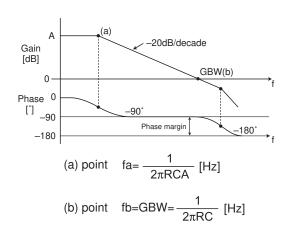


Fig. 22 Typical integrator characteristics

Since the error amplifier is provided with (sun) or (mon) phase compensation, the low pass filter is applied. In the case of the DC/DC converter application, the R becomes a parallel resistance of the feedback resistance.

2. For output capacitors having high ESR, such as aluminum electrolytic capacitor

For output capacitors having high ESR (i.e., several ohms), the phase compensation setting procedure becomes comparatively simple. Since the DC/DC converter application has a LC resonant circuit attached to the output, a -180° phase-delay occurs in that area. If ESR component is present there, however, a $+90^{\circ}$ phase-lead occurs to shift the phase delay to -90° . Since the phase delay is desired to set within 150° , this is a very effective method but has a demerit to increase the ripple component of the output voltage.

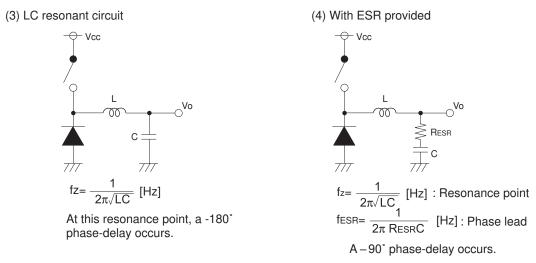


^{*} Same for the phase compensation of inverting and step-up voltages

Fig. 23 DC/DC converter output application

According to changes in phase characteristics due to the ESR, only one phase lead should be inserted. For this phase lead, select either of the methods shown below:

(5) Insert feedback resistance in the C.

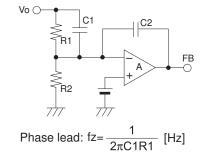

(6) Insert the R3 in integrator.

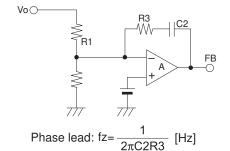


Fig. 24 Typical phase compensation circuit

To cancel the LC resonance, phase lead frequency should be set close to the LC resonant frequency.

3. For output capacitors having low ESR, such as a ceramic capacitor or OS-CON

In order to use capacitors having low ESR (i.e., several tens of mW), two phase-leads should be inserted so that a -180° phase-delay, due to LC resonance, will be compensated. The following section shows a typical phase compensation procedure.

· Phase compensation with secondary phase lead

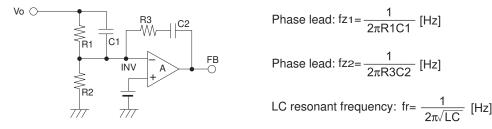


Fig. 25 Typical circuit after secondary compensation circuit

For the settings of phase lead frequency, insert both of the phase leads close to the LC resonant frequency.

Phase compensation on the BD9300F/FV

For BD9300F/FV, since the error amplifier input is inverted to the normal input, the phase compensation procedure is slightly different. (The BD9300F/FV returns feedback to the NON pin.)

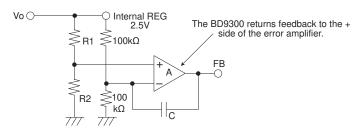


Fig. 26 Typical circuit after phase compensation on BD9300F/FV

The BD9300F/FV feeds back on the + side input and returns the phase compensation on the - side input. Consequently, resistance of the resistance divider being used to determine the reference voltage has influence on the frequency characteristics. (The BD9300F/FV has a 1/2 VREF pin to divide resistance by 100 k Ω .)


The following section shows the phase characteristics.


Primary phase delay: fp =
$$\frac{1}{2\pi C} \frac{100 k\Omega}{2}$$
 (1+A) [Hz], where A is approximately 80 dB.
Phase lead: fz = $\frac{1}{2\pi C} \frac{100 k\Omega}{2}$ [Hz]

As a result, inserting a phase compensation capacitor will cause phase lead component. If any further phase lead is required, add a capacitor in parallel with the R1.


Equivalent circuit

(1) DTC

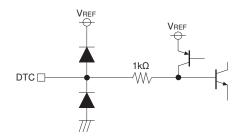


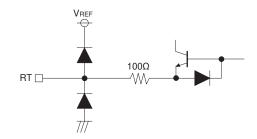


(3) CT

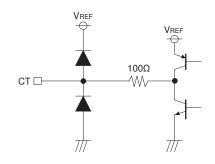


(4) FB

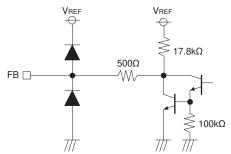


(5) OUT

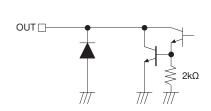


(9) SCP

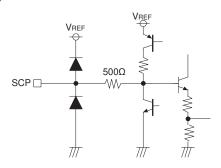


(10) CTL

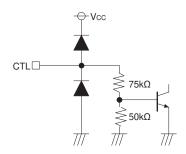


(12) INV

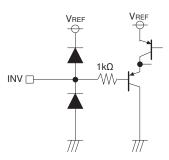

(13) 1/2 VREF

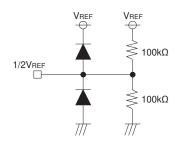

(14) NON

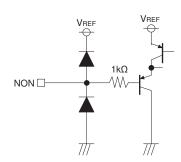

Cautions on use

1) Absolute maximum ratings

An excess in the absolute maximum ratings, such as supply voltage, temperature range of operating conditions, etc., can break down the devices, thus making impossible to identify breaking mode, such as a short circuit or an open circuit. If any over rated values will expect to exceed the absolute maximum ratings, consider adding circuit protection devices, such as fuses.

2) GND potential

Ground-GND potential should maintain at the minimum ground voltage level. Furthermore, no terminals should be lower than the GND potential voltage including an electric transients.

3) Thermal design

Use a thermal design that allows for a sufficient margin in light of the power dissipation (Pd) in actual operating conditions.

4) Inter-pin shorts and mounting errors

Use caution when positioning the IC for mounting on printed circuit boards. The IC may be damaged if there is any connection error or if positive and ground power supply terminals are reversed. The IC may also be damaged if pins are shorted together or are shorted to other circuitís power lines.

5) Operation in strong electromagnetic field

Use caution when using the IC in the presence of a strong electromagnetic field as doing so may cause the IC to malfunction.

6) Testing on application boards

When testing the IC on an application board, connecting a capacitor to a pin with low impedance subjects the IC to stress. Always discharge capacitors after each process or step. Always turn the IC's power supply off before connecting it to, or removing it from a jig or fixture, during the inspection process. Ground the IC during assembly steps as an antistatic measure. Use similar precaution when transporting and storing the IC.


7) IC pin input

This monolithic IC contains P+ isolation and P substrate layers between adjacent elements to keep them isolated. PñN junctions are formed at the intersection of these P layers with the N layers of other elements, creating a parasitic diode or transistor. For example, the relation between each potential is as follows:

O When GND > Pin A and GND > Pin B, the PñN junction operates as a parasitic diode.

 \bigcirc When Pin B > GND > Pin A, the PñN junction operates as a parasitic transisto r.

Parasitic diodes can occur inevitably in the structure of the IC. The operation of parasitic diodes can result in mutual interference among circuits, operational faults, or physical damage. Accordingly, methods by which parasitic diodes operate, such as applying a voltage that is lower than the GND (P substrate) voltage to an input pin, should not be used.

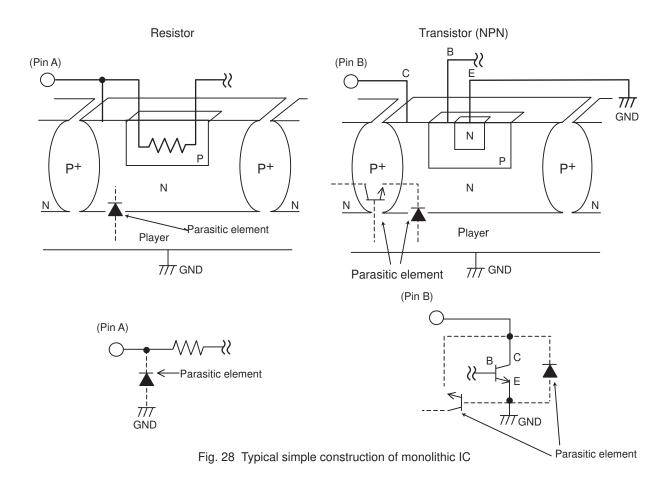

8) Ground wiring pattern

The power supply and ground lines must be as short and thick as possible to reduce line impedance. Fluctuating voltage on the power ground line may damage the device.

Derating curve


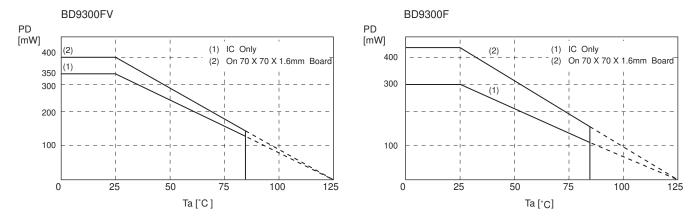



Fig. 29 Thermal derating characteristics


Selection of order type

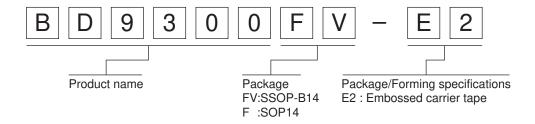


Package specifications


SOP14

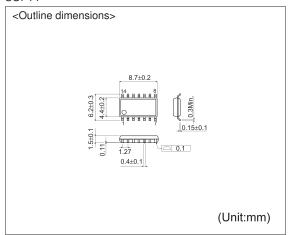

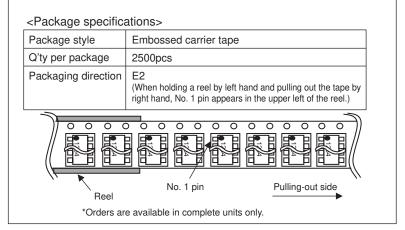

SSOP-B14

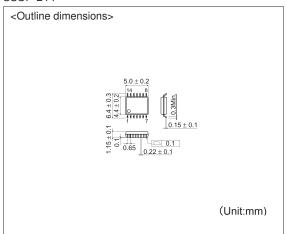

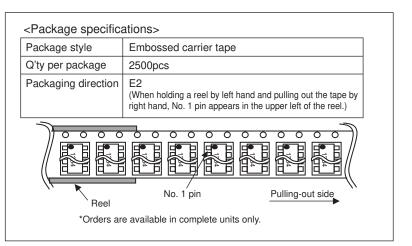

- The contents described herein are correct as of September, 2008
- The contents described herein are subject to change without notice. For updates of the latest information, please contact and confirm with ROHM CO.,LTD.
- Any part of this application note must not be duplicated or copied without our permission.
- Application circuit diagrams and circuit constants contained herein are shown as examples of standard use and operation. Please pay careful attention to the peripheral conditions when designing circuits and deciding upon circuit constants in the set.
- Any data, including, but not limited to application circuit diagrams and information, described herein are intended only as illustrations of such devices and not as the specifications for such devices. ROHM CO.,LTD. disclaims any warranty that any use of such devices shall be free from infringement of any third party's intellectual property rights or other proprietary rights, and further, assumes no liability of whatsoever nature in the event of any such infringement, or arising from or connected with or related to the use of such devices.
- Upon the sale of any such devices, other than for buyer's right to use such devices itself, resell or otherwise dispose of the same, implied right or license to practice or commercially exploit any intellectual property rights or other proprietary rights owned or controlled by ROHM CO., LTD. is granted to any such buyer.
- The products described herein utilize silicon as the main material.
- The products described herein are not designed to be X ray proof.

The products listed in this catalog are designed to be used with ordinary electronic equipment or devices (such as audio visual equipment, office-automation equipment, communications devices, electrical appliances and electronic toys).

Should you intend to use these products with equipment or devices which require an extremely high level of reliability and the malfunction of which would directly endanger human life (such as medical instruments, transportation equipment, aerospace machinery, nuclear-reactor controllers, fuel controllers and other safety devices), please be sure to consult with our sales representative in advance.

Excellence in Electronics



ROHM CO., LTD.

21 Saiin Mizosaki-cho, Ukyo-ku, Kyoto 615-8585, Japan TEL: +81-75-311-2121 FAX: +81-75-315-0172 URL http://www.rohm.com

Published by KTC LSI Development Headquarters LSI Business Pomotion Group

Contact us for further information about the products.

TEL: +1-858-625-3630 San Diego Atlanta Boston Chicago Dallas Denver Detroit Nashville Mexico Düsseldorf Munich Stuttgart France United Kinadom Denmark Barcelona Hungary Russia

FAX: +1-858-625-3670 TEL: +1-770-754-5972 FAX: +1-770-754-0691 FAX: +1-7/0-754-0691 FAX: +1-928-438-7164 FAX: +1-847-368-1008 FAX: +1-469-362-7973 FAX: +1-303-708-0858 FAX: +1-248-348-9942 FAX: +1-615-620-6702 TEL: +1-978-371-0382 TEL: +1-978-371-0382 TEL: +1-847-368-1006 TEL: +1-469-287-5366 TEL: +1-303-708-0908 TEL: +1-248-348-9920 TEL: +1-615-620-6700 TEL: +1-615-620-6700
TEL: +52-33-3123-2001
TEL: +49-2154-9210
TEL: +49-8999-216168
TEL: +49-711-7272-370
TEL: +33-1-5697-3060 FAX: +52-33-3123-2002 FAX: +32-33-3123-2002 FAX: +49-2154-921400 FAX: +49-8999-216176 FAX: +49-711-7272-3720 FAX: +33-1-5697-3080 TEL: +44-1-908-306700 FAX: +44-1-908-235788 TFI: +45-3694-4739 FAX: +45-3694-4789 FAX: +45-3694-4789 FAX: +358-9-7255-4499 FAX: +358-2-7332237 FAX: +358-8-5372931 FAX: +34-9375-24410 FAX: +36-1-4719339 TEL: +358-9725-54491 TEL: +358-9725-5449
TEL: +358-2-7332234
TEL: +358-8-5372930
TEL: +34-9375-24320
TEL: +36-1-4719338 TEL: +48-22-5757213 FAX: +48-22-5757001 TEL: +7-495-739-41-74 FAX: +7-495-739-41-74 TEL: +82-2-8182-700 FAX: +82-2-8182-715
TEL: +82-55-240-6234 FAX: +82-55-240-6236
TEL: +86-411-8230-8537
TEL: +86-10-8525-2489 FAX: +86-10-8525-2489

Tianiin Hangzhou Nanjing Ningbo Qingdao Suzhou Wuxi Shenzhen Dongguan Fuzhou Guangzhou Huizhou Xiamen Zhuhai Hong Kong Taipei Kaohsiung Singapore Philippines Thailand Kuala Lumpur Penang Kyoto Yokohama

TEL: +86-22-23029181 FAX: +86-22-23029183 TEL: +86-592-238-5705 FAX: +86-592-239-8380 FAX: +86-756-3232-460 TEL: +86-756-3232-480 TEL: +86-7-36-3232-460 TEL: +852-2-740-6262 TEL: +886-2-2500-6956 TEL: +886-7-237-0881 TEL: +65-6332-2322 FAX: +86-7-36-3232-460 FAX: +852-2-375-8971 FAX: +886-2-2503-2869 FAX: +886-7-238-7332 FAX: +65-6332-5662 TEL: +63-2-807-6872 FAX: +63-2-809-1422 TEL: +66-2-254-4890 FAX: +66-2-256-6334 FAX: +60-3-7958-8377 FAX: +60-4-2286452 FAX: +81-75-365-1228 FAX: +81-45-476-2295 TEL: +60-3-7958-8355 TEL: +60-4-2286453 TEL: +61-75-365-1218 TEL: +81-45-476-2290

Notes

No copying or reproduction of this document, in part or in whole, is permitted without the consent of ROHM CO.,LTD.

The content specified herein is subject to change for improvement without notice.

The content specified herein is for the purpose of introducing ROHM's products (hereinafter "Products"). If you wish to use any such Product, please be sure to refer to the specifications, which can be obtained from ROHM upon request.

Examples of application circuits, circuit constants and any other information contained herein illustrate the standard usage and operations of the Products. The peripheral conditions must be taken into account when designing circuits for mass production.

Great care was taken in ensuring the accuracy of the information specified in this document. However, should you incur any damage arising from any inaccuracy or misprint of such information, ROHM shall bear no responsibility for such damage.

The technical information specified herein is intended only to show the typical functions of and examples of application circuits for the Products. ROHM does not grant you, explicitly or implicitly, any license to use or exercise intellectual property or other rights held by ROHM and other parties. ROHM shall bear no responsibility whatsoever for any dispute arising from the use of such technical information.

The Products specified in this document are intended to be used with general-use electronic equipment or devices (such as audio visual equipment, office-automation equipment, communication devices, electronic appliances and amusement devices).

The Products are not designed to be radiation tolerant.

While ROHM always makes efforts to enhance the quality and reliability of its Products, a Product may fail or malfunction for a variety of reasons.

Please be sure to implement in your equipment using the Products safety measures to guard against the possibility of physical injury, fire or any other damage caused in the event of the failure of any Product, such as derating, redundancy, fire control and fail-safe designs. ROHM shall bear no responsibility whatsoever for your use of any Product outside of the prescribed scope or not in accordance with the instruction manual.

The Products are not designed or manufactured to be used with any equipment, device or system which requires an extremely high level of reliability the failure or malfunction of which may result in a direct threat to human life or create a risk of human injury (such as a medical instrument, transportation equipment, aerospace machinery, nuclear-reactor controller, fuel-controller or other safety device). ROHM shall bear no responsibility in any way for use of any of the Products for the above special purposes. If a Product is intended to be used for any such special purpose, please contact a ROHM sales representative before purchasing.

If you intend to export or ship overseas any Product or technology specified herein that may be controlled under the Foreign Exchange and the Foreign Trade Law, you will be required to obtain a license or permit under the Law.

Thank you for your accessing to ROHM product informations.

More detail product informations and catalogs are available, please contact your nearest sales office.

ROHM Customer Support System

THE AMERICAS / EUROPE / ASIA / JAPAN

www.rohm.com

Contact us : webmaster@ rohm.co.jp

Copyright © 2009 ROHM CO.,LTD.

ROHM Co., Ltd. 21 Saiin Mizosaki-cho, Ukyo-ku, Kyoto 615-8585, Japan

TEL:+81-75-311-2121 FAX:+81-75-315-0172

