

Chipsmall Limited consists of a professional team with an average of over 10 year of expertise in the distribution of electronic components. Based in Hongkong, we have already established firm and mutual-benefit business relationships with customers from, Europe, America and south Asia, supplying obsolete and hard-to-find components to meet their specific needs.

With the principle of "Quality Parts, Customers Priority, Honest Operation, and Considerate Service", our business mainly focus on the distribution of electronic components. Line cards we deal with include Microchip, ALPS, ROHM, Xilinx, Pulse, ON, Everlight and Freescale. Main products comprise IC, Modules, Potentiometer, IC Socket, Relay, Connector. Our parts cover such applications as commercial, industrial, and automotives areas.

We are looking forward to setting up business relationship with you and hope to provide you with the best service and solution. Let us make a better world for our industry!



Contact us

Tel: +86-755-8981 8866 Fax: +86-755-8427 6832

Email & Skype: info@chipsmall.com Web: www.chipsmall.com

Address: A1208, Overseas Decoration Building, #122 Zhenhua RD., Futian, Shenzhen, China







Q UIC K START G UIDE FOR DEMONSTRATION CIRC UIT 495 2 C ELL LLION BATIERY CHARGER WITH CHARGE TERMINATION

LTC 4006

DESCRIPTION

Demonstration circuit 495 is a single battery standalone battery charge controller with built in charge termination featuring the LTC®4006. The input voltage is 9 to 20V. The charger output voltage is fixed for a 2cell 8.4V Li-ion battery. The maximum charge current is 2A. The board will automatically charge a battery to termination as soon as input power is applied with a battery connected prior to power up. Status LEDs are provided for CHG, ACP, and C/10. An onboard NTC thermistor is provided. Although this charger is not a smart battery charger, a popular smart battery connector is provided that

can be used for data logging with the OPTIONAL DC1223A-B Demo board and software. To be clear, you do NOT need a smart battery to use this board. The optional DC1223A-B SMBUS to USB port adapter and associated software to monitor a smart battery for demonstration purposes only. Contact your LT representative for ordering a DC1223A-B.

Design files for this circuit board are available. Call the LTC factory.

LTC is a registered trademark of Linear Technology Corporation.

Table 1. Performance Summary

| PARAMETER | CONDITION | VALUE |
|-----------------------------------|--|---------------------------------------|
| Maximum Input Voltage | Limited by input Capacitor Volt Ratings. | 20V +/- 10 % |
| Recommended Minimum Input Voltage | Vin > Vbat Termination voltage. | 9V when using an 8.4V Li-ion battery. |
| Input Current Limit | | 2 Amps |
| Maximum Charge Current | Vin > Vbatmax > 6V | 2A +/- 5% |

QUICK START PROCEDURE

Demonstration circuit 495 is easy to set up to evaluate the performance of the LTC4006. Refer to Figure 1 for proper measurement equipment setup and follow the procedure below:

NOTE: When measuring the input or output voltage ripple, care must be taken to avoid a long ground lead

- 1. Connect the input power source to DCIN terminals J1 or DCIN and GND using a power supply capable of handling 2.5A of current within a 9 to 20V range. The input supply MUST be greater than the full voltage value of the battery to allow a full charge to take place.
- 2. Connect the load to DCOUT and GND terminals.

on the oscilloscope probe. Measure the input or output voltage ripple by touching the probe tip directly across the V_{IN} or V_{OUT} and GND terminals. See Figure 2 for proper scope probe technique.

- 3. Plug in s 8.4V Li-ion battery. Industry standard 5 Pin AMP Smart Battery connector is provided as well as generic soldering Test Points for hardwire connections.
- 4. Turn on the input power supply.
- 5. Optionally use the provided DC1223A-B demonstration software to control and configure the DC495.



Q UIC K START G UIDE FOR DEMONSTRATION CIRC UIT 495 2 C ELL LLION BATTERY CHARGER WITH CHARGE TERMINATION

6. **NOTE**: If the board is allowed to get to warm, the onboard NTC thermistor may trip and momentarily suspend the charge process. This

can be confirmed by the fault LED turning on. When the board cools down, charging will resume.

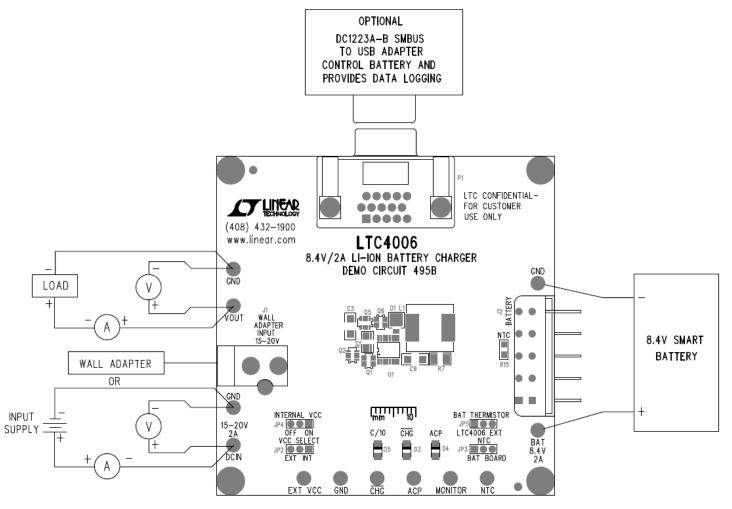


Figure 1: Proper Measurement Equipment Setup




Figure 2: Scope Probe Placement for Measuring Input or Output Ripple



Q UIC K START G UIDE FOR DEMONSTRATION CIRC UIT 495 2 CELLIJION BATTERY CHARGER WITH CHARGE TERMINATION

