



Chipsmall Limited consists of a professional team with an average of over 10 year of expertise in the distribution of electronic components. Based in Hongkong, we have already established firm and mutual-benefit business relationships with customers from,Europe,America and south Asia,supplying obsolete and hard-to-find components to meet their specific needs.

With the principle of “Quality Parts,Customers Priority,Honest Operation,and Considerate Service”,our business mainly focus on the distribution of electronic components. Line cards we deal with include Microchip,ALPS,ROHM,Xilinx,Pulse,ON,Everlight and Freescale. Main products comprise IC,Modules,Potentiometer,IC Socket,Relay,Connector.Our parts cover such applications as commercial,industrial, and automotives areas.

We are looking forward to setting up business relationship with you and hope to provide you with the best service and solution. Let us make a better world for our industry!



Contact us

Tel: +86-755-8981 8866 Fax: +86-755-8427 6832

Email & Skype: info@chipsmall.com Web: www.chipsmall.com

Address: A1208, Overseas Decoration Building, #122 Zhenhua RD., Futian, Shenzhen, China



MAX17242 Evaluation Kit with Preset 3.3V/2A Output

Evaluates: MAX17242

General Description

The MAX17242 evaluation kit (EV kit) demonstrates the MAX17242 high-voltage, current-mode step-down converters with low operating current. The EV kit operates over a wide 3.5V to 36V input range and the output is set for 3.3V at 2A.

The EV kit comes with the MAX17242ETPB installed.

Features

- Wide 3.5V to 36V Input Supply Range
- 96% Peak Efficiency @ 3.5V Input in Skip Mode
- Forced-PWM or Skip-Mode Operation
- Programmable Switching Frequency (400kHz Default)
- Selectable Spread Spectrum Optimizes EMI Performance
- FSYNC Input and Power-Good Output
- Proven 4-Layer 2oz Copper PCB Layout
- Demonstrates 950mil x 835mil Solution Size
- Fully Assembled and Tested

Quick Start

Required Equipment

- MAX17242EV kit
- 12V, 2A DC power supply
- Electronic load capable of 2A
- Digital voltmeter (DVM)

Procedure

The EV kit is fully assembled and tested. Follow the steps below to verify board operation. **Caution: Do not turn on supplies until all connections are made.**

- 1) Verify that jumpers JU1–JU4 are in their default positions, as shown in [Table 1](#) through [Table 4](#).
- 2) Connect the power supply between the VINSUPSW and nearest PGND 2-hole pads or test points.
- 3) Connect the 2A electronic load between the VOUT and nearest PGND 2-hole pads or test points.
- 4) Connect the DVM between the VOUT and nearest PGND test points.
- 5) Turn on the power supply.
- 6) Enable the electronic load.
- 7) Verify that the voltage at the VOUT test point is approximately 3.3V.

Table 1. EN Configuration (JU1)

SHUNT POSITION	EN PIN	MODE
1-2*	Connected to SUP	Normal Operation
2-3	Connected to PGND	Shutdown Mode

*Default position.

Table 2. Operating-Mode and Frequency Control (JU2)

SHUNT POSITION	FSYNC PIN	MODE
1-2*	Connected to BIAS	Forced-PWM mode
2-3	Connected to AGND	Skip mode
Not installed	Connected to FSYNC test point and external clock	Forced-PWM mode (device syncs to an external clock)

*Default position.

Table 3. Spread Spectrum (JU3)

SHUNT POSITION	SPS PIN	MODE
1-2*	Connected to BIAS	Spread-Spectrum Enabled
2-3	Connected to AGND	Spread-Spectrum Disabled

*Default position.

Table 4. PGOOD (JU4)

SHUNT POSITION	MODE
Installed*	PGOOD pulled high to BIAS
Not installed	PGOOD pulled high to V_PULL

*Default position.

[Ordering Information](#) appears at end of data sheet.

MAX17242 Evaluation Kit with Preset 3.3V/2A Output

Evaluates: MAX17242

Detailed Description of Hardware

The MAX17242EV kit demonstrates the MAX17242 high-voltage, high-frequency, step-down converter with low operating current. The EV kit operates over a wide 3.3V to 36V input range and the output is set for 3.3V at 2A. Consider thermal and switching efficiency when designing for operation in the 24V–36V input voltage range.

Enable (EN)

Place a shunt in the 1-2 position on JU1 for normal operation. To place the device into shutdown mode, move the shunt on JU1 to the 2-3 position.

Synchronization Input (FSYNC)

The EV kit features jumper JU2 to control the synchronization input (FSYNC). The device synchronizes to an external signal applied to FSYNC. Connect FSYNC to AGND to enable skip-mode operation. Connect to BIAS to enable Forced-PWM mode, or to an external clock to enable fixed-frequency forced-PWM mode operation.

To use an external clock, uninstall the shunt on jumper JU2 and apply the signal at the FSYNC test point and AGND. The external clock frequency at FSYNC can be higher or lower than the internal clock by 20%. Ensure that the duty cycle of the external clock used has a minimum 100ns pulse width. The external clock logic High voltage can be in the 1.4V–5V range.

Spread-Spectrum Option (SPS)

The EV kit provides jumper JU3 that allows SPS to be pulled high (BIAS) or pulled low (AGND). Connect SPS high to enable spread spectrum where the operating frequency is varied $\pm 3\%$ centered on FOSC. Connect SPS low to disable the spread-spectrum feature.

Setting the Switching Frequency (FOSC)

The EV kit switches at 400kHz by default, and the switching frequency is set by a resistor, R_{FOSC} (R4), connected from FOSC to AGND. Refer to TOC08 in the *Typical Operating Characteristics* section of the MAX17242 IC data sheet for the correct R_{FOSC} (R4) value.

Power-Good Output (PGOOD)

The EV kit provides a PGOOD test point to monitor the status of the device output. PGOOD asserts when V_{OUT} rises above 95% of its regulation voltage. PGOOD deasserts when V_{OUT} drops below 92.5% of its regulation voltage. R5 pulls PGOOD up to BIAS or V_{PULL} with respect to AGND. When operating in Skip-mode, use an external voltage source for V_{PULL} . Remove the shunt on jumper JU4 and connect an external voltage source up to 5.5V to the V_{PULL} 2-hole pad.

Output

Resistor R6 connects FB to BIAS for a fixed +3.3V (EV kit default output) or a fixed +5V output voltage. To set the output to other voltages between 1V and 10V, connect a resistive divider from output (OUT) to FB to AGND. Use the following equation to determine the R7 and R8 of the resistive divider network:

$$R7 = R8 \times \left(\frac{V_{OUT}}{V_{FB}} - 1 \right)$$

where $V_{FB} = 1V$ and $R8$ is $\leq 500k\Omega$.

Operation at 1MHz Switching Frequency

For 1MHz switching frequency, the following components must be changed to:

- R4 = 27.4k Ω
- L1 = 4.7 μ H (recommend Coilcraft XAL6060-472MEB)
- R1 = 12.1k Ω
- C10 = 6,800pF

Additional capacitance on C8 may be needed, depending on transient performance.

MAX17242 Evaluation Kit with Preset 3.3V/2A Output

Evaluates: MAX17242

Component Suppliers

SUPPLIER	WEBSITE
Coilcraft Inc.	www.coilcraft.com
Murata Americas	www.murata.com
Panasonic Corp.	www.panasonic.com
TDK Corporation	www.tdk.com

Note: Indicate that you are using the MAX17242 when contacting these component suppliers.


MAX17242 EV Bill of Materials

REF_DES	QTY	DESCRIPTION
C1, C3	2	CAPACITOR; SMT (0603); CERAMIC CHIP; 0.1UF; 100V; TOL=10%; TG=-55 DEGC TO +125 DEGC; TC=X7R
J1-J3, J5	4	CONNECTOR; MALE; THROUGH HOLE; BREAKAWAY; STRAIGHT THROUGH; 3PINS; -65 DEGC TO +125 DEGC
J4	1	CONNECTOR; MALE; THROUGH HOLE; BREAKAWAY; STRAIGHT; 4PINS
LED1	1	DIODE; LED; LY L29K SERIES; SMARTLED; YELLOW; SMT (1608); VF=1.8V; IF=0.02A
LED2	1	DIODE; LED; SMART; RED; SMT (0603); PIV=1.8V; IF=0.02A; -40 DEGC TO +100 DEGC
R1	1	RESISTOR; 0603; 5K OHM; 0.1%; 25PPM; 0.15W; THIN FILM
SU1-SU5	5	TEST POINT; JUMPER; STR; TOTAL LENGTH=0.24IN; BLACK; INSULATION=PBT;PHOSPHOR BRONZE CONTACT=GOLD PLATED
TP1	1	TESTPOINT WITH 1.80MM HOLE DIA, RED, MULTIPURPOSE;
TP2-TP6, TP8	6	TEST POINT; PIN DIA=0.125IN; TOTAL LENGTH=0.445IN; BOARD HOLE=0.063IN; WHITE; PHOSPHOR BRONZE WIRE SILVER PLATE FINISH;
TP9-TP11	3	TEST POINT; PIN DIA=0.125IN; TOTAL LENGTH=0.445IN; BOARD HOLE=0.063IN; BLACK; PHOSPHOR BRONZE WIRE SILVER PLATE FINISH;
U1	1	IC; DRV; 24V PIN-CONFIGURABLE INDUSTRIAL SENSOR OUTPUT DRIVERS; TDFN12-EP
C4	0	PACKAGE OUTLINE 0603 NON-POLAR CAPACITOR
PCB	1	PCB Board:MAX14838 EVALUATION KIT


MAX17242 Evaluation Kit with Preset 3.3V/2A Output

Evaluates: MAX17242

MAX17242 EV Schematics

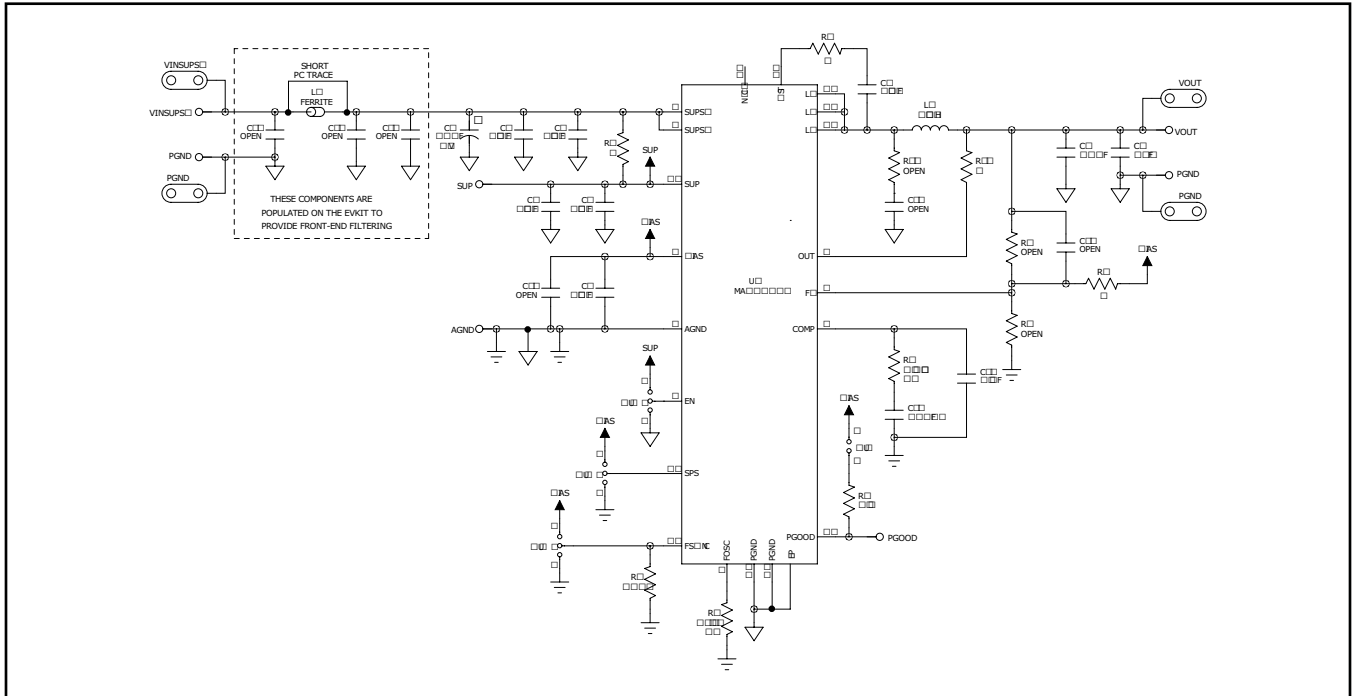

MAX17242 EV Schematic

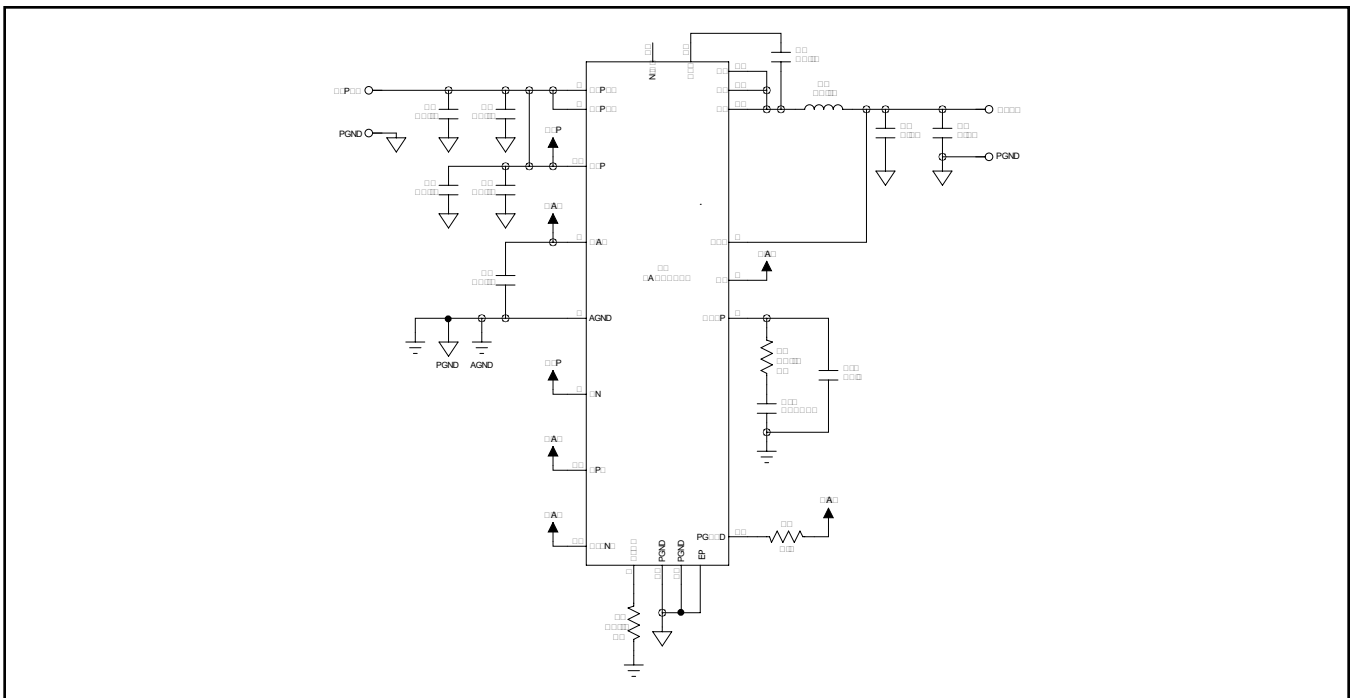


MAX17242 EV Minimal Component Schematic


MAX17242 Evaluation Kit with Preset 3.3V/2A Output

Evaluates: MAX17242


MAX17242 EV PCB Layout

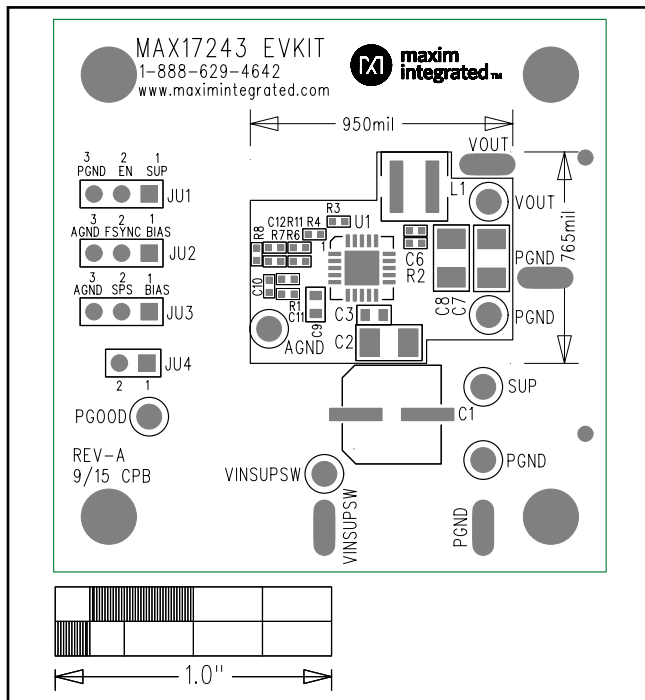


MAX17242 EV Top Silkscreen

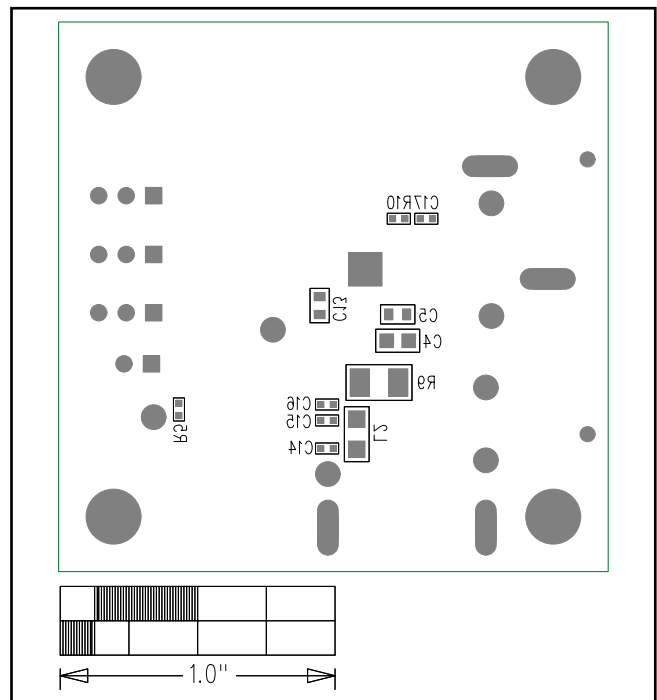

MAX17242 EV Bottom Silkscreen

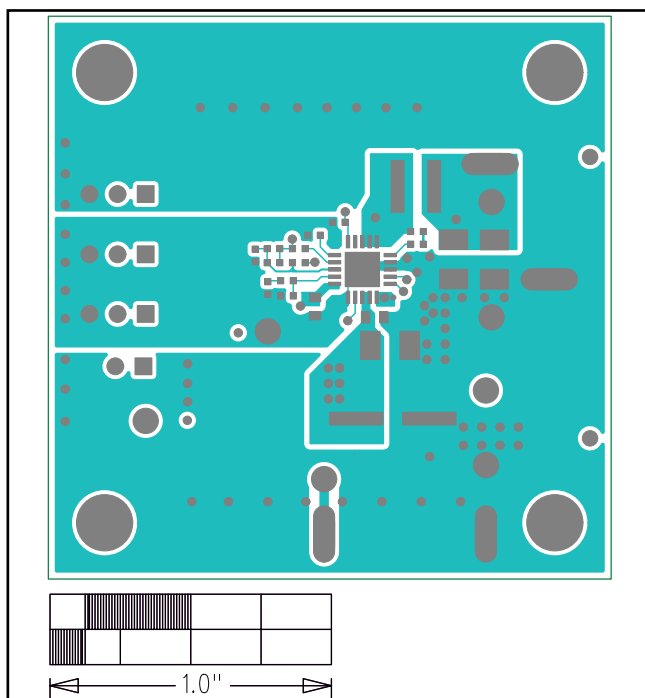


MAX17242 EV Component Side

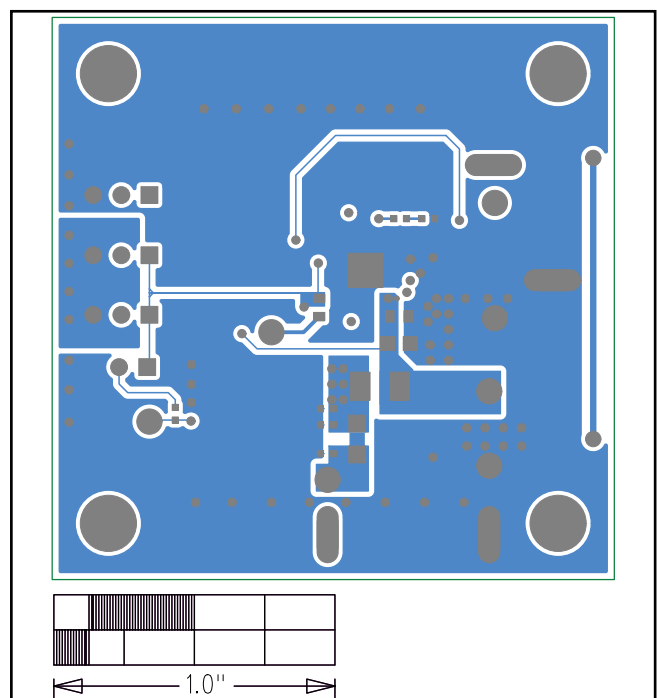


MAX17242 EV Solder Side

MAX17242 EV PCB Layout (Continued)

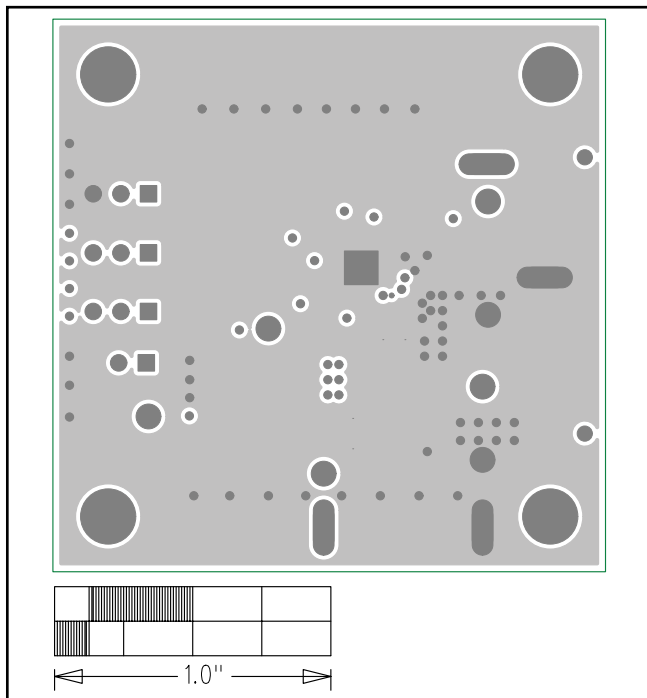

MAX17242 EV Layer 2-PGND

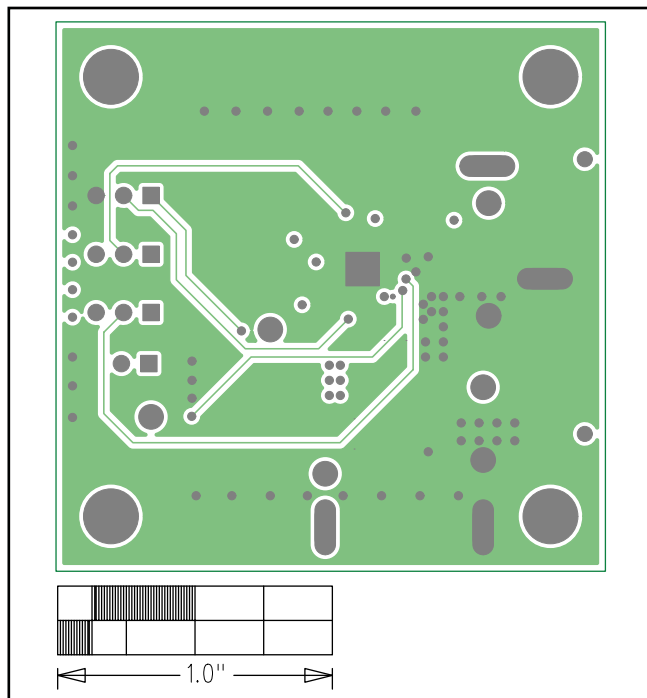

MAX17242 EV Layer 3-Signal PGND

Ordering Information

PART	TYPE
MAX17242EVKIT#	EV Kit

#Denotes RoHS compliant.

Revision History

REVISION NUMBER	REVISION DATE	DESCRIPTION	PAGES CHANGED
0	12/15	Initial release	—
1	5/16	Updated Table 2	1
2	8/16	Removed FSYNC information in Table 2	1

For pricing, delivery, and ordering information, please contact Maxim Direct at 1-888-629-4642, or visit Maxim Integrated's website at www.maximintegrated.com.

Maxim Integrated cannot assume responsibility for use of any circuitry other than circuitry entirely embodied in a Maxim Integrated product. No circuit patent licenses are implied. Maxim Integrated reserves the right to change the circuitry and specifications without notice at any time.