



Chipsmall Limited consists of a professional team with an average of over 10 year of expertise in the distribution of electronic components. Based in Hongkong, we have already established firm and mutual-benefit business relationships with customers from Europe, America and south Asia, supplying obsolete and hard-to-find components to meet their specific needs.

With the principle of "Quality Parts, Customers Priority, Honest Operation, and Considerate Service", our business mainly focus on the distribution of electronic components. Line cards we deal with include Microchip, ALPS, ROHM, Xilinx, Pulse, ON, Everlight and Freescale. Main products comprise IC, Modules, Potentiometer, IC Socket, Relay, Connector. Our parts cover such applications as commercial, industrial, and automotives areas.

We are looking forward to setting up business relationship with you and hope to provide you with the best service and solution. Let us make a better world for our industry!



Contact us

Tel: +86-755-8981 8866 Fax: +86-755-8427 6832

Email & Skype: info@chipsmall.com Web: www.chipsmall.com

Address: A1208, Overseas Decoration Building, #122 Zhenhua RD., Futian, Shenzhen, China

Description

The P9242-R-EVK Mass-Market Evaluation Board demonstrates the features of the P9242-R 15W Wireless Power Transmitter (TX). It is intended to evaluate the functionality and performance of the P9242-R when combined with a power receiver in a wireless charging system. The P9242-R-EVK offers the flexibility to select parameters, such as the over-current limit threshold, LED pattern, and external temperature sensing function. The printed circuit board (PCB) has four layers. The P9242-R Evaluation Board is designed to function with the P9221-R Receiver Evaluation Board, which is ordered separately. It can also be used with the user's WPC-1.2.2 compliant receiver.

The high-efficiency, turnkey reference design is supported by comprehensive online, digital resources to significantly expedite the design-in effort and enable rapid prototyping. The total active area is optimized to 32mm x 32mm.

Kit Contents

- P9242-R-EVK Mass-Market Evaluation Board
- Adaptor: 12V/2A AC

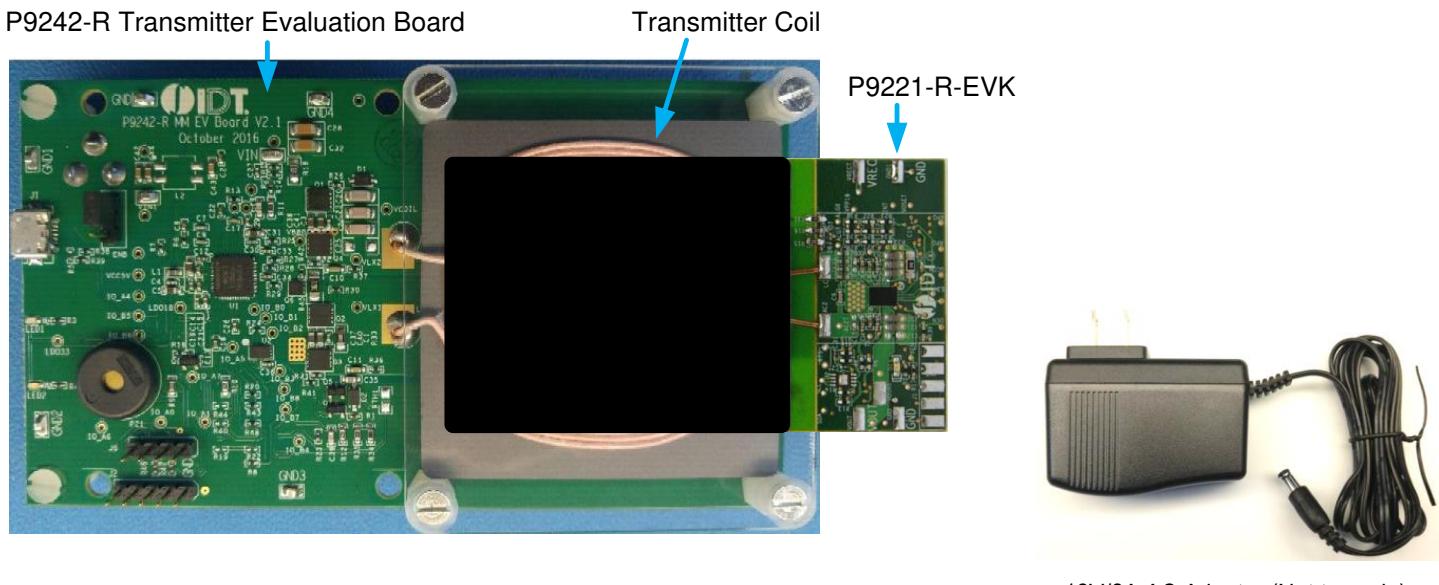
Features

- P9242-R Evaluation Board with support for WPC-1.2.2
- Up to 15W output power
- Adjustable over-current limit
- Adjustable temperature shutdown
- Two programmable LED status indicators
- Four-layer PCB
- Total active area: 1024 mm²
- Fully assembled with test points and coil fixture

P9242-R-EVK Mass-Market Evaluation Board



P9242-R Transmitter Board Connected to P9221-R-EVK



12V/2A AC Adapter (Not to scale)

Important Notes

Disclaimer

Integrated Device Technology, Inc. and its affiliated companies (herein referred to as "IDT") shall not be liable for any damages arising out of defects resulting from

- (i) delivered hardware or software
- (ii) non-observance of instructions contained in this manual and in any other documentation provided to user, or
- (iii) misuse, abuse, use under abnormal conditions, or alteration by anyone other than IDT.

TO THE EXTENT PERMITTED BY LAW, IDT HEREBY EXPRESSLY DISCLAIMS AND USER EXPRESSLY WAIVES ANY AND ALL WARRANTIES, WHETHER EXPRESS, IMPLIED, OR STATUTORY, INCLUDING, WITHOUT LIMITATION, IMPLIED WARRANTIES OF MERCHANTABILITY AND OF FITNESS FOR A PARTICULAR PURPOSE, STATUTORY WARRANTY OF NON-INFRINGEMENT, AND ANY OTHER WARRANTY THAT MAY ARISE BY REASON OF USAGE OF TRADE, CUSTOM, OR COURSE OF DEALING.

Restrictions in Use

IDT's P9242-R-EVK Mass Market Evaluation Board is designed for evaluation purposes only. It must not be used for module production or production test setups.

Contents

1.	Setup	4
1.1	Required or Recommended User Equipment.....	4
1.2	Kit Hardware Connections	4
2.	Usage Guide.....	5
2.1	Overview of the P9242-R-EVK	5
2.2	LED Pattern Selection	6
2.3	Adjustment of Over-Current Limit	8
2.4	External Temperature Sensing – TS	10
2.5	Reserved Pins	11
2.6	Transmitter Coil	11
3.	Schematics, Bill of Materials (BOM), and Board Layout.....	12
3.1	P9242-R Evaluation Board Schematics.....	12
4.	Bill of Materials (BOM).....	13
5.	Board Layout	16
6.	Ordering Information.....	21
7.	Revision History.....	21

List of Figures

Figure 1. Evaluation Kit Connections using the P9221-R Receiver Evaluation Board	4
Figure 2. P9242-R V2.1 Evaluation Board Features.....	5
Figure 3. P9242-R V2.1 Evaluation Board Details.....	5
Figure 4. R43 and R44 Schematic Location	7
Figure 5. R33 and R34 PCB Location	7
Figure 6. Over-Current Limit vs. V_{ILIM}	8
Figure 7. R48 and R40 Schematic Location	9
Figure 8. R48 and R40 PCB Location	9
Figure 9. RTH1 and R20 Schematic Location	10
Figure 10. RTH1 and R20 R40 PCB Location	10
Figure 11. Silkscreen – Top of Board	16
Figure 12. Copper – Top Layer.....	17
Figure 13. Copper L1 Layer.....	18
Figure 14. Copper L2 Layer.....	19
Figure 15. Copper Bottom	20

List of Tables

Table 1. Selecting the LED Pattern	6
Table 2. Recommend Coil Manufacturer.....	11
Table 3. P9242-R-EVK BOM.....	13

1. Setup

1.1 Required or Recommended User Equipment

The following additional lab equipment is required for using the kit:


- P9221-R-EVK Receiver Evaluation Board or any WPC-1.2.2 compliant receiver
- Power supply or 12V/2A AC adaptor

1.2 Kit Hardware Connections

Follow these procedures to set up the kit as shown in Figure 1.

1. Set up the P9242-R Evaluation Board: Plug the 12V adapter or user's power supply into the J3 (barrel connector on the bottom of the board) or J1 (micro USB connector).
2. Place the P9221-R-EVK or the user's receiver on the transmitter (TX) pad with the components facing up as shown in Figure 1.
3. Verify that the two green LEDs identified in Figure 1 are illuminated indicating that coupling has been established.
4. If using the P9221-R-EVK Evaluation Board as the receiver, connect wires to the VOUT and GND test points on the P9221-R-EVK receiver to measure the output voltage and apply a load.

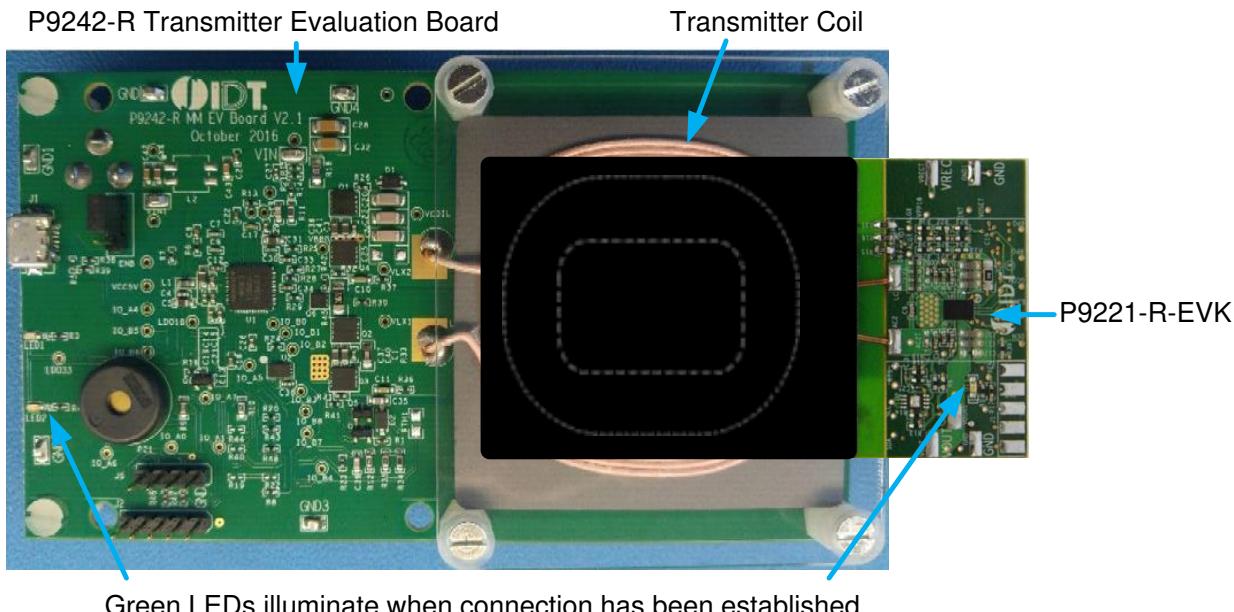Figure 1. Evaluation Kit Connections using the P9221-R Receiver Evaluation Board



Green LEDs illuminate when connection has been established.

2. Usage Guide

2.1 Overview of the P9242-R-EVK

Figure 2. P9242-R V2.1 Evaluation Board Features


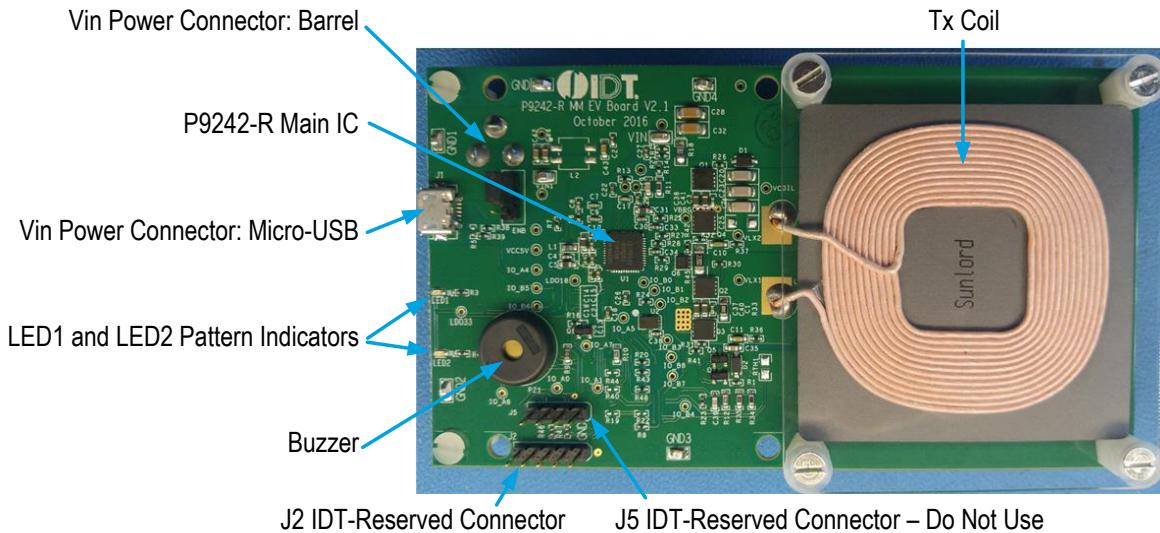


Figure 3. P9242-R V2.1 Evaluation Board Details


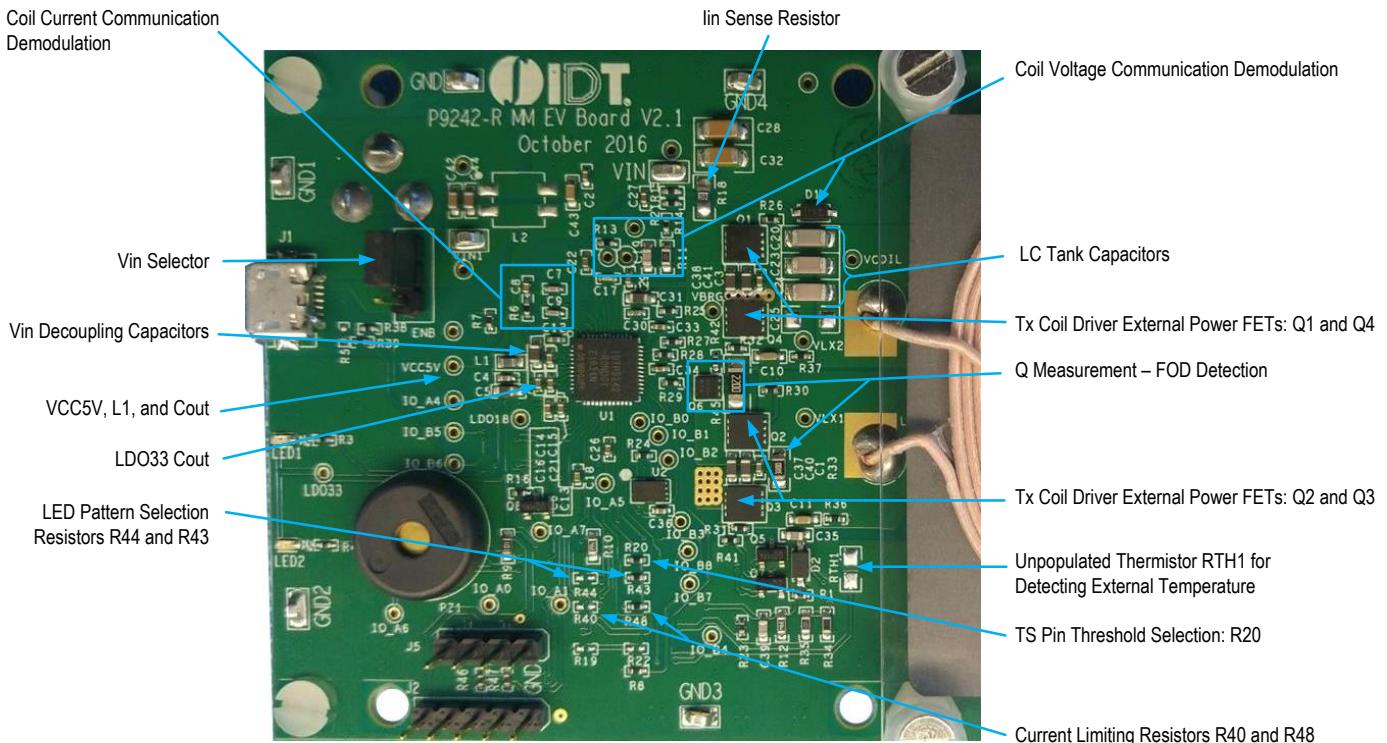


2.2 LED Pattern Selection

The P9242-R-EVK uses two LEDs (LED1 and LED2; see Figure 2) to indicate the power transfer status, faults, and operating modes. The LEDs are connected to the LED1 and LED2 pins as shown on P9242-R-EVK schematics (see section 3.1). The LED patterns can be selected by setting the voltage on the LED_PAT pin through the resistor divider R43 and R44; see Table 1 for the options. On the evaluation board the LED_PAT pin is pulled up to 3.3V through R43. R44 is unpopulated; therefore, option 7 is the default option.

Table 1. Selecting the LED Pattern

Option	Voltage on LED_PAT Pin	LED1/LED2 Pin	Status			
			Standby	Transfer	Complete	Fault
1	Pull-Down or 0.075V	LED1 – GREEN	Off	On	Off	Off
		LED2 – RED	Off	Off	Off	Blink 4Hz
2	0.225V	LED1 – GREEN	On	On	Off	Off
		LED2 – RED	On	Off	Off	Blink 4Hz
3	0.375V	LED1 – GREEN	Off	Blink 1Hz	On	Blink 4Hz
		LED2 – RED	Off	Off	Off	Off
4	0.525V	LED1 – GREEN	Off	On	Off	Blink 4Hz
		LED2 – RED	Off	Off	Off	Off
5	0.675V	LED1 – GREEN	On	Blink 1Hz	On	Off
		LED2 – RED	On	Off	Off	Blink 4Hz
6	0.825V	LED1 – GREEN	Off	Off	On	Off
		LED2 – RED	Off	On	Off	Blink 4Hz
7	0.975V or Pull-Up	LED1 – GREEN	Off	Blink 1Hz	On	Off
		LED2 – RED	Off	Off	Off	Blink 4Hz

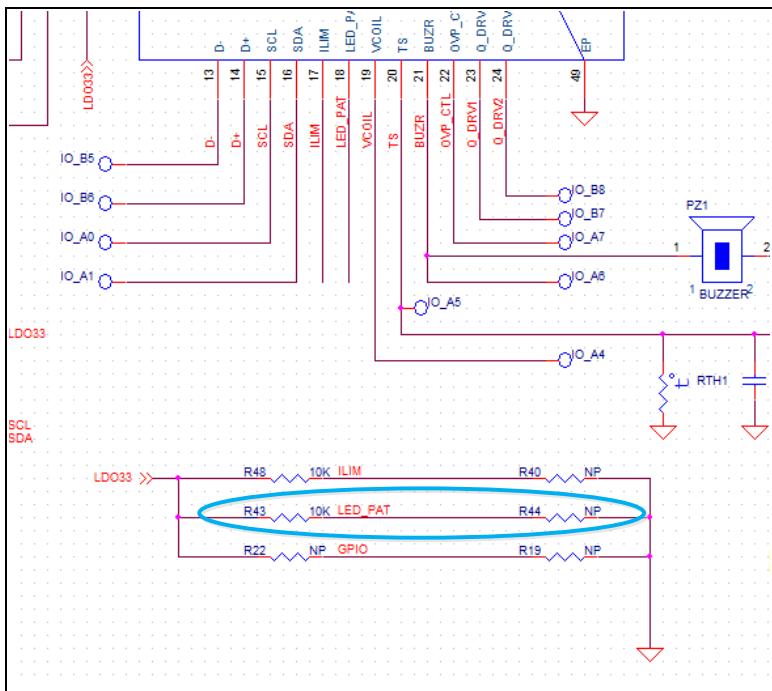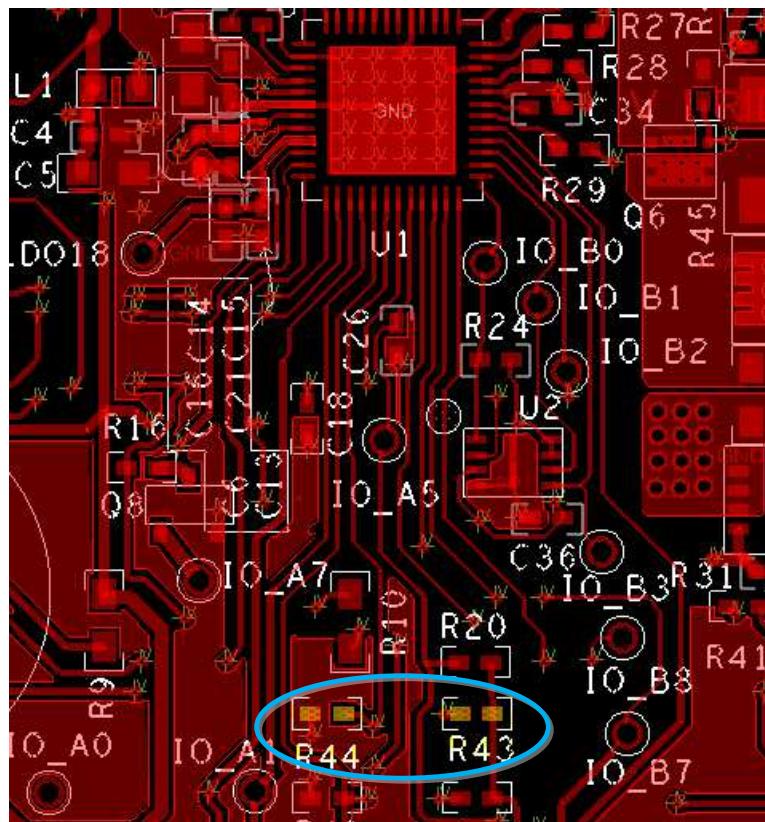Figure 4. R43 and R44 Schematic Location**Figure 5. R33 and R34 PCB Location**

2.3 Adjustment of Over-Current Limit

The over-current protection (OCP) is designed to protect the transmitter from operating conditions that could potentially cause damage or unexpected behavior from the system. The input current is continuously monitored during the power transfer stage. If the input current goes above the OCP threshold of the programmed current limit, the P9242-R will increase the switching frequency or reduce the duty cycle in order to keep the input current below the OCP value. The current limit can be selected by setting the voltage on the ILIM pin through the resistor divider R48 and R40. On the P9242-R-EVK, the ILIM pin is pulled up to 3.3V through R48. R40 is unpopulated; therefore, the current limit is set to 2.3A.

Figure 6. Over-Current Limit vs. V_{ILIM}

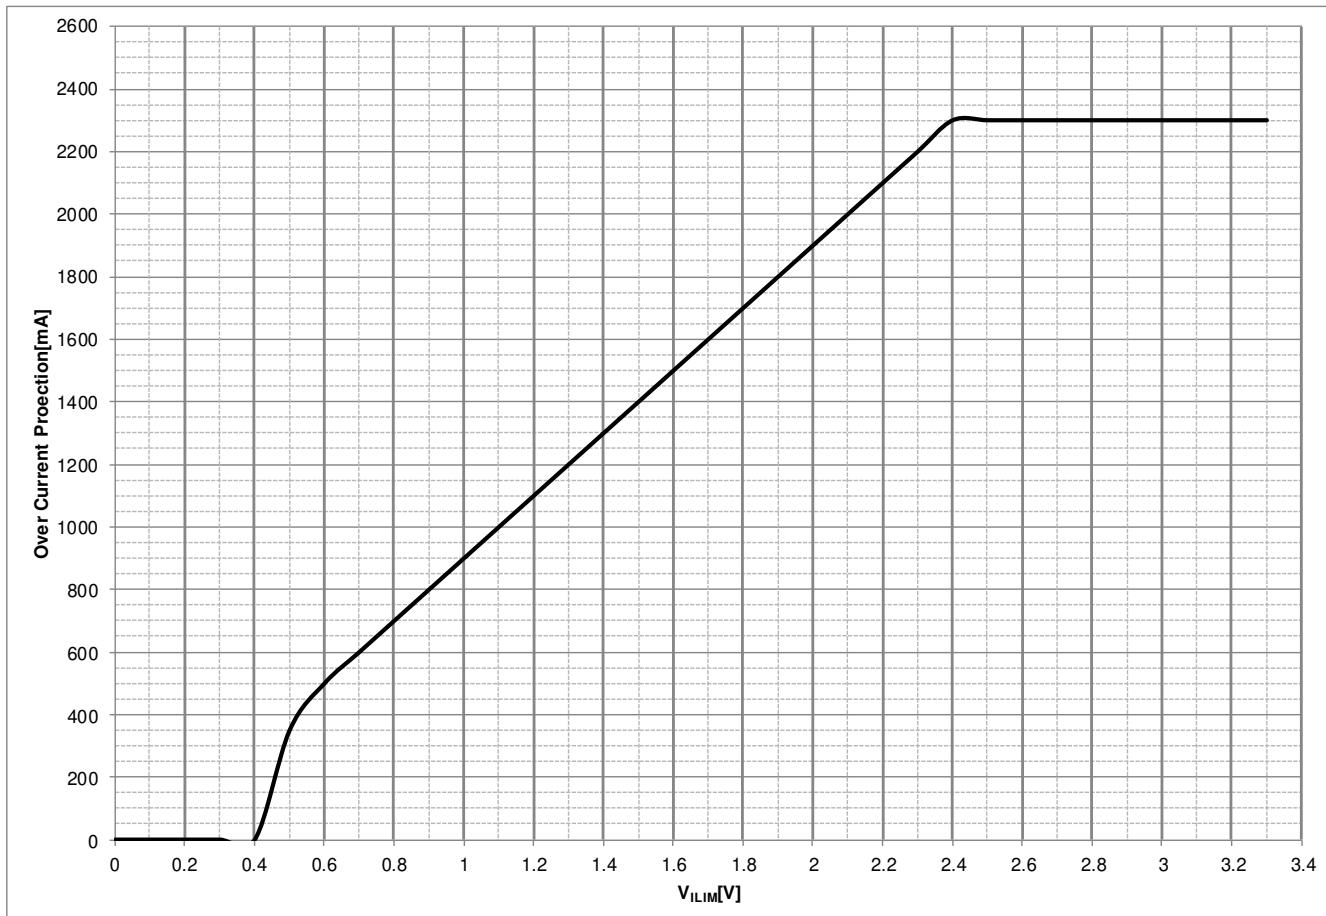
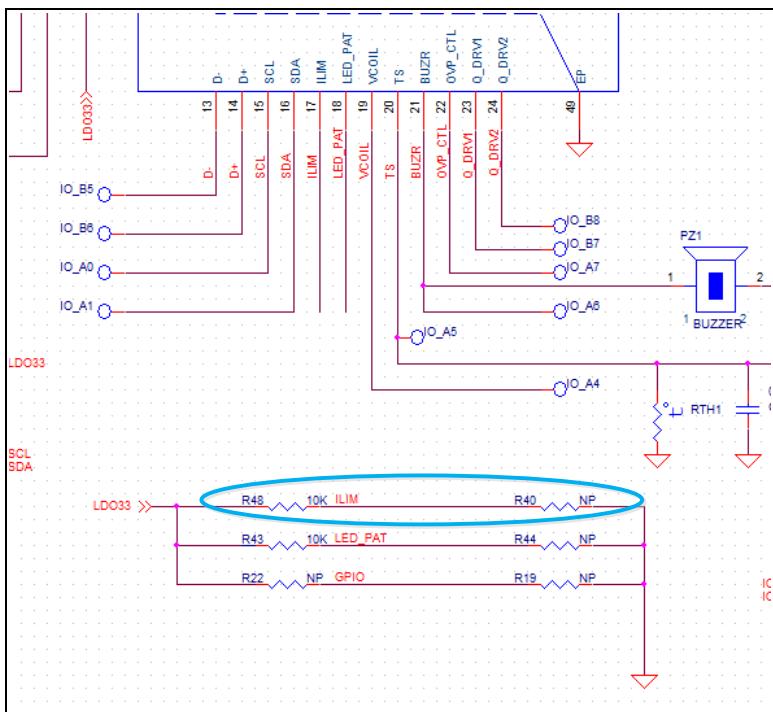
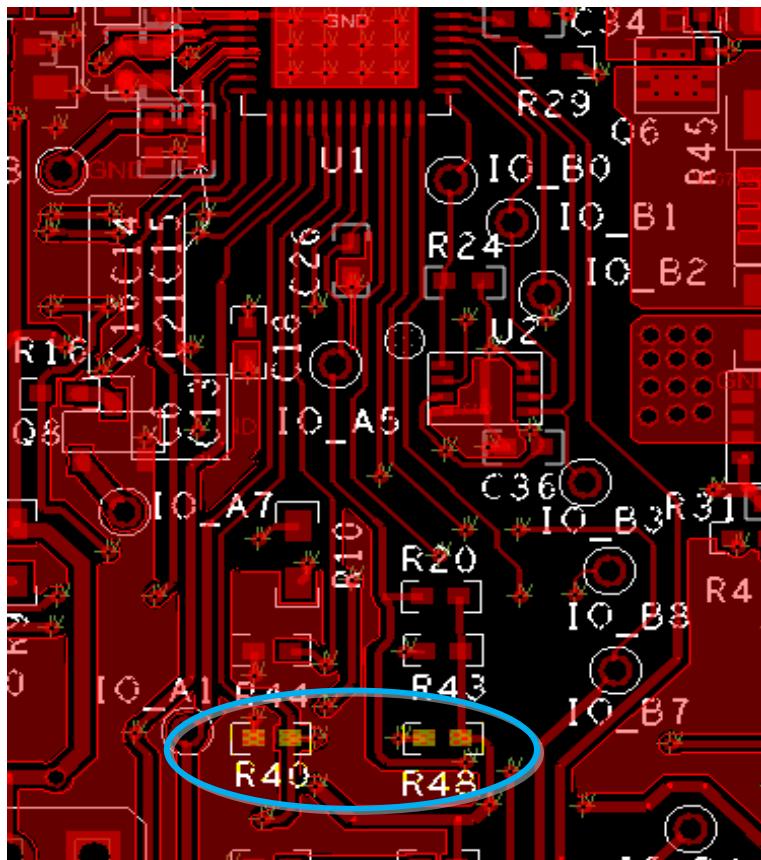


Figure 7. R48 and R40 Schematic Location**Figure 8. R48 and R40 PCB Location**

2.4 External Temperature Sensing – TS

The P9242-R includes an optional temperature sense input pin, TS, used to monitor a remote temperature, such as for a coil or a battery charger.

The TS pin voltage can be calculated by Equation 1.

$$V_{TS} = V_{LDO33} \times \frac{NTC}{R20 + NTC} \quad \text{Equation 1}$$

Where NTC is the thermistor's resistance (RTH1) and R20 is the pull-up resistor connected to the 3.3V supply voltage on the P9242-R Evaluation Board. The over-temperature shutdown is triggered if the voltage on the TS pin is lower than 0.6V. The RTH1 is not populated on the P9242-R Evaluation Board.

Figure 9. RTH1 and R20 Schematic Location


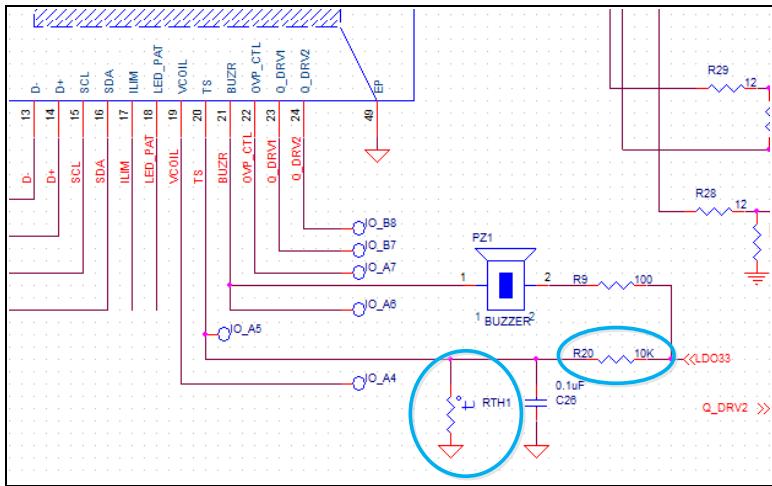


Figure 10. RTH1 and R20 R40 PCB Location

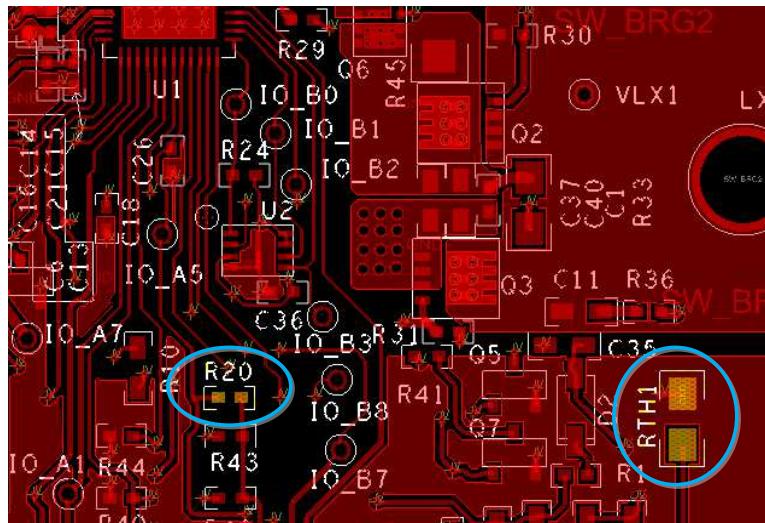

2.5 Reserved Pins

There are multiple reserved pins listed in the schematic: pins 13 through 16, 25 through 29, 42, and 43. These GPIOs are proprietary and for factory use only.


2.6 Transmitter Coil

The following coil is recommended with P9242-R transmitter for 15W applications for optimum performance. The recommended vendor has been tested and verified.

Table 2. Recommend Coil Manufacturer

Output Power	Vendor	Part Number	Inductance at 100kHz	DCR at 20°C
15W	SUNLORD	SWA53N53H30C11B	10µH	50mΩ

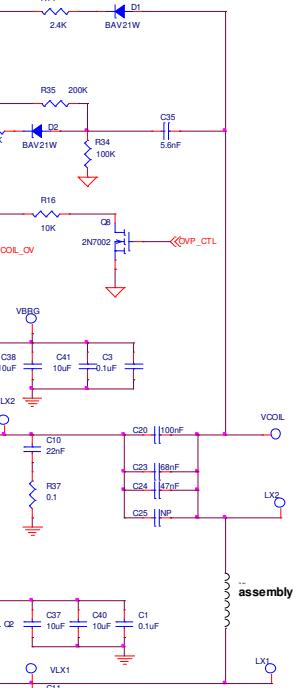
3.1 P9242-R Evaluation Board Schematics



IDT
Integrated Device Technology

TO Integrated Device Technology, Inc. (IDT).
USE OR DISCLOSURE WITHOUT THE
WRITTEN PERMISSION OF AN OFFICER OF
IDT IS EXPRESSLY FORBIDDEN

P9242-R MM Board V 2.1	
Custom	2.1
Tuesday, December 20, 2016	1

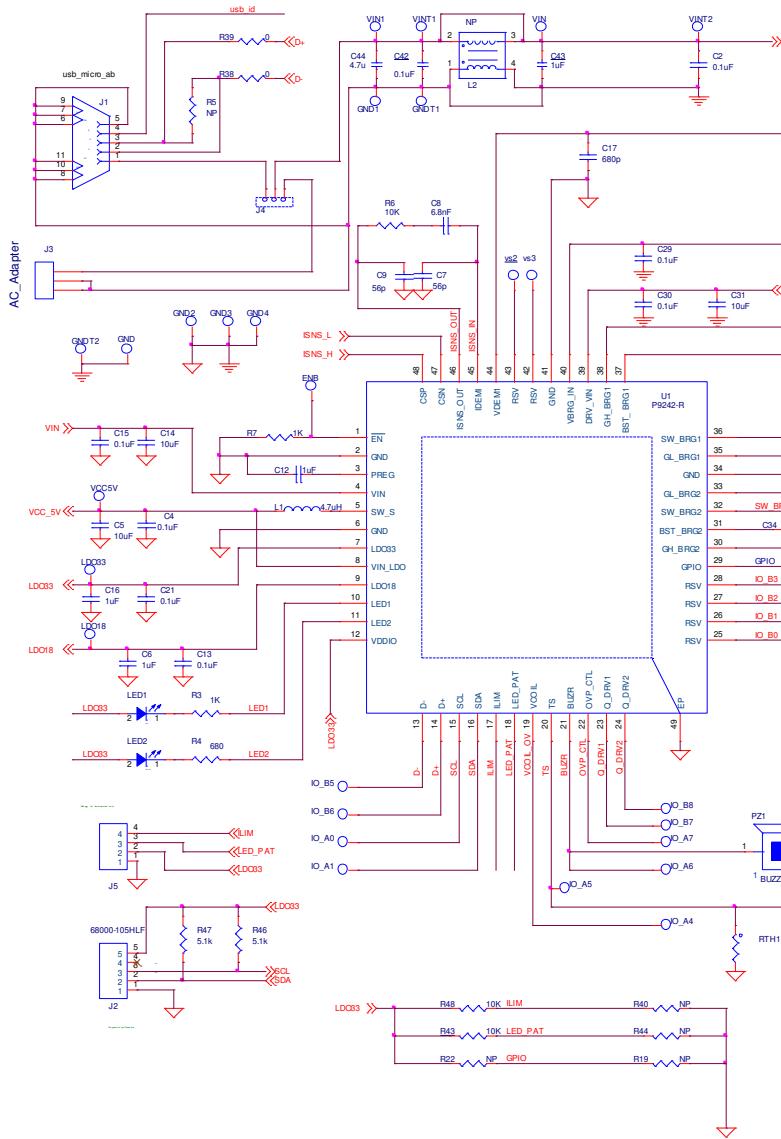

4. Bill of Materials (BOM)

Table 3. P9242-R-EVK BOM

Item	Quantity	Reference	Value	Description	Part Number	PCB Footprint
1	12	C1, C2, C3, C4, C13, C15, C21, C26, C29, C30, C33, C34	0.1µF	CAP CER 0.1µF 25V 10% X7R 0402	C1005X7R1E104K 050BB	0402
2	7	C5, C14, C31, C37, C38, C40, C41	10µF	CAP CER 10µF 25V 20% X5R 0603	C1608X5R1E106M 080AC	0603
3	4	C6, C12, C16, C27	1µF	CAP CER 1µF 25V 20% X5R 0402	C1005X5R1E105M 050BC	0402
4	2	C7, C9	56pF	CAP CER 56PF 50V NP0 0402	CL05C560JB5NNN C	0402
5	1	C8	6.8nF	CAP CER 6800PF 25V X7R 0402	GRM155R71E682K A01D	0402
6	2	C10, C11	22nF	0.022µF 50V Ceramic Capacitor X7R 0603	GCM188R71H223K A37D	0603
7	1	C17	680pF	CAP CER 680PF 50V X7R 0402	CL05B681KB5NNN C	0402
8	1	C18	1nF	CAP CER 1000pF ±10% 50V X7R 0402	GRM155R71H102K A01D	0402
9	3	C19, C35, C39	5.6nF	5600pF 100V Ceramic Capacitor C0G, NP0 0603	C1608C0G2A562J 080AC	0603
10	1	C20	100nF	CAP CER 0.1µF 100V C0G 1206	C3216C0G2A104K 160AC	1206
11	1	C22	22nF	CAP CER 0.022µF 50V 10% X7R 0402	GRM155R71H223K A12D	0402
12	1	C23	68nF	CAP CER 0.068µF 100V NP0 1206	C3216C0G2A683K 160AC	1206
13	1	C24	47nF	CAP CER 0.047µF 100V NP0 1206	C3216C0G2A473J 115AC	1206
14	1	C25	NP	CAP CER 10000PF 100V C0G 1206	C3216C0G2A103J 115AA	1206
15	2	C28, C32	22µF	CAP CER 22µF 25V 20% X5R 1206	GRM31CR61E226 KE15L	1206
16	1	C36	NP	CAP CER 0.1µF 25V 10% X7R 0402	C1005X7R1E104K 050BB	0402
17	1	C42	0.1µF	0.10µF 50V Ceramic Capacitor X7R 0603	GRM188R71H104K A93D	0603
18	1	C43	1µF	1µF 25V Ceramic Capacitor X5R 0603	GRM188R61E105K A12D	0603
19	1	C44	4.7µF	4.7µF 25V Ceramic Capacitor X5R 0603	GRM188R61E475K E11D	0603
20	2	D1, D2	BAV21W	DIODE GEN PURP 80V 125MA DFN	BAV21W-7-F	sod123

Item	Quantity	Reference	Value	Description	Part Number	PCB Footprint
21	30	VLX1, VINT1, IO_B1, IO_A1, GND1, vs2, VLX2, VINT2, IO_B2, GND2, vs3, IO_B3, IO_B4, IO_A4, VCC5V, IO_B5, IO_A5, IO_B6, IO_A6, IO_B7, IO_A7, IO_B8, LDO18, LDO33, VSNS_IN, VCOIL, VBRG, IO_B0, IO_A0, ENB	PTH_TP	30 GAUGE WIRE PAD	NP	TEST_PT30DPAD
22	7	VIN1, GND1, GND2, GND3, GND4, VIN, GND	TP	TEST POINT PC MINIATURE SMT	5015	test_pt_sm_135x70
23	1	J1	5P	CONN RCPT MCR USB AB SMD TH SHLL	ZX62D-AB-5P8	usb_micro_ab
24	1	J2	68000-105HLF	BERGSTIK II .100" SR STRAIGHT	68000-105HLF	sip5
25	1	J3	AC_Adapter	CONN POWER JACK 2.5X5.5MM HI CUR	PJ-002AH	CONN_POWER_JA_CK5_5MM
26	1	J4	TP	CONN HEADER 3POS .100" STR GOLD	901200763	sip3
27	1	J5	SIP con	4 Positions Header, Unshrouded Connector 0.100" (2.54mm) Through Hole Gold or Gold, GXT™	961104-6404-AR	sip-4
28	1	LED1	LED	LED RED CLEAR 0603 SMD	150060RS75000	0603_diode
29	1	LED2	LED	LED GREEN CLEAR 0603 SMD	150060GS75000	0603_diode
30	2	LX1, LX2	NP	Tx Coil assemble through hole	NA	TP_TXCoil
31	1	L1	4.7µH	FIXED IND 4.7µH 620MA 500 MOHM	CIG10W4R7MNC	L0603
32	1	L2	NP	Common mode EMI choke	ACM4520-901-2P-T-000	EMI_TDK_ACM452_0L
33	1	PZ1	BUZZER	BUZZER PIEZO 4KHZ 12.2MM PC MNT	PS1240P02CT3	9235_buzzer
34	4	Q1, Q2, Q3, Q4	DMG7430LFG	MOSFET N-CH 30V 10.5A PWRDI3333	DMG7430LFG-7	powerdi3333_8ld_fet
35	3	Q5, Q7, Q8	2N7002	N-Channel 60-V (D-S) MOSFET	2N7002KT1G	SOT23_3
36	1	Q6	SIA453EDJ-T1-GE3	MOSFET P-CH 30V 24A PPAK SC-70-6	SIA453EDJ-T1-GE3	sc70_6ld_fet
37	1	RTH1	NP	NTC Thermistor 10k Bead	NTCLE203E3103J_B0	0805
38	3	R1, R3, R7	1K	RES SMD 1K OHM 5% 1/16W 0402	RC0402JR-071KL	0402
39	1	R4	680	RES SMD 680 OHM 5% 1/16W 0402	RC0402JR-07680RL	0402
40	1	R5	NP	RES SMD 0.0 OHM JUMPER 1/10W	RC0402JR-070RL	0402
41	9	R6, R13, , R16, R20, R23, R41, R42, R43, R48	10K	RES SMD 10K OHM 1% 1/10W 0402	RC0402FR-0710KL	0402
42	5	R8, R26, R30, R31, R32	100K	RES SMD 100K OHM 5% 1/10W 0402	ERJ-2GEJ104X	0402
43	1	R24	NP	RES SMD 100K OHM 5% 1/10W 0402	ERJ-2GEJ104X	0402
44	1	R9	100	RES SMD 100 OHM 5% 1/10W 0603	RC0603JR-07100RL	0603
45	2	R10, R12	390K	RES SMD 390K OHM 5% 1/10W 0603	ERJ-3GEYJ394V	0603
46	1	R14	2.4K	RES SMD 2.4K OHM 5% 1/10W 0402	ERJ-2GEJ242X	0402
47	2	R11, R35	200K	RES SMD 200K OHM 1% 1/10W 0603	RC1608F204CS	0603
48	2	R15, R21	10	RES SMD 10 OHM 1% 1/10W 0402	ERJ-2RKF10R0X	0402

Item	Quantity	Reference	Value	Description	Part Number	PCB Footprint
49	1	R18	0.02	RES SMD 0.02 OHM 1% 1/8W 0805	WSL0805R0200FEA	0805
50	4	R19, R22, R40, R44	NP	RES SMD 10K OHM 1% 1/10W 0402	RC0402FR-0710KL	0402
51	4	R25, R27, R28, R29	12	RES SMD 12 OHM 5% 1/10W 0402	ERJ-2GEJ120X	0402
52	1	R33	3	RES SMD 3 OHM 1% 1/8W 0805	RC0805FR-073RL	0805
53	1	R34	100K	RES SMD 100K OHM 1% 1/10W 0603	ERJ-3EKF1003V	0603
54	2	R36, R37	0.1	RES SMD 0.1 OHM 5% 1/6W 0402	ERJ-2BSJR10X	0402
55	2	R38, R39	0	RES SMD 0.0 OHM JUMPER 1/10W	RC0402JR-070RL	0402
56	1	R45	220	RES SMD 220 OHM 1% 0.4W 0805	RC1206FR-07220RL	1206
57	2	R46, R47	5.1k	RES SMD 5.1K OHM 5% 1/16W 0402	MCR01MRTJ512	0402
58	1	U1	P9242-R	Medium Power Transmitter	P9242-R	socketqfn_48_6x6_0p4
59	1	U2	NP	SPIFLASH 2M-BIT 4KB UNIFORM SECT	W25X20CLUXIGTR	uson_2x3_8LD

5. Board Layout

Figure 11. Silkscreen – Top of Board

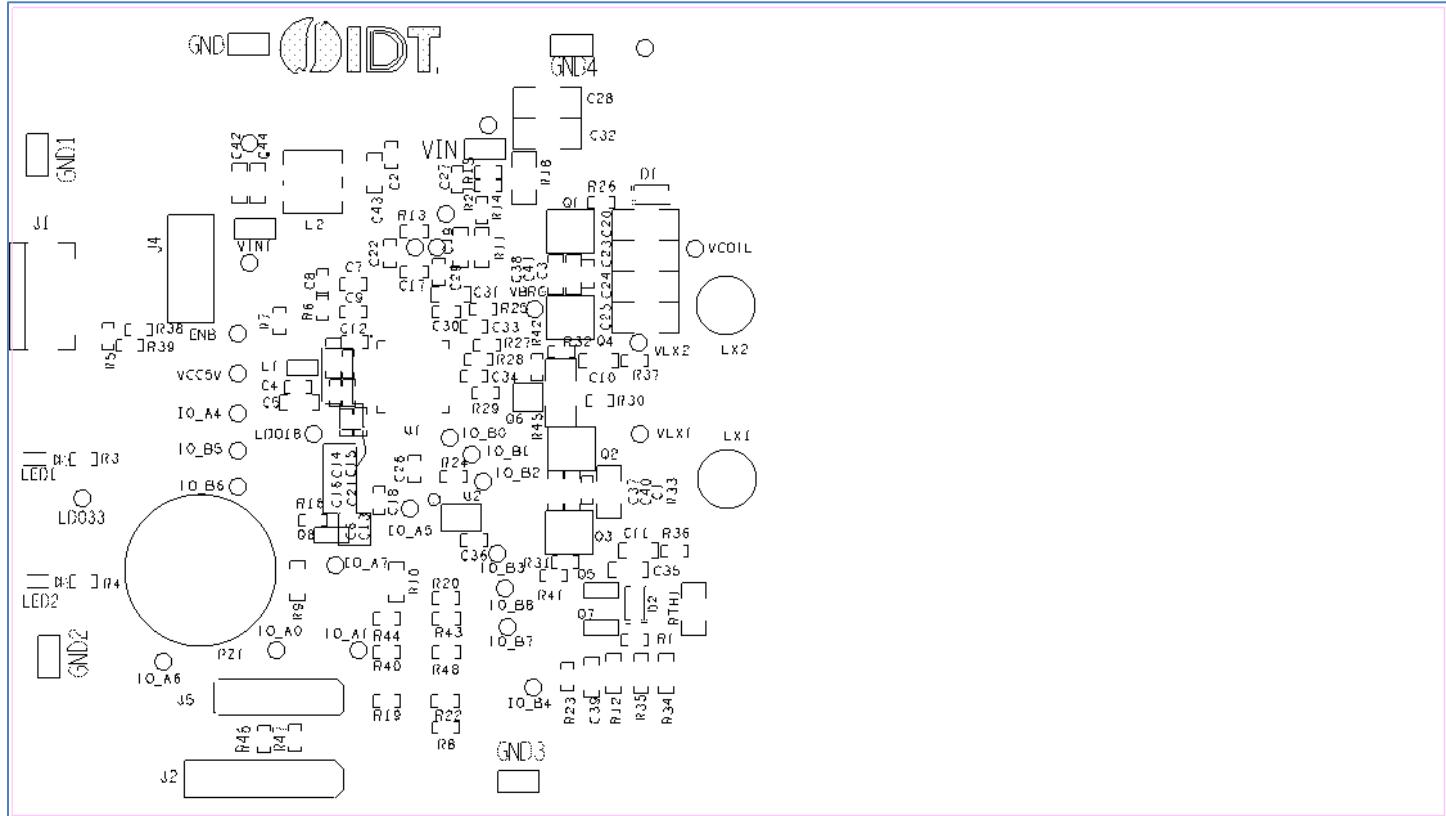


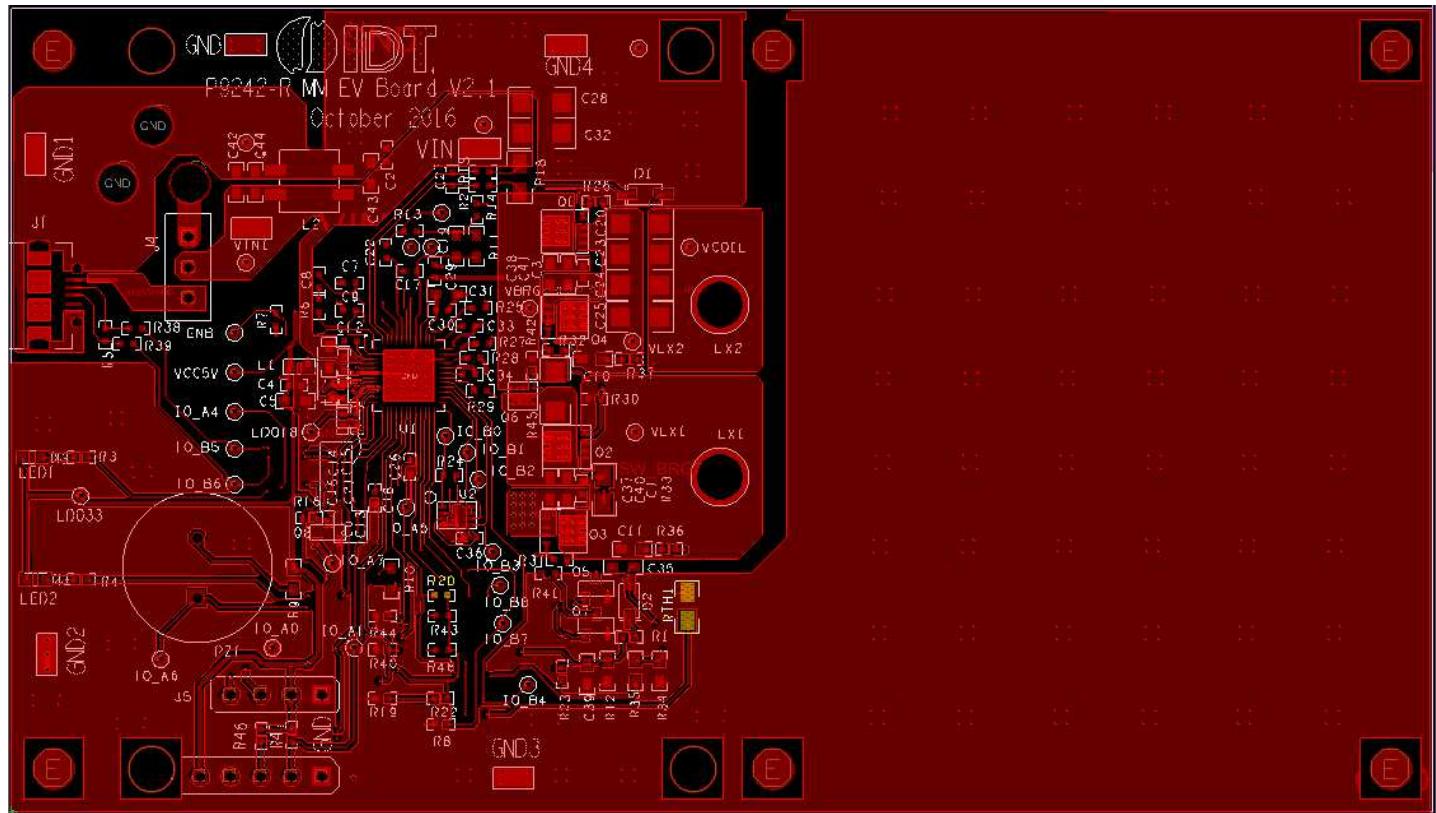
Figure 12. Copper – Top Layer

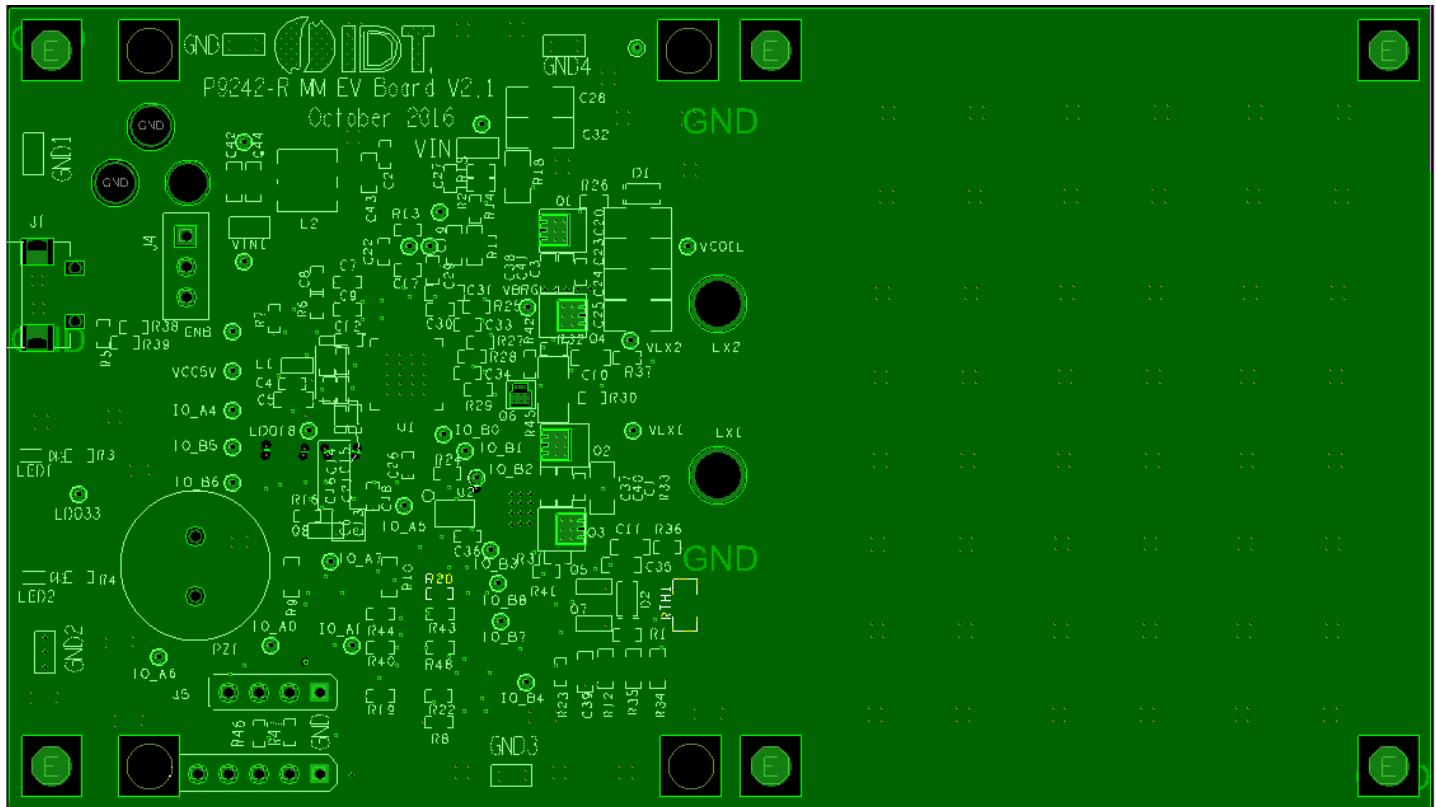
Figure 13. Copper L1 Layer

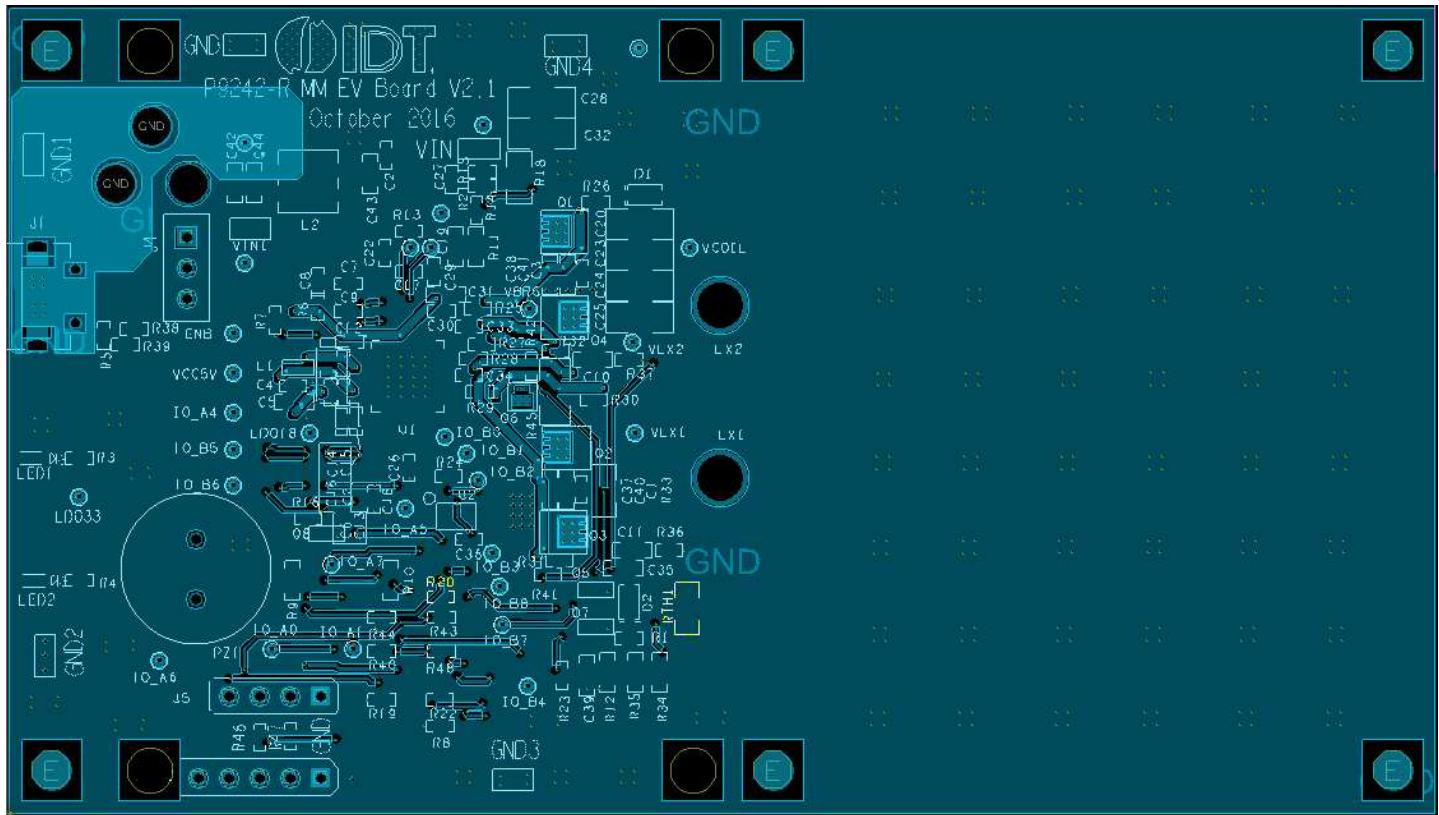
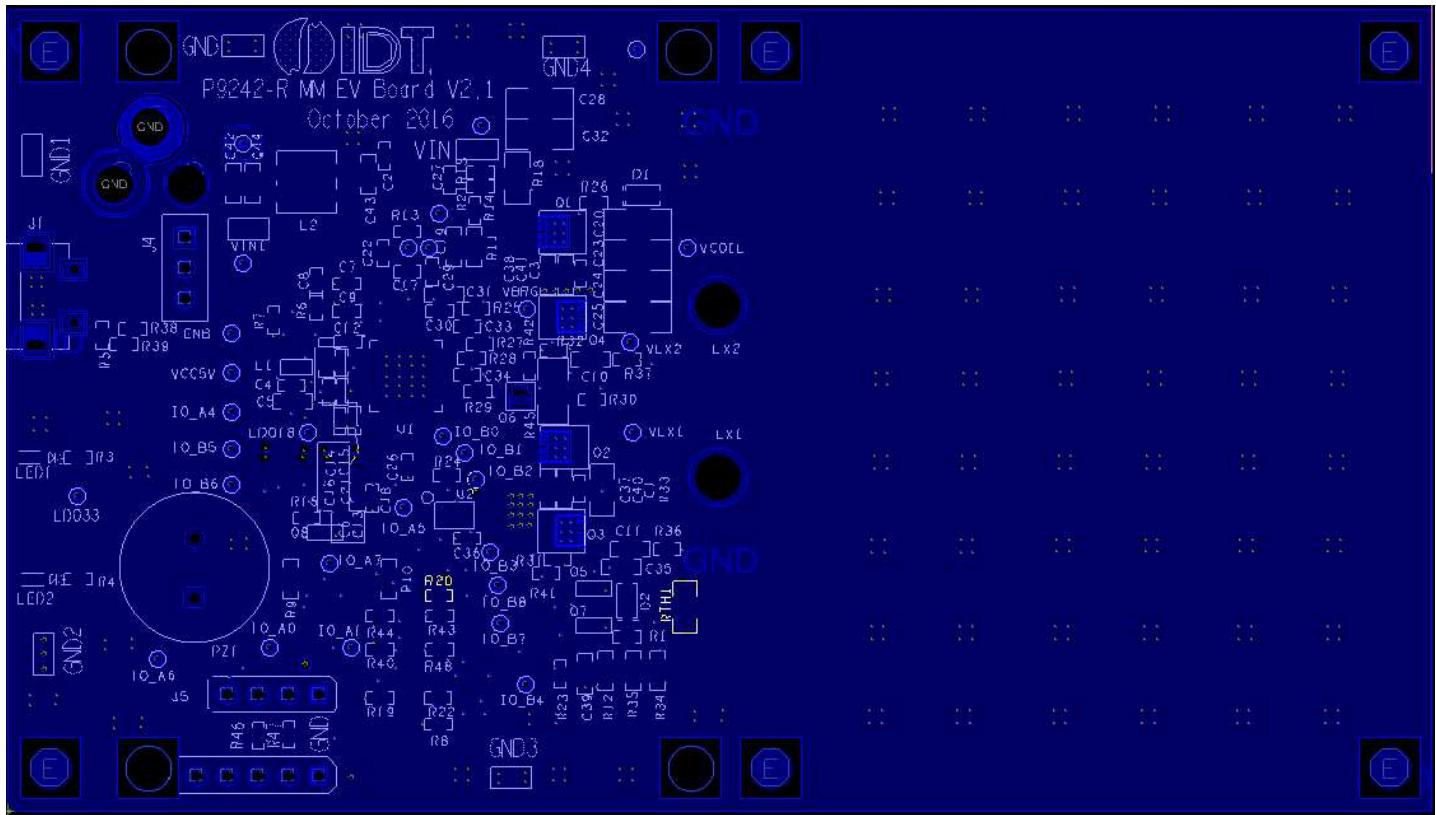
Figure 14. Copper L2 Layer

Figure 15. Copper Bottom

6. Ordering Information

Orderable Part Number	Description
P9242-R-EVK	P9242-R-EVK Evaluation Board

7. Revision History

Revision Date	Description of Change
December 22, 2016	Initial release of document.



Corporate Headquarters
6024 Silver Creek Valley Road
San Jose, CA 95138
www.IDT.com

Sales
1-800-345-7015 or 408-284-8200
Fax: 408-284-2775
www.IDT.com/go/sales

Tech Support
www.IDT.com/go/support

DISCLAIMER Integrated Device Technology, Inc. (IDT) reserves the right to modify the products and/or specifications described herein at any time, without notice, at IDT's sole discretion. Performance specifications and operating parameters of the described products are determined in an independent state and are not guaranteed to perform the same way when installed in customer products. The information contained herein is provided without representation or warranty of any kind, whether express or implied, including, but not limited to, the suitability of IDT's products for any particular purpose, an implied warranty of merchantability, or non-infringement of the intellectual property rights of others. This document is presented only as a guide and does not convey any license under intellectual property rights of IDT or any third parties.

IDT's products are not intended for use in applications involving extreme environmental conditions or in life support systems or similar devices where the failure or malfunction of an IDT product can be reasonably expected to significantly affect the health or safety of users. Anyone using an IDT product in such a manner does so at their own risk, absent an express, written agreement by IDT.

Integrated Device Technology, IDT and the IDT logo are trademarks or registered trademarks of IDT and its subsidiaries in the United States and other countries. Other trademarks used herein are the property of IDT or their respective third party owners. For datasheet type definitions and a glossary of common terms, visit www.idt.com/go/glossary. All contents of this document are copyright of Integrated Device Technology, Inc. All rights reserved.