

Chipsmall Limited consists of a professional team with an average of over 10 year of expertise in the distribution of electronic components. Based in Hongkong, we have already established firm and mutual-benefit business relationships with customers from, Europe, America and south Asia, supplying obsolete and hard-to-find components to meet their specific needs.

With the principle of "Quality Parts, Customers Priority, Honest Operation, and Considerate Service", our business mainly focus on the distribution of electronic components. Line cards we deal with include Microchip, ALPS, ROHM, Xilinx, Pulse, ON, Everlight and Freescale. Main products comprise IC, Modules, Potentiometer, IC Socket, Relay, Connector. Our parts cover such applications as commercial, industrial, and automotives areas.

We are looking forward to setting up business relationship with you and hope to provide you with the best service and solution. Let us make a better world for our industry!



Contact us

Tel: +86-755-8981 8866 Fax: +86-755-8427 6832

Email & Skype: info@chipsmall.com Web: www.chipsmall.com

Address: A1208, Overseas Decoration Building, #122 Zhenhua RD., Futian, Shenzhen, China









Me Stepper Driver



Overview

The Me Stepper Motor Driver module is designed to precisely drive the bipolar stepper motor. When pulse signals are input into the stepper motor, it rotates step by step. For each pulse signal, it rotates a certain angle. This module features adjustable drive current and microstepping hardware adjustment. It can be used in 3D printing, numerical control, Makeblock music robot, precise motion control, etc. Its red ID means that it should be connected to the port with red ID on Makeblock Orion by RJ25 wire.

Technical specifications

Drive voltage: 6V-12V DCMaximum current: 1.35A

• Dimension: 51 x 24 x 18mm (L x W x H)

Functional characteristics

- Compatible with 4-wire bipolar stepper motor
- Simply two I/O ports to control stepping and direction
- Provide an adjustable potentiometer to adjust current and change the torque of stepper motor
- Provide onboard DIP switch to support the full, half, 1/4, 1/8, 1/16 stepping mode
- Provide grounding short-circuit protection and loading short-circuit protection
- Anti-reverse protection connecting the power supply inversely will not damage IC
- White area of module is the reference area to contact metal beams
- Support mBlock GUI programming, and applicable to users of all ages
- Adopt RJ25 port for easy connection
- Provide pin-type port to support most development boards including Arduino series

Pin definition

The port of Me Stepper Motor Driver has seven pins, and their functions are as follows:

| No. | Pin | Function | |
|-----|-----|--|--|
| 1 | EN | Enable pin (usually low level) | |
| 2 | RST | Reset pin (usually high level) | |
| 3 | SLP | Sleep control pin (usually high level) | |
| 4 | STP | Stepping control port | |
| 5 | DIR | Direction control port | |
| 6 | GND | Grounding | |
| 7 | V-M | Motor power (8-12V) | |

Wiring mode

• Connecting with RJ25

Since the port of Me Stepper Motor Driver has red ID and the module is motor drive, you need to connect the port with red ID on Makeblock Orion when using RJ25 port.

Taking Makeblock Orion as example, you can connect it to ports No. 1 and 2 as follows:

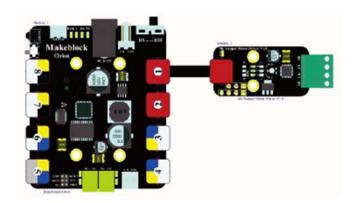


Figure 1 Connecting Me Stepper Motor Driver to Makeblock Orion Note: If the drive board works for a long time, the chip will emit heat. Please note this point, and add a heat sink over the board on demand to help the chip for heat dissipation.

• Connecting with Dupont wire

When the Dupont wire is used to connect the module to the Arduino UNO Baseboard, its pin EN should be connected to low level, RST and SLP should be connected to high level, STP and DIR should be connected to digital ports (also can only be connected with STP and DIR pins) as follows:

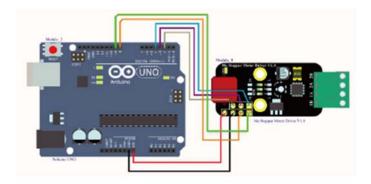


Figure 2 Connecting Me Stepper Motor Driver to Arduino UNO Note: When Dupont wire is used, pin header should be welded on the module.

Guide to programming

• Arduino programming

If you use Arduino to write a program, the library Makeblock-Library-master should be invoked to control the Me Stepper Motor Driver. This program serves to make the motor rotating on demand through Arduino programming. (Input an integer between 0 to 4 on the serial port control tab and send it out).

```
01 #include "MeOrion.h"
02 #include (SoftwareSerial.h)
03 #include (Wire, h)
04 #include (AccelStepper. h)
05 int dirPin = mePort[PORT_1].s1;
06 int stpPin = mePort[PORT_1].s2;
07 AccelStepper stepper(AccelStepper::DRIVER, stpPin, dirPin);
08 void setup()
09 {
           Serial. begin (9600);
11
          stepper.setMaxSpeed(1000);
12
          stepper. setAcceleration (20000);
14 void loop()
15 {
16
            if (Serial. available ())
18
                   char a = Serial.read();
19
                   switch(a)
20
                   case '0':
                          stepper.moveTo(0);
                          break;
                  case '1':
                          stepper.moveTo(200);
                         break:
                   case '2':
                          stepper. move (50);
                          break:
                  case '3':
                          stepper. move (100);
                  case '4':
                          stepper. move (200);
                          break:
            stepper.run();
```

Function List of Me Stepper Motor Driver


| Function name | Function | |
|--|---|--|
| AcclStepper(uint_8 interface,uint_8 stpPin,uint_8 dir Pin) | Select a port | |
| setMaxSpeed(float Speed) | Set the maximum speed of stepper motor | |
| setAcceleration(float acceleration) | Set the maximum acceleration of stepper motor | |
| moveTo(int32_t absolute) | The motor rotates to | |
| move(int32_t relative) | The motor rotates | |
| run() | Start the motor | |

• mBlock programming

Me Stepper Motor Driver supports the mBlock programming environment and its instructions are introduced as follows:

| Programming description | Introduction | |
|--|--|--|
| set stepper motor Port1 speed 3000 distance 1000 | parameter1: Select a port parameter2: Set the rotary speed parameter3: Set the stepping distance | |

This is an example on how to use mBlock to control the Me Stepper Motor Driver module. mBlock can make the stepper motor rotating from lower speed to higher speed again and again.

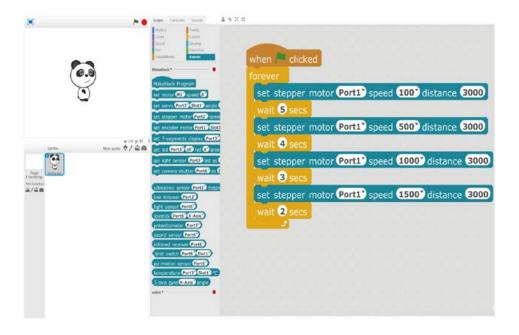

Principle analysis

Stepping motor is a kind of electromagnetic device to transform pulse signal into corresponding angular displacement or linear displacement. It is a special kind of motor.

Rotation of general motor is continuous, but stepper motor has two basic states – positioning and operating. When pulse signals are input to the stepper motor, it rotates step by step. For each pulse signal, it rotates a certain angle.

The main component of Me Stepper Motor Driver module is A4988 micro-step driver which is designed to operate the bipolar stepper motor in such stepping modes as Full, Half, 1/4, 1/8, and 1/16 step. When it is used, simply control the STEP and DIR. For example, when in the Full stepping mode, the motor should rotate a circle by 200 steps (i.e. 1.8° per step). If higher accuracy is required, we can choose other mode. For example, we choose the 1/4 stepping mode (that is, 0.45° per step), and then the motor should rotate by 800 micro steps to complete a round.

The stepping mode table of this module:

| MS1 | MS2 | MS3 | Stepping mode |
|-----|-----|-----|---------------|
| L | L | L | Full step |
| н | L | L | Half step |
| L | н | L | 1/4 step |
| Н | н | L | 1/8 step |
| н | н | Н | 1/16 step |

The module has a potentiometer which can be used to adjust the torque of motor, However, overtorquing may burn the chip due to heat dissipation, so it's not recommended adjusting the torque to too large.

Schematic

