



Chipsmall Limited consists of a professional team with an average of over 10 year of expertise in the distribution of electronic components. Based in Hongkong, we have already established firm and mutual-benefit business relationships with customers from,Europe,America and south Asia,supplying obsolete and hard-to-find components to meet their specific needs.

With the principle of “Quality Parts,Customers Priority,Honest Operation,and Considerate Service”,our business mainly focus on the distribution of electronic components. Line cards we deal with include Microchip,ALPS,ROHM,Xilinx,Pulse,ON,Everlight and Freescale. Main products comprise IC,Modules,Potentiometer,IC Socket,Relay,Connector.Our parts cover such applications as commercial,industrial, and automotives areas.

We are looking forward to setting up business relationship with you and hope to provide you with the best service and solution. Let us make a better world for our industry!



## Contact us

Tel: +86-755-8981 8866 Fax: +86-755-8427 6832

Email & Skype: [info@chipsmall.com](mailto:info@chipsmall.com) Web: [www.chipsmall.com](http://www.chipsmall.com)

Address: A1208, Overseas Decoration Building, #122 Zhenhua RD., Futian, Shenzhen, China



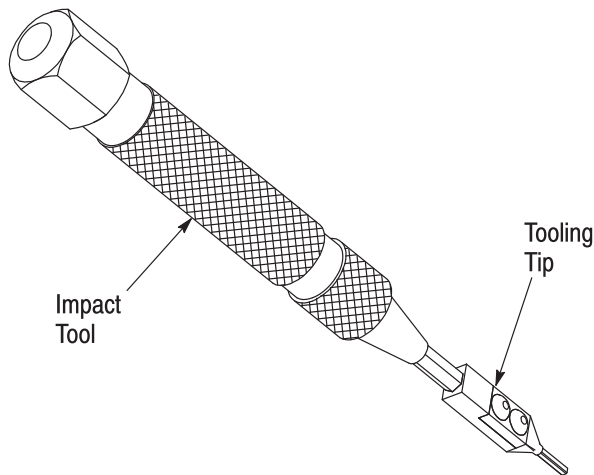


Figure 1

## 1. INTRODUCTION

These instructions cover the use Pin (Post) Insertion Tool 1583255-1. Refer to Figure 1. This tool was designed to insert individual pin (post) contacts into HM-Zd Connectors and printed circuit (pc) boards.

### NOTE



All dimensions on this document are in metric units [with U.S. customary units in brackets], unless otherwise specified.

Read these instructions and understand them before using the header removal tools and pin removal tool.

## 2. DESCRIPTION

Insertion Tool 1583255-1 consists primarily of the impact tool (which also acts as handle) and the tooling tip. Refer to Figure 1.

The impact tool generates the needed force to seat the contact pin (post) into the pc board and HM-Zd connector.

The tooling tip is used to orient and hold the contact pin prior to and during insertion.

## 3. CONTACT PIN (POST) INSERTION PROCEDURE

Before inserting any new posts, be sure that any old or damaged posts are removed from the contact housing and pc board using Extraction Tool 1583237-1. Refer to 408-8646. Then proceed as follows:

1. Insert new post into the tooling tip as shown in Figure 2. In order to ensure proper orientation of the post during insertion, the post will only enter the tooling tip one way. Note the following during post placement:

- Screws on Tooling Tip facing upwards,
- Eye of needle portion of post facing away from the tool,
- Shoulders of the contact aligned with screws, as shown in Figure 2.

2. Position the insertion tool over the connector and pc board as shown in Figure 3.

### NOTE



The screw heads on the tooling tip must face the ground shield associated with the pin being replaced.

3. Carefully insert the tip of the post into the appropriate cavity. Refer to Figure 4.

4. Apply downward force to the impact tool until the tool "snaps," seating the post to the required depth in the HM-Zd connector and pc board.

5. Remove the tool by carefully pulling the tool off the post. Be sure to keep the tool perpendicular to the floor of the connector when removing the insertion tool.

6. Examine the post to be sure the shoulder of the post is flush with the floor of the connector.

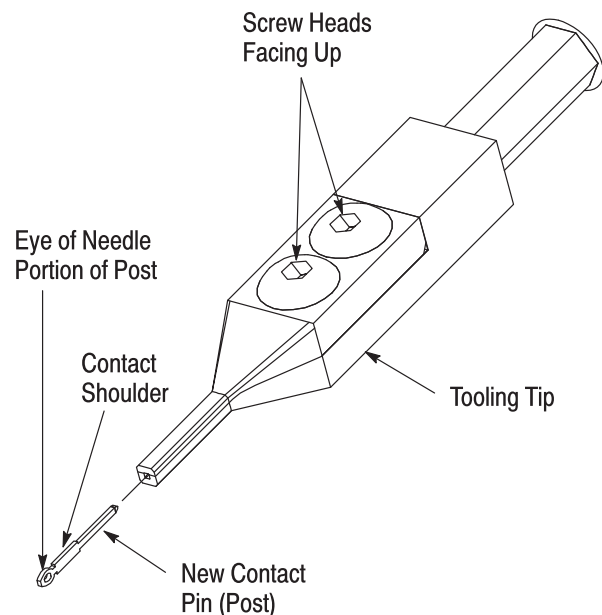


Figure 2



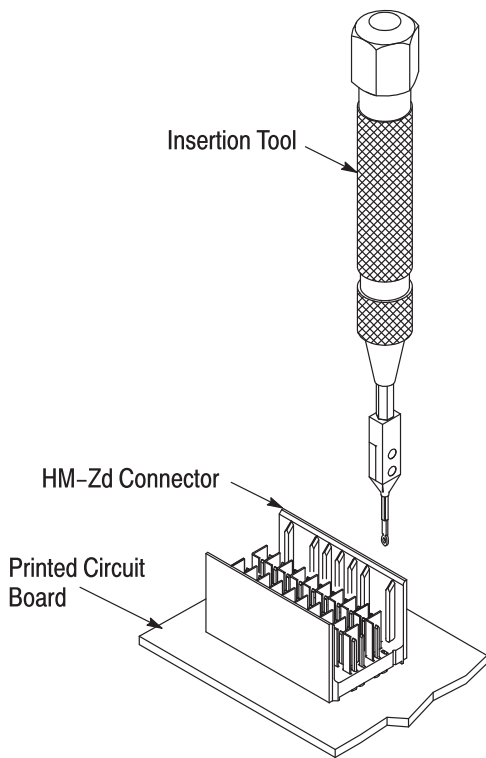


Figure 3

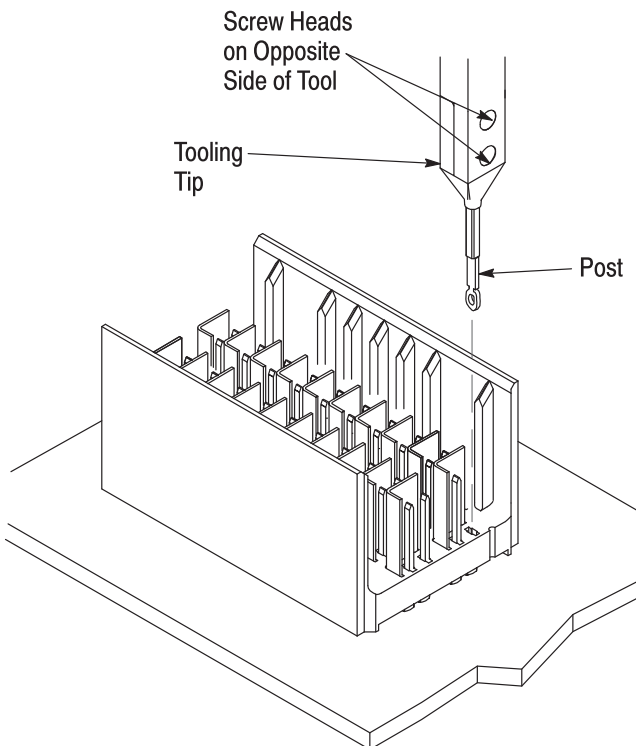


Figure 4

## 4. TOOL INSPECTION

It is recommended that the tool be inspected immediately upon its arrival in your plant to ensure that it has not been damaged during shipment.

## 5. MAINTENANCE/INSPECTION

### 5.1. Daily Maintenance

It is recommended that each operator be made aware of, and responsible for, the following steps of daily maintenance:

1. Remove dust, moisture, and other contaminants with a clean, soft brush, or lint-free cloth. Do NOT use objects that could damage the tool or any of its components.
2. When the tool is not in use, store it in a clean, dry area.

### 5.2. Periodic Inspection

Regular inspections should be performed by quality control personnel. A record of scheduled inspections should remain with the tool or be supplied to supervisory personnel responsible for the tool. The inspection frequency should be based on the amount of use, working conditions, operator training and skill, and established company standards.

## 6. REPLACEMENT AND REPAIR

Order replacement seating tools through your Tyco Electronics representative, or call 1-800-526-5142, or send a facsimile of your purchase order to 1-717-986-7605 or write to:

CUSTOMER SERVICE (38-35)  
TYCO ELECTRONICS CORPORATION  
P.O. BOX 3608  
HARRISBURG, PA 17105-3608

For seating tool repair service, please contact a Tyco Electronics representative at 1-800-526-5136.

## 7. REVISION SUMMARY

Revisions to this instruction sheet include:

- Updated document to corporate requirements.