imall

Chipsmall Limited consists of a professional team with an average of over 10 year of expertise in the distribution of electronic components. Based in Hongkong, we have already established firm and mutual-benefit business relationships with customers from, Europe, America and south Asia, supplying obsolete and hard-to-find components to meet their specific needs.

With the principle of "Quality Parts, Customers Priority, Honest Operation, and Considerate Service", our business mainly focus on the distribution of electronic components. Line cards we deal with include Microchip, ALPS, ROHM, Xilinx, Pulse, ON, Everlight and Freescale. Main products comprise IC, Modules, Potentiometer, IC Socket, Relay, Connector. Our parts cover such applications as commercial, industrial, and automotives areas.

We are looking forward to setting up business relationship with you and hope to provide you with the best service and solution. Let us make a better world for our industry!



Contact us

Tel: +86-755-8981 8866 Fax: +86-755-8427 6832 Email & Skype: info@chipsmall.com Web: www.chipsmall.com Address: A1208, Overseas Decoration Building, #122 Zhenhua RD., Futian, Shenzhen, China



LTC2755

DESCRIPTION

Demonstration circuit 1112 features the LTC2755 Dual 16 bit SoftSpan lout DAC. This device features six output ranges, 0 to 5V, and 0 to 10V, +/- 5V, +/- 10V, +/- 2.5V, and -2.5V to + 7.5V. The DAC has an offset adjust input pin and a compensation pin to allow optimization of transient response.

Design files for this circuit board are available. Call the LTC factory.

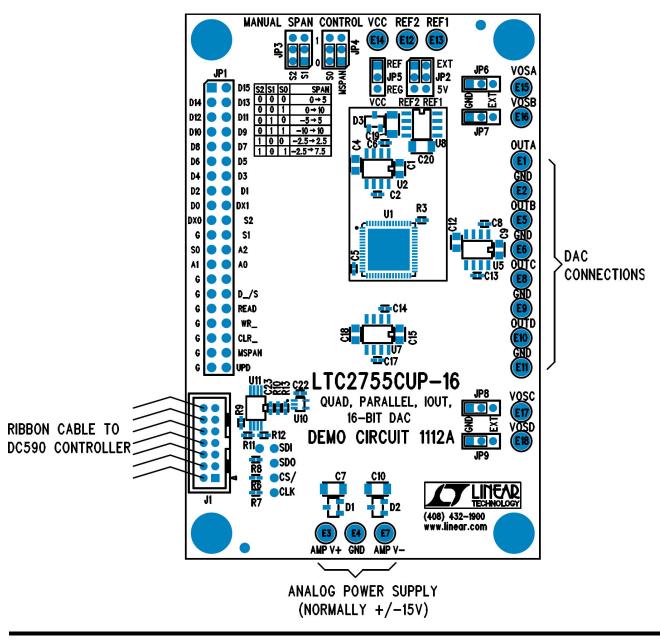


Figure 1. Proper Measurement Equipment Setup

QUICK START PROCEDURE

Connect a clean +/-15V power supply to the turret posts at the top of the DC1112 board. Connect J1 to a DC590 USB serial controller using the supplied 14 conductor ribbon cable. Connect DC590 to a host PC with a standard USB A/B cable. Run the evaluation software supplied with DC590 or download it from <u>www.linear.com/software</u>. The correct control panel will be loaded automatically.

The software automatically sets the LTC2755 outputs according to the entries in the control panel. A square wave option is available to test settling time. MSPAN jumper should be low if software span control is desired.

Additional software documentation may be available from the Help menu item, as features may be added periodically.

LTC2753	-16			
File View	Help			
			LTC27	53-16
<i>9</i> .				
	0 - 5V 🤉	 DC Level 	 Square Wave 	
	0 - 10V o	0.99998	0.99998	High
	± 5V o			. ngin
	± 3V +		0.00000	Low
	± 10V ා	 Output specified in Volts 		Low
	± 2.5 °	 Output in Hex Counts 	А	Б
				В
-2	2.5 - 7.5V o	 Output in Decimal Counts 		

USING THE PARALLEL CONNECTOR

PROTOCOL

The DC1112 can also be used without the DC590 system. If a DC590 demo board is not connected the shift registers on the DC1112 are disabled, allowing the user to clock in data through the parallel connector (JP1).

The data input register is loaded directly from the 16-bit microprocessor bus (D0-D15 on the parallel connector) by holding the _D/S pin low and then pulsing the _WR pin low. The second register (DAC register) is loaded by pulsing the UPD pin high, which copies the data held in the input register into the DAC register. Note that updates always include both data and span; but the DAC register values will not change unless the input register values have been changed by writing.

Loading the span input register is accomplished in a similar manner, by holding the _D/S pin high and then bringing the _WR pin low. The span and data register structures are the same except for the number of parallel bits the span registers have three bits, while the data registers have 12, 14, or 16 bits.

Please see the LTC2755 datasheet for in depth timing diagrams and more information about the communication protocol.

PARALLEL PIN DESCRIPTIONS

A0-A2: DAC address bits. Determine which DAC(s) respond to parallel commands.

A2	A1	A0	DAC CHANNEL			
0	0	0	DAC A			
0	0	1	DAC B			
0	1	0	DAC C			
0	1	1	DAC D			
1	1	1	ALL DACs*			

Codes not shown are reserved and should not be used.

D0-D15: DAC Input/Output Data Bits. These I/O pins set and read back the DAC code. D15 is the MSB. D0 is the LSB.

S0-S2: Span I/O Bit 0. Pins S0, S1 and S2 are used to program and to read back the output range of the DAC.

_D/S: Data/Span Select. This pin is used to select activation of the data or span I/O pins (D0 to D15 or S0 to S2, respectively), along with their respective dedicated registers, for write or read operations. Update operations ignore _D/S, since all updates affect both data and span registers. For single-span operation, tie _D/S to GND.

READ: Read Pin. When READ is asserted high, the data I/O pins (D0-D15) or span I/O pins (S0-S2) output the contents of the selected register (see Table 1).For single-span operation, readback of the span I/O pins is disabled.

UPD: Update and Buffer Select Pin. When READ is held low and UPD is asserted high, the contents of the input registers (both data and span) are copied into their respective DAC registers. The output of the DAC is updated, reflecting the new DAC register values. When READ is held high, the update function is disabled and the UPD pin functions as a buffer selector—logic low to select the input register, high for the DAC register.

_WR: Active Low Write Pin. A Write operation copies the data present on the data or span I/O pins (D0- D15 or S0-S2, respectively) into the input register. When READ is high, the Write function is disabled.

MSPAN: Manual Span Control Pin. MSPAN is used to configure the LTC2755 for operation in a single, fixed output range.

G: Ground Pin. (Note, if an IDE cable is used, pin 21 is often keyed on the connector and may be trimmed)



HARDWARE SET-UP

JUMPERS

MSPAN – Manual Span Control Pin. MSPAN is used to configure the LTC2755 for operation in a single, fixed output range. If MSPAN is high it will be configured for single span use. If MSPAN is low it will be set through the Quick Eval Software. Default position is 0 (low).

S0,S1,S2 – Used to set the fixed output range if MSPAN is high. Default is all jumpers removed, allowing software span control.

S 2	S1	S0	SPAN
0	0	0	Unipolar 0V to 5V
0	0	1	Unipolar 0V to 10V
0	1	0	Bipolar –5V to 5V
0	1	1	Bipolar –10V to 10V
1	0	0	Bipolar –2.5V to 2.5V
1	0	1	Bipolar –2.5V to 7.5V

Codes not shown are reserved and should not be used.

VREF – Voltage reference selection for the DAC, either 5V for the onboard LT1236 reference or EXT if an external reference source is connected to the VREF turret post.

VOSA,VOSB, VOSC,VOSD – offset adjustment selection for DACA, DACB, DACC, DACD. If no offset adjustment is required, select GND. Selecting EXT connects the offset pin to the turret allowing external adjustment of offset.

VCC – Select source for 5V Vcc supply. Set to 5V for supply by onboard LT1236 reference (recom-

mended). Set to REG to be supplied by regulated supply from DC590 Controller and remove the jumper to supply externally.

ANALOG CONNECTIONS (TURRET POSTS)

OUTA, OUTB, OUTC, OUTD – DAC voltage outputs.

VREF – DAC Reference voltage. If the onboard LT1236 references are selected, the voltage may be measured at these points. If a remote reference is selected, then an external reference must be applied to these points.

VOSA,VOSB, VOSC,VOSD – DAC Offset Adjust input, use only if VOSA/VOSB jumper set to EXT. Nominal input range is $\pm 5V$.


POWER AND GROUND CONNECTIONS

Analog Power – The +15V, -15V, and GND turret posts are the analog supplies for the internal DAC amplifiers. These should be connected to a well regulated, low noise power supply.

Vcc – Connection to Vcc. See schematic and description for VCC jumper.

Grounding – Separate power and signal grounds are provided. Signal GND is the turret closest to OUTA, use this for measurement ground and output return. Power GND is between AMPV+ and AMPVturrets.

QUICK START GUIDE FOR DEMONSTRATION CIRCUIT 1112 QUAD, PARALLEL, IOUT, 16-BIT DAC

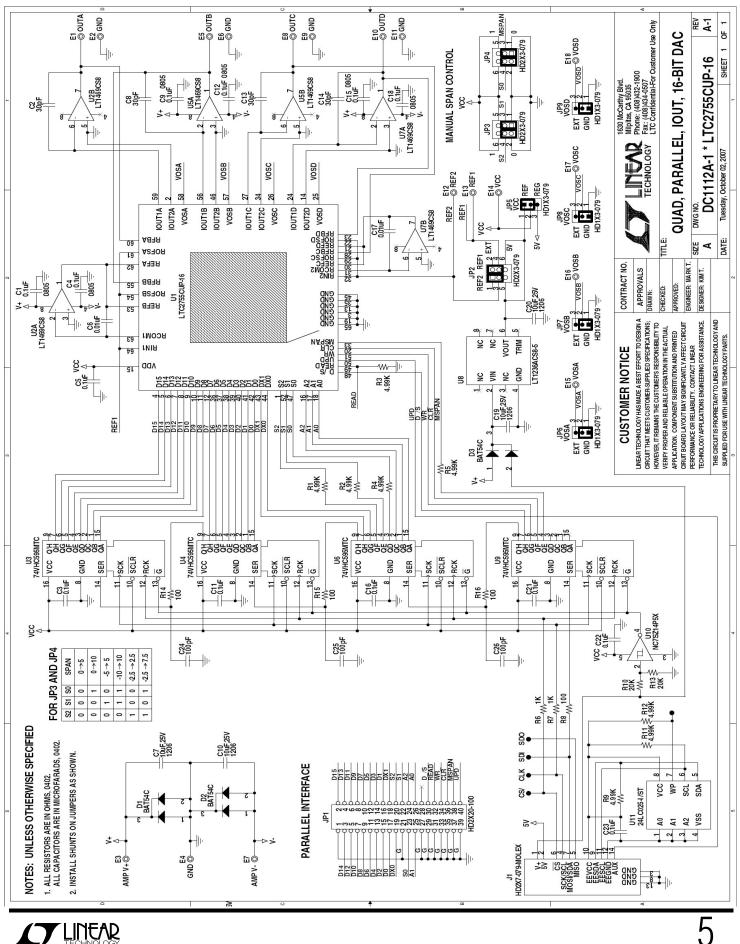

5