



Chipsmall Limited consists of a professional team with an average of over 10 year of expertise in the distribution of electronic components. Based in Hongkong, we have already established firm and mutual-benefit business relationships with customers from,Europe,America and south Asia,supplying obsolete and hard-to-find components to meet their specific needs.

With the principle of “Quality Parts,Customers Priority,Honest Operation,and Considerate Service”,our business mainly focus on the distribution of electronic components. Line cards we deal with include Microchip,ALPS,ROHM,Xilinx,Pulse,ON,Everlight and Freescale. Main products comprise IC,Modules,Potentiometer,IC Socket,Relay,Connector.Our parts cover such applications as commercial,industrial, and automotives areas.

We are looking forward to setting up business relationship with you and hope to provide you with the best service and solution. Let us make a better world for our industry!



Contact us

Tel: +86-755-8981 8866 Fax: +86-755-8427 6832

Email & Skype: info@chipsmall.com Web: www.chipsmall.com

Address: A1208, Overseas Decoration Building, #122 Zhenhua RD., Futian, Shenzhen, China




Noise click

From MikroElektronika Documentation

Noise click is a mikroBUS™ add-on board with noise detecting circuitry. It enables you to set a noise detection threshold for alarm systems, environmental monitoring or data logging. When the volume of ambient sound reaches the set threshold, an interrupt is triggered.

Features and usage notes

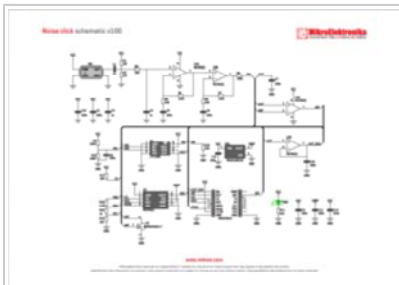

Schematic also available in PDF (http://cdn-docs.mikroe.com/images/1/1f/Noise_click_schematic)

The most important parts of the circuit are the microphone, an RMS-to-DC converter, two dual rail-to-rail Input/Output 10 MHz operational amplifiers, and a 12-bit digital-to-analog converter (DAC).

One operational amplifier processes the microphone signal. The amplified voltage passes through the RMS-to-DC converter. The signal then goes into the second operational amplifier which functions as a voltage comparator (from which the

interrupt signal originates).

The 12-bit DAC provides the reference voltage — the noise threshold — for the comparator. You set the exact level through the SPI interface. The threshold should be configured through trial and error (4096 discrete values to select from).

To avoid triggering the interrupt hundreds of times per second as ambient noise oscillates near the threshold, a hysteresis circuit is also employed.

Alternatively, Noise click also enables you to directly monitor the voltage levels from the microphone through the AN pin.

The board works on a 3.3V power supply.

Programming

This snippet sets a threshold of 600 and begins displaying the ADC value from the Noise Click on the terminal. If the Interrupt pin is pulled high (threshold exceeded), then the terminal will say "Interrupt!!!!!!".

```

1 #include <stdint.h>
2 #include "noise_hw.h"
3
4 sbit NOISE_CS at GPIO_ODR.B13;
5 sbit NOISE_INT at GPIO_IDR.B10;
6
7 void system_setup( void );
8
9 void main()
10 {
11     //Local Decalarations
12     uint8_t buffer[20] = { 0 };
13     uint32_t value = 0;
14     uint16_t threshold = 600;
15
16     //Setup
17     system_setup();
18
19     noise_set_threshold( threshold );
20
21     //Loop
22     while(1)
23     {
24         value = ADC1_Read( 4 );
25         LongToStr( value, buffer );
26         UART1_Write_Text( buffer );
27         UART1_Write_Text( "\r\n" );
28         Delay_ms(20);
29         if( NOISE_INT == 0 ); // Do nothing
30         else
31             UART1_Write_Text( "Interrupt!!!!!!\r\n" );
32     }
33

```

Noise click



Noise click

IC/Module	MCP4901 (http://ww1.microchip.com/downloads/en/DeviceDoc/22248a.pdf)
	MCP6021 (http://ww1.microchip.com/downloads/en/DeviceDoc/21685d.pdf)
	LTC1966 (http://www.linear.com/product/LTC1966)
Interface	SPI, AN, EN
Power supply	3.3V
Website	www.mikroe.com/click/noise (http://www.mikroe.com/click/noise)

34 }

Code examples that demonstrate the usage of Noise click with MikroElektronika hardware, written for mikroC for PIC, dsPIC/PIC24, PIC32, ARM, AVR, FT90x are available on Libstock (<http://libstock.mikroe.com/projects/view/1878/noise-click>)

Resources

- MCP4901 Vendor's data sheet (<http://ww1.microchip.com/downloads/en/DeviceDoc/22248a.pdf>)
- Noise click Libstock library (<http://libstock.mikroe.com/projects/view/1878/noise-click>)
- mikroBUS™ standard specifications (<http://download.mikroe.com/documents/standards/mikrobus/mikrobus-standard-specification-v200.pdf>)

Retrieved from "http://docs.mikroe.com/index.php?title=Noise_click&oldid=560"

-
- This page was last modified on 29 July 2016, at 15:08.
 - Content is available under Creative Commons Attribution unless otherwise noted.