



Chipsmall Limited consists of a professional team with an average of over 10 year of expertise in the distribution of electronic components. Based in Hongkong, we have already established firm and mutual-benefit business relationships with customers from,Europe,America and south Asia,supplying obsolete and hard-to-find components to meet their specific needs.

With the principle of “Quality Parts,Customers Priority,Honest Operation,and Considerate Service”,our business mainly focus on the distribution of electronic components. Line cards we deal with include Microchip,ALPS,ROHM,Xilinx,Pulse,ON,Everlight and Freescale. Main products comprise IC,Modules,Potentiometer,IC Socket,Relay,Connector.Our parts cover such applications as commercial,industrial, and automotives areas.

We are looking forward to setting up business relationship with you and hope to provide you with the best service and solution. Let us make a better world for our industry!



## Contact us

Tel: +86-755-8981 8866 Fax: +86-755-8427 6832

Email & Skype: info@chipsmall.com Web: www.chipsmall.com


Address: A1208, Overseas Decoration Building, #122 Zhenhua RD., Futian, Shenzhen, China



**VHDM® and  
VHDM® HSD  
Right Angle DC  
Single Wafer  
Removal Tool**



**Application Tooling  
Specification Sheet**

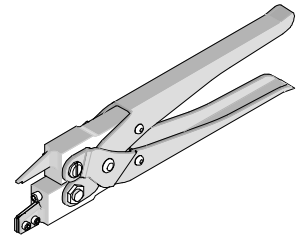

**Order No. 62100-4300**

**FEATURES**

- A pliers-type tool used in the repair of damaged connectors to replace individual wafers, which reduces connector replacement costs
- Lightweight manual tool that is easy to use
- High quality construction that will provide longevity with proper care of hand tool

**SCOPE**

Products: 2.00mm (.079") Pitch VHDM® and VHDM® HSD\* Board-to-Board Daughtercard Receptacle, Right Angle, 5, 6, or 8-Row.

The following is a Partial List of the Product Part Numbers and their specifications that this tooling is designed to repair. We will be adding to this list and an up to date copy is available on [www.molex.com](http://www.molex.com).

Series No.	Columns	Assembly Order Number							
74030 VHDM®	6	74030-0001	74030-0002	74030-0006	74030-0009	74030-0010	74030-0011	74030-0012	74030-0013
		74030-0014	74030-0015	74030-0016	74030-0017	74030-0018	74030-0019	74030-0020	74030-0024
		74030-0025	74030-0026	74030-0027	74030-0028	74030-0031	74030-0032	74030-0033	74030-0034
		74030-0035	74030-0036	74030-0038	740300-0389	74030-0039	74030-0041	74030-0042	74030-0043
		74030-0044	74030-0045	74030-0046	74030-0047	74030-0048	74030-0050	74030-0052	74030-0056
		74030-0059	74030-0060	74030-0061	74030-0062	74030-0063	74030-0064	74030-0065	74030-0066
		74030-0067	74030-0068	74030-0069	74030-0070	74030-0071	74030-0072	74030-0073	74030-0074
		74030-0075	74030-0077	74030-0078	74030-0079	74030-0080	74030-0081	74030-0082	74030-0085
		74030-0088	74030-0089	74030-0090	74030-0092	74030-0094	74030-0095	74030-0096	74030-0097
		74030-0098	74030-0101	74030-0102	74030-0105	74030-0106	74030-0107	74030-0108	74030-0109
		74030-0110	74030-0111	74030-0112	74030-0113	74030-0114	74030-0116	74030-0117	74030-0118
		74030-0095	74030-0096	74030-0097	74030-0098	74030-0101	74030-0102	74030-0105	74030-0106
		74030-0107	74030-0108	74030-0109	74030-0110	74030-0111	74030-0112	74030-0113	74030-0114
		74030-0116	74030-0117	74030-0118	74030-0119	74030-0122	74030-0123	74030-0124	74030-0125
		74030-0126	74030-0127	74030-0128	74030-0129	74030-0130	74030-0131	74030-0132	74030-0133
		74030-0134	74030-0135	74030-0141	74030-0146	74030-0147	74030-0148	74030-0149	74030-0150
		74030-0151	74030-0152	74030-0153	74030-0154	74030-0156	74030-0166	74030-0169	74030-0170
		74030-0171	74030-0172	74030-0173	74030-0174	74030-0175	74030-0176	74030-0177	74030-0178
		74030-0180	74030-0181	74030-0182	74030-0184	74030-0187	74030-0188	74030-0189	74030-0190
		74030-0191	74030-0193	74030-0196	74030-0197	74030-0198	74030-0199	74030-0200	74030-0201
		74030-0203	74030-0205	74030-0206	74030-0207	74030-0208	74030-0209	74030-0211	74030-0212
		74030-0213	74030-0216	74030-0217	74030-0218	74030-0225	74030-0226	74030-0227	74030-0229
		74030-0232	74030-0233	74030-0234	74030-0235	74030-0236	74030-0237	74030-0238	74030-0239
		74030-0240	74030-0241	74030-0242	74030-0243	74030-0244	74030-0245	74030-0247	74030-0248
		74030-0249	74030-0250	74030-0251	74030-0252	74030-0253	74030-0254	74030-0257	74030-0258
		74030-0259	74030-0260	74030-0261	74030-0262	74030-0263	74030-0264	74030-0265	74030-0267
		74030-0268	74030-0273	74030-0276	74030-0277	74030-0278	74030-0279	74030-0280	74030-0281

74030 VHDM®	6	74030-0282	74030-0283	74030-0284	74030-0285	74030-0286	74030-0287	74030-0288	74030-0289
		74030-0290	74030-0291	74030-0292	74030-0298	74030-0299	74030-0300	74030-0301	74030-0302
		74030-0303	74030-0306	74030-0307	74030-0308	74030-0309	74030-0311	74030-0314	74030-0316
		74030-0317	74030-0318	74030-0322	74030-0324	74030-0326	74030-0327	74030-0330	74030-0331
		74030-0332	74030-0333	74030-0334	74030-0335	74030-0336	74030-0337	74030-0338	74030-0339
		74030-0340	74030-0341	74030-0344	74030-0345	74030-0346	74030-0347	74030-0348	74030-0349
		74030-0352	74030-0355	74030-0356	74030-0357	74030-0358	74030-0359	74030-0360	74030-0367
		74030-0368	74030-0369	74030-0370	74030-0371	74030-0372	74030-0373	74030-0374	74030-0375
		74030-0376	74030-0377	74030-0380	74030-0383	74030-0384	74030-0385	74030-0386	74030-0387
		74030-0388	74030-0393	74030-0394	74030-0395	74030-0396	74030-0397	74030-0398	74030-0399
		74030-0400	74030-0401	74030-0402	74030-0403	74030-0404	74030-0405	74030-0406	74030-0407
		74030-0409	74030-0410	74030-0412	74030-0413	74030-0416	74030-0418	74030-0420	74030-0421
		74030-0422	74030-0423	74030-0432	74030-0433	74030-0434	74030-0435	74030-0436	74030-0437
		74030-0439	74030-0444	74030-0445	74030-0446	74030-0448	74030-0449	74030-0452	74030-0454
		74030-0459	74030-0463	74030-0464	74030-0465	74030-0466	74030-0467	74030-0470	74030-0473
		74030-0474	74030-0477	74030-0478	74030-0479	74030-0481	74030-0482	74030-0483	74030-0484
		74030-0485	74030-0488	74030-0489	74030-0491	74030-0494	74030-0498	74030-0502	74030-0504
		74030-0505	74030-0506	74030-0507	74030-0509	74030-0510	74030-0511	74030-0512	74030-0513
		74030-0514	74030-0515	74030-0516	74030-0517	74030-0518	74030-0521	74030-0522	74030-0524
		74030-0525	74030-0529	74030-0530	74030-0532	74030-0533	74030-0534	74030-0535	74030-0536
		74030-0538	74030-0539	74030-0541	74030-0544	74030-0545	74030-0546	74030-0548	74030-0549
		74030-0550	74030-0551	74030-0554	74030-0555	74030-0556	74030-0557	74030-0558	74030-0560
		74030-0561	74030-0562	74030-0563	74030-0564	74030-0565	74030-0566	74030-0567	74030-0568
		74030-0569	74030-0571	74030-0572	74030-0575	74030-0576	74030-0577	74030-0578	74030-0580
		74030-0582	74030-0583	74030-0584	74030-0585	74030-0586	74030-0590	74030-0594	74030-0595
		74030-0596	74030-0598	74030-0599	74030-0600	74030-0609	74030-0610	74030-0611	74030-0612
		74030-0613	74030-0614	74030-0616	74030-0617	74030-0618	74030-0619	74030-0620	74030-0621
		74030-0622	74030-0625	74030-0626	74030-0627	74030-0630	74030-0631	74030-0632	74030-0634
		74030-0636	74030-0637	74030-0639	74030-0642	74030-0644	74030-0645	74030-0646	74030-0647
		74030-0648	74030-0650	74030-0653	74030-0654	74030-0656	74030-0660	74030-0661	74030-0662
		74030-0663	74030-0664	74030-0665	74030-0667	74030-0668	74030-0669	74030-0670	74030-0671
		74030-0672	74030-0673	74030-0674	74030-0675	74030-0676	74030-0677	74030-0680	74030-0681
		74030-0685	74030-0686	74030-0688	74030-0689	74030-0691	74030-0692	74030-0693	74030-0694
		74030-0695	74030-0696	74030-0698	74030-0701	74030-0702	74030-0703	74030-0704	74030-0706
		74030-0707	74030-0709	74030-0710	74030-0710	74030-0711	74030-0712	74030-0720	74030-0721
		74030-0733	74030-0735	74030-0736	74030-0737	74030-0738	74030-0746	74030-0749	74030-0751
		74030-0752	74030-0753	74030-0757	74030-0758	74030-0759	74030-0763	74030-0764	74030-0766
		74030-0768	74030-0769	74030-0770	74030-0771	74030-0772	74030-0773	74030-0774	74030-0775
		74030-0776	74030-0777	74030-0778	74030-0779	74030-0780	74030-0781	74030-0783	74030-0790
		74030-0791	74030-0792	74030-0793	74030-0794	74030-0796	74030-0797	74030-0802	74030-0803
		74030-0804	74030-0805	74030-0809	74030-0810	74030-0811	74030-0813	74030-0814	74030-0815
		74030-0816	74030-0817	74030-0824	74030-0830	74030-0837	74030-0838	740300840	74030-0844
		74030-0845	74030-0846	74030-0849	74030-0853	74030-0854	74030-0855	74030-0862	74030-0863
		74030-0865	74030-0866	74030-0867	74030-0868	74030-0869	74030-0870	74030-0873	74030-0876
		74030-0877	74030-0878	74030-0879	74030-0880	74030-0881	74030-0882	74030-0883	74030-0884
		74030-0885	74030-0887	74030-0890	74030-0891	74030-0892	74030-0894	74030-0895	74030-0896
		74030-0897	74030-0898	74030-0899	74030-0900	74030-0901	74030-0902	74030-0903	74030-0904
74030-0905	74030-0907	74030-0908	74030-0909	74030-0912	74030-0913	74030-0914	74030-0915		
74030-0916	74030-0918	74030-0919	74030-0920	74030-0921	74030-0922	74030-0923	74030-0927		
74030-0928	74030-0936	74030-0937	74030-0938	74030-0939	74030-0940	74030-0943	74030-0944		
74030-0945	74030-0946	74030-0947	74030-0948	74030-0949	74030-0950	74030-0951	74030-0952		
74030-0954	74030-0955	74030-0956	74030-0957	74030-0960	74030-0961	74030-0962	74030-0963		
74030-0964	74030-0965	74030-0966	74030-0967	74030-0968	74030-0969	74030-0970	74030-0971		
74030-0972	74030-0975	74030-0976	74030-0977	74030-0979	74030-0986	74030-0993	74030-0995		
74030-0997	74030-0999	74030-1001	74030-1003	74030-1004	74030-1005	74030-1006	74030-1007		
74030-1008	74030-1009	74030-1010	74030-1011	74030-1013	74030-1016	74030-1018	74030-1019		



74030 VHDM®	6	74030-1020	74030-1021	74030-1022	74030-1023	74030-1024	74030-1026	74030-1028	74030-1029		
		74030-1031	74030-1033	74030-1038	74030-1040	74030-1042	74030-1043	74030-1044	74030-1045		
		74030-1046	74030-1049	74030-1052	74030-1053	74030-1054	74030-1056	74030-1057	74030-1059		
		74030-1064	74030-1065	74030-1067	74030-1068	74030-1069	74030-1071	74030-1072	74030-1085		
		740301086	74030-1088	74030-1089	74030-1091	74030-1092	74030-1093	74030-1094	74030-1095		
		74030-1096	74030-1098	74030-1105	74030-1106	74030-1107	74030-1108	74030-1109	74030-1110		
		74030-1113	74030-1114	74030-1115	74030-1116	74030-1120	74030-1122	74030-1123	74030-1126		
		74030-1127	74030-1128	74030-1130	74030-1131	74030-1132	74030-1134	74030-1135	74030-1136		
		74030-1137	74030-1138	74030-1139	74030-1140	74030-1141	74030-1142	74030-1143	74030-1144		
		74030-1146	74030-1147	74030-1148	74030-1150	74030-1151	74030-1152	74030-1153	74030-1154		
		74030-1155	74030-1156	74030-1157	74030-1158	74030-1159	74030-1160	74030-1161	74030-1162		
		74030-1163	74030-1164	74030-1165	74030-1166	74030-1167	74030-1168	74030-1169	74030-1170		
		74030-1171	74030-1172	74030-1173	74030-1174	74030-1175	74030-1176	74030-1177	74030-1178		
		74030-1179	74030-1180	74030-1181	74030-1182	74030-1183	74030-1184	74030-1185	74030-1186		
		74030-1187	74030-1188	74030-1190	74030-1191	74030-1192	74030-1193	74030-1209	74030-1210		
		74030-1230	74030-1235	74030-1250	74030-1251	74030-1252	74030-1253	74030-1254	74030-1255		
		74030-1256	74030-1257	74030-1258	74030-1259	74030-1260	74030-1261	74030-1262	74030-1263		
		74030-1264	74030-1265	74030-1266	74030-1267	74030-1268	74030-1269	74030-1270	74030-1271		
		74030-1272	74030-1274	74030-1275	74030-1276	74030-1277	74030-1278	74030-1279	74030-1280		
		74030-1281	74030-1282	74030-1283	74030-1284	74030-1286	74030-1287	74030-1288	74030-1289		
		74030-1290	74030-1291	74030-1292	74030-1293	74030-1294	74030-1295	74030-1296	74030-1297		
		74030-1298	74030-1299	74030-1300	74030-1301	74030-1302	74030-1303	74030-1304	74030-1305		
		74030-1306	74030-1307	74030-1308	74030-1309	74030-1310	74030-1311	74030-1312	74030-1313		
		74030-1314	74030-1315	74030-1316	74030-1317	74030-1318	74030-1319	74030-1320	74030-1321		
		74030-1322	74030-1323	74030-1324	74030-1325	74030-1326	74030-1327	74030-1328	74030-1329		
		74030-1330	74030-1331	74030-1332	74030-1333	74030-1334	74030-1335	74030-1336	74030-1337		
		74030-1338	74030-1339	74030-1340	74030-1341	74030-1342	74030-1343	74030-1344	74030-1345		
		74030-1346	74030-8040	74038-8055	74030-9711	74030-9816	74030-9817	74030-9818	74030-9819		
		74030-9820	74030-9821	74030-9822	74030-9824	74030-9825	74030-9826	74030-9827	74030-9828		
		74030-9829	74030-9830	74030-9831	74030-9832	74030-9833	74030-9834	74030-9835	74030-9836		
		74030-9838	74030-9839	74030-9840	74030-9841	74030-9842	74030-9843	74030-9844	74030-9845		
		74030-9847	74030-9848	74030-9849	74030-9852	74030-9853	74030-9854	74030-9855	74030-9857		
		74030-9858	74030-9860	74030-9861	74030-9864	74030-9865	74030-9866	74030-9867	74030-9868		
		74030-9869	74030-9870	74030-9871	74030-9872	74030-9873	74030-9874	74030-9875	74030-9876		
		74030-9877	74030-9879	74030-9880	74030-9881	74030-9882	74030-9883	74030-9891	74030-9892		
		74030-9893	74030-9894	74030-9895	74030-9896	74030-9897	74030-9898	74030-9899	74030-9900		
		74030-9903	74030-9904	74030-9906	74030-9907	74030-9911	74030-9912	74030-9913	74030-9914		
		74030-9915	74030-9916	74030-9917	74030-9931	74030-9946	74030-9947	74030-9948	74030-9949		
		74030-9950	74030-9951	74030-9952	74030-9953	74030-9956	74030-9965	74030-9967	74030-9972		
		74030-9973	74030-9977	74030-9994	74030-9995						
		74040 VHDM®	8	74040-0001	74040-0002	74040-0003	74040-0004	74040-0005	74040-0006	74040-0008	74040-0009
				74040-0010	74040-0011	74040-0012	74040-0013	74040-0014	74040-0016	74040-0017	74040-0018
				74040-0021	74040-0022	74040-0023	74040-0024	74040-0025	74040-0026	74040-0027	74040-0028
				74040-0029	74040-0030	74040-0031	74040-0032	74040-0033	74040-0034	74040-0035	74040-0036
				74040-0037	74040-0038	74040-0039	74040-0040	74040-0041	74040-0042	74040-0043	74040-0044
74040-0044	74040-0045			74040-0046	74040-0047	74040-0048	74040-0051	74040-0053	74040-0055		
74040-0056	74040-0057			74040-0058	74040-0059	74040-0060	74040-0061	74040-0062	74040-0063		
74040-0064	74040-0065			74040-0066	74040-0067	74040-0068	74040-0069	74040-0070	74040-0071		
74040-0072	74040-0077			74040-0078	74040-0079	74040-0082	74040-0083	74040-0085	74040-0086		
74040-0087	74040-0088			74040-0089	74040-0090	74040-0091	74040-0092	74040-0093	74040-0094		
74040-0096	74040-0097			74040-0098	74040-0099	74040-0100	74040-0101	74040-0102	74040-0104		
74040-0105	74040-0106			74040-0109	74040-0110	74040-0113	74040-0114	74040-0116	74040-0120		
74040-0122	74040-0125			74040-0126	74040-0127	74040-0129	74040-0130	74040-0131	74040-0132		
74040-0133	74040-0135			74040-0136	74040-0137	74040-0138	74040-0141	74040-0142	74040-0143		
74040-0144	74040-0145			74040-0146	74040-0147	74040-0148	74040-0150	74040-0152	74040-0153		
74040-0155	74040-0156			74040-0157	74040-0158	74040-0159	74040-0160	74040-0161	74040-0162		

74040 VHDM®	8	74040-0163	74040-0165	74040-0166	74040-0167	74040-0169	74040-0170	74040-0171	74040-0172
		74040-0173	74040-0174	74040-0175	74040-0176	74040-0177	74040-0178	74040-0180	74040-0182
		74040-0184	74040-0187	74040-0188	74040-0189	74040-0190	74040-0191	74040-0193	74040-0194
		74040-0195	74040-0196	74040-0197	74040-0198	74040-0200	74040-0201	74040-0203	74040-0205
		74040-0206	74040-0208	74040-0209	74040-0210	74040-0211	74040-0212	74040-0213	74040-0214
		74040-0215	74040-0216	74040-0218	74040-0219	74040-0221	74040-0222	74040-0223	74040-0224
		74040-0225	74040-0226	74040-0227	74040-0229	74040-0231	74040-0232	74040-0233	74040-0234
		74040-0235	74040-0236	74040-0237	74040-0238	74040-0239	74040-0240	74040-0241	74040-0242
		74040-0243	74040-0244	74040-0250	74040-0251	74040-0252	74040-0253	74040-0254	74040-0255
		74040-0261	74040-0263	74040-0264	74040-0266	74040-0270	74040-0271	74040-0272	74040-0273
		74040-0275	74040-0276	74040-0277	74040-0280	74040-0285	74040-0286	74040-0288	74040-0289
		74040-0290	74040-0291	74040-0294	74040-0295	74040-0297	74040-0299	74040-0306	74040-0307
		74040-0309	74040-0310	74040-0311	74040-0312	74040-0313	74040-0314	74040-0315	74040-0316
		74040-0317	74040-0318	74040-0319	74040-0320	74040-0321	74040-0322	74040-0323	74040-0324
		74040-0325	74040-0327	74040-0328	74040-0329	74040-0330	74040-0331	74040-0333	74040-0335
		74040-0336	74040-0337	74040-0338	74040-0339	74040-0340	74040-0341	74040-0342	74040-0343
		74040-0345	74040-0346	74040-0347	74040-0348	74040-0349	74040-0353	74040-0357	74040-0358
		74040-0359	74040-0360	74040-0361	74040-0363	74040-0364	74040-0365	74040-0367	74040-0368
		74040-0369	74040-0370	74040-0371	74040-0372	74040-0373	74040-0374	74040-0375	74040-0376
		74040-0377	74040-0378	74040-0379	74040-0380	74040-0381	74040-0382	74040-0383	74040-0384
		74040-0385	74040-0386	74040-0387	74040-0388	74040-0389	74040-0390	74040-0391	74040-0392
		74040-0393	74040-0394	74040-0395	74040-0396	74040-0397	74040-0398	74040-0399	74040-0400
		74040-0401	74040-0402	74040-0408	74040-0409	74040-0412	74040-0414	74040-0416	74040-0417
		74040-0418	74040-0419	74040-0420	74040-0421	74040-0422	74040-0423	74040-0424	74040-0426
		74040-0430	74040-0431	74040-0432	74040-0433	74040-0434	74040-0435	74040-0436	74040-0438
		74040-0439	74040-0440	74040-0441	74040-0442	74040-0443	74040-0444	74040-0445	74040-0446
		74040-0447	74040-0448	74040-0449	74040-0450	74040-0451	74040-0452	74040-0453	74040-0454
		74040-0455	74040-0456	74040-0457	74040-0458	74040-0459	74040-0460	74040-0461	74040-0462
		74040-0463	74040-0464	74040-0465	74040-0466	74040-0467	74040-0468	74040-0469	74040-0470
		74040-0471	74040-0472	74040-0473	74040-0474	74040-0475	74040-0476	74040-0477	74040-0480
		74040-0481	74040-0482	74040-0483	74040-0484	74040-0487	74040-0490	74040-0491	74040-0492
		74040-0493	74040-0495	74040-0499	74040-0500	74040-0501	74040-0502	74040-0503	74040-0504
		74040-0505	74040-0506	74040-0507	74040-0509	74040-0510	74040-0511	74040-0513	74040-0514
		74040-0515	74040-0516	74040-0517	74040-0518	74040-0520	74040-0521	74040-0522	74040-0523
		74040-0524	74040-0525	74040-0526	74040-0528	74040-0533	74040-0534	74040-0535	74040-0536
		74040-0538	74040-0539	74040-0540	74040-0541	74040-0542	74040-0543	74040-0544	74040-0554
		74040-0555	74040-0556	74040-0557	74040-0558	74040-0559	74040-0560	74040-0561	74040-0562
		74040-0563	74040-0564	74040-0565	74040-0566	74040-0568	74040-0569	74040-0570	74040-0571
		74040-0573	74040-0574	74040-0575	74040-0576	74040-0577	74040-0578	74040-0579	74040-0580
		74040-0581	74040-0582	74040-0583	74040-0584	74040-0585	74040-0586	74040-0587	74040-0588
		74040-0589	74040-0590	74040-0591	74040-0592	74040-0593	74040-0594	74040-0595	74040-0598
		74040-0601	74040-0602	74040-0603	74040-0604	74040-0606	74040-0607	74040-0608	74040-0609
		74040-0610	74040-0611	74040-0612	74040-0613	74040-0614	74040-0615	74040-0616	74040-0617
		74040-0618	74040-0619	74040-0620	74040-0621	74040-0622	74040-0623	74040-0624	74040-0625
		74040-0627	74040-0628	74040-0629	74040-0630	74040-0631	74040-0632	74040-0633	74040-0635
		74040-0636	74040-0640	74040-0642	74040-0643	74040-0644	74040-0645	74040-0647	74040-0648
		74040-0650	74040-0651	74040-0652	74040-0653	74040-0654	74040-0655	74040-0659	74040-0660
		74040-0661	74040-0663	74040-0664	74040-0665	74040-0667	74040-0668	74040-0671	74040-0672
74040-0674	74040-0675	74040-0676	74040-0677	74040-0678	74040-0679	74040-0680	74040-0681		
74040-0682	74040-0683	74040-0686	74040-0687	74040-0688	74040-0701	74040-0702	74040-0703		
74040-0707	74040-0708	74040-0709	74040-0710	74040-0711	74040-0712	74040-0713	74040-0714		
74040-0715	74040-0716	74040-0717	74040-0718	74040-0719	74040-0720	74040-0721	74040-0722		
74040-0723	74040-0724	74040-0725	74040-0728	74040-0730	74040-0733	74040-0735	74040-0736		
74040-0737	74040-0738	74040-0739	74040-0740	74040-0741	74040-0742	74040-0743	74040-0744		
74040-0745	74040-0746	74040-0747	74040-0748	74040-0749	74040-0751	74040-0752	74040-0753		
74040-0754	74040-0755	74040-0756	74040-0763	74040-0764	74040-0765	74040-0767	74040-0772		

74040 VHDM®	8	74040-0775	74040-0776	74040-0777	74040-0779	74040-0780	74040-0782	74040-0787	74040-0788
		74040-0789	74040-0790	74040-0791	74040-0792	74040-0793	74040-0795	74040-0797	74040-0798
		74040-0799	74040-0800	74040-0801	74040-0802	74040-0803	74040-0804	74040-0805	74040-0806
		74040-0807	74040-0818	74040-0819	74040-0820	74040-0823	74040-0824	74040-0825	74040-0826
		74040-0827	74040-0828	74040-0831	74040-0834	74040-0835	74040-0836	74040-0837	74040-0838
		74040-0844	74040-0845	74040-0847	74030-0848	74040-0849	74040-0850	74040-0851	74040-0852
		74040-0853	74040-0854	74040-0855	74040-0856	74040-0857	74040-0858	74040-0859	74040-0860
		74040-0861	74040-0864	74040-0875	74040-0876	74040-0877	74040-0878	74040-0880	74040-0881
		74040-0882	74040-0883	74040-0885	74040-0887	74040-0888	74040-0890	74040-0892	74040-0894
		74040-0896	74040-0897	74040-0898	74040-0899	74040-0900	74040-0905	74040-0907	74040-0908
		74040-0915	74040-0916	74040-0918	74040-0920	74040-0921	74040-0925	74040-0926	74040-0927
		74040-0928	74040-0929	74040-0930	74040-0931	74040-0932	74040-0933	74040-0934	74040-0935
		74040-0937	74040-0938	74040-0939	74040-0943	74040-0944	74040-0945	74040-0949	74040-0950
		74040-0951	74040-0952	74040-0953	74040-0954	74040-0955	74040-0956	74040-0957	74040-0958
		74040-0960	74040-0979	74040-0980	74040-0981	74040-0982	74040-0983	74040-0984	74040-0985
		74040-0986	74040-0988	74040-0990	74040-0991	74040-0992	74040-0993	74040-0994	74040-0995
		74040-0996	74040-0997	74040-0998	74040-1001	74040-1005	74040-1006	74040-1007	74040-1012
		74040-1013	74040-1014	74040-1015	74040-1016	74040-1017	74040-1018	74040-1019	74040-1020
		74040-1023	74040-1025	74040-1026	74040-1028	74040-1029	74040-1030	74040-1032	74040-1033
		74040-1036	74040-1037	74040-1038	74040-1039	74040-1043	74040-1045	74040-1046	74040-1047
		74040-1048	74040-1049	74040-1050	74040-1051	74040-1052	74040-1056	74040-1057	74040-1058
		74040-1061	74040-1062	74040-1063	74040-1064	74040-1065	74040-1066	74040-1069	74040-1071
		74040-1072	74040-1073	74040-1075	74040-1076	74040-1077	74040-1079	74040-1081	74040-1082
		74040-1084	74040-1085	74040-1086	74040-1089	74040-1092	74040-1093	74040-1096	74040-1102
		74040-1105	74040-1106	74040-1107	74040-1108	74040-1113	74040-1115	74040-1118	74040-1119
		74040-1124	74040-1126	74040-1127	74040-1129	74040-1130	74040-1133	74040-1142	74040-1145
		74040-1147	74040-1148	74040-1149	74040-1150	74040-1156	74040-1158	74040-1167	74040-1168
		74040-1169	74040-1170	74040-1172	74040-1173	74040-1174	74040-1175	74040-1181	74040-1182
		74040-1183	74040-1186	74040-1187	74040-1188	74040-1194	74040-1195	74040-1196	74040-1197
		74040-1198	74040-1201	74040-1202	74040-1204	74040-1207	74040-1209	74040-1210	74040-1211
		74040-1212	74040-1213	74040-1214	74040-1215	74040-1216	74040-1217	74040-1218	74040-1219
		74040-1220	74040-1223	74040-1224	74040-1225	74040-1226	74040-1227	74040-1228	74040-1229
		74040-1230	74040-1231	74040-1232	74040-1233	74040-1234	74040-1235	74040-1236	74040-1237
		74040-1238	74040-1239	74040-1240	74040-1241	74040-1243	74040-1244	74040-1245	74040-1246
		74040-1247	74040-1248	74040-1249	74040-1250	74040-1251	74040-1252	74040-1253	74040-1254
		74040-1255	74040-1256	74040-1257	74040-1258	74040-1259	74040-1260	74040-1261	74040-1262
		74040-1263	74040-1264	74040-1265	74040-1266	74040-1267	74040-1268	74040-1269	74040-1270
		74040-1271	74040-1272	74040-1273	74040-1274	74040-1275	74040-1276	74040-1277	74040-1278
		74040-1279	74040-1280	74040-1281	74040-1282	74040-1283	74040-1284	74040-1285	74040-1286
		74040-1287	74040-1288	74040-1289	74040-1290	74040-1291	74040-1292	74040-1293	74040-1294
		74040-1295	74040-1296	74040-1297	74040-1298	74040-1299	74040-1300	74040-1301	74040-1302
74040-1303	74040-1304	74040-1305	74040-1306	74040-1307	74040-1308	74040-1309	74040-1310		
74040-1311	74040-1312	74040-1313	74040-1314	74040-1315	74040-1316	74040-1317	74040-1318		
74040-1319	74040-1320	74040-1321	74040-1322	74040-1323	74040-1324	74040-1325	74040-1326		
74040-1327	74040-1328	74040-1329	74040-1330	74040-1331	74040-1332	74040-1333	74040-1334		
74040-1335	74040-1336	74040-1337	74040-1338	74040-1339	74040-1340	74040-1341	74040-1342		
74040-1343	74040-1344	74040-1345	74040-1346	74040-1347	74040-1348	74040-1349	74040-1350		
74040-1351	74040-1352	74040-1353	74040-1354	74040-1355	74040-1356	74040-1357	74040-1358		
74040-1359	74040-1360	74040-1361	74040-1362	74040-1363	74040-1364	74040-1365	74040-1366		
74040-1367	74040-1368	74040-1369	74040-1370	74040-1371	74040-1372	74040-1373	74040-1374		
74040-1375	74040-1376	74040-1377	74040-1378	74040-1379	74040-1380	74040-1381	74040-1382		
74040-1383	74040-1384	74040-1385	74040-1386	74040-1387	74040-1388	74040-1389	74040-1390		
74040-1391	74040-1392	74040-1393	74040-1394	74040-1395	74040-1396	74040-1397	74040-1398		
74040-1399	74040-1400	74040-1401	74040-1402	74040-1403	74040-1404	74040-1405	74040-1405		
74040-1406	74040-1407	74040-1408	74040-1409	74040-1410	74040-1411	74040-1412	74040-1413		
74040-1414	74040-1415	74040-1416	74040-1417	74040-1418	74040-1419	74040-1420	74040-1421		

74040 VHDM®	8	74040-1422	74040-1423	74040-1424	74040-1425	74040-1426	74040-1427	74040-1428	74040-1429		
		74040-1430	74040-1431	74040-1432	74040-1433	74040-1434	74040-1435	74040-1436	74040-1437		
		74040-1438	74040-1439	74040-1440	74040-1441	74040-1442	74040-1443	74040-1444	74040-1445		
		74040-1446	74040-1447	74040-1448	74040-1449	74040-1450	74040-1451	74040-1452	74040-1453		
		74040-1454	74040-1455	74040-1456	74040-1457	74040-1458	74040-1459	74040-1460	74040-1461		
		74040-1462	74040-1463	74040-1464	74040-1465	74040-1466	74040-1467	74040-1468	74040-1469		
		74040-1470	74040-1471	74040-1472	74040-1473	74040-1474	74040-1475	74040-1476	74040-1477		
		74040-1478	74040-1479	74040-1480	74040-1481	74040-1482	74040-1483	74040-1484	74040-1485		
		74040-1486	74040-1487	74040-1488	74040-1489	74040-1490	74040-1491	74040-1492	74040-1493		
		74040-1494	74040-1495	74040-1496	74040-1497	74040-1498	74040-1500	74040-8000	74040-8381		
		74040-9822	74040-9823	74040-9824	74040-9834	74040-9835	74040-9836	74040-9837	74040-9838		
		74040-9839	74040-9840	74040-9841	74040-9842	74040-9843	74040-9844	74040-9845	74040-9846		
		74040-9848	74040-9849	74040-9850	74040-9851	74040-9852	74040-9853	74040-9854	74040-9855		
		74040-9856	74040-9857	74040-9858	74040-9859	74040-9860	74040-9861	74040-9862	74040-9863		
		74040-9864	74040-9865	74040-9866	74040-9868	74040-9869	74040-9870	74040-9871	74040-9872		
		74040-9875	74040-9876	74040-9882	74040-9883	74040-9890	74040-9891	74040-9892	74040-9893		
		74040-9894	74040-9895	74040-9896	74040-9897	74040-9898	74040-9899	74040-9900	74040-9904		
		74040-9912	74040-9922	74040-9923	74040-9937	74040-9938	74040-9946	74040-9948	74040-9949		
		74040-9950	74040-9951	74040-9953	74040-9955	74040-9956	74040-9957	74040-9958	74040-9961		
		74040-9962	74040-9964	74040-9965	74040-9987	74040-9988	74040-9989	74040-9990			
		74670 VHDM® HSD	5	74670-0001	74670-0003	74670-0008	74670-0009	74670-0010	74670-0011	74670-0013	74670-0014
				74670-0022	74670-0023	74670-0024	74670-0025	74670-0027	74670-0029	74670-0033	74670-0034
				74670-0036	74670-0037	74670-0041	74670-0042	74670-0043	74670-0044	74670-0045	74670-0046
				74670-0054	74670-0059	74670-0060	74670-0061	74670-0062	74670-0063	74670-0064	74670-0071
				74670-0072	74670-0073	74670-0074	74670-0075	74670-0076	74670-0077	74670-0078	74670-0079
74670-0080	74670-0081			74670-0082	74670-0084	74670-0086	74670-0087	74670-0090	74670-0091		
74670-0092	74670-0093			74670-0100	74670-0101	74670-0102	74670-0103	74670-0104	74670-0106		
74670-0107	74670-0108			74670-0109	74670-0110	74670-0111	74670-0112	74670-0113	74670-0114		
74670-0115	74670-0116			74670-0117	74670-0118	74670-0119	74670-0120	74670-0121	74670-0122		
74670-0123	74670-0124			74670-0125	74670-0129	74670-0135	74670-0137	74670-0138	74670-0144		
74670-0145	74670-0152			74670-0156	74670-0162	74670-0163	74670-0164	74670-0167	74670-0169		
74670-0170	74670-0171			74670-0172	74670-0178	74670-0179	74670-0180	74670-0181	74670-0182		
74670-0184	74670-0185			74670-0186	74670-0198	74670-0199	74670-0200	74670-0201	74670-0205		
74670-0206	74670-0207			74670-0208	74670-0212	74670-0213	74670-0214	74670-0215	74670-0226		
74670-0227	74670-0228			74670-0229	74670-0230	74670-0231	74670-0232	74670-0233	74670-0234		
74670-0235	74670-0236			74670-0239	74670-0240	74670-0243	74670-0244	74670-0245	74670-0246		
74670-0247	74670-0248			74670-0249	74670-0250	74670-0256	74670-0257	74670-0258	74670-0259		
74670-0262	74670-0263			74670-0264	74670-0266	74670-0267	74670-0268	74670-0269	74670-0270		
74670-0272	74670-0278			74670-0282	74670-0285	74670-0286	74670-0288	74670-0289	74670-0291		
74670-0292	74670-0293			74670-0294	74670-0295	74670-0300	74670-0301	74670-0302	74670-0303		
74670-0304	74670-0305			74670-0306	74670-0307	74670-0308	74670-0309	74670-0310	74670-0317		
74670-0318	74670-0319			74670-0320	74670-0321	74670-0322	74670-0323	74670-0324	74670-0325		
74670-0326	74670-0327			74670-0328	74670-0329	74670-0331	74670-0332	74670-0333	74670-0335		
74670-0336	74670-0338			74670-0341	74670-0342	74670-0344	74670-0345	74670-0346	74670-0347		
74670-0348	74670-0349			74670-0350	74670-0351	74670-0352	74670-0353	74670-0355	74670-0363		
74670-0364	74670-0365			74670-0366	74670-0367	74670-0370	74670-0371	74670-0373	74670-0374		
74670-0375	74670-0376			74670-0377	74670-0378	74670-0379	74670-0382	74670-0384	74670-0385		
74670-0390	74670-0392			74670-0393	74670-0394	74670-0395	74670-0396	74670-0397	74670-0398		
74670-0399	74670-0406			74670-0407	74670-0408	74670-0410	74670-0411	74670-0417	74670-0418		
74670-0419	74670-0420			74670-0422	74670-0423	74670-0427	74670-0429	74670-0430	74670-0433		
74670-0434	74670-0435			74670-0438	74670-0439	74670-0440	74670-0442	74670-0445	74670-0446		
74670-0447	74670-0448			74670-0449	74670-0450	74670-0451	74670-0452	74670-0453	74670-0454		
74670-0455	74670-0456			74670-0457	74670-0458	74670-0459	74670-0460	74670-0461	74670-0462		
74670-0463	74670-0464			74670-0465	74670-0466	74670-0467	74670-0468	74670-0469	74670-0470		
74670-0471	74670-0472			74670-0473	74670-0600	74670-0635	74670-0636	74670-0637	74670-0638		
74670-0639	74670-0640			74670-0641	74670-0642	74670-0643	74670-0644	74670-0645	74670-0646		

74670 VHDM® HSD		74670-0647	74670-0648	74670-0649	74670-0650	74670-0651	74670-0652	74670-0653	74670-0654
		74670-0655	74670-0656	74670-0657	74670-0658	74670-0659	74670-0660	74670-0661	74670-0662
		74670-0663	74670-0664	74670-0665	74670-0666	74670-0667	74670-0668	74670-0669	74670-0670
		74670-0671	74670-0672	74670-0673	74670-0674	74670-0675	74670-0676	74670-0677	74670-0678
		74670-0679	74670-0680	74670-0681	74670-0682	74670-0683	74670-0684	74670-0685	74670-0686
		74670-0687	74670-0688	74670-0689	74670-0690	74670-0691	74670-0692	74670-0693	74670-0694
		74670-0695	74670-0696	74670-0697	74670-0698	74670-0699	74670-0700	74670-0701	74670-0702
		74670-0703	74670-0704	74670-0705	74670-0706	74670-0707	74670-0708	74670-0709	74670-0710
		74670-0711	74670-0712	74670-0713	74670-0714	74670-0715	74670-0716	74670-0717	74670-0718
		746700719	74670-0720	74670-0721	74670-0722	74670-0723	74670-0724	74670-0725	74670-0726
		74670-0727	74670-0728	74670-0729	74670-0730	74670-8000	74670-9946	74670-9947	74670-9949
		74670-9950	74670-9951	74670-9952	74670-9953	74670-9954	74670-9955	74670-9956	74670-9957
		74670-9977	74670-9979	74670-9981	74670-9982	74670-9983	74670-9984	74670-9985	74670-9986
		74670-9987	74670-9988	74670-9989	74670-9991	74670-9992	74670-9993	74670-9995	
	74680 VHDM® HSD	8	74680-0001	74680-0002	74680-0004	74680-0005	74680-0006	74680-0007	74680-0008
74680-0011			74680-0015	74680-0016	74680-0019	74680-0022	74680-0023	74680-0024	74680-0025
74680-0026			74680-0027	74680-0028	74680-0029	74680-0030	74680-0043	74680-0044	74680-0045
74680-0046			74680-0048	74680-0049	74680-0050	74680-0051	74680-0052	74680-0053	74680-0054
74680-0055			74680-0056	74680-0058	74680-0059	74680-0061	74680-0062	74680-0063	74680-0064
74680-0065			74680-0067	74680-0068	74680-0071	74680-0073	74680-0074	74680-0075	74680-0076
74680-0079			74680-0080	74680-0083	74680-0085	74680-0086	74680-0087	74680-0089	74680-0090
74680-0095			74680-0099	74680-0104	74680-0105	74680-0106	74680-0108	74680-0109	74680-0110
74680-0120			74680-0121	74680-0122	74680-0123	74680-0124	74680-0125	74680-0126	74680-0127
74680-0128			74680-0129	74680-0133	74680-0135	74680-0143	74680-0144	74680-0149	74680-0151
74680-0155			74680-0156	74680-0168	74680-0169	74680-0170	74680-0171	74680-0172	74680-0173
74680-0174			74680-0176	74680-0177	74680-0178	74680-0189	74680-0190	74680-0191	74680-0192
74680-0193			74680-0194	74680-0195	74680-0196	74680-0197	74680-0198	74680-0199	74680-0201
74680-0202			74680-0203	74680-0204	74680-0205	74680-0207	74680-0208	74680-0209	74680-0212
74680-0213			74680-0214	74680-0219	74680-0220	74680-0221	74680-0224	74680-0225	74680-0226
74680-0227			74680-0228	74680-0229	74680-0230	74680-0231	74680-0239	74680-0240	74680-0246
74680-0254			74680-0255	74680-0256	74680-0258	74680-0259	74680-0260	74680-0267	74680-0269
74680-0270			74680-0271	74680-0272	74680-0273	74680-0274	74680-0275	74680-0276	74680-0277
74680-0278			74680-0280	74680-0282	74680-0283	74680-0286	74680-0287	74680-0289	74680-0290
74680-0291			74680-0292	74680-0293	74680-0295	74680-0296	74680-0297	74680-0298	74680-0299
74680-0300			74680-0301	74680-0302	74680-0303	74680-0304	74680-0306	74680-0308	74680-0309
74680-0311			74680-0315	74680-0316	74680-0317	74680-0319	74680-0322	74680-0324	74680-0328
74680-0330			74680-0331	74680-0332	74680-0333	74680-0334	74680-0335	74680-0336	74680-0338
74680-0339			74680-0340	74680-0341	74680-0342	74680-0343	74680-0344	74680-0345	74680-0346
74680-0347			74680-0348	74860-0350	74680-0351	74680-0352	74680-0353	74680-0354	74680-0355
74680-0356			74680-0357	74680-0358	74680-0359	74680-0360	74680-0361	74680-0362	74680-0363
74680-0364			74680-0365	74680-0366	74680-0367	74680-0368	74680-0369	74680-0370	74680-0371
74680-0372			74680-0373	74680-0374	74680-0375	74680-0376	74680-0377	74680-0378	74680-0379
74680-0380			74680-0381	74680-0382	74680-0383	74680-0384	74680-0385	74680-0386	74680-0387
74680-0388			74680-0389	74680-0390	74680-0625	74680-0626	74680-0627	746800628	74680-0629
74680-0630			74680-0631	74680-0632	74680-0633	74680-0634	74680-0635	74680-0636	74680-0637
74680-0638			74680-0639	74680-0640	74680-0641	74680-0642	74680-0643	74680-0644	74680-0645
74680-0646			74680-0647	74680-0648	74680-0649	74680-0650	74680-0651	74680-0652	74680-0653
74680-0654			74680-0655	74680-0656	74680-0657	74680-0658	74680-0659	74680-0660	74680-0661
74680-0662			74680-0663	74680-0664	74680-0665	74680-0666	74680-0667	74680-0668	74680-0669
74680-0670	74680-0671	74680-0672	74680-0673	74680-9980	74680-9981	74680-9982	74680-9983		
74680-9984	74680-9985	74680-9986	74680-9987	74680-9992	74680-9993	74680-9994			



**Description:**

The tool is approximately 203mm (8 in.) long by 51mm (2 in.) wide (closed) by 2 mm (1 in.) thick and weighs .48 kg (1 lb)

**OPERATION:**

Before removing individual wafers from a VHDM® or VHDM® HSD\* Daughtercard header assembly, you must first remove the stiffener. Use the *Stiffener Removal Tool* order no. 62201-6200. After removing the stiffener, identify the wafer that needs to be replaced.

**NOTE:** Marking the defective wafer with white correction fluid or other similar material will aid in the removal process.

1. Position the wafer removal tool over the defective wafer with the toothed jaw and separators located over the pin end of the wafer and the slotted jaw over the nubs on the other end of the wafer. The adjustment screw should be set so that it rests on top of the wafers. This assists in the proper location of the jaws for different sized wafers. See Figure 1.
2. While holding the tool in position over the wafer, squeeze the handles until the separator blades on the toothed jaw separate the defective wafer from the adjacent wafers and the opposing jaws clamp the wafer.
3. While applying pressure to the handles, pull straight up until the wafer slips out of the assembly. It may be necessary to also remove and replace adjacent wafers as they are easily damaged in the process of removal.
4. See 62201-0999 VHDM® and VHDM® HSD\* *Installation Tooling Manual* for additional repair tools and information.

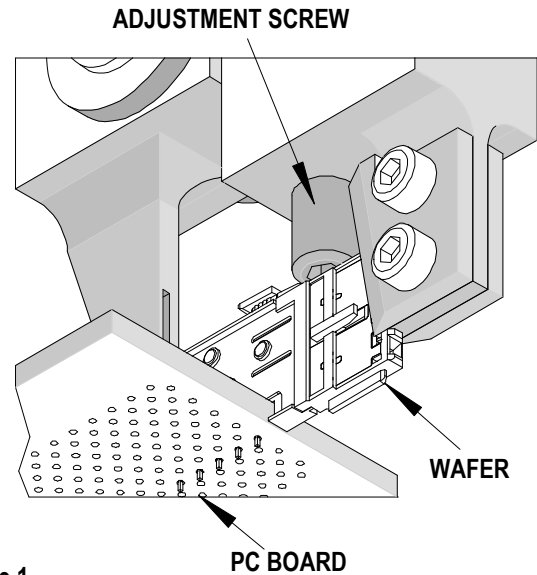
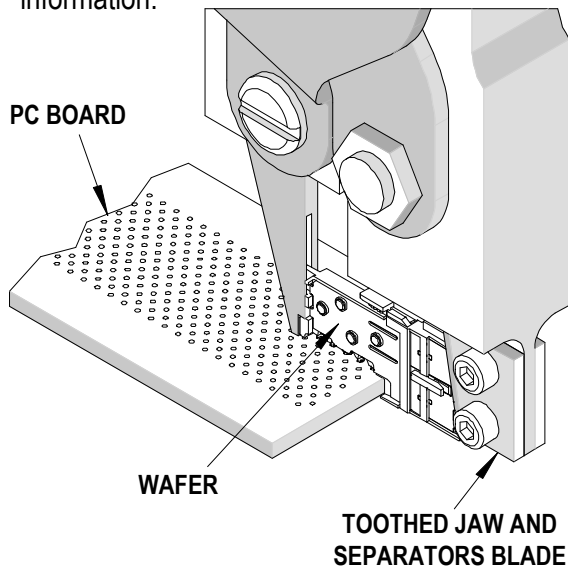


Figure 1

**CAUTION:** Molex specifications are valid only when used with Molex terminals, applicators and tooling.

**Contact Information**

For more information on Molex application tooling please contact Molex at 1-800-786-6539.

Visit our Web site at <http://www.molex.com>